 


Goodmans

GPS188IPXI

Portable CD Radio with iPod Dock

User Guide

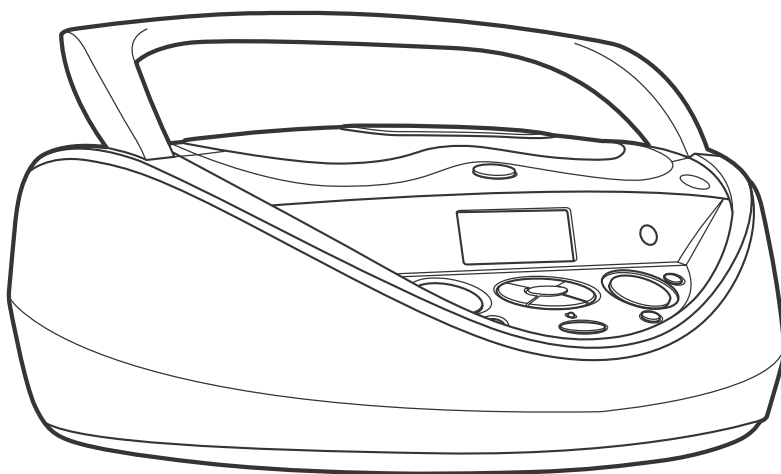

IMPORTANT: Please read all instructions carefully before use and keep for future use

Introduction

Thank you for choosing this Goodmans Portable CD Radio with iPod Dock. Not only can it receive radio stations, but you can also listen to your favourite tracks on your iPod and charge it up.

It's really simple to use; you can fully operate your iPod from the control panel on the top or from the remote control, and even connect another auxiliary device to it.

Throughout this User Guide, the Portable CD Radio with iPod Dock will be referred to as the Portable System.

 
Safety is important

Use of any electrical equipment should be undertaken with care. Please read the safety section on page 14 and 15 before using your Portable System. This appliance is for household use only.



An audio system that allows docking of an iPod and which fully supports the iPod menu system.


What's in the box?

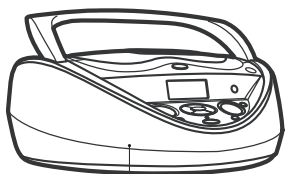

Speaker Dock




 Remote Control

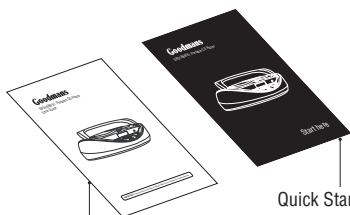

This User Guide

 Quick Start Guide

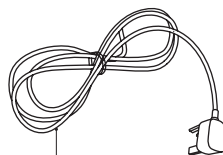


AC Power Cord

Contents

01 Your Portable System4	05 Specifications.....13
02 Get going6	06 Warnings.....14
03 Daily use8	07 Guarantee.....16
04 Troubleshooting12	

 01 Your Portable System

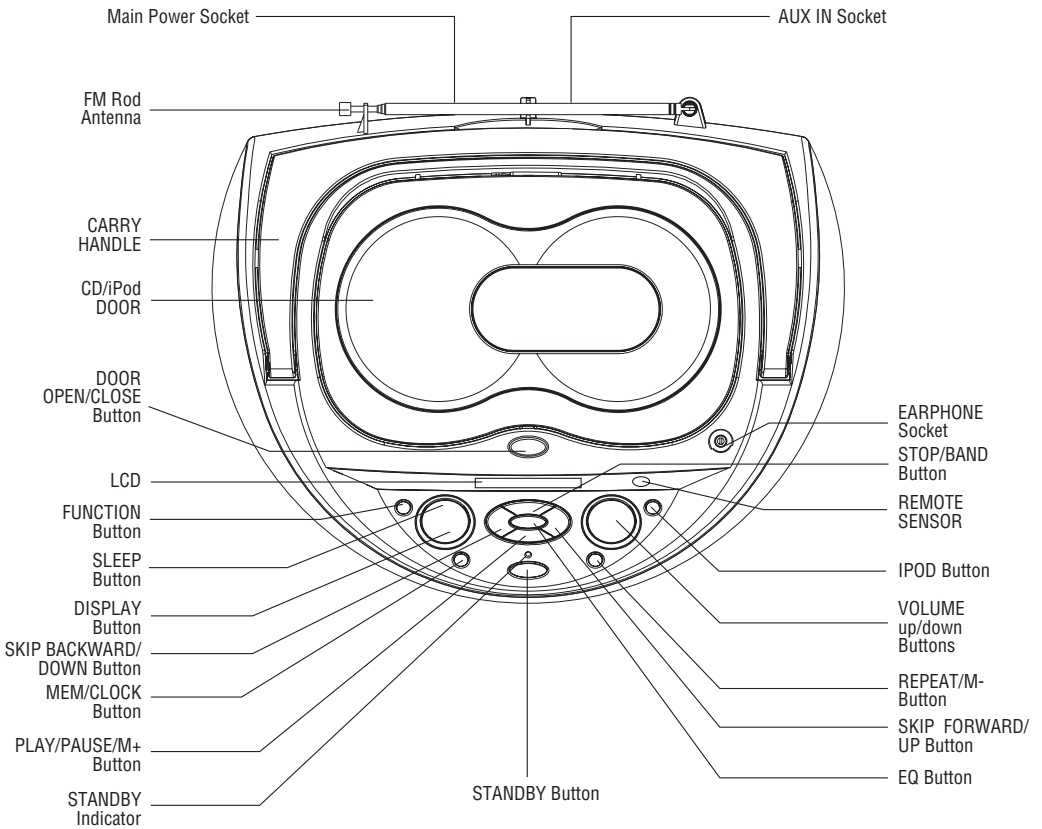


02 Get going

1

Using the Remote Control

The Remote Control can be used to operate the Portable System. Before using the Remote Control, the Safety Tab should be removed.

 Simply pull out the Safety Tab from the remote control, as shown below.

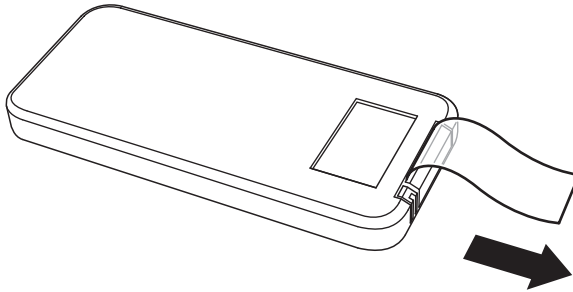

To use the Remote Control, simply direct it towards the front of the Portable System and press the desired buttons.

DON'T FORGET! When replacing the battery make sure that you use the same size and type.

2

iPod Docking

Most iPods can be connected to the Portable System to allow all your songs to be played through the speakers.

To connect an iPod to the Portable System, open the CD/iPod door and lift up the iPod dock compartment. Select the appropriate back support setting for your iPod.

Carefully slide your iPod into the dock compartment until it connects firmly with the connector located at the bottom.

 
 
Return the dock compartment to the closed position.

DON'T FORGET! Your iPod will charge while docked in the Portable System.

Press the **STANDBY** button.

Press the **iPod** button to select iPod mode.

To start playback, press the **PLAY/PAUSE** button.

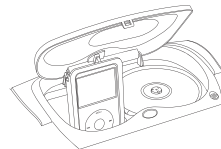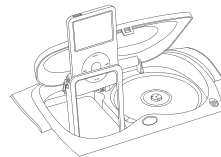

3

Using Headphones

A pair of headphones (not supplied) with a 3.5mm diameter stereo plug and 8-32 ohm impedance is required. Plug the headphones into the Headphone Socket on the front of the Portable CD Player.

When headphones are connected, the sound to the speakers is automatically turned off.

4

 
Using the Portable System with Batteries

The Portable System can be powered by 8 "C" types Batteries. This allows the Portable System to be used outside or away from wall sockets.

To remove the Battery Compartment Cover, press firmly and pull away from the Portable System.

Insert 8 "C" type batteries into the battery compartment, following the polarity diagram on the inside.

Replace the Battery Compartment Cover.

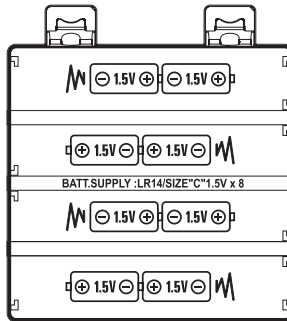

5

Using AUX IN

Connect an audio cable (not supplied) to the AUX IN socket on the rear of the Portable System. Connect the other end to a suitable output socket on your auxiliary device. Press the FUNCTION button to select AUX mode.

03 Daily Use

Switching On

- 1 To turn the Portable System on, press the **STANDBY** button.
- 2 To turn the Portable System off, press the **STANDBY** button again.

Adjusting the Volume

- 1 To increase the volume, press the **VOLUME UP BUTTON**.
- 2 To decrease the volume, press the **VOLUME DOWN BUTTON**.
- 3 You can also press the **MUTE** button to turn the sound off. To turn the sound back on, press the **MUTE** button again.

Preset equaliser

The range of the sound can be adjusted to suit the different types of music that you are listening to, by changing the preset equaliser settings. The available settings are:

- Jazz
 - Pop
 - Rock
 - Classic
- 1 Press the **EQ** button to select the setting which sounds best.

Listening to Radio

- 1 Press the **STANDBY** button to turn the Portable System on.
- 2 Press the **FUNCTION** button until **TUNER** is displayed.
- 3 Press the **BAND** button to select MW/ FM band.
- 4 **Manual Tuning** - Press the **SKIP /UP** or **SKIP / DN** buttons repeatedly until the display is showing the frequency of your desired station.
- 5 **Automatic Tuning** - Press and hold the **SKIP /UP** or **SKIP / DN** buttons until the display begins to move and then release the buttons. The tuner will scan up or down the band until it finds the first strong station, and then stop on that station. Repeat this process until the tuner stops on your desired station.
- 6 If you tune to an FM stereo station the **STEREO** indicator will show.

DON'T FORGET!

To have the best MW reception, slightly rotate the unit or move the unit to a different area of the room until the best reception is obtained.

To obtain the best FM reception, fully extend the FM antenna. Avoid close proximity to other electrical appliances.

Storing radio stations

- ❶ Tune to a radio station using the SKIP/UP or SKIP/DOWN buttons.
- ❷ Press and hold the MEM/CLK Button.
- ❸ Press the SKIP /UP or SKIP / DN buttons to select the preset number you want to assign the station to.
- ❹ Press the MEM/CLK Button to store the station.
- ❺ Repeat the above procedure to store additional stations.
- ❻ To play a stored radio station press the PLAY/M+ or REPEAT/M- buttons to recall the preset station.

Handling CDs

To remove a disc from its storage case, press down on the centre of the case and lift the disc out, holding it carefully by the edges.



Fingerprints and dust should be carefully wiped off the disc's recorded surface with a soft cloth before use.

DON'T FORGET!

Never use chemicals such as record sprays, antistatic sprays, benzene, or thinners to clean compact discs. These chemicals can damage the disc's surface.

Listening to a Music CD

- ❶ Open the CD compartment by pressing the Door Open / Close button.
- ❷ Insert a disc into the disc compartment with the printed side facing upwards.
- ❸ Close the CD compartment door.
- ❹ Press the FUNCTION button until CD mode is selected, "--" is displayed for a few seconds, then the total number of tracks will show on LCD display.
- ❺ Press the PLAY/PAUSE button to play the CD.
- ❻ Press the SKIP /UP or SKIP / DN buttons to move to the next/previous track.
- ❼ Press and hold the SKIP /UP or SKIP / DN buttons to fast forwards / fast backwards.
- ❽ When the CD is playing, press the PLAY/PAUSE button to pause the CD. To continue playback, press the PLAY/PAUSE button again.
- ❾ Press the SHUFFLE button (on the remote control) to playback your tracks in a random order.
- ❿ To stop playback of a CD press the STOP button.
- ⓫ After all tracks have been played, the CD will stop automatically.

DON'T FORGET!

Do not open the CD compartment while the disc is playing or rotating. First press the STOP button and wait for the CD to stop.

Using the repeat function

- 1 During CD disc playback, select a desired track as previously described.
- 2 Press the REPEAT button once "REP" is shown in the display. The portable system will repeat the selected track.
- 3 Press the REPEAT button twice "REP ALL" is shown in the display. The portable system will repeat all tracks on the CD.

Programming tracks

 
- 1 Insert a CD into the portable system.
- 2 Make sure the CD function is in stop mode.
- 3 Press the MEM/CLK button, PROG and "01" will flash in the display.
- 4 Press the SKIP /UP or SKIP / DN buttons until the display shows the track number that you want to program.
- 5 Press the MEM/CLK button to store the track.
- 6 Repeat steps 4 and 5 until you have entered all the tracks that you want to program.
- 7 To playback the programed track, press the PLAY/PAUSE button.
- 8 After all programmed tracks have been played, the CD player will stop automatically.

DON'T FORGET!

A total of 20 tracks can be programmed into the CD memory.

Using an iPod

- 1 Adjust the back support in the iPod compartment to suit your iPod model.
- 2 The dial will rise to the correct depth for the selected iPod model.

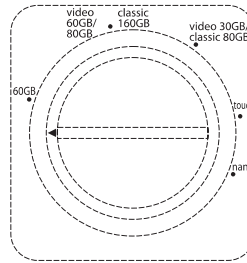

Listening to an iPod

- 1 When the iPod is correctly docked, press the STANDBY button to power on. Press the iPod button on the portable system. The iPod icon will show in the display.
- 2 Press the PLAY/PAUSE Button to play the tracks on the iPod.
- 3 Press the SKIP /UP or SKIP / DN buttons to skip to the next/previous track.
- 4 Press and hold the SKIP /UP or SKIP / DN buttons to search forwards or backwards through the current track.
- 5 Press the MENU button to enter the iPod menu. Use the iPod MENU UP and iPod MENU DOWN buttons (on the remote control) to navigate through the iPod menu system. Press the SELECT button to select a track or menu option.
- 6 Press the REPEAT button once to repeat the track you are listening to, or press it again to repeat all tracks.
- 7 Press the SHUFFLE button (on the remote control) to playback your tracks in a random order.
- 8 Press the STOP Button to stop playback.

Charging your iPod

When your iPod is docked and the portable system is connected to the mains supply, your iPod will be recharged.

DON'T FORGET!

iPod Shuffles will NOT recharge with this portable system.

Setting the Time

- 1 Press the STAND-BY button so that the portable system is in standby mode.
- 2 Press and hold the CLK button until "12 Hr" flashes in the display.
- 3 Press the SKIP /UP or SKIP / DN buttons to select 12 or 24 hour time format.
- 4 Press the CLK button to confirm. The hour digit will flash.
- 5 Press the SKIP /UP or SKIP / DN buttons to increase or decrease the hour.
- 6 Press the CLK button to confirm the hour setting. The minute digit will flash.
- 7 Press the SKIP /UP or SKIP / DN buttons to increase or decrease the minutes.
- 8 Press the CLK button to confirm the time.

Using the Sleep function

Press the SLEEP button to activate the SLEEP timer. You can set the time between 90 and 10 minutes, in 10 minute increments. When the sleep time has been reached, the portable system will turn off to standby.

Changing the display information

In radio mode, press the DISPLAY button to view the time. After a few seconds the display will return to the previous mode.

04 Troubleshooting

Problem	Possible Cause	What to do
CD Player will not play	<ol style="list-style-type: none"> 1. Unit not in CD mode. 2. CD is not installed or installed in correctly. 	<ol style="list-style-type: none"> 1. Select CD mode. 2. Load a CD and check it is the correct way round.
CD skips while playing	<ol style="list-style-type: none"> 1. Disc is dirty or scratched. 	<ol style="list-style-type: none"> 1. Wipe the disc with a cloth or use another disc.
Radio sound distorted.	<ol style="list-style-type: none"> 1. The station is not tuned in. 2. There is interference. 	<ol style="list-style-type: none"> 1. Fine tune the station. 2. Reposition the Portable System.
No radio sound.	<ol style="list-style-type: none"> 1. The Portable System is not in tuner mode. 2. The volume has been muted or is on the minimum setting. 	<ol style="list-style-type: none"> 1. Press the MODE button until Tuner is selected. 2. Adjust the volume level.
The iPod will not play.	<ol style="list-style-type: none"> 1. The Portable System is not in iPod mode. 2. The iPod is not connected correctly. 	<ol style="list-style-type: none"> 1. Press the iPod button. 2. Reconnect the iPod.
No iPod sound.	<ol style="list-style-type: none"> 1. The Portable System is not in iPod mode. 2. The volume has been muted or is on the minimum setting. 	<ol style="list-style-type: none"> 1. Press the iPod button. 2. Adjust the volume level.

Specifications

05

Model Number	• GPS188IPXI
Power Supply	• 230 - 240V AC 50Hz OR 8 X 1.5 Volt "C" size batteries
Power Consumption	• 30 watts
Power Output	• 2 x 2 Watts RMS
Radio Frequency Coverage	• FM: 87.5 - 108 MHz MW: 522 - 1620KHz
Dimensions	• 325mm (L) x 270mm (W) x 120mm (H)
Battery Requirement	• 8 X "C" type (not included)

IMPORTANT: Due to continual revision and improvements to our products design, specifications are subject to change without notice.



WEEE

This appliance is labelled in accordance with European Directive 2002/96/EG concerning used electrical and electronic appliances (Waste Electrical and Electronic Equipment - WEEE).

The guideline determines the framework for the return and recycling of used appliances.

Sound levels

Your hearing is very important to you and to us, so please take care when using this Portable System. It is strongly recommended that you follow the listed guidelines in order to prevent possible damage or loss of hearing.

Establish a safe sound level

Over time your hearing will adapt to continuous loud sounds and will give the impression that the volume has in fact been reduced. What seems normal to you may in fact be harmful. To guard against this **before your hearing adapts**, set the volume to a low level.

Slowly increase the level until you can hear comfortably and clearly and without distortion. Damage to your hearing is accumulative and is irreversible. Any ringing or discomfort in the ears indicates that the volume is too loud.

Once you have established a comfortable listening level, **do not increase the sound level**.

General Safety

This Portable System has been designed and manufactured to meet European safety standards, but like any electrical equipment, care must be taken if you are to obtain the best results and safety is to be assured.

Do read these operating instructions before you attempt to use the Portable System.

Do ensure that all electrical connections (including the mains plug, extension leads and interconnections between pieces of equipment) are properly made in accordance with the manufacturer's instructions.

Switch off and remove the mains plug when making or changing any connections.

Do consult your dealer if you are ever in doubt about the installation, operation or safety of your Portable System.

Don't continue to operate the Portable System if you are ever in doubt about it working normally, or if it is damaged in any way. Switch it off, withdraw the plug from the mains and consult your dealer.

Don't remove any fixed covers as this may expose you to dangerous voltages.

Don't leave the Portable System switched On when it is unattended for long periods of time, unless it is specifically stated that it is designed for unattended operation or has a standby mode.

Make sure that other people in your household are conversant with the Portable System.

Don't obstruct the ventilation vents on the Portable System, for example with curtains or soft furnishings.

Overheating will cause damage and shorten the life of the product.

Don't allow electrical equipment to be exposed to rain or moisture.

Electrical Information

This Portable System is supplied with a mains lead fitted with a BS1363/A 13 amp plug. If it is not suitable for your supply sockets it must be removed and replaced with an appropriate plug. If the plug becomes damaged and/or needs to be replaced please follow the wiring instructions below.

The plug removed must be disposed of immediately. It must not be plugged into a supply socket as this will be an electrical hazard. If the fuse needs to be replaced it must be of the same rating and ASTA approved to BS1362. If the plug is changed, a fuse of the appropriate rating must be fitted in the plug, adapter or at the distribution board. If the fuse in a moulded plug is replaced, the fuse cover must be refitted before the appliance can be used.

Wiring Instructions

The supply cable will be either 2-core or 3-core. Follow the appropriate wiring instructions given below. In both cases ensure that the outer sheath of the cable is firmly held by the cable clamp.

2-Core Plug

WARNING! Do not connect either wire to the earth terminal.



This symbol indicates that this 2-core appliance is Class II and does not require an earth connection.

The wire coloured blue must be connected to the terminal marked with the letter N or coloured black.

The wire coloured red must be connected to the terminal marked with the letter L or coloured red.



 
3-Core Plug

WARNING! This appliance must be earthed.

The wire coloured green and yellow must be connected to the terminal marked with the letter E, or by the earth symbol (⏚), or coloured green and yellow.

The wire coloured blue must be connected to the terminal marked with the letter N or coloured black.

The wire coloured red must be connected to the terminal marked with the letter L or coloured red.

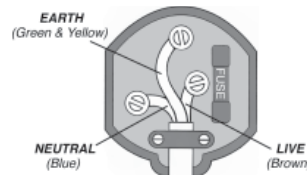

07 Guarantee

The Portable System is guaranteed for twelve months from the date of original purchase. If there are any defects due to faulty materials or workmanship, contact the Goodmans Helpline. Have your receipt of purchase on hand.

The guarantee is subject to the following provisions:

- It is only valid within the boundaries of the country of purchase.
- The product must be correctly installed and operated in accordance with the instructions contained in this User Guide.
- The Portable System must be used solely for domestic purposes.
- The guarantee will be rendered invalid if the Portable System is re-sold or has been damaged by inexpert repair.
- The manufacturer disclaims any liability for incidental or consequential damages.
- The guarantee is in addition to, and does not diminish, your statutory or legal rights.

Goodmans

NOV08-GPS188IPXI Revision 2