 


Goodmans

GPS167

Portable CD Radio

User Guide

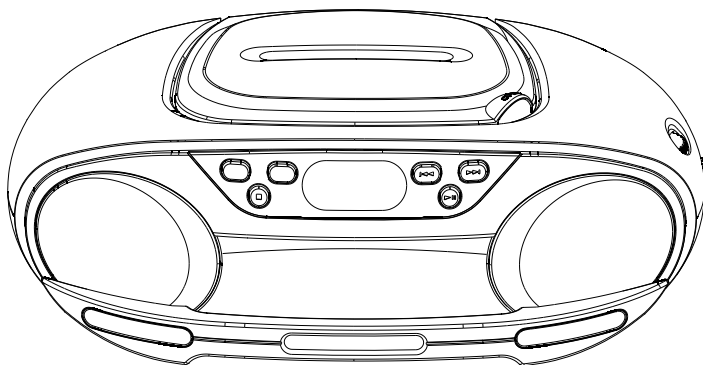

IMPORTANT: Please read all instructions carefully before use and keep for future reference

 
Introduction

Thank you for choosing this Goodmans Portable CD Radio .
You can listen to your favourite radio stations and CDs

Safety is important

Use of any electrical equipment should be undertaken with care. Please read the safety section on page 11 and 12 before using your Portable System. This appliance is for household use only.


What's in the box?

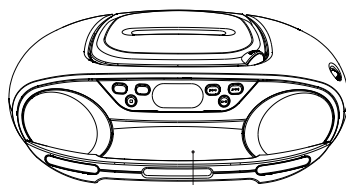

Portable system



 This User Guide




power supply

Contents


01 Your Portable System	4	05 Specifications.....	13
02 Get going	6	06 Warnings.....	14
03 Daily use	8	07 Guarantee	16
04 Troubleshooting.....	12		

01 Your Portable System

 
Front

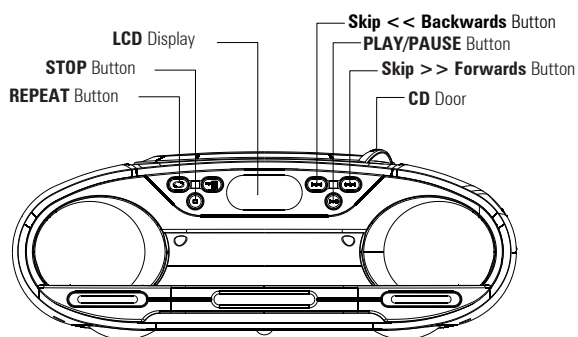

Side

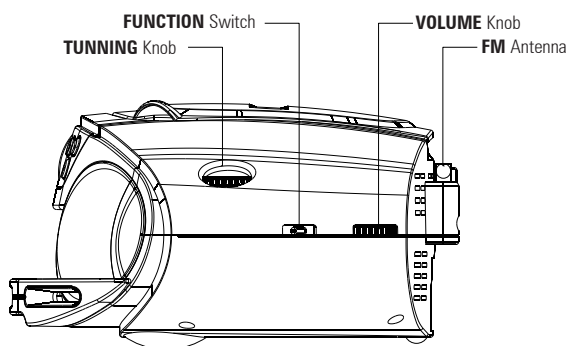 

Rear

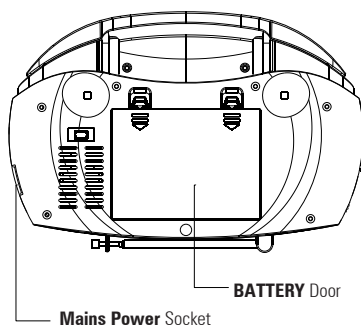 

1

AC POWER CONNECTION

Connect one end of the AC cord to the AC INPUT socket on the left side of the unit, then connect other end to the wall outlet. The unit is now ready to operate.

Disconnect the AC cord from the wall outlet when the unit is not in use.

2

 
Using the Portable System with Batteries

The Portable System can be powered by 6 "C" types Batteries. This allows the Portable System to be used outside or away from wall sockets.

To remove the Battery Compartment Cover, press firmly and pull away from the unit.

Insert 6 "C" type batteries into the battery compartment, following the polarity diagram on the inside.

Replace the Battery Compartment Cover.

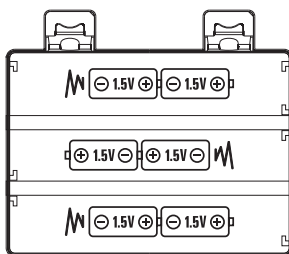

03 Daily Use

Switching On

- 1 Slide the **FUNCTION** switch to AM, FM or CD position to turn the unit ON.
- 2 Slide the **FUNCTION** switch to the OFF position to turn the unit OFF.

Adjusting the Volume

- 1 Rotate the volume knob to increase or decrease the volume level.

 
ANTENNAS

MW - This unit has a built-in ferrite rod antenna, which eliminates the need for an external antenna, and provides adequate reception in most areas. If the signal is weak, turn the unit to improve reception.

FM - The telescopic antenna on the top of the unit is for FM reception only. If the signal is weak, adjust the angle of the antenna.

Listening to Radio

- 1 Slide the **FUNCTION** selector to the FM position.
- 2 Tune to a desired station by rotating the **TUNING KNOB**(Fig A).
- 3 To switch the radio off, slide the **FUNCTION** switch to the OFF position.

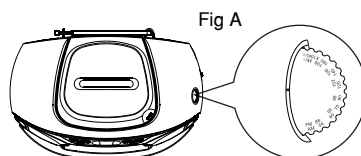

DON'T FORGET!

To get the best MW reception, slightly rotate the unit or move the unit to a different area of the room until the best reception is obtained.

To obtain the best FM reception, fully extend the FM antenna. Avoid close proximity to other electrical appliances.

Handling CDs

To remove a disc from its storage case, press down on the centre of the case and lift the disc out, holding it carefully by the edges.



Fingerprints and dust should be carefully wiped off the disc's recorded surface with a soft cloth before use.

DON'T FORGET!

Never use chemicals such as record sprays, antistatic sprays, benzene, or thinners to clean compact discs.

These chemicals can damage the disc's surface.

Listening to a CD

- ❶ Open the CD compartment by lifting the door upwards.
- ❷ Insert a disc into the disc compartment with the printed side facing upwards.
- ❸ Close the CD compartment door.
- ❹ Slide the **FUNCTION** switch to the CD position. "----" is displayed for a few seconds, then the total number of tracks will show in the LCD display.
- ❺ Press the **PLAY/PAUSE** button to begin playback.
- ❻ Press the **SKIP / Forwards** or **SKIP / Backwards** buttons to skip to the next/previous track.
- ❼ Press and hold the **SKIP /Forwards** or **SKIP / Backwards** buttons to search for a desired part of the current track.
- ❽ When the CD is playing, press the **PLAY/PAUSE** button to pause the CD. To continue playback, press the **PLAY/PAUSE** button again.
- ❾ To stop playback of a CD press the **STOP** button.
- ❿ After all tracks have been played, the CD will stop automatically.

DON'T FORGET!

Do not open the CD compartment while the disc is playing or rotating.

First press the STOP button and wait for the CD to stop.

Using the repeat function

- ❶ During **CD** disc playback, select a desired track as previously described.
- ❷ Press the **REPEAT** button once.
"REPEAT 1" is shown in the display.
The portable system will repeat the selected track.
- ❸ Press the **REPEAT** button twice.
"REPEAT ALL" is shown in the display.
The portable system will repeat all tracks on the CD.

Programming tracks

- ❶ Insert a CD into the portable system.
- ❷ Make sure the CD function is in stop mode.
- ❸ Press the **PROG** button, "PROG 01" and will flash in the display.
- ❹ Press the **SKIP /Forwards** or **SKIP / Backwards** buttons until the display shows the track number that you want to program.
- ❺ Press the **PROG** button to store the track.
- ❻ Repeat steps 4 and 5 until you have entered all the tracks that you want to program.
- ❼ To playback the programmed track, press the **PLAY/PAUSE** button.
- ❽ After all programmed tracks have been played, the CD player will stop automatically.

DON'T FORGET!

A total of 20 tracks can be programmed into the CD memory.

04 Troubleshooting

Problem	Possible Cause	What to do
CD Player will not play	<ol style="list-style-type: none">1. Unit not in CD mode.2. CD is not installed or installed in correctly.	<ol style="list-style-type: none">1. Select CD mode.2. Load a CD and check it is the correct way round.
CD skips while playing	<ol style="list-style-type: none">1. Disc is dirty or scratched.	<ol style="list-style-type: none">1. Wipe the disc with a cloth or use another disc.
Radio sound distorted.	<ol style="list-style-type: none">1. The station is not tuned in.2. There is interference.	<ol style="list-style-type: none">1. Fine tune the station.2. Reposition the Portable System.
No radio sound.	<ol style="list-style-type: none">1. The Portable System is not in tuner mode.2. The volume has been muted or is on the minimum setting.	<ol style="list-style-type: none">1. Select Tuner mode2. Adjust the volume level.

Model Number	• GPS167
Power Supply	• 230V AC 50Hz OR 6 X 1.5 Volt "C" size batteries
Power Consumption	• 12 watts
Power Output	• 0.8 x 2 Watts RMS
Radio Frequency Coverage	• FM: 87.5 - 108 MHz MW: 540 - 1600KHz
Dimensions	• 264mm (L) x 174mm (W) x 90mm (H)
Battery Requirement	• 6 X "C" type (not included)

IMPORTANT: Due to continual revision and improvements to our products design, specifications are subject to change without notice.

06 Warnings



WEEE

This appliance is labelled in accordance with European Directive 2002/96/EG concerning used electrical and electronic appliances (Waste Electrical and Electronic Equipment - WEEE).

The guideline determines the framework for the return and recycling of used appliances.

Sound levels

Your hearing is very important to you and to us, so please take care when using this Portable System. It is strongly recommended that you follow the listed guidelines in order to prevent possible damage or loss of hearing.

Establish a safe sound level

Over time your hearing will adapt to continuous loud sounds and will give the impression that the volume has in fact been reduced. What seems normal to you may in fact be harmful. To guard against this before your hearing adapts, set the volume to a low level.

Slowly increase the level until you can hear comfortably and clearly and without distortion. Damage to your hearing is accumulative and is irreversible. Any ringing or discomfort in the ears indicates that the volume is too loud.

Once you have established a comfortable listening level, do not increase the sound level.

General Safety

This Portable System has been designed and manufactured to meet European safety standards, but like any electrical equipment, care must be taken if you are to obtain the best results and safety is to be assured.

Do read these operating instructions before you attempt to use the Portable System.

Do ensure that all electrical connections (including the mains plug, extension leads and interconnections between pieces of equipment) are properly made in accordance with the manufacturer's instructions.

Switch off and remove the mains plug when making or changing any connections.

Do consult your dealer if you are ever in doubt about the installation, operation or safety of your Portable System.

Don't continue to operate the Portable System if you are ever in doubt about it working normally, or if it is damaged in any way. Switch it off, withdraw the plug from the mains and consult your dealer.

Don't remove any fixed covers as this may expose you to dangerous voltages.

Don't leave the Portable System switched On when it is unattended for long periods of time, unless it is specifically stated that it is designed for unattended operation or has a standby mode.

Make sure that other people in your household are conversant with the Portable System.

Don't obstruct the ventilation vents on the Portable System, for example with curtains or soft furnishings.

Overheating will cause damage and shorten the life of the product.

Don't allow electrical equipment to be exposed to rain or moisture.

Electrical Information

This Portable System is supplied with a mains lead fitted with a BS1363/A 13 amp plug. If it is not suitable for your supply sockets it must be removed and replaced with an appropriate plug. If the plug becomes damaged and/or needs to be replaced please follow the wiring instructions below.

The plug removed must be disposed of immediately. It must not be plugged into a supply socket as this will be an electrical hazard. If the fuse needs to be replaced it must be of the same rating and ASTA approved to BS1362. If the plug is changed, a fuse of the appropriate rating must be fitted in the plug, adapter or at the distribution board. If the fuse in a moulded plug is replaced, the fuse cover must be refitted before the appliance can be used.

Wiring Instructions

The supply cable will be either 2-core or 3-core. Follow the appropriate wiring instructions given below. In both cases ensure that the outer sheath of the cable is firmly held by the cable clamp.

2-Core Plug

WARNING! Do not connect either wire to the earth terminal.



This symbol indicates that this 2-core appliance is Class II and does not require an earth connection.

The wire coloured blue must be connected to the terminal marked with the letter N or coloured black.

The wire coloured brown must be connected to the terminal marked with the letter L or coloured red.



 
3-Core Plug

WARNING! This appliance must be earthed.

The wire coloured green and yellow must be connected to the terminal marked with the letter E, or by the earth symbol ⚡ or coloured green and yellow.

The wire coloured blue must be connected to the terminal marked with the letter N or coloured black.

The wire coloured brown must be connected to the terminal marked with the letter L or coloured red.

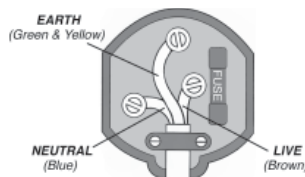

07 Guarantee

The Portable System is guaranteed for twelve months from the date of original purchase. If there are any defects due to faulty materials or workmanship, contact the Goodmans Helpline. Have your receipt of purchase on hand.

The guarantee is subject to the following provisions:

- It is only valid within the boundaries of the country of purchase.
- The product must be correctly installed and operated in accordance with the instructions contained in this User Guide.
- The Portable System must be used solely for domestic purposes.
- The guarantee will be rendered invalid if the Portable System is re-sold or has been damaged by inexpert repair.
- The manufacturer disclaims any liability for incidental or consequential damages.
- The guarantee is in addition to, and does not diminish, your statutory or legal rights.

Goodmans

SEPT08-GPS167 Revision 1