 


# Goodmans

## USER GUIDE

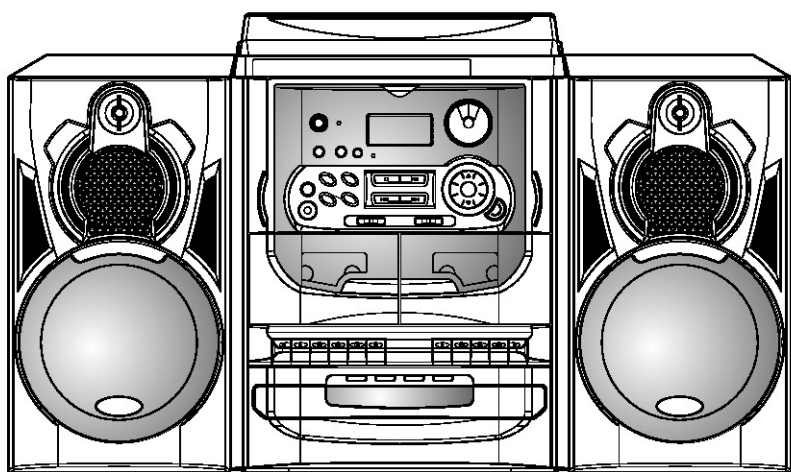

2719

**Stereo 3CD HI-FI System with Radio  
and Double Cassette**

Please read these instructions before use and keep for future reference

## WARNINGS



The exclamation point within the triangle is a warning sign alerting the user of important instructions accompanying the product.



The lightening flash with arrowhead symbol within the triangle is a warning sign alerting the user of "dangerous voltage" inside the unit.



To reduce the risk of electric shock, do not remove the cover. No user serviceable parts inside the unit. Refer all servicing to qualified personnel.

**230v~**

This unit operates on 230V ~ 50Hz. If the unit is not used for a long period of time, remove the plug from the AC mains.



This unit must not be exposed to moisture or rain.



The power switch in this unit is mounted on the secondary circuit and does not disconnect the whole unit from the mains in OFF position.



Ensure all connections are properly made before operating the unit.



This unit should be positioned so that it is properly ventilated. Avoid placing it, for example, close to curtains, on the carpet or in a built-in installation such as a bookcase.



 
Do not expose this unit to direct sunlight or heat radiating sources.

**CAUTION! If a 13 amp (BS1363) plug is used, a 3 amp fuse (BS1362) must be fitted.**

If the colours of the wires in the mains lead of this product do not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

- The blue wire must be connected to the terminal marked with the letter **N** or coloured black.
- The brown wire must be connected to the terminal marked with the letter **L** or coloured red.
- No connection must be made to the earth terminal inside the plug.

Plug should be BS1363/A approved.  
Fit a 3 Amp fuse.

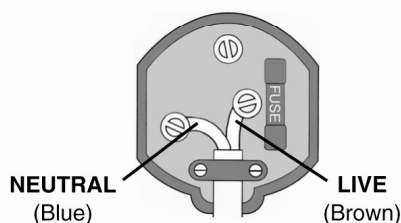




Ensure that the outer sheath of the cable is firmly held by the clamp.

**Goodmans 2719****STEREO 3CD MINI HI-FI SYSTEM WITH RADIO AND DOUBLE CASSETTE****INSTRUCTION MANUAL**

   Please read this instruction manual carefully and familiarize yourself with your new HIFI system before using it for the first time. Please retain this manual for future reference.

**LOCATION OF CONTROLS**

- 1) TURNTABLE DUST COVER
- 2) LCD DISPLAY
- 3) FM STEREO INDICATOR
- 4) REMOTE SENSOR
- 5) STANDBY LED INDICATOR
- 6) POWER BUTTON
- 7) RANDOM BUTTON
- 8) MUTE BUTTON
- 9) REPEAT BUTTON
- 10) MEMORY BUTTON
- 11) DISC CHANGE BUTTON
- 12) CD SEARCH BACKWARD BUTTON
- 13) HEADPHONE JACK
- 14) CD SEARCH FORWARD BUTTON
- 15) FUNCTION SELECTOR
- 16) CASSETTE DECK 1
- 17) DECK 1 CONTROL KEY
- 18) DISC 1-2-3 BUTTON
  - RECORD KEY
  - ▶ PLAYBACK KEY
  - ◀◀ REWIND KEY
  - ▶▶ FAST FORWARD KEY
  - ▲ STOP/EJECT KEY
  - || PAUSE KEY
- 19) TUNING KNOB
- 20) CD STOP BUTTON
- 21) CD PLAY / PAUSE BUTTON
- 22) VOLUME UP-DOWN BUTTON
- 23) CD SKIP FORWARD BUTTON
- 24) CD SKIP BACKWARD BUTTON
- 25) EXTRA BASS BUTTON
- 26) BAND/FM MODE SWITCH
- 27) CASSETTE DECK 2
- 28) DECK 2 CONTROL KEYS
- 29) CD DOOR OPEN/CLOSE BUTTON
- 30) CENTER SPINDALE ADAPTOR
- 31) 33/45 RPM SPEED SELECTOR
- 32) ARM PICK-UP HOLDER
- 33) SPEAKER TERMINALS
- 34) FM WIRE ANTENNA
- 35) AUTO STOP SWITCH
- 36) POWER CORD

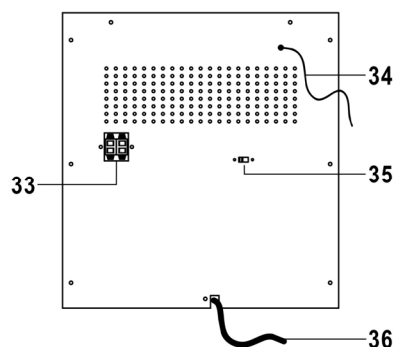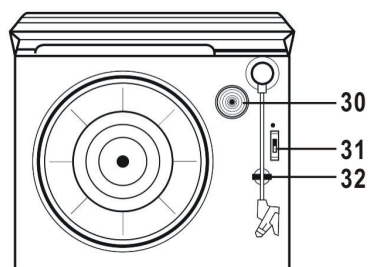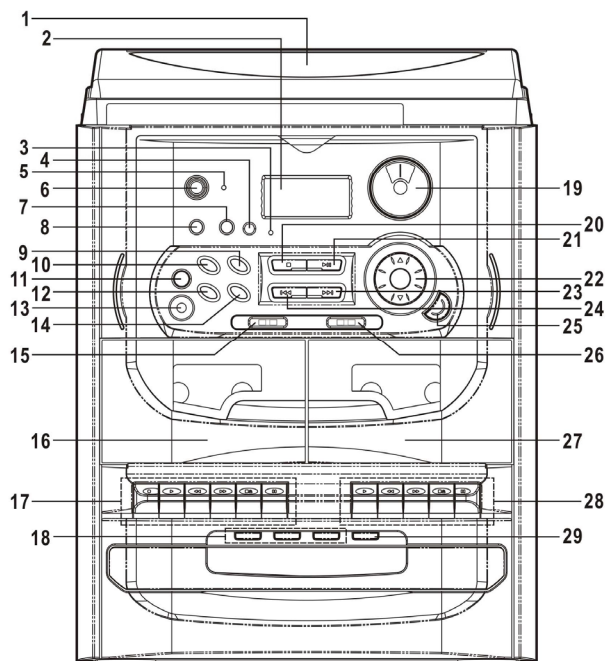

## REMOTE CONTROL

### BATTERY INSTALLATION (Battery not Supplied )

INSERT BATTERIES INTO THE REMOTE CONTROL BATTERY COMPARTMENT FOLLOWING THE POLARITY ( + - ) INDICATED. THE REMOTE CONTROL REQUIRE 2 X 1,5 “ AAA “ BATTERY FOR OPERATION (WE RECOMMEND TO USE A GOOD BRAND ALKALINE BATTERIES )

#### 1. POWER BUTTON

PRESS TO SWITCHING ON/STANDBY THE SYSTEM

#### 2. DISC-CH

PRESS TO ROTATE THE DISC TRAY IN CLOCKWISE

#### 3. MEMORY BUTTON

TO ACTIVE “MEMORY“ MODE FOR CD PROGRAMMING

#### 4. PLAY /PAUSE BUTTON

TO START PLAYING THE DISC AND INTERRUPT THE DISC PLAY AS DESIRED

#### 5. SKIP SEARCH BACKWARD BUTTON

PRESS TO SKIP/SEARCH DOWN OF CD DURING PLAYBACK

#### 6. SKIP SEARCH FORWARD BUTTON

PRESS TO SKIP/SEARCH UP OF CD DURING PLAYBACK

#### 7. STOP BUTTON

 
PRESS TO STOP THE PAYBACK OF CD OR CANCEL THE MEMORY/RANDOM FUNCTION AT CD MODE

#### 8. VOL +/- BUTTON

TO CONTROL THE VOLUME AT CD/VCD MODE

#### 9. MUTE

PRESS TO ACTIVE MUTE FUNCTION

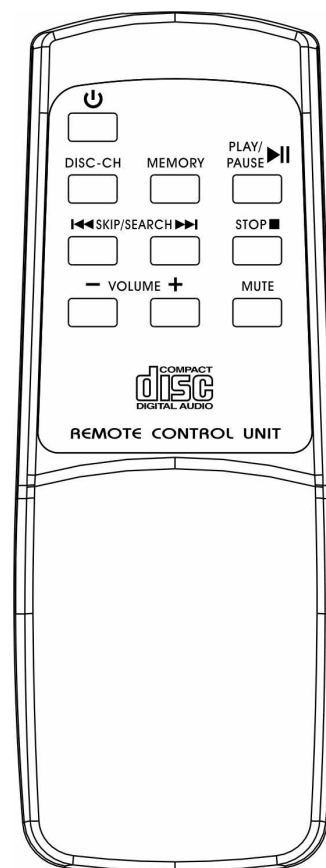

## CONNECTING TO POWER

BEFORE SWITCHING ON MAKE SURE THAT THE VOLTAGE OF YOUR ELECTRICITY SUPPLY IS SAME AS THAT INDICATED ON THE RATING LABEL  
FOR YOUR OWN SAFETY READ THE FOLLOWING INSTRUCTIONS CAREFULLY BEFORE ATTEMPTING TO CONNECT THIS UNIT TO THE MAINS.

### MAINS (AC) OPERATION

THIS UNIT IS DESIGNED TO OPERATE ON AC240V 50Hz CURRENT ONLY. CONNECTING IT TO OTHER POWER SOURCES MAY DAMAGE THE UNIT.

### CAUTION

TO PREVENT ELECTRIC SHOCK DISCONNECT FROM THE MAINS BEFORE REMOVING COVER. NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

### SAFETY PRECAUTION

DO NOT ALLOW THIS UNIT TO BE EXPOSED TO RAIN OR MOISTURE.  
MAINS SUPPLY: 240V 50Hz – AC ONLY



THIS SYMBOL MEANS THAT THIS UNIT IS DOUBLE INSULATED. AN EARTH CONNECTION IS NOT REQUIRED.

## POWER SUPPLY

---

REMOVE THE STEREO CAREFULLY FROM THE BOX, RETAIN THE PACKAGING FOR FUTURE USE.

### AC POWER OPERATION

CONNECT THE PLUG TO A MAINS POWER INLET 240V AC~50Hz

## IMPORTANT

---

SINCE MOVEMENT OF THE CD MECHANISM AND THE SENSITIVE CIRCUITRY MAY CAUSE INTERFERENCE TO THE RADIO TUNER NEARBY, SWITCH THIS UNIT OFF WHILE OPERATING OTHER RADIO DEVICES.

## INSTALLATION

---

- UNPACK ALL PARTS AND REMOVE PROTECTIVE MATERIAL.
- DO NOT CONNECT THE UNIT TO THE MAINS BEFORE CHECKING THE MAINS VOLTAGE AND BEFORE ALL OTHER CONNECTIONS HAVE BEEN MADE.
- DO NOT COVER ANY VENTS AND MAKE SURE THAT THERE IS A SPACE OF SEVERAL CENTIMETERS AROUND THE UNIT FOR VENTILATION.

## CONNECTION

---

1. CONNECT THE SPEAKER COLOUR CODED WIRES TO THE SPEAKER TERMINAL LOCATED AT THE BACK OF THE UNIT.
2. BEFORE CONNECTING THE POWER PLUG. BE SURE THE SWITCH AT THE POWER WALL OUTLET IS IN OFF POSITION.
3. CONNECT THE POWER CORD TO AC~240V 50Hz INTO THE WALL OUTLET.
4. SWITCH BACK ON THE POWER AT THE WALL OUTLET.
5. THE UNIT WILL GO INTO STANDBY MODE.
6. TURN ON THE POWER AND SELECT " CD " FUNCTION. IF THE LCD DISPLAY IS ON WITH BACKLIGHTING, IT'S MEAN THE POWER SUPPLY IS NORMAL. NOW YOUR SYSTEM IS READY TO PLAY THE MUSIC.

## LISTENING TO RADIO

---

### OPERATION

1. SET THE FUNCTION SELECTOR TO " RADIO " POSITION.
2. SELECT THE DESIRED RADIO FREQUENCY BAND FROM BAND SELECTOR.
3. TURN THE TUNING CONTROL, TO SET THE DESIRED RADIO STATION.
4. ADJUST VOLUME CONTROLS FOR THE DESIRED VOLUME LEVEL.

### FM & FM-STEREO RECEPTION

- SET THE FM MODE SELECTOR AT " FM " POSITION. PROGRAMS ARE RECEIVED IN MONO MODE. IN PARTICULAR WHEN STEREO SIGNALS ARE WEAK. IT IS PREFERABLE TO RECEIVE THE PROGRAM IN MONO.
- SET THE FM MODE SELECTOR AT " FM-ST " POSITION FOR RECEIVING STEREO PROGRAMS. THE STEREO LED INDICATOR WILL LIGHT UP TO SHOW FM STEREO PROGRAM IS RECEIVING.

 
### HINTS FOR BEST RECEPTION

**AM:** THE RECEIVER HAS A BUILT-IN ANTENNA. IF THE AM RECEPTION IS WEAK, SLIGHT ROTATE OR RE-POSITIONING THE UNIT, FOR BETTER AM RECEPTION.

**FM:** THE RECEIVER HAS A FM WIRE ANTENNA, HANGING AT THE REAR CABINET. THIS WIRE SHOULD BE TOTALLY UNRAVELED AND EXTENDED FOR BEST RECEPTION.

## PHONO


- REMOVE THE STYLUS PROTECTOR.
  - BE SURE THAT THE TONE ARM IS BEING DETACHED FROM THE TONE ARM REST BEFORE OPERATING, AND RE-SECURED AGAIN AFTERWARDS.
1. PRESS THE " PHONO " FUNCTION SWITCH.
  2. SET THE SPEED SELECTOR TO THE PROPER POSITION DEPENDING ON THE RECORD TO BE PLAYED.
  3. PLACE THE RECORD ON THE PLATTER (USE THE SPINDLE ADAPTOR IF REQUIRED).
  4. LIFT THE TONE ARM FROM THE REST AND SLOWLY MOVE IT TO THE RECORD SIDE. THE PLATTER WILL BEGIN TO ROTATE.
  5. PLACE THE TONE ARM TO THE DESIRED POSITION OF THE RECORD.
  6. ADJUST THE VOLUME TO THE DESIRED LEVEL.
  7. AT THE END OF RECORD, THE PLATTER WILL AUTOMATICALLY STOP ROTATING. LIFT THE TONE ARM FROM THE RECORD AND RETURN IT TO THE REST.
  8. TO STOP MANUALLY, LIFT THE TONE ARM FROM THE RECORD AND RETURN IT TO THE REST.

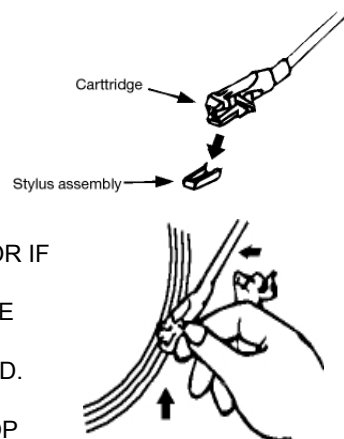

**REMARK :** AS SOME KIND OF RECORD THE AUTO-STOP AREA WAS OUT OF THE UNIT SETTING, SO IT WILL STOP BEFORE THE LAST RACK FINISH. IN THIS CASE, SELECT THE AUTO-STOP SWITCH TO " OFF " POSITION, THEN IT WILL RUN TO THE END OF THE RECORD BUT WILL NOT STOP AUTOMATICALLY (TURN OFF THE UNIT BY POWER BUTTON OR SWITCH BACK THE AUTO-STOP SWITCH TO " ON " POSITION TO STOP THE PLATTER ROTATE). THEN PUT BACK THE TONE ARM TO THE REST POSITION.

## PLAYING COMPACT DISC

### GETTING START

1. SELECT "CD" FUNCTION.
2. PRESS "OPEN/CLOSE" BUTTON TO OPEN THE CD DOOR.
3. PLACE A CD WITH THE PRINTED SIDE FACING UP INSIDE THE TRAY.
4. PRESS THE "  " OR " DISC-CH " BUTTON TO TURNING THE CD TRAY, AND LOADING OUT THE OTHER DISC COMPARTMENT.
5. PRESS THE "OPEN/CLOSE" BUTTON TO CLOSE THE CD DOOR.
6. CD SEARCH IS PERFORMING, AND THE 1<sup>ST</sup> DETECTED DISC WILL BE STARTED PLAYBACK AUTOMATICALLY.

**NOTE:** CD SEARCHING WILL BE PERFORMED EVERY TIME WHEN SWITCHING TO CD MODE OR CLOSING THE CD DOOR.

### PLAY / PAUSE MODE ►||

1. PRESS THE "PLAY/PAUSE" BUTTON TO START PLAYBACK, THE FIRST TRACK OF THE FIRST DISC WILL BE PLAYED AND THE PLAY INDICATOR WILL APPEAR ON THE LCD DISPLAY.
2. OR PRESS EITHER THE " DISC 1 " , " DISC 2 " , " DISC 3 " BUTTON, UNIT WILL PLAY THE DISC INSIDE THE DESIRE TRAY DIRECTLY.
3. TO INTERRUPT, PRESS THE "PLAY/PAUSE" BUTTON ONCE, AND THE DISPLAY WILL START FLASHING. PRESS AGAIN TO RELEASE & RESUME PLAYBACK.

### STOP MODE ■

1. IF "STOP" BUTTON IS PRESSED DURING PLAY OR PAUSE MODE, SYSTEM WILL GO TO STOP MODE.

### SKIP MODE (SKIP UP ►►/SKIP DOWN ◀◀)

1. DURING PLAY OR PAUSE MODE, IF " SKIP + " BUTTON IS PRESSED IT WILL GO TO NEXT TRACK AND DISPLAY THE TRACK NO. AND THEN REMAIN THE PLAY OR PAUSE MODE.
2. DURING PLAY OR PAUSE MODE, IF " SKIP - " BUTTON IS PRESSED. IT WILL GO BACK TO THE PREVIOUS TRACK AND REMAIN THE PLAY OR PAUSE MODE.

### SEARCH MODE ( SEARCH UP ►► SEARCH DOWN ◀◀ )

1. DURING PLAY MODE, IF " SEARCH + " BUTTON IS PRESSED & HOLD FOR FEW SECONDS, IT WILL START SEARCHING FORWARD.
2. DURING PLAY MODE, IF " SEARCH - " BUTTON IS PRESSED & HOLD FOR FEW SECONDS. IT WILL STAR SEARCHING BACKWARDS.

**NOTE:** UNIT WILL GO TO MUTE MODE DURING SEARCHING

## REPEAT PLAY

THIS FUNCTION ALLOW TO REPEAT 1 SINGLE TRACK, 1 SINGLE DISC OR ALL DISCS  
PRESS THE “ REPEAT “ KEYS REPEATEDLY TO SWITCH THE FUNCTION



**NOTE:** SINGLE TRACK REPEAT FUNCTION IS POSSIBLE IN NORMAL OR PROGRAMMED PLAYBACK, REPEAT ONE DISC OR ALL DISCS IS ONLY AVAILABLE IN NORMAL PLAYBACK.




## RANDOM PLAY

YOU CAN LISTEN ALL THE TACKS OF ONE SINGLE DISC IN A RANDOM ORDER BY THIS FUNCTION

1. PRESS "RANDOM" BUTTON ONCE DURING CD STOP/PLAYBACK MODE, UNIT WILL PLAY THE 1<sup>ST</sup> AVAILABLE DISC IN RANDOM ORDER, AND THE "RANDOM" SIGN APPEAR ON THE LCD DISPLAY.
2. PRESS "STOP" BUTTON TO CANCEL THE RANDOM MODE.

## CD PROGRAMMING (BY REMOTE CONTROL)

UP TO 32 TACKS CAN BE PROGRAMMED, CAN BE PLAYED IN ANY REQUIRED ORDER FROM ONE CD OR ALL CDs IN THE CD CHANGER.

1. SET IN CD MODE.
2. PRESS THE MEMORY BUTTON
3. PRESS THE “  ” TO SELECT THE DESIRED DISC.
4. PRESS SKIP  OR  BUTTON TO SELECT THE DESIRED TRACK.
5. PRESS THE “ MEMORY “ BUTTON AGAIN TO STORE THE TRACK IN MEMORY.
6. REPEAT STEPS 3 TO 5 TO ENTER ADDITIONAL PROGRAM
7. PRESS PLAY/PAUSE BUTTON TO START PLAYBACK IN ORDER.
8. PRESS “STOP” BUTTON TO STOP PLAYBACK AND PRESS AGAIN TO CLEAR ALL PROGRAMMED TRACKS.

## TAPE DECK

## GENERAL OPERATION

## STOP / EJECT KEY

- PRESS TO STOP ALL DECK OPERATION. PRESS AGAIN TO OPEN THE CASSETTE DOOR.

## FAST FORWARD

- PRESS TO START, FAST FORWARD WINDING THE TAPE.

## FAST REWIND

- PRESS TO START, FAST REWIND WINDING THE TAPE.

## PLAY

- PRESS TO START PLAYING TAPE.

**PAUSE**

- PRESS TO STOP TAPE OPERATION TEMPORARILY. PRESS AGAIN TO RESUME PLAY.

## RECORD

- PRESS TOGETHER WITH PLAY KEY TO START TAPE RECORDING. (TAPE DECK 1 ONLY)

## PLAYBACK

---

- SELECT "TAPE" FUNCTION
- PUT IN THE CASSETTE TAPE.
- PRESS PLAY KEY TO ACTIVE PLAYBACK
- ADJUST THE VOLUME CONTROL TO THE DESIRED LEVEL.
- USE PAUSE KEY WHEN YOU WANT TO STOP PLAYBACK TEMPORARILY.
- PRESS STOP / EJECT KEY WHEN FINISHED.

## RECORDING

---

### A. RECORDING FROM TAPE (DECK 2 TO DECK 1)

THIS UNIT ENABLES YOU TO DUPLICATE A PRE-RECORDED TAPE TO ANOTHER TAPE. IT IS PERFORMED ONLY ONE WAY FROM DECK 2 (PLAYBACK) TO DECK 1 (RECORDING).

#### DUBBING AT NORMAL SPEED

- SELECT "TAPE" FUNCTION.
- INSERT A PRE-RECORDED CASSETTE INTO DECK 2 AND A BLANK CASSETTE TAPE INTO DECK 1.
- PRESS THE "PAUSE" KEY AND THEN PRESS THE "RECORD" AND "PLAY" KEY AT DECK 1.
- PRESS THE "PLAY" KEY TO START PLAYBACK AT DECK 2 & THEN PRESS "PAUSE" KEY AT DECK 1 TO START DUBBING.
- PRESS "PAUSE" KEY AT DECK 1 & "STOP" KEY AT DECK 2 WHEN FINISH.

#### DUBBING AT HIGH SPEED

THIS UNIT IS EQUIPPED WITH A HIGH SPEED DUBBING SYSTEM WHICH CAN SAVE THE TIME FOR DUBBING BY 2/3 WHEN COMPARE TO NORMAL SPEED.

- PRESS THE DUBBING BUTTON TO "HI" POSITION AND THEN FOLLOW THE SAME PROCEDURES AS STIPULATED IN "DUBBING AT NORMAL SPEED".
- WHEN DUBBING A PRE-RECORDED CASSETTE TAPE AT HIGH SPEED, A CHATTERING SOUND IS BEING HEARD. TO AVOID THIS, SET THE VOLUME CONTROL TO A MINIMUM LEVEL.
- DO NOT ACTIVE/DE-ACTIVE THE "HI-NOR. DUBBING" BUTTON DURING DUBBING, THIS WILL VARY THE SPEED OF RECORDING AND MAY BE DAMAGE THE CASSETTE TAPE.

### B. RECORDING FROM RADIO

- SELECT "RADIO" FUNCTION
- TUNE TO THE DESIRED STATION AND INSERT A BLANK CASSETTE TAPE IN DECK 1.
- PRESS "RECORD" & "PLAY" KEY TO START RECORDING.
- PRESS "PAUSE" KEYS AND THEN "STOP/EJECT" KEY WHEN FINISH.

### C. RECORDING FROM CD

- SELECT "CD" FUNCTION.
- INSERT A BLANK CASSETTE TAPE IN DECK 1 WHICH SUITABLE FOR RECORDING.
- PRESS "PAUSE" KEY FIRST AND THEN "RECORD" & "PLAY" KEY AT CASSETTE. RECORDING FUNCTION IS NOW STAND BY.
- ACTIVATE THE CD PLAYER, AND THEN PRESS "PAUSE KEY" AT CASSETTE TO START RECORDING.
- TO STOP RECORDING, PRESS "STOP" BUTTON ON CD PLAYER FIRST, THEN PRESSES THE "PAUSE" KEY AND THEN "STOP/EJECT" KEY ON CASSETTE TAPE DECK.

## SPECIFICATIONS

---

### POWER SUPPLY

AC: 240V ~ 50Hz

### RADIO FREQUENCY COVERAGE

FM: 88-108 MHz

AM: 540-1600 kHz

Design and specifications are subject to change without notice.



## CARE & MAINTENANCE

---

### STYLUS

- Regularly check and remove any build-up of fluff from the stylus to prevent it from skidding and jumping across the disc surface.
- When transporting the unit always fit the stylus head protector and secure the ARM using the ARM clamp,

### RECORDS

- Clean your records with an anti-static lint free cloth. Gently wipe the disc surface in the direction of the grooves.
- When handling records avoid touching the disc surface.
- Always store records in their sleeves and away from heat.

#### **Correct Disposal of This Product** **(Waste Electrical & Electronic Equipment)**



This marking shown on the product or its literature, indicates that it should not be disposed with other household wastes at the end of its working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product should not be mixed with other commercial wastes for disposal.