

Goodmans DVD PLAYER

■ USER GUIDE

Before attempting to connect, operate or adjust this product, please save and read this manual completely.

FCC and Safety Information

CAUTION:

This unit employs a laser. Due to possible eye injury, only qualified service personnel should remove the cover or attempt to service this device. Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

Since it is usual for DVD movies to be released at different times in different regions of the world, all players have region codes and disc can have an optional region code. If you load a disc of a different region code to your player, you will see the region code notice on the screen. The disc will not play, and should be unloaded.

(Possible region codes:)



There are 6 regions (also called "locals"). Each DVD player and disc will be played in one region ONLY.

- 1: Canada, U.S., U.S. Territories
- 2: Japan, Europe, South Africa, Middle East (including Egypt)
- 3: Southeast Asia, East Asia (including Hong Kong)
- 4: Australia, New Zealand, Pacific Islands, Central America, Mexico, South America, Caribbean
- 5: Former Soviet Union, Indian Subcontinent, Africa (also North Korea, Mongolia)
- 6: China

Never make or change connections with the power switched on.

CAUTION VISIBLE AND INVISIBLE LASER RADIATION WHEN OPEN
AVOID EXPOSURE TO BEAM
(WARNING LOCATION: INSIDE ON LASER COVERSHIELD)

**CLASS I
LASER PRODUCT**

Important Safety Instruction

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with a damp cloth.
7. Do not block any of the ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized-type plug. A polarized plug has two blades with one wider than the other. The wide blade is provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plug, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Unplug this apparatus during lighting storms or when unused for long periods of time.
13. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way; such as when the power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
14. Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



Outdoor use or wet location applications:

An apparatus that does not comply with the requirements in Appendix A# (Outdoor Use and Wet Location Apparatus) shall be marked or the instruction manual packed with the word "WARNING" and the following or equivalent: "To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture."

A Class II APPARATUS shall be permanently marked with the words "DOUBLE INSULATION" or "Double insulated" and "When servicing use only identical replacement parts."

Precautions

Please read these precautions before operating this unit.

■ Power cord protection

To avoid any malfunctions of the unit, and to protect against electric shock, fire or personal injury, please observe the following.

- Hold the plug firmly when connecting or disconnecting the AC power cord.
- Keep the AC power cord away from heating appliances.
- Never put any heavy object on the AC power cord.
- Do not attempt to repair or reconstruct the AC power cord in any way.

■ Placement

Avoid placing the unit in areas of:

- direct sunlight or heating radiators, or closed automobiles
- high temperature (over 35°C) or high humidity (over 90%)
- much dust as the internal parts may be seriously damaged.

■ Non-use periods

When the unit is not being used, turn it off. When left unused for a long period of time, the unit should be unplugged from the household AC outlet.

■ No fingers or other objects inside

- Touching internal parts of this unit is dangerous, and may cause serious damage to the unit. Do not attempt to disassemble the unit.
- Do not put any foreign object on the disc tray.

■ Keep away from water/magnet

- Keep the unit away from flower vases, tubs, sinks, etc. If liquids are spilled into the unit, serious damage could occur.
- Never bring a magnet or magnetized object near the unit.

■ Stacking

- Place the unit in a horizontal position, and do not place anything heavy on it.

■ Condensation

Moisture may form on the lens in the following conditions:

- immediately after a heater has been turned on
- in a steamy or very humid room
- when the unit is suddenly moved from a cold environment to a warm one

If moisture forms inside this unit, it may not operate properly. In this case, turn on the power and wait about one hour for the moisture to evaporate.





■ If there is noise interference on the TV while a broadcast is being received

Depending on the reception condition of the TV, interference may appear on the TV monitor while you watch a TV broadcast and the unit is left on. This is not a malfunction of the unit or the TV. To watch a TV broadcast, turn off the unit.





Selecting the type of disc for the type of TV connected

DVD discs have the material recorded in the PAL and NTSC systems. Refer to the table below to select the correct disc type for the type of connected TV.





■ Connecting to the multi-system TV

DISC	TV MONITOR
 PAL	 Played in the PAL system.
 NTSC	 Played in the NTSC system.

■ Connecting to the NTSC TV

DISC	TV MONITOR
 PAL	 No clear images are shown on the screen.
 NTSC	 Played in the NTSC system.

■ Connecting to the PAL TV

DISC	TV MONITOR
 PAL	 Played in the PAL system.
 NTSC	 No clear images are shown on the screen.

Dear Customers

May we take this opportunity to thank you for purchasing this DVD player. We strongly suggest that you carefully study the Operating Instructions before attempting to operate the unit and that you note the listed precautions.

Contents

Getting Started:

FCC and Safety Information	ii
Important Safety Instruction	iii
Precautions	1
Selecting the type of disc for the type of TV connected	1

DVD:

DVD Playback	3
Basic Playback	3
Programming DVDs	3
Stopping Playback	3-4
Rapid Advance (Rapid Reverse)	4
Skipping Ahead or Back to Chapters	4
Still Picture	4
Frame Advance (STEP)	4
Slow-Motion Playback	4
Direct Selection of Scenes	5
Selecting Scenes by Title/Chapter Number	5
Selecting Scenes by Time	5
Repeat Playback	6
Repeat Viewing	6
Repeating Sections Between Two Specific Points (A-B Repeat)	6
Convenient functions	6
Displaying the Information of the Scene	6
Displaying the Scene With a Larger and Closer View	6
Changing Audio Soundtrack Language	7
Clearing/Displaying of Subtitles (A)	7
Changing Subtitle Language (B)	7
Viewing From Another Angle	8
Using a DVD Menu	8
Using the MENU Function	8
Switching to Another TV System	9
To Mute the DVD Player	9

Audio CDs:

Audio CD Playback	10
Basic Playback	10
Playing MP3 Music Discs	10
Stopping Playback	10
Rapid Advance (Rapid Reverse)	10
Skipping Ahead or Back to Tracks	10
Pause Playback	10
Programming Audio CDs	11
Information	11

Initial Settings:

Language Setup	12
On Screen Display (OSD) Language Setting	12
MENU Language Setting	12
AUDIO Soundtrack Language Selection [DVD]	13
SUBTITLE Language Selection [DVD]	13
Screen Setup	14
TV TYPE Display Setting	14
SCREEN SAVER Setting	14
TV SYSTEM Setting	15
BRIGHTNESS Setting	15
CONTRAST Setting	16
VIDEO OUTPUT Setting	16
Custom Setup	17
PARENTAL CONTROL Setting [DVD]	17
CHANGE PASSWORD Setting [DVD]	17
ANGLE MARK Setting [DVD]	18
DEFAULT Setting [DVD]	18
Audio Setup	19
OUTPUT Setting	19

For Your Reference:

Troubleshooting	19-20
Disc Handling and Maintenance	21
Definition of Terms	22

DVD Playback

Preparations

- Press on the power button of the TV set, and select “Video” as the TV input.
- Press on the power button of the stereo system if the player has been connected to a stereo system.

Basic Playback

1 Press POWER on.

2 Press EJECT to open the disc tray.

3 Place a disc onto the tray.

Hold the disc without touching its surfaces, position it with the printed title side facing up, align it with the guides, and place it in its proper position.

4 Press EJECT.

- The disc tray closes and the DVD player starts playback if the disc does not have any menus recorded on it.
- If the disc has one or more titles recorded on it, a menu screen will appear on the TV screen.

NOTE: Proceed with steps 5 and 6 when a menu is available on the disc.

5 Press ◀/▶/▲/▼ or the number button(s) to select the preferred title.

NOTE: To select a title, input the number, i.e. 1 for chapter 1, 10 for chapter 10, and etc.

6 Press PLAY/SEL.

The player now starts playback of the selected item.

DVD Playback - continued

Stopping Playback and Returning to The Menu Screen (If a Menu Screen Is Available on The Disc)

Press MENU. The DVD player stops playback, and then displays the menu screen.


After operation

When the DVD player is not in use, remove the disc and press POWER to turn off the player.

NOTE:

- The disc continues to rotate while the menu is displayed even after the player has finished playing a particular disc. When no further selections are to be played, be sure to press the STOP button to clear the menu screen.
- If the disc is placed in upside down (and it is a single sided disc), the player’s display will appear “NO DISC”.

For your reference:

- When “” appears while a button is being operated, it means that the corresponding operation is prohibited by the player.

Programming DVDs

1 Press PBC and then Press STOP.

2 Press PROGRAM.

3 Press the number button(s) to arrange the play list.

4 Press PLAY/SEL.

NOTE:

- Refer to page 11 for the detailed setting.

DVD Playback - continued

Stopping Playback

Press **STOP**.

Rapid Advance (Rapid Reverse)

By the remote control:

Press **◀◀ F.BWD or F.FWD ▶▶** during playback.

- Normal playback is resumed when you press PLAY/SEL.
- The speed of advance (▶▶ x2, ▶▶ x4, and etc) or reverse (◀◀ x2, ◀◀ x4, and etc.) changes for each press of the F.FWD or F.BWD button.

Skipping Ahead or Back to Chapters

You can skip a specific chapter or track to playback.

Skipping Ahead

Press **NEXT ▶▶** on the remote control or on the DVD player during playback.

Skips a chapter each time you press the button.

Skipping Back

Press **◀◀ PREV** during playback.

When you press the button once midway through a chapter, the DVD player returns to the beginning of the chapter to playback.

The player skips a chapter each time you press the button.

DVD Playback - continued

Still Picture (PAUSE)

Press **PAUSE/STEP** once during playback.

The screen is paused .

To return to normal playback

Press PLAY/SEL.

Frame Advance (STEP)

Press **PAUSE/STEP** twice during playback.

The disc is advanced by one frame each time you press the button.

To return to normal playback

Press PLAY/SEL.

Slow-Motion Playback

Press **SLOW** during playback.

The playback speed changes (▶▶ 1/2, ▶▶ 1/4, and etc.) each time you press the SLOW button.

To return to normal playback

Press PLAY/SEL.

Direct Selection of Scenes

Selecting Scenes by Title/Chapter Number

Allows you to locate specific titles/chapters of scenes to playback.

- 1 Press **GOTO** during playback.
- 2 Press **◀/▶** to move the cursor to the title or chapter number.
- 3 Press the number button(s) to select the preferred title or chapter.


Example:

To locate "Title 5 Chapter 5", press "5" in Title input blanks, and "5" in Chapter input blanks.

4 Press **PLAY/SEL**.

The DVD player starts playback from selected title/chapter numbers.

For your reference:

- When  appears while you are pressing a button, it may indicate that the corresponding operation is prohibited by the player.
- When pressing **GOTO** once, you can select scenes by **CHAPTER/TITLE**.
- When Pressing **GOTO** twice, you can select scenes by **TIME**.
- To exit the direct selection of scenes, press **GOTO** three times.

Direct Selection of Scenes- continued

Selecting Scenes by Time

Example: Viewing after 1 hour and 50 minutes have elapsed from the title starts.

- 1 Press **GOTO** twice during playback.
- 2 Press **◀/▶** to move the cursor to the time number.
- 3 Press the number button(s) to specify the starting position.

Example:


To locate "01 hr. 50 min. 00 sec.", press "1", "5", "0", "0" and "0".

4 Press **PLAY/SEL**.

The DVD player starts playback from the specified position.

- These operations work only with discs for which the elapsed playing time appears on the player's display during playback.
- For some discs, **PLAY** may not start from the specified position even when the steps above have been performed correctly.

For your reference:

- When  appears while you are pressing a button, it may indicate that the corresponding operation is prohibited by the player.
- When pressing **GOTO** once, you can select scenes by **CHAPTER/TITLE**.
- When Pressing **GOTO** twice, you can select scenes by **TIME**.
- To exit the direct selection of scenes, press **GOTO** three times.

Repeat Playback

Repeat Viewing

1 Press PBC

“Navigate OFF” appears on the screen.

2 Press 1/ALL REPEAT during playback.

Each time you press the button, the disc will repeat a chapter or title.

Press once : REP CHAPTER (Repeat chapter)

Press twice : REP TITLE (Repeat title)

Press three times : REP DISC (Repeat disc)

Press four times : REP Off (Repeat cancelled)

To return to normal playback

Press 1/ALL REPEAT several times until “REPEAT Off” appears.

NOTE:

- Repeat playback works only with discs for which the elapsed playing time appears on the player’s display during playback.
- Repeat playback may not work correctly with some DVDs.

Repeating Sections Between Two Specific Points (A-B Repeat)

1 Press A-B during playback at the point where repeat play is to start (A).

“REP A” appears on the screen.

2 Press A-B again at the point where repeat play is to end (B).

“REP A-B” appears on the screen.

Repeat playback of points A to B starts playback.

To return to normal playback

Press A-B again. (“REP Off” appears on the screen.)

NOTE:

- A-B repeat playback works only within a chapter.

Convenient Functions

Displaying the Information of the Scene

Displaying the Information of the Scene

1 Press INFO. during playback.

Press INFO. a number of times, the title number, chapter number, and other information will show on the screen.

Stop Displaying the Information of the Scene

Press INFO. a number of times until the information disappears.

Displaying the Scene With a Larger and Closer View

The ZOOM function enables you to take a closer look at the scene while you are watching a movie.

1 Press ZOOM during playback.

2 Press ZOOM once to see the scene in 2 times of size; press twice to see the scene in 4 times of size.

Press ZOOM a number of times to see the scene in different sizes.

To return to normal playback

Press ZOOM a number of times until “x 1” is shown on the screen.

Convenient Functions - continued

Changing Audio Soundtrack Language

You can change the audio language from the one selected at the initial settings to a different language, if available. (This operation functions only with discs on which multiple audio soundtrack languages are recorded.)

1 Press AUDIO during playback.

2 Press AUDIO a number of times until the preferred language is selected.

For your reference:

- When the preferred language is not selected even after pressing the button several times, it may indicate that language is not available on the disc.
- When you turn on or remove the disc the DVD player will play back the language which is selected at the initial setting. If you select a language which is not recorded on the disc the DVD player will play back a prior language programmed on the disc.

Convenient Functions - continued

Clearing/Displaying of Subtitles (A)

If a disc provides subtitles, you can choose to hide or display them. (This operation works only with discs that provide subtitles.)

Press SUBTITLE during playback to display subtitles or hide them.

When you press SUBTITLE once, the first subtitle recorded on the disc will display. The rest of the subtitles recorded will display in sequence as you press the button.

- You may change to another language with this function, or you can CANCEL the subtitle by pressing this button a number of times until "SUBTITLE OFF" appears on the screen.

Changing Subtitle Language (B)

You can change the subtitle language with the initial settings, if available.

(This operation works only with discs on which multiple subtitle languages are included.)

1 Press SUBTITLE during playback.

When no subtitles are recorded " " will display instead of the language number.

2 Press SUBTITLE a number of times until the preferred language is selected.

NOTE:


- In some cases, the subtitle language may not change immediately to the selected one.

For your reference:

- When the preferred subtitle language is not selected even after pressing the button several times, it may indicate that the language is not available on the disc.
- When you turn on or remove the disc, the DVD player will play back the subtitle language which is selected at the initial setting. If you select a subtitle language which is not recorded on the disc the player will play back a prior subtitle language programmed on the disc.


Convenient Functions - continued

Viewing From Another Angle

Some DVD discs may contain scenes which have been shot simultaneously from a number of different angles. For these discs, the same scenes can be viewed from each of these different angles using the ANGLE “” button. (The recorded angles vary depending on the disc programmed.)

1 Press ANGLE during playback.

2 Press ANGLE a number of times until the preferred viewing angle is selected.

Press the angle “” button a number of times to change the viewing angle.

NOTE:

- ANGLE will only function on discs where different angles have been recorded.
- The viewing angles are shown on the player's display and you can select one from them for viewing .

Using a DVD Menu

Some DVD discs have unique menu structures called DVD menus. For example, DVDs programmed with complex contents provide guide menus, and those recorded with various languages provide menus for audio and subtitle language. Although the DVD menu's contents and operation vary from disc to disc, the following explains basic operation when this feature is used.

1 Press TITLE in STOP mode

The DVD menu available on the disc now appears.

2 Press  /  /  /  to select the preferred item.

3 Press PLAY/SEL.

you now enter to the selected item.

To enter other menu screen

Repeat steps 2 and 3.

To return to the previous menu screen

Press TITLE.





Convenient Functions - continued

Using the MENU Function

1 Press PLAY/SEL.

2 Press MENU.

A DVD chapter menu with brief broadcast of each paragraph now appears. You may see the introduction of each chapter and then decide with which chapter to start first.

3 Press  /  /  /  or number button(s) to select the preferred item.

Note:

The menu details vary depending on discs recorded.

Convenient Functions - continued

Switching to Another TV System

Both the DVD discs have the material recorded in the PAL and NTSC systems. This player provides PAL, NTSC and Multi TV types for your selection. (Refer to page 1 for the examples)

1 Press TV SYS. during playback.

2 Press TV SYS. button a number of times to select a TV system.

NOTE:

- Press the TV SYS. button once to switch to NTSC system. Press twice to switch to PAL system. Press 3 times to switch to AUTO system.

To Mute the DVD Player

In some cases, you may need to mute the DVD player temporarily. This player provides a MUTE function for your selections.

1 Press MUTE button during playback.

- When “MUTE” appears on the screen, the DVD player is mute. To resume the sound, press the button a number of times until “MUTE OFF” appears on the screen.

Audio CD Playback

Preparations

- Power on the TV set, and then select “Video” as the TV input.
- Power on the stereo system if the player has been connected to a stereo system.

Basic Playback

- 1 Press POWER on.**
- 2 Press EJECT to open the disc tray.**
- 3 Place a disc onto the tray.**
Hold the disc without touching its surfaces, position it with the printed title side facing up, align it with the guides, and place it in its proper position.
- 4 Press EJECT.**

For audio CDs without playback control:
The DVD player starts playback.

Playing MP3 Music Discs

- 1 Press POWER on.**
- 2 Press EJECT to open the disc tray.**
- 3 Place a MP3 disc onto the tray.**
- 4 Press EJECT.**

After tray closes, wait about 5 seconds, playback will start automatically.

Normally, MP3 discs are divided into Root directories (main menu) which are sub-divided to MP3 music. You may select a specific MP3 music to playback .

With Root Directories

- Press STOP to enter to the directories
- Select a specified track to playback by pressing ◀/▶ ▲/▼ buttons or the numbers.
- Press PLAY

Without Root Directories

- During playback, select a specified track to playback by pressing ◀/▶ ▲/▼ buttons or the numbers.
- Press PLAY

Audio CD Playback - continued

Stopping Playback

Press **STOP**.

Rapid Advance (Rapid Reverse)

By the remote control:

Press **◀◀ F.BWD or F.FWD ▶▶** down during playback.

- Normal play is resumed when you release the button.
- The speed of forward (▶▶ x2, ▶▶ x4, and etc.) or reverse (◀◀ x2, ◀◀ x4, ◀◀ x8, and etc.) changes for every press of the F.FWD or F.BWD button.

Skipping Ahead or Back to Tracks

Skipping Ahead

Press **NEXT ▶▶▶** during playback.

A track is skipped each time you press the button.

Skipping Back

Press **◀◀ PREV** during playback.

When you press the button once midway through a track, the DVD player returns to the beginning of the track to playback. The player skips a track each time the button is pressed.

Pause Playback

Press **PAUSE/STEP** during playback.

The player will pause playback.

To return to normal playback

Press **PLAY/SEL**.

Audio CD Playback - continued

Programming Audio CD Soundtrack

You can program music to play back in your favorite order.

1 Press STOP.

2 Press PROGRAM.

3 Press the number button(s) to arrange the play list.

4 Press PLAY/SEL.

NOTE:

- You will see the below list displayed on screen after step 2.

PROGRAM

Input the number corresponding to the order of the track on the audio CD you wish to play.

- The default playback order will start from the beginning to the end of the tracks if you did not set it yourself. On the contrary, if you did set all the playback order of the available tracks, the DVD player will start playback of the order you specified.

To Reset the Programmed Items

- Press STOP and then Press PROGRAM
- Press CLEAR.

Information [Audio CDs]

Displaying the Information of the Playing Track

Displaying the Information of the Playing track

1 Press INFO. during playback.

Press INFO. a number of times, the elapsed time, track number, and other information will appear on the screen.

Stop Displaying the Information of the Playing Track

Press INFO. a number of times until the information disappears.

LANGUAGE SETUP

On Screen Display (OSD) Language Setting

Allows you to set various languages for the on screen display (OSD).

- 1 Press SETUP in the stop mode.**
- 2 Press ▲/▼ to select “LANGUAGE SETUP” then press PLAY/SEL.**
- 3 Press ▲/▼ to select “OSD” then press PLAY/SEL.**
- 4 Press ▲/▼ to select the preferred language.**
- 5 Press PLAY/SEL.**

To return to the SETUP MENU screen

Select “RETURN” and press PLAY/SEL.

To finish the setup operation

Press SETUP to exit or select EXIT from SETUP MENU screen.

LANGUAGE SETUP -continued

MENU Language Setting

You can select a preferred language among various languages that has been recorded on discs for the disc menu messages display.

- 1 Press SETUP in the stop mode.**
- 2 Press ▲/▼ to select “LANGUAGE SETUP” and press PLAY/SEL.**
- 3 Press ▲/▼ to select “MENU” then press PLAY/SEL.**
- 4 Press ▲/▼ to select the preferred language.**
- 5 Press PLAY/SEL.**

To return to the SETUP MENU screen

Select “RETURN” and press PLAY/SEL.

To finish the setup operation

Press SETUP to exit or select EXIT from SETUP MENU screen.

For your reference:

- If the language selected is not recorded on the disc, the DVD player will play back the top-priority language of the disc.

LANGUAGE SETUP - continued

AUDIO Soundtrack Language Selection [DVD]

You can select a preferred soundtrack language among various languages that have been recorded on DVD discs.

- 1 Press the SETUP in the stop mode.**
- 2 Press ▲/▼ to select “LANGUAGE SETUP” then press PLAY/SEL.**
- 3 Press ▲/▼ to select “AUDIO” then press PLAY/SEL.**
- 4 Press ▲/▼ to select a preferred language.**
- 5 Press PLAY/SEL.**

ORIGINAL:

The top-priority language of each disc will always play back first.

To return to the SETUP MENU screen

Select “RETURN” and press PLAY/SEL.

To finish the setup operation

Press SETUP to exit or select EXIT from SETUP MENU screen.

For your reference:

- If the language selected is not recorded on the disc, the DVD player will play back the top-priority language of the disc.

LANGUAGE SETUP - continued

SUBTITLE Language Selection [DVD]

You can select a preferred subtitle language among various languages that have been recorded on DVD discs.

- 1 Press SETUP in the stop mode.**
- 2 Press ▲/▼ to select “LANGUAGE SETUP” and press PLAY/SEL.**
- 3 Press ▲/▼ to select “SUBTITLE”, then press PLAY/SEL.**
- 4 Press ▲/▼ to select a preferred language.**
- 5 Press PLAY/SEL.**

To return to the SETUP MENU screen

Select “RETURN” and press PLAY/SEL.

To finish the setup operation

Press SETUP to exit or select EXIT from SETUP MENU screen.

For your reference:

- If the language selected is not recorded on the disc, the subtitle will playback the top-priority language of the disc.

SCREEN SETUP

TV TYPE Display Setting

The kind of TV set (4:3 or 16:9) connected to the player and a wide-screen picture type for a 4:3 TV set can be selected.

- 1 Press **SETUP** in the stop mode.
- 2 Press **▲/▼** to select “**SCREEN SETUP**” and press **PLAY/SEL**.
- 3 Press **▲/▼** to select “**TV TYPE**” then press **PLAY/SEL**.
- 4 Press **▲/▼** to select a preferred TV display.

4:3 PS

Select 4:3 PS for a conventional size TV set.

Video material formatted in the pan & scan style is played in that style (the left and right edges are cut off).



4:3 LB (factory preset setting)

Select 4:3 LB for a conventional size TV set.

Black bands appear at top and bottom of screen (letter-box style).



- Video material not formatted in the pan & scan style is played in the letter-box style.

16:9

Select WIDE for a wide-screen TV set.

Played in “FULL” size.



- Setting the wide-screen TV to “FULL” mode is also necessary.
- Each screen shows an example when the video material for a wide-screen is played.

5 Press **PLAY/SEL**.

To return to the **SETUP MENU** screen

Select “RETURN” and press **PLAY/SEL**.

To finish the setup operation

Press **SETUP** to exit or select **EXIT** from **SETUP MENU** screen.

SCREEN SETUP - continued

SCREEN SAVER Setting

If you have set the screen saver ON by the following method then you may see it functioning in the stop mode. This function will ONLY function in the stop mode.

- 1 Press **SETUP**.
- 2 Press **▲/▼** to select “**SCREEN SETUP**” and press **PLAY/SEL**.
- 3 Press **▲/▼** to select “**SCREEN SAVER**”.
- 4 Press **▲/▼** to select “**ON**” or “**OFF**” and press **PLAY/SEL**.

The waiting time of the screen saver is set to 60 seconds. In other words, when you are in the stop mode and have not operated the DVD player over 60 seconds then the screen saver will appear automatically on the TV.

To return to the **SETUP MENU** screen

Select “RETURN” and press **PLAY/SEL**.

To finish the setup operation

Press **SETUP** to exit or select **EXIT** from **SETUP MENU** screen.

SCREEN SETUP - continued

TV SYSTEM Setting

The player provides "PAL", "NTSC" and "AUTO" settings for your selection. (Refer to page 1 for the examples)
Video output changes according to the playback disc's recorded format. When connecting the DVD player to your TV, set the "TV SYSTEM" from the on-screen display to the format that is compatible with your TV's system. Set "NTSC" from on-screen display if connecting to NTSC TV system, set "PAL" if it is PAL TV, or set "AUTO" if it is a multi-TV system that supports both PAL and NTSC.

- 1 Press SETUP.**
- 2 Press ▲/▼ to select "SCREEN SETUP" and press PLAY/SEL.**
- 3 Press ▲/▼ to select "TV SYSTEM" then press PLAY/SEL.**
- 4 Press ▲/▼ to select the appropriate TV system for your clearest view.**
- 5 Press PLAY/SEL.**

To return to the SETUP MENU screen

Select RETURN and then press PLAY/SEL.

To finish the setup operation

Press SETUP to exit or select EXIT from SETUP MENU screen.

SCREEN SETUP - continued

BRIGHTNESS Setting

You can adjust the brightness of the video with this setting to a soothing view for your eyes.

- 1 Press SETUP.**
- 2 Press ▲/▼ to select "BRIGHTNESS" and press PLAY/SEL.**
- 3 Press ▲/▼ to select the preferred setting.**
- 4 Press PLAY/SEL.**

To return to the SETUP MENU screen

Select RETURN and then press PLAY/SEL.

To finish the setup operation

Press SETUP to exit or select EXIT from SETUP MENU screen.

SCREEN SETUP - continued

CONTRAST Setting

You can adjust the contrast of video with this setting to a soothing view for your eyes .

- 1 Press SETUP.**
 - 2 Press ▲/▼ to select “CONTRAST” and press PLAY/SEL.**
 - 3 Press ▲/▼ to select the preferred setting.**
 - 4 Press PLAY/SEL.**
-

To return to the SETUP MENU screen

Select RETURN and then press PLAY/SEL.

To finish the setup operation

Press SETUP to exit or select EXIT from SETUP MENU screen.

SCREEN SETUP - continued

VIDEO OUTPUT Setting

Three types of video output, RGB, YUV, and NORMAL can be set.

- 1 Press SETUP.**
 - 2 Press ▲/▼ to select “SCREEN SETUP” and press PLAY/SEL.**
 - 3 Press ▲/▼ to select “VIDEO OUTPUT” then press PLAY/SEL.**
 - 4 Press ▲/▼ to select the preferred audio output setting**
 - 5 Press PLAY/SEL.**
-

To return to the SETUP MENU screen

Select RETURN and then press PLAY/SEL.

To finish the setup operation

Press SETUP to exit or select EXIT from SETUP MENU screen.

For your reference:

- Select “RGB” or “YUV” settings if a component video cable connected to your TV set.
- The component video connectors may differ by the models. Select “RGB” or “YUV” according to the connectors equipped on the model that you purchase.

CUSTOM SETUP

PARENTAL CONTROL Setting [DVD]

A built-in viewer rating setting enables you to lock the videos that you do not want children to view. For example, if you set it to PG-13 then the player will not play the videos rated R, NC-17 or X unless the correct password is entered.

- 1 Press SETUP in the stop mode.**
- 2 Press ▲/▼ to select “CUSTOM SETUP” and press PLAY/SEL.**
- 3 Press ▲/▼ to select “PARENTAL CONTROL” and press PLAY/SEL.**
- 4 Enter a 4-digit password and press PLAY/SEL**
Factory pre-set password : 0000
You need to enter “0000” to set the rating for the first time when purchasing your DVD from the store.
- 5 Press ▲/▼ to select ratings and press PLAY/SEL.**

To return the screen to the SETUP MENU

Select RETURN and then press PLAY/SEL.

To finish the setup operation

Press SETUP to exit or select EXIT from SETUP MENU screen.

For Your Reference:

- You can use the parental control lock ONLY with DVD video discs featured with the parental lock function.
- Some discs may not be encoded with specific rating level information though its disc jacket says that is for “adults”. For those discs, PARENTAL CONTROL lock will not function.

CUSTOM SETUP - continued

CHANGE PASSWORD Setting [DVD]

You can change the password to your DVD by selections.

- 1 Press SETUP in the stop mode.**
- 2 Press ▲/▼ to select “CUSTOM SETUP” and press PLAY/SEL.**
- 3 Press ▲/▼ to select “CHANGE PASSWORD” and press PLAY/SEL.**
- 4 Enter your old password, and then press PLAY/SEL.**
- 5 Enter your new password, and then press PLAY/SEL.**

To return the screen to the SETUP MENU


Select RETURN and then press PLAY/SEL.

To finish the setup operation

Press SETUP to exit or select EXIT from SETUP MENU screen.

CUSTOM SETUP - continued

ANGLE MARK Setting [DVD]

You can choose to display or hide the angle mark “” on screen.

- 1 Press **SETUP** in the stop mode.
- 2 Press **▲/▼** to select “CUSTOM SETUP” and press **PLAY/SEL**.
- 3 Press **▲/▼** to select “ANGLE MARK”, and then press **PLAY/SEL**.
- 4 Press **▲/▼** to select “ON” or “OFF” and press **PLAY/SEL**.

NOTES:

Whether the ANGLE MARK is set to ON or OFF with this setting, when you press the ANGLE button, the DVD player will still playback multi-angles that are available on the video discs.

DEFAULT Setting

You may re-set the previous settings in CUSTOM SETUP to the default setting.

- 1 Press **SETUP** in the stop mode.
- 2 Press **▲/▼** to select “CUSTOM SETUP” and press **PLAY/SEL**.
- 3 Press **▲/▼** to select “DEFAULT” and select **READ**
- 4 Press **PLAY/SEL**

Exceptions:

The viewer rating and the password setting will NOT be changed even though you re-set to the DEFAULT setting.

To return the screen to the SETUP MENU

Select **RETURN** and then press **PLAY/SEL**.

To finish the setup operation

Press **SETUP** to exit or select **EXIT** from **SETUP MENU** screen.

AUDIO SETUP

OUTPUT Setting [DVD]

The DVD players provides various types of audio output to set and that include 2-channel stereo sound, Dolby Digital 5.1 surround sound, and digital sound output.

- 1 Press **SETUP** in the stop mode.
- 2 Press **▲/▼** to select “AUDIO SETUP” and press **PLAY/SEL**.
- 3 Press **▲/▼** to select “OUTPUT” and press **PLAY/SEL**.
- 4 Press **▲/▼** to select a preferred output setting
- 5 Press **PLAY/SEL**

NOTE:

- The digital output connectors are used to output the digital audio signal recorded on discs. You can output the digital signal via either coaxial output jack or optical output jack to an amplifier. If you set Audio Output to <Digital> from on-screen display, the sound will be output as the original sound recording format on discs (for example; Dolby Digital).
- When using a microphone, set Audio Output from on-screen display to **ANALOG**.

WARNING:

- Do not connect both analog output (R/L) and digital output (Coaxial/optical) at the same time for audio output.
- Do not set “AUDIO SETUP” TO “Digital” via the on-screen display unless you are connecting (via the PCM/DOLBY DIGITAL AUDIO OUT jack) an A/V decoder that has the Dolby Digital (AC-3) decoding function. High volume sound may damage your hearing as well as the speakers.

To return the screen to the SETUP MENU

Select **RETURN** and then press **PLAY/SEL**.

To finish the setup operation

Press **SETUP** to exit or select **EXIT** from **SETUP MENU** screen.

Troubleshooting

Before requesting service for the DVD player, check the chart below for a possible cause of the problem you are experiencing. Some simple checkups or a minor adjustment on your part may eliminate the problem and restore proper operation.

SYMPTOM (COMMON)	REMEDY
No power.	<ul style="list-style-type: none"> • Insert the power plug securely into the power outlet. • Check if the ON/OFF button on the front of the player is set to on. • Check if no power at the AC outlet by plugging in another appliance for a test.
The player does not start playback when PLAY is pressed.	<ul style="list-style-type: none"> • Condensation has formed: wait about 1 to 2 hours to allow the player to dry out. • This player cannot play discs other than DVDs and audio CDs. • Check if the disc is defective by trying another disc. • Check the region (local) code.
The player starts playback but stops immediately.	<ul style="list-style-type: none"> • The disc may be dirty and may require cleaning. • Ensure that the disc is installed with the label side up.
No picture.	<ul style="list-style-type: none"> • Ensure that the equipment is connected properly. • Ensure that the input setting for the TV is "Video". • Check if the TV is on. • Select the same channel and source on the TV as on the player.
No sound.	<ul style="list-style-type: none"> • Ensure that the equipment is connected properly. • If using a HiFi amplifier, try another sound source.
Distorted sound.	<ul style="list-style-type: none"> • Check the Audio Output Setting menu to make sure that Analog Output is selected. • Ensure that the input settings for the TV and stereo system are proper.
No audio at Digital Output.	<ul style="list-style-type: none"> • No sound is heard during still picture (pause) or slow-motion playback. • Check the digital connections. • Check the settings menu to make sure that the digital output is set to on. • Check if the audio format of the selected audio language matches your receiver capabilities.
Distorted picture.	<ul style="list-style-type: none"> • Check the disc for fingerprints and clean with a soft cloth, wiping from center to edge. • Sometimes a small amount of picture distortion may appear. This is not a malfunction.
Completely distorted picture or no color in picture.	<ul style="list-style-type: none"> • The disc format is not according to the TV-set used (PAL/NTSC).
Picture is distorted during rapid advance or rapid reverse.	<ul style="list-style-type: none"> • The picture will be somewhat distorted at times: this is normal.
No rapid advance (or rapid reverse) playback.	<ul style="list-style-type: none"> • Some discs may have sections which prohibit rapid advance (or rapid reverse).
No 4:3 (16:9) picture.	<ul style="list-style-type: none"> • Choose the correct setup "TV DISPLAY" item which matches the TV set used.
No operations perform with the remote control.	<ul style="list-style-type: none"> • Check the batteries are installed with the correct polarities (+ and -). • The batteries are depleted: replace them with new ones. • Point the remote control unit at the remote control signal sensor and operate. • Operate the remote control unit at a distance of not more than 7 meters from the remote control signal sensor. • Remove the obstacles between the remote control unit and remote control signal sensor.
No key operation (by the DVD player and/or the remote control) is effective.	<ul style="list-style-type: none"> • Turn the unit off and then back to on. Alternatively, turn off the unit, disconnect the AC power cord and then re-connect it. (The player may not be operating properly due to lightning, static electricity or some other external factor.)

SYMPTOM [DVD]	REMEDY
PLAY does not start playback even when title is selected.	<ul style="list-style-type: none"> • This may be a result of the parental lock function that has been set. Confirm the "PARENTAL" setup.
Audio soundtrack and/or subtitle language is not the one selected at the initial settings.	<ul style="list-style-type: none"> • If the audio soundtrack and/or subtitle language does not exist on the disc, the language selected at the initial settings will not be seen/heard.

(Continued on the next page)

Troubleshooting- continued

SYMPTOM [DVD]	REMEDY
No subtitles.	<ul style="list-style-type: none">• Subtitles appear only with discs that contain them.• Subtitles are hidden from the TV screen. Press SUBTITLE to display the subtitles.
Alternative audio soundtrack (or subtitle) languages cannot be selected.	<ul style="list-style-type: none">• An alternative language can not be selected may result of no more than one language available.
Angle cannot change.	<ul style="list-style-type: none">• This function depends on software availability. Even if a disc has a number from angles recorded, these angles may be recorded for specific scenes only.

Disc Handling and Maintenance

Handling Precautions

- Hold the disc by the edges so the surface will not be soiled with fingerprints. (A)
Fingerprints, dirt and scratches can cause skipping and distortion.
- Do not write on the label side with a ball-point pen or other writing utensils.
- Do not use record cleaning sprays, benzine, thinner, static electricity prevention liquids or any other solvent.
- Be careful not to drop or bend the disc.
- Do not install more than 1 disc on the disc tray.
- Do not try to close the disc tray when the disc is not installed properly. (B)
- Be sure to store the disc in its exclusive case when not in use.

If the surface is soiled (C)

Wipe gently with a soft, damp (water only) cloth.

When wiping discs, always move the cloth from the center hole toward the outer edge.

(If you wipe the discs using a circular motion, circular scratches are likely to occur, which will cause noise.)

If the disc is brought from a cold to a warm environment, moisture may form on the disc

Wipe this moisture off with a soft, dry, lint-free cloth before using the disc.

Improper disc storage

You can damage discs if you store them in the following places:

- Areas exposed to direct sunlight
- Humid or dusty areas
- Areas directly exposed to a heat outlet or heating appliance

Disc which cannot be played with this player

- CD-ROM (Application Program)
- CVD
- CD-G
- DVD with a Locale No. other than that shown on the DVD unit's Region Code Label on the rear panel


Maintenance

- Be sure to turn the unit off and disconnect the AC power cord before maintaining the unit.
- Wipe this unit with a dry soft cloth.
If the surfaces are extremely dirty, wipe clean with a cloth which has been dipped in a weak soap-and-water solution and wrung out thoroughly, and then wipe again with a dry cloth.
- Never use alcohol, benzine, thinner, cleaning fluid or other chemicals. And do not use compressed air to remove dust.


(A)



(B)

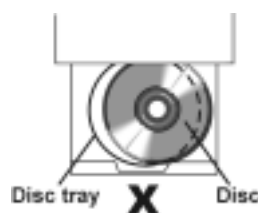

(C)

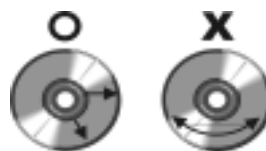

Definition of Terms

Angle

Recorded onto some DVD discs are scenes which have been simultaneously shot from a number of different angles (the same scene is shot from the front, from the left side, from the right side, etc.). With such discs, the ANGLE button can be used to view the scene from different angles.

Chapter Number

These numbers are recorded on DVD discs. A title is subdivided into many sections, each of which is numbered, and specific parts of video presentations can be searched quickly using these numbers.

DVD

These refer to a high-density optical disc on which high-quality pictures and sound have been recorded by means of digital signals. Incorporating a new video compression technology (MPEG II) and high-density recording technology, DVD enables aesthetically pleasing full-motion video to be recorded over long periods of time (for instance, a whole movie can be recorded).

DVD has a structure consisting of two 0.6 mm thin discs which are adhered to each other. Since the thinner the disc, the higher the density at which the information can be recorded, a DVD disc has a greater capacity than a single 1.2 mm thick disc. Since the two thin discs are adhered to each other, there is the potential to achieve double-sided play sometime in the future for even longer duration play.

Subtitles

These are the printed lines appearing at the bottom of the screen which translate or transcribe the dialogue. They are recorded on DVD discs.

Time Digit

This indicates the play time which has elapsed from the start of a disc or a title. It can be used to find a specific scene quickly. (It may not work with some discs.)

Title Number

These numbers are recorded on DVD discs. When a disc contains two or more movies, these movies are numbered as title 1, title 2, etc.

Track Number

These numbers are assigned to the tracks which are recorded on audio CDs. They enable specific tracks to be located quickly.