

CONNECTING TO MAINS SUPPLY

Before switching on make sure that the voltage of your electricity supply is the same as that indicated on the rating plate.

This appliance may be fitted with a non-rewireable plug. If it is necessary to change the fuse in a non-rewireable plug the fuse cover must be refitted. If the fuse cover is lost or damaged, the plug must not be used until a replacement available from the appliance manufacturer is obtained. It is important that the colour of the replacement fuse cover corresponds with the colour marking on the base of the plug.

If the plug has to be changed because it is not suitable for your socket, or becomes damaged, it should be cut off and an appropriate plug fitted following the wiring instructions below. The plug removed must be disposed of safely as insertion into a 13A socket is likely to cause an electrical hazard.

For your own safety read the following instructions carefully before attempting to connect this unit to the mains.

MAINS (AC) OPERATION

 
This unit is designed to operate on 230 V, 50 Hz current only. Connecting it to other power sources may damage the unit

The wires in this mains lead are coloured in accordance with the following code :

BLUE = NEUTRAL BROWN = LIVE

IMPORTANT

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:-

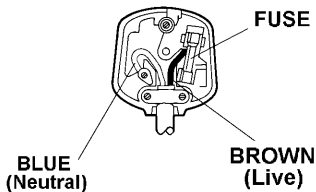

The wire which is coloured blue must be connected to the terminal which is marked with the letter N or coloured black.

The wire which is coloured brown must be connected to the terminal which is marked with the letter L or coloured red.

No connection is to be made to the earth terminal of the plug.

If a 13 Amp (BS 1363) Plug is used, a 3 Amp Fuse must be fitted, or if any other type of Plug is used a 3 Amp Fuse must be fitted, either in the Plug , or on the Distribution Board.

CAUTION

To prevent electric shock disconnect from the mains before removing cover. No user serviceable parts inside. Refer servicing to qualified service personnel.

SAFETY PRECAUTION

Do not allow this unit to be exposed to rain or moisture.

Mains Supply: 230 Volts 50 Hz - AC only.



This symbol means that this unit is double insulated. An earth connection is not required.

CAUTION

CLASS 1 LASER PRODUCT

Use of Controls or adjustments or performance of procedures other than those specified herein may result hazerdous radiation expisure.

LASERSAFETY



This unit employs a laser, only quality service personnel should attempt repair.

DANGER: INVISIBLE LASER RADIATION WHEN OPEN AND INTERLOCK FAILED OR DEFEATED AVDIO DIRECT EXPOSURE TO BEAM.

CAUTION: HAZARDOUS LASER RADIATION WHEN OPEN AND DEFEATED.

INTERLOCK

CAUTION

CLEANING: Always disconnect unit from mains supply before attempting to clean it. Use soft cloth moistened with soapy water, wipe gently. Do not use solvents or abrasive materials.

MAINTENANCE AND CARE

Electronic products of this kind should never be subjected to extreme temperatures or high humidity. For instance, this set should not be placed in bathing areas or around stoves and radiators.

If necessary, clean the unit with a piece of cloth dampened with water only (Be sure the AC Power Cord is disconnected from the Mains). Never use a polish or a strong detergent as this will damage the finish of the cabinet.

This equipment has been designed and manufactured to meet the highest international standards, but, like any electrical apparatus which is operated at mains voltage, care must be taken if you are to obtain the best results and safety is to be assured. This is particularly important with audio equipment.

- DO. . . Read the operating instructions before you attempt to use the equipment.
- DO. . . Ensure that all electrical connections (including the mains plug, extension leads and interconnections between pieces of equipment) are properly made and in accordance with the manufacturer's instructions. Check that the mains fuse rating is correct.
- DO. . . Always consult your dealer if you are ever in doubt about the installation, operation or safety of your equipment. He is the best person to advise you.
- DON'T. . . Obstruct the necessary all-round ventilation - especially DON'T stand the set close to curtains or on soft furnishing such as carpets. Overheating can cause unnecessary damage and shorten the life of the set.

Remember that to obtain the best performance and lasting satisfaction from your equipment, have it regularly maintained by a reliable service organization. Ensure that it is correctly used by all the family.

ABOVE ALL. . .


Never let children push anything into holes or slots in the case - this could result in an electric shock;

Never guess or take chances with electrical equipment of any kind - it is better to be safe than sorry!

TABLE OF CONTENTS

Location of controls	4
Preparation For Use	6
Listening to the Radio	6
Mute Function	6
Preset Equalizer.....	6
Handling compact discs	7
Loading discs	7
Playing Discs.....	8
Track Skip	8
Disc Skip	9
Repeat Play	9
Programmed Disc Play	9
Record Player	10
Listening to Tape	11
Recording	12
Remote Control	13
Headphones	13
Cassette Care	14
Prevention against accidental erasure	14

 LOCATION OF CONTROLS

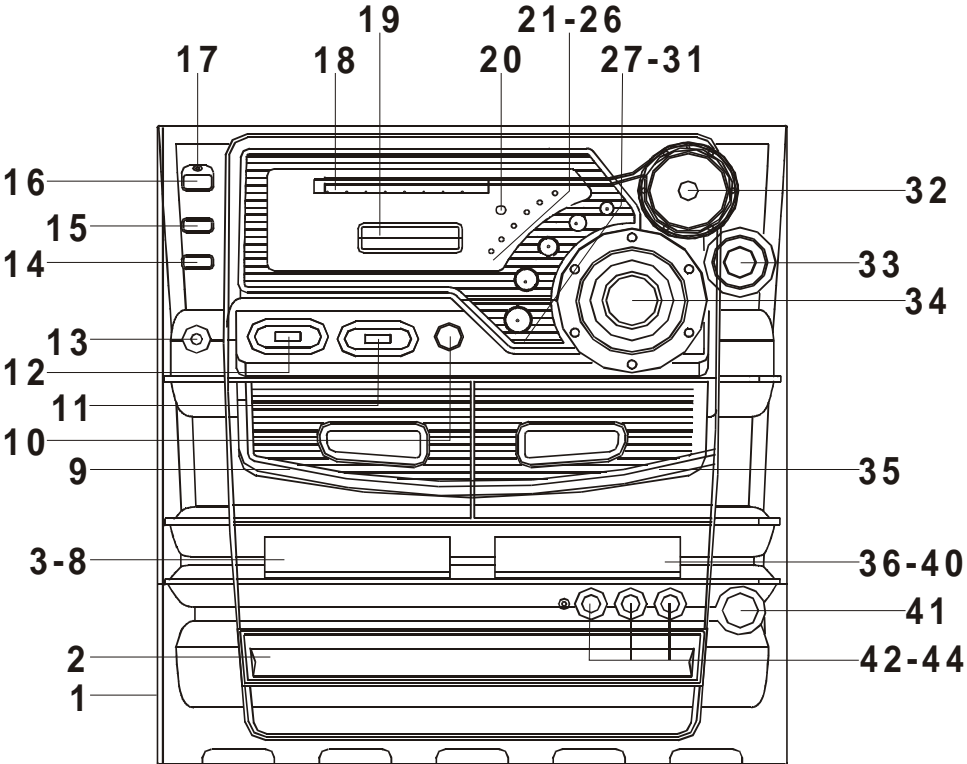

LOCATION OF CONTROLS

1. MAINS LEAD, SPEAKER SOCKETS AND FM AERIAL WIRE (AT THE REAR OF THE UNIT)
2. CD Door
3. RECORD Key (Deck A)
4. PLAY Key (Deck A)
5. REWIND Key (Deck A)
6. FAST Forward Key (Deck A)
7. STOP / EJECT Key (Deck A)
8. PAUSE Key (Deck A)
9. CASSETTE Compartment A
10. HI-SPEED DUBBING FM MONO Button
11. RADIO BAND Selector
12. FUNCTION Selector
13. HEADPHONES Socket
14. PRESET EQ (rock, pop, classic, jazz)
15. CD REPEAT Button
16. STANDBY Button
17. STANDBY/ON Indicator
18. TUNER Scale
19. LCD Display
20. REMOTE Sensor
21. JAZZ Indicator
22. CLASSIC Indicator
23. POP Indicator
24. ROCK Indicator
25. MUTE Indicator
26. FM Stereo Indicator
27. CD PLAY/PAUSE Button
28. CD STOP Button
29. CD MEMORY Button
30. CD SKIP/SEARCH Backward Button
31. CD SKIP/SEARCH Forwards Button
32. TUNING Knob
33. BASS Knob
34. VOLUME Control Knob
35. CASSETTE Compartment B
36. PLAY Key (Deck B)
37. REWIND Key (Deck B)
38. FAST Forward Key (Deck B)
39. STOP / EJECT Key (Deck B)
40. PAUSE Key (Deck B)
41. CD OPEN/CLOSE Button
42. DISC 1 Direct Access
43. DISC 2 Direct Access
44. DISC 3 Direct Access

PREPARATION FOR USE

Remove the stereo carefully from the box, retaining the packaging for future use.

Read these instructions carefully before use.

CONNECTIONS

Before switching on your stereo system, ensure that it is connected as follows:

SPEAKERS

Connect the speakers to the speaker sockets on the back of the music system.

- Connect the left speaker to the left speaker socket and the right speaker to the right speaker socket.
- Connect the Mains Lead to an AC outlet.
- Insert two R03S (AAA or equivalent) batteries into the battery compartment of the remote controller.

You are now ready to switch on the power.

CAUTION

- The product shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the product.
- The normal ventilation of the product shall not be impeded for intended use.

LISTENING TO THE RADIO

OPERATION

- Press the STANDBY/ON Button to turn the unit on, the Stand-By indicator will go off.
- Set the FUNCTION Selector to the tuner position and the radio band selector to AM or FM position.
- Tune into the station using the TUNING knob.
- Adjust the VOLUME to the desired level using the VOLUME Control Knob.
- To turn off the radio, press the STANDBY/ON Button.

MUTE

- Press the MUTE Button on the remote control to switch off the sound, the MUTE indicator will light up.
- Press MUTE again to restore the sound to the previous level. MUTE indicator will go off.

PRESET EQUALIZER

This unit is equipped with a preset equaliser which has been added to enhance your listening pleasure by altering the frequency response of the music to give it a different feel. Press the PRESET EQ Button repeatedly to cycle through the following equalization modes.



HANDLING COMPACT DISCS

To remove a disc from its storage case, press down on the centre of the case and lift the disc out, holding it carefully by the edges.



Fingerprints and dust should be carefully wiped off the disc's recorded surface with a soft cloth. Unlike conventional records, compact discs have no grooves to collect dust and microscopic debris so gently wiping with a soft cloth should remove most particles. Wipe in a straight line from the inside to the outside of the disc. Small dust particles and light stains will have absolutely no effect on reproduction quality.

Never use chemicals such as record sprays, antistatic sprays, benzene, or thinners to clean compact discs. These chemicals can irreparably damage the disc's surface. Discs should be returned to their cases after use. This avoids serious scratches that could cause the Laser pickup to skip.

Do not expose discs to direct sunlight, high humidity, or high temperatures for extended periods. Long exposure to high temperatures can warp the disc.

LOADING DISCS

LOADING AND UNLOADING COMPACT DISCS

- Set the FUNCTION Selector to the CD position.
- Press the CD Open / Close Button to open the disc compartment.
- Once the CD door has opened, remove a disc from its case and place it carefully in one of the indentations in the compartment with the label side facing up. Smaller, 3" discs, may also be used with this CD player.
- To load additional CD's press the CD Skip button to rotate the CD tray, upto 3 discs can be placed in the tray at any one time. Smaller 3 inch discs can be used in this unit.
- To close the disc compartment press the CD Open / Close Button
- The unit will go through a cycle to find the first CD there is in the tray, this may take upto 15 seconds.
- The disc compartment may be opened at any time by pressing the CD Open/Close Button.

CAUTION

- Do not put anything except a compact disc into the compartment. Foreign objects can damage the mechanism.
- Do not force the compartment by hand during the opening and closing operations.
- Keep the disc compartment closed when not in use to prevent dirt and dust from entering the mechanism.

PLAYING DISCS

- Press the CD Open/Close Button to open the disc compartment, and load a CD.
- Close the disc compartment, the unit will search for the first tray to contain a CD and the display will show the total playing time of the CD.
- Press the CD SKIP Button to select the CD of your choice or select the disc using the direct access buttons on the front of the unit.
- Press the Play/Pause Button, disc play will begin from the start of the first track.
A particular track can be selected by pressing the ◀◀ & ▶▶ Buttons. If this is done before pressing the Play/Pause Button, disc play will start with the selected track when the Play/Pause Button is pressed.
- At the end of the disc, the unit will switch to stop mode
*Notes: If the disc is deeply scratched, or too dirty, disc play may not start.
If an improperly centred disc is played, noise can be heard in the mechanism.
The use of such discs should be avoided.*

IMPORTANT INFORMATION

This compact disc player has built-in error compensation circuits to correct for minor defects in a disc. There are limits, however, to the amount of correction available.

In some cases, the CD player may skip some tracks on a disc during disc play. This problem may be caused by defects (such as scratches) in the disc being played, which are too large for the error compensation circuits to handle. If you encounter this problem, check the CD player's operation as follows, before having the unit serviced.

Play a different disc. If the CD player operates normally, the skipping problem is probably due to a defective disc.

TO STOP A CD PART WAY THROUGH

- Press the Stop Button. Disc play will stop, the Play indicator will go off, and the display will show the total number of tracks and the total playing time of the CD.
- To temporarily stop disc play (pause mode), press the Play/Pause Button. Disc play will pause at the current play position.
- To resume disc play, press the Play/Pause Button again. The Play indicator will be displayed.

TRACK SKIP

TO SKIP TO THE NEXT TRACK ON A DISC

- For example, to skip ahead to the beginning of track 5 while track 4 is playing.
- Press the ▶▶ Button once. Disc play will resume at the beginning of track 5.
The CD player will skip ahead to the next track each time the ▶▶ Button is pressed. Repeatedly pressing the Forward Skip Track Button makes the CD player skip ahead through the disc track by track. Once the beginning of the last track is reached the CD player will not advance any further.

TO SKIP BACK TO THE PREVIOUS TRACK ON A DISC

- For example to skip back to the beginning of track 3 while track 4 is playing.
- Press the ⏮ Button twice. Disc play will resume at the beginning of track 3.

The CD player will skip back one track each time the ⏮ Button is pressed. If this Button is pressed once in the middle of a track, the CD player will skip back to the beginning of that track. To make it skip back to the previous track press the ⏮ Button twice.

Repeatedly pressing the ⏮ Button makes the CD player skip back through the disc track by track. Once the beginning of the first track is reached, the CD player will not go back any further.

Notes: The ⏮ & ⏪ Buttons can be used to select a desired track to play from before disc play starts. In this case the number of the selected track will be displayed until the Play/Pause Button is pressed.

DISC SKIP

- To skip to the next disc simply press the DISC SKIP Button the unit will cycle through position 1 - 2 - 3 - 1 - 2etc
- Direct access to disc 1, 2 or 3 can be operated by pressing DISC 1, DISC 2 or DISC 3 at the bottom right corner of the unit.

REPEAT DISC PLAY

If the REPEAT Button is pressed during normal or programmed disc play the following repeat functions are displayed in sequence in the CD Display.

REPEAT ALL DISC Repeats All the Tracks on All the Discs

REPEAT 1 DISC Repeats all the tracks on the Current disc.

REPEAT 1 Repeats the current track on the Current disc.

To cancel a repeat mode, keep pressing the REPEAT Button until the REPEAT Indicator is extinguished.

PROGRAMMED DISC PLAY

It is not possible to enter programs during disc play. Press the STOP Button first, then follow the instructions below.

ENTERING A PROGRAM

1. Press the MEMORY Button, the CD Display will display the word Program edit and 01 d2:--
2. Select the disc that the first track is on using the Disc Skip Button or the direct access buttons on front of unit.
3. Select the desired track using the Track skip buttons until the desired track is reached, the display will show Program edit and 01 d2:04.
4. Press the PROGRAM Button once again, the selected disc and track number is then stored in memory. The CD Display will change to Program edit and 02 d2:--

5. Repeat steps 2 - 4 to enter additional tracks. You can store upto 32 programs in memory.
*Notes: If the PLAY/PAUSE Button is pressed before the MEMORY Button is pressed to store a track, the track will not be programmed, and the disc will start playing from the first selected track.
 Any track can be programmed to play more than once.
 If you press the STOP Button during MEMORY mode, the entire program will be erased from memory.*

LISTENING TO PROGRAMMED TRACKS

Program your selection of tracks by following the procedure shown above.

Press the PLAY/PAUSE Button.

Disc play will start at the beginning of the first programmed track.

TO CLEAR THE PROGRAM MEMORY

If the disc is playing, press the STOP Button.

 
Press the STOP Button again. All the programs will then be erased from memory.

The program memory will also be cleared if the Function Selector is changed to another function, or if the power is switched off.

RECORD PLAYER

RECORD PLAYER UNPACKING - Before playing any records:

- A. 45 RPM ADAPTOR
- B. TURNTABLE
- C. PICK UP ARM
- D. 33/45 SPEED SELECTOR

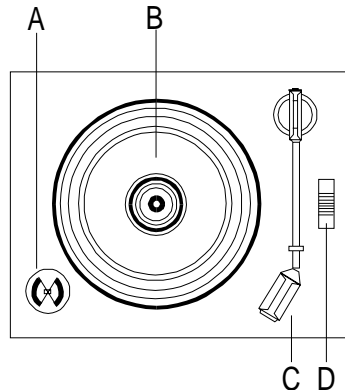

- * Unlock the PICK UP ARM from the PICK UP ARM REST.
 - * Remove the stylus cover by pulling it gently forward, away from the HEAD SHELL.
1. Turn the unit on using the STANDBY/ON button.
 2. Set the Function Selector to PHONO position.
 3. Lift the DUST COVER and select the speed to suit the record you are about to play using the 33/45 RPM SPEED SELECTOR switch.
 4. Place the record on the TURNTABLE so that the SPINDLE protrudes through the centre hole in the record.
 5. Raise the PICK-UP ARM by grasping it lightly at the FINGER LIFT located on the HEAD SHELL and gently move it to the left towards the record. The turntable will now start rotating. Move the stylus to the selected point above the record. Lower the PICK-UP ARM gently onto the record groove.
 6. When the PICK-UP ARM reaches the end of the record, raise the PICK-UP ARM by grasping it lightly at the FINGER LIFT located on the HEAD SHELL and gently return it to the PICK-UP ARM REST.

7. To stop playing the record mid-way, lift the PICK-UP ARM and swing it gently toward the centre of the record to activate the auto-stop mechanism and the TURNTABLE will stop rotating. Now return the PICK-UP ARM back to the PICK-UP ARM REST.
8. To turn the unit off, press the STANDBY/ON button again.

Note:

1. Do not turn off the main power while the TURNTABLE is still rotating to avoid leaving the player in its engaged position.
2. Never allow the PICK-UP ARM to be lowered onto any surface other than a rotating record to avoid serious damage to the stylus.
3. Be careful never to drop the stylus onto the record surface from its' raised position to avoid damaging the record surface as well as the stylus.

LISTENING TO TAPE

INSERTION AND REMOVAL OF CASSETTES

- Press the Stop/Eject Button to open the Cassette Door.
- Insert your cassette tape into the cassette door with the exposed section of tape at the bottom and the playback side facing you.
- Close the Cassette Door securely before starting.
- When finished, press the Stop/Eject Key to open the Cassette Door, and remove your cassette tape.

PLAYING TAPES

You can choose either Tape A or Tape B for playback.

- Select the TAPE Option using the FUNCTION Selector.
- Insert your cassette tape.
- Press the Play Key to start the tape.
- Use the Pause Key whenever you want to suspend playback.
- Press the Stop/Eject Key when finished.

CONTINUOUS PLAYBACK

- Select the TAPE Option using the FUNCTION Selector.
- Insert two cassette tapes.
- Press the Play Key of deck B.
- Press the Pause Key followed by the Play Key of deck A.
- Deck B will play while Deck A waits.
- Adjust the Volume Control to the appropriate level.
- When Tape B reaches the end and stops, Tape A starts playing back automatically.
- When Tape A reaches the end, it will automatically stop.

RECORDING

RECORDING FROM THE RADIO

- Select the AM or FM Option using the RADIO BAND Selector.
- Tune in your station and insert a cassette tape into tape deck A.
- Press the Record Key and the Play Key at the same time to start recording.
- Press the Stop/Eject Key when finished.

RECORDING FROM CD

- Select the CD Option using the FUNCTION Selector, and insert your disc.
- Press the Record Key and the Play Key at the same time to start recording.
- Press the CD Play/Pause Button to start the disc.
- Press the Stop/Eject Key when finished.

TAPE-TO-TAPE RECORDING (DUBBING)

NORMAL SPEED DUBBING

- Insert a fully rewound pre-recorded cassette into Tape Deck B.
- Insert a fully rewound blank cassette tape into Tape Deck A.
- Select the TAPE Option using the FUNCTION Selector.
- Press the Pause Key and then the Play and Record Keys of Tape Deck A.
- Press the Play Key of Tape Deck B. The contents of the tape in Deck B will now be copied onto the tape in Deck A.
- Adjust the Volume Control to the desired level for monitoring purposes. The recording level will be unaffected by changes in volume.
- To stop recording, press both of the Stop/Eject Keys.

HIGH SPEED DUBBING

- Press the High Speed button to the ON position.
- Follow the steps described above for Normal Speed Dubbing. Monitoring is not possible.

Notes: If the length of the tape in Deck B is shorter than that in Deck A, the Play Key of Deck B will be released automatically at the end of the tape. Tape A will continue to record until the tape reaches its end, or its Stop/Eject Key is pressed.

 
If the length of the tape in Deck A is shorter than that in Deck B. The Record and Play Keys of Deck A will be released automatically at the end of tape. Tape B will continue to play until the tape reaches its end, or its Stop/Eject Key is pressed.

COPYRIGHT NOTICE WARNING

Most records, compact discs, audio and video cassettes, radio and television broadcasts contain material which is the subject of copyright. It is unlawful to record such material in any form whatsoever, whether on disc or tape, without the permission of the copyright owner concerned. Any person who makes a recording of such material without the consent of the copyright owner infringes copyright and may be liable, to pay substantial damages to the copyright owner, and in some cases to criminal prosecution.

REMOTE CONTROL

1. POWER Button
2. STOP Button
3. PLAY / PAUSE Button
4. CD SKIP/SEARCH Buttons
5. PROGRAM Button
6. DISC SKIP Button
7. MUTE Button
8. VOLUME UP/DOWN Buttons.

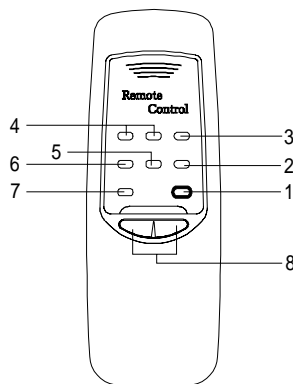

BATTERY INSTALLATION

Insert 2 R03S (AAA or equivalent) size batteries into the battery compartment of the remote controller and replace the cover.

BATTERY REPLACEMENT

When the batteries become too weak, the operating distance of the remote controller is greatly reduced and you will need to replace the batteries.

Notes: To maintain the accuracy and long life of the transmitter, do not press two or more Buttons simultaneously.

If the remote control is not to be used for a long time, remove the batteries to prevent possible damage through leaking batteries.

Do not mix different types of batteries, or old batteries with new ones.

USING THE REMOTE CONTROLLER CORRECTLY

Point the remote controller at the Remote Sensor.

The functions of the Buttons on the remote control are the same as the corresponding controls on the main unit.

When there is a strong ambient light source, the performance of the infrared Remote Sensor may be degraded, causing unreliable operation.

The maximum effective distance for remote control operation is about 5 metres (16.5 feet).

HEADPHONES

Headphones should have a 3.5 mm diameter stereo plug with an impedance of 8-32 ohms. When headphones are connected, the speakers are automatically disconnected.

CASSETTE CARE

Two common causes of trouble experienced when using cassettes are:—

- (a) Tape jamming — Leading to uneven speed in playback, and
- (b) Tape tangling — Where the tape wraps itself around vital parts of the mechanism.

To reduce the likelihood of these problems occurring, the following precautions should be observed.

Check that there are no loose layers of tape visible through the cassette centre window (see Fig. 1). Take up any loose layers, using a pencil or hexagonal barrelled ballpoint pen, before inserting the cassette into the machine (see Fig. 2).

 


Fig.1

If the cassette feels "tight" while performing operation shown in Fig. 2, the tape may be jamming due to "ridges" formed in the winding of the tape (visible through the centre window). These may be removed, in most cases, by fast winding of the cassette from one end to the other and back again.

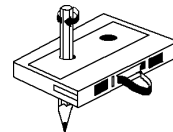 


Fig.2

 
Use only well-known brands of tape.

Avoid use of C-120 cassettes.

Furthermore, do not expose cassettes to direct sunlight, dust or oil, and do not touch the tape surfaces.


HEAD CLEANING

The tape heads, pinch roller and capstan require periodic cleaning. This removes particles of the metal oxide coating that wear off the tape and accumulate on these parts and impair performance. Switch off the power, press the Stop/Eject Button to open the cassette door, and press the Play Button. Clean the tape heads, pinch roller and capstan with a soft cloth or cotton bud dampened in iso-propylalcohol or special tape head cleaner.

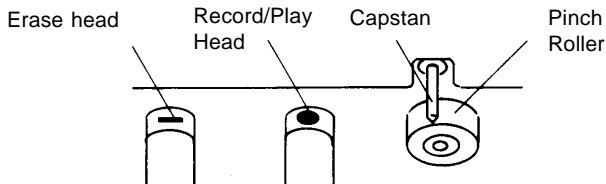

PREVENTION AGAINST ACCIDENTAL ERASURE

 To prevent a recording on a cassette tape being erased accidentally, break off the tab on the rear of the tape, as in the diagram. Now recording on this side is no longer possible. To record after removing this tab cover the hole using a piece of adhesive tape.



TAB FOR SIDE A