 


Goodmans

GCR1873IP

Alarm Clock Radio with Dock for iPhone

User Guide

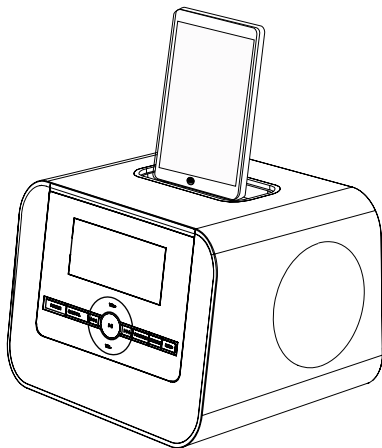

IMPORTANT: Please read all instructions carefully before use and keep for future reference

Introduction

Thank you for choosing this Alarm Clock Radio with Dock for iPhone. Not only can you listen to your tracks on your iPod, but you can also wake up to your favourite tracks.

It's really simple to use: you can operate your iPod directly from the control panel or from your iPod. You can even connect auxiliary devices to it.


Throughout this User Guide, the Alarm Clock Radio with Dock for iPhone will be referred to as the alarm clock radio.

Safety is important

Use of any electrical equipment should be undertaken with care. Please read the safety section on pages 16 to 18 before using this alarm clock radio. This appliance is for household use only.



In the box

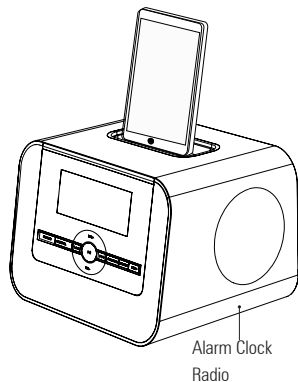

Quick Start
Guide




The above images are for illustrative purposes only and may differ to the items supplied. *iPod not included.

Contents


01 Your Alarm Clock Radio	4	05 Auxiliary	11
02 Getting Started.....	6	06 Using the Radio	12
03 Using Your Alarm Clock Radio ...	7	07 Battery Backup	13
04 Using an iPod	9	08 Troubleshooting	14

01 Your alarm clock radio

 Front view

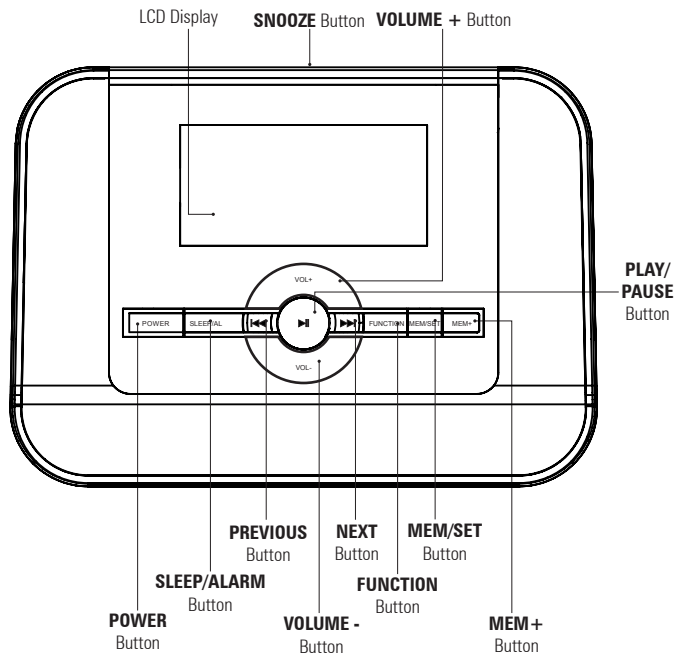


Rear view

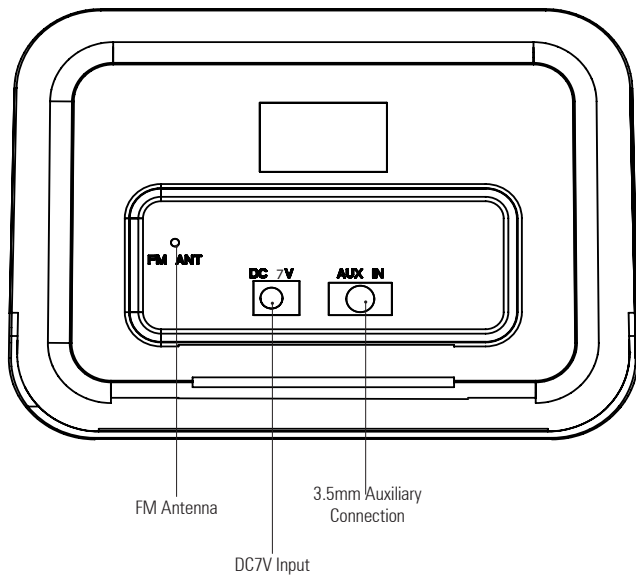 

1

Connecting the mains supply

 
Connect the mains lead to the socket labelled **DC7V** on the back of the alarm clock radio. Then connect the mains adapter to the mains socket and switch it on.

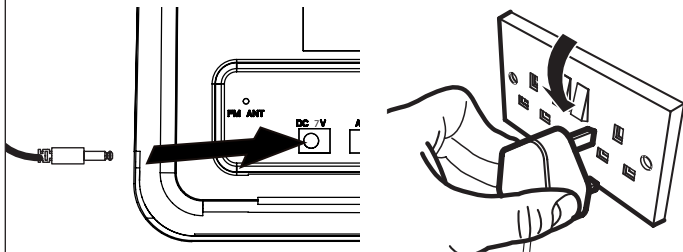

2

Switching on the alarm clock radio

When the mains adapter has been connected the display will light up. Press the **POWER** button to turn the alarm clock radio on.

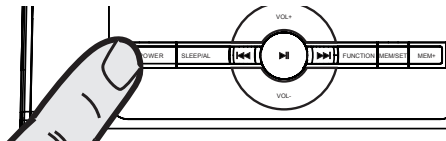

Setting the time

- 1 Make sure that the alarm clock radio is switched into standby mode.
- 2 Press and hold the **MEM/SET** button to enter clock mode.
- 3 When the hours are flashing use the ◀◀ or ▶▶ buttons to select the correct hour.
- 4 Press the **MEM/SET** button to set the hour.
- 5 When the minutes are flashing use the ◀◀ or ▶▶ buttons to select the correct minutes.
- 6 Press the **MEM/SET** button to set the minutes.

DON'T FORGET! The time will be reset if the alarm clock radio is disconnected from the mains supply and the backup batteries have not been fitted.

Setting the alarm

- 1 Make sure that the alarm clock radio is switched into standby mode.
- 2 Press and hold the **SLEEP/AL** button to enter alarm mode.
- 3 When the hours are flashing use the ◀◀ or ▶▶ buttons to select the correct hour.
- 4 Press the **SLEEP/AL** button to set the hour.
- 5 When the minutes are flashing use the ◀◀ or ▶▶ buttons to select the correct minutes.
- 6 Press the **SLEEP/AL** button to set the minutes.
- 7 Press the ◀◀ or ▶▶ buttons to choose between **Alarm, Radio** or **iPod**.

DON'T FORGET! The Alarm will remain active and sound at the same time each day.

Snooze mode

The snooze function will turn off your alarm and then sound it again 9 minutes later.

- 1 Press the **SNOOZE** button to turn the alarm off.
- 2 After 9 minutes has elapsed the alarm will sound again.
- 3 The Snooze function will continue to be active until the alarm is cancelled by pressing the **POWER** button.

Sleep mode

- 1 Select your music and volume level that you want to go to sleep to.
- 2 Press the **SLEEP** button to scroll through the sleep times 120, 90, 60, 30, 15 and off.

- 3 When you activate Sleep, the radio or your iPod's music will shut off automatically after the selected time has elapsed.


DON'T FORGET! You can activate and deactivate the Sleep function by pressing the **SLEEP** button and selecting off.

Display brightness mode

- 1 Press the **SNOOZE** button to change the display brightness.

DON'T FORGET! You can not change the brightness setting when the alarm clock radio is in snooze mode.

An iPod can be connected to the alarm clock radio allowing all your favourite songs to be played through the alarm clock radio speakers. The iPod can be controlled by the alarm clock radio and also charges when docked.

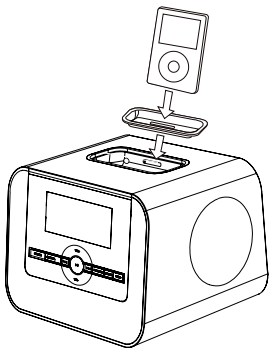

- 1 To connect an iPod to the alarm clock radio, use the compatible adaptor that was supplied with your iPod/iPhone. The iPod adaptors have markings on the bottom which clearly identify which iPod they should be used with.

DON'T FORGET! Use the adaptor that was supplied with your iPod/iPhone.

- 2 Place the iPod adaptor into the recess on the top of the alarm clock radio and then insert your iPod into the adaptor.
- 3 After a few seconds the alarm clock radio will show an iPod symbol on the display.

- 4 Press the ► || button to start the iPod playing the last selected song.
- 5 Press the ◀◀ button to go to the previous track and the ▶▶ button to skip to the next track.
- 6 To disconnect the iPod, turn it off and disconnect it from the dock.

DON'T FORGET! Your iPod will charge while docked with the alarm clock radio.

Adjusting the Volume

- 1 To increase the volume, press the **VOLUME +** button to a maximum level of 30.
- 2 To decrease the volume, press the **VOLUME -** button to a minimum level of 0.

Using an iPhone

This alarm clock radio is compatible with an iPhone and can be used to take a call whilst it is docked.

When a call is received, the music will stop automatically and your ring tone will be heard.

The AUX port allows you to play music from an external audio source such as a MP3 player or CD player when connected to the 'Line in' socket on the back of the alarm clock radio.

You will need an auxiliary cable with 3.5mm connectors so that you can connect an external audio source.

- ❶ Press the **FUNCTION** button, to select AUX.
- ❷ Connect the auxiliary cable to the back of the alarm clock radio and the external audio source.
- ❸ Press the play button on the external audio source to start playback.

DON'T FORGET! The auxiliary cable is not supplied with the alarm clock radio.

Adjusting the Volume

- ❶ To increase the volume, press the **VOLUME +** button to a maximum level of 30.
- ❷ To decrease the volume, press the **VOLUME -** button to a minimum level of 0.

FM antenna

For best FM reception, extend the wire aerial located at the back of the alarm clock radio.

DON'T FORGET! You may need to try a few positions to get the best reception.

Scanning for FM stations

- 1 Press the **POWER** button, to switch on the alarm clock radio.
- 2 Press and hold the **◀◀** or **▶▶** buttons to automatically scan for a FM station.
- 3 If required press briefly the **◀◀** or **▶▶** buttons to fine tune a FM station.

Storing a FM station

Make sure that the FM station has been tuned in and the FM antenna has been positioned to get a good reception.

- 1 Press the **MEM/SET** button, to store the station.
- 2 Press the **◀◀** or **▶▶** buttons to select a memory position to store the FM station.

DON'T FORGET! You can store a maximum of 20 stations.

Selecting a stored FM station


- 1 Press the **MEM+** to select a stored FM station.

Fitting the backup batteries

Make sure that the alarm clock radio is disconnected from the mains supply before fitting the backup batteries.

The backup batteries will remember the time and alarm time in case of a power cut.

- 1 Disconnect the alarm clock radio from the mains supply.
- 2 Remove the battery compartment cover on the bottom of the alarm clock radio.
- 3 Fit 4 x AA batteries (not supplied) following the diagram shown in the compartment.

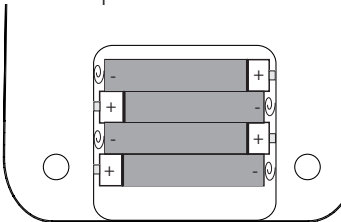

- 4 Re-fit the battery compartment cover.
- 5 Re-connect the mains supply to the alarm clock radio.
- 6 Set the time following the instructions on page 7.
- 7 Set the alarm time following the instructions on page 7.

DON'T FORGET! You should replace your batteries every 12 months to ensure that they are in good working order.

Problem	Possible Cause	What to do
No Power	<ol style="list-style-type: none">1. The mains adapter is not plugged into the wall socket.2. The wall socket is not turned on.	<ol style="list-style-type: none">1. Ensure the mains adapter is plugged into the wall socket.2. Turn on the power at the wall socket.
No sound is heard	<ol style="list-style-type: none">1. The volume is on the minimum setting.2. The iPod is not correctly fitted.	<ol style="list-style-type: none">1. Increase the volume.2. Remove the iPod from the dock and put it back in again.

Need extra help?

Don't worry we are just at the other end of the phone. If you are experiencing problems using your new product visit goodmans.co.uk

Specifications

General	
Model Number	• GCR1873IP
Power Adapter	• 7V
Power Consumption: Standby Operating	<ul style="list-style-type: none">• 0.3 Watts• 0.8 Watts
Stereo Output	• 2 x 2W Speakers
Line In	• 3.5mm Connection
FM Frequency	• 87.5 MHz - 108 MHz

IMPORTANT: Due to continual revision and improvements to our products design, specifications are subject to change without notice.

Warnings

WEEE



This alarm clock radio is labelled in accordance with European Directive 2002/96/EG concerning used electrical and electronic appliances (Waste Electrical and Electronic Equipment - WEEE).

The guideline determines the framework for the return and recycling of used appliances.

Sound levels

Your hearing is very important to you and to us, so please take care when using this alarm clock radio. It is strongly recommended that you follow the listed guidelines in order to prevent possible damage or loss of hearing.

Establish a safe sound level

Over time your hearing will adapt to continuous loud sounds and will give the impression that the volume has in fact been reduced. What seems normal to you may in fact be harmful. To guard against this **before your hearing adapts**, set the volume to a low level.

Slowly increase the level until you can hear comfortably and clearly and without distortion. Damage to your hearing is accumulative and is irreversible. Any ringing or discomfort in the ears indicates that the volume is too loud.

Once you have established a comfortable listening level, **do not increase the sound level.**

Warnings

General Safety

This alarm clock radio has been designed and manufactured to meet European safety standards, but like any electrical equipment, care must be taken if you are to obtain the best results and safety is to be assured.

Do read these operating instructions before you attempt to use the alarm clock radio.

Do ensure that all electrical connections (including the mains plug, extension leads and interconnections between pieces of equipment) are properly made in accordance with the manufacturer's instructions.

Switch off and remove the mains plug when making or changing any connections.

Do consult your dealer if you are ever in doubt about the installation, operation or safety of your alarm clock radio.

Don't continue to operate the alarm clock radio if you are ever in doubt about it working normally, or if it is damaged in any way. Switch it off withdraw the plug from the mains and consult your dealer.

Don't remove any fixed covers as this may expose you to dangerous voltages.

Don't leave the alarm clock radio switched On when it is unattended for long periods of time, unless it is specifically stated that it is designed for unattended operation or has a standby mode.

Warnings

Make sure that other people in your household are conversant with the alarm clock radio.

Don't obstruct the ventilation vents on the alarm clock radio, for example with curtains or soft furnishings.

Overheating will cause damage and shorten the life of the product.

Don't allow electrical equipment to be exposed to rain or moisture.

Store the alarm clock radio in a clean, dry environment.

Do not use any cleaning solutions on the alarm clock radio.

Electrical Safety

Read these electrical safety instructions carefully before connecting the adapter to the mains supply.

This alarm clock radio is supplied with a mains adapter which has been designed for indoor use only.

The mains adapter is a sealed unit. There are no user serviceable parts inside and it does not require any electrical adjustments.

Do not attempt to open the mains adapter.

If the mains adapter becomes damaged, or fails to operate your alarm clock radio, it must be replaced and disposed of in a safe and environmentally protective way.

The mains adapter is designed to operate on 230VAC 50Hz supply. Connecting it to any other power sources may damage the adapter and the alarm clock radio.

Guarantee

The alarm clock radio is guaranteed for twelve months from the date of original purchase. If any defect due to faulty materials or workmanship, contact the Goodmans Helpline. Have your receipt of purchase for reference.

The guarantee is subject to the following provisions:

- It is only valid within the boundaries of the country of purchase.
- The alarm clock radio must be correctly installed and operated in accordance with the instructions contained in this User Guide.
- The alarm clock radio must be used solely for domestic purposes.
- The guarantee will be rendered invalid if the alarm clock radio is re-sold or has been damaged by inexpert repair.
- The manufacturer disclaims any liability for incidental or consequential damages.
- The guarantee is in addition to, and does not diminish, your statutory or legal rights.

Goodmans

GCR1873IP/JNR1/180210