 


# Goodmans

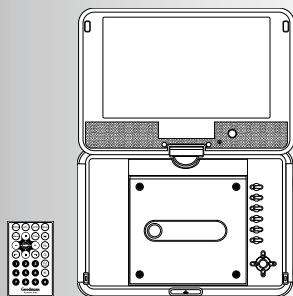 


**GDVD100W3**

10" Portable DVD Player  
with remote control  
**User Manual**

<b>Getting Started .....</b>	<b>3</b>	<b>MPEG-4 Playback .....</b>	<b>15</b>
Front View .....	3	Basic MPEG-4 Playback .....	15
Side View .....	4	Stopping Playback .....	15
Remote Control .....	5	Pausing Playback .....	15
Recharging the battery .....	6	<b>OSD Setup .....</b>	<b>16</b>
Insert memory card and USB flash drive...	6	Language Setup .....	16
How to Use In a Vehicle .....	7	- OSD Language .....	16
Connections .....	9	- Menu Language .....	16
<b>DVD Operation .....</b>	<b>11</b>	- Audio Language .....	16
Basic DVD Playback .....	11	- Subtitle Language .....	16
Stopping Playback and Returning to the Menu Screen		Screen Setup .....	17
(If a Menu Screen is Available on the Disc) .....	11	- Screen saver .....	17
Stopping Playback .....	11	- TV Type .....	17
Pausing Playback .....	11	- TV System .....	18
Fast Forward and Backward .....	11	Audio Setup .....	18
Skipping a Chapter Ahead or Back .....	11	- Digital Out .....	18
Muting .....	11	Custom Setup .....	18
Repeat Viewing .....	12	- Parental Control .....	18
Displaying Scene Information .....	12	- Password .....	19
Changing Audio Soundtrack Language .....	12	- Style .....	19
Changing Subtitle Languages .....	12	- Angle Mark .....	19
Viewing from Different Angles .....	12	- DivX VOD .....	20
Using a DVD Menu .....	12	- Default .....	20
Using the Menu Function .....	12	Exit Setup Mode .....	20
<b>Audio CD Playback .....</b>	<b>13</b>	<b>LCD Setup .....</b>	<b>21</b>
Basic Audio CDs Playback .....	13	Panel Setting .....	21
Stopping Playback .....	13	Colour Setting .....	21
Pausing Playback .....	13	Brightness Setting .....	21
Displaying Track Information .....	13	LCD Setting .....	21
Skipping a Track Ahead or Back .....	13	<b>Important Safety Information .....</b>	<b>22</b>
<b>Kodak and JPEG Picture CDs Play-</b>		<b>Disc Use and Care .....</b>	<b>24</b>
<b>back .....</b>	<b>14</b>	<b>Precautions .....</b>	<b>25</b>
Basic Picture CDs Playback .....	14	<b>Troubleshooting .....</b>	<b>26</b>
Pausing Playback .....	14	<b>Disc Handling and Maintenance ....</b>	<b>27</b>
Rotating Pictures .....	14	<b>Specifications .....</b>	<b>28</b>
Viewing the Next or Previous Picture .....	14		
Thumbnail Function .....	14		

## Front View

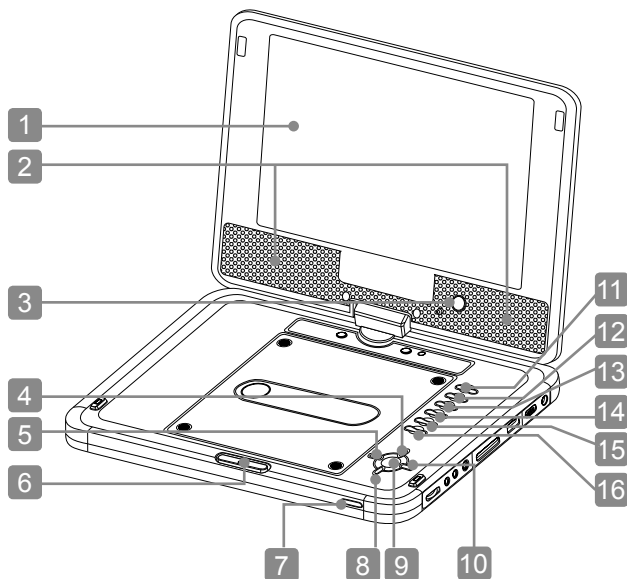


- 1** LCD Screen
- 2** Speakers
- 3** Remote Sensor
- 4** PAUSE/UP Button
- 5** F.BWD/LEFT Button
- 6** EJECT Button
- 7** LED Indicator
- 8** STOP/DOWN Button

- 9** PLAY/SEL. Button
- 10** STOP/DOWN Button
- 11** LCD Button
- 12** Mode Button
- 13** Menu Button
- 14** Setup Button
- 15** NEXT Button
- 16** PREVIOUS Button


## Side Views
 
### Right Side Panel

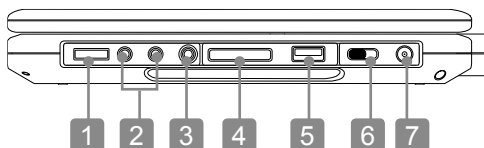


- |  |   |
|--|---|
| <b>1</b> Volume Adjustment<br>Scroll Wheel | <b>5</b> USB Port<br>(For USB Flash Drive only) |
| <b>2</b> PHONE Sockets                     | <b>6</b> POWER Switch                           |
| <b>3</b> Coaxial Out Socket                | <b>7</b> DC IN Socket                           |
| <b>4</b> MMC/SD Card Slot                  |   |

### Back Panel

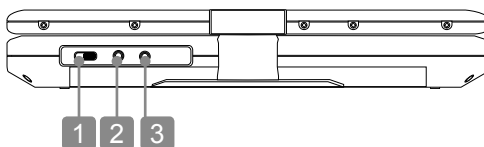 

- |  |                       |
|--|-----------------------|
| <b>1</b> AV Out/AV In Switch<br>Button | <b>2</b> Audio Socket |
|  | <b>3</b> Video Socket |


## Remote control

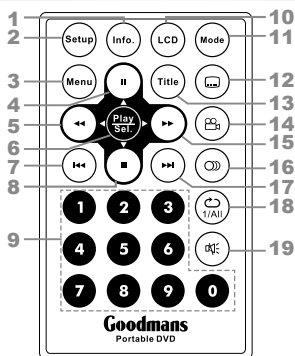 

- |                     |                        |
|---------------------|------------------------|
| 1 Info. Button      | 10 LCD Button          |
| 2 Setup Button      | 11 Mode Button         |
| 3 Menu Button       | 12 Subtitle Button     |
| 4 Pause/Up Button   | 13 Title Button        |
| 5 F.Bwd/Left Button | 14 Angle Button        |
| 6 Play/Sel. Button  | 15 F.Fwd/Right Button  |
| 7 Previous Button   | 16 Audio Button        |
| 8 Stop/Down Button  | 17 Next Button         |
| 9 Number Buttons    | 18 Repeat 1/ALL Button |
|                     | 19 Mute Button         |


## Remote Control Operation Range

 Point the remote control unit no more than 6 meters from the sensor and within 60° of the front of the unit.



## Battery Installation for the Remote Control

 Push **1** and pull **2** to open the battery compartment. Insert the battery and match the (+) and (-) on battery to the indicated marks.

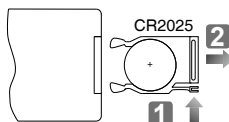

### Recharging the Battery

 
If you want to use the internal rechargeable battery as the portable dvd player's main power, please fully charge the internal rechargeable battery before using the player for the first time. This charging procedure requires approximately four hours.

- 1 Power off the player.
- 2 Connect the AC adapter to the DC IN socket on the player and to power outlet.
- 3 The LED indicator will light up red when the battery is charging. The LED indicator will turn off when the battery is charged completely.




**Note:**

1. **The internally fitted rechargeable battery is factory fitted and is designed to last for the life time of this product.**
2. *The battery cannot be charged whilst playing a disc.*

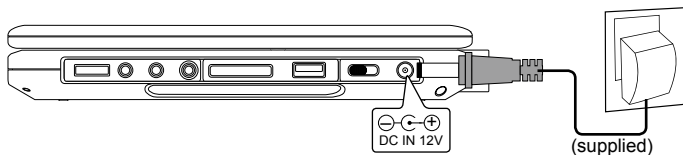

### Insert memory card and USB flash drive

 - 1 Insert MMC/SD memory card into memory slot or insert USB flash drive into USB port.
- 2 To remove MMC/SD card, gently push in the card to eject it from the slot.

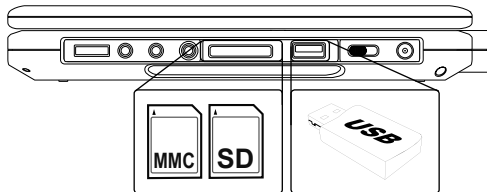

## How to Use In a Vehicle

For using the portable DVD player in a vehicle, please read the following instructions:



 
**Note:**

- It is illegal for the driver of the vehicle to view the DVD player whilst the vehicle is in motion.


**STEP 1. Pack your portable DVD player into the carry bag.**



**STEP 2. Adjust the elastic straps and tighten it securely; then fasten the straps with the velcro.**

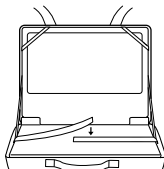

 
**STEP 3. Attach the bag to the headrest part by two steps.**  
 (a) Snap the buckles together.  
 (b) Adjust the straps with the stoppers.

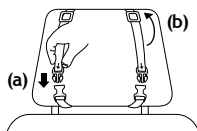


**STEP 4.**

**Flatten this unit.**

 *If you want to place a disc when releasing the velcro, please be careful or the player would slip out.*

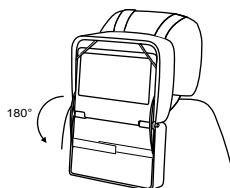

 **STEP 5.** Connect the cigar adaptor plug to the power socket on the portable DVD player, the other end to the cigar lighter socket.

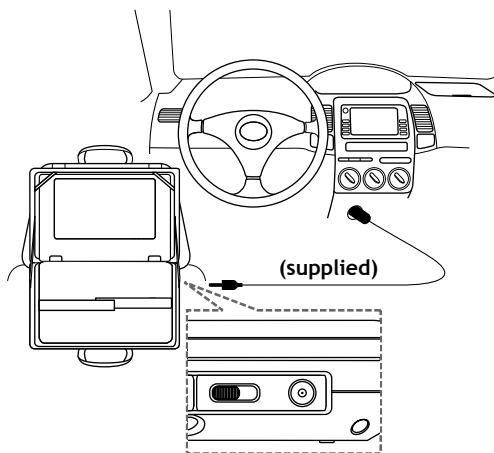





## Connections

**Connect to TV**

 - 1 Switch to AV out.
- 2 Connect the AV Out of the DVD Player to the Audio and Video In of your TV with an Audio/Video Cable.

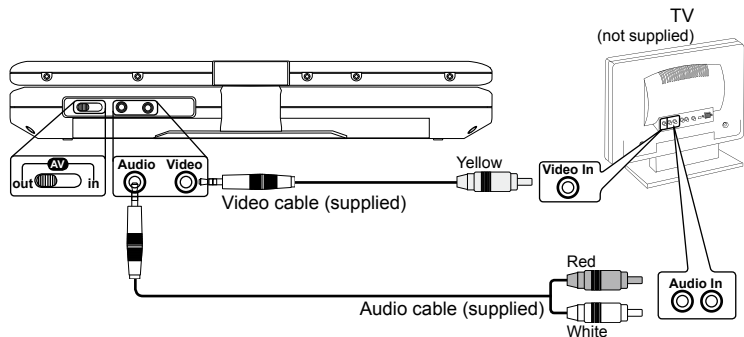
**Connect to Other Equipment**

 - 1 Switch to AV out.

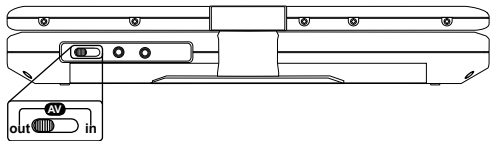


- 2 Connect the Coaxial Out of the DVD Player to the Coaxial In of external devices.

  Example: Digital 5.1ch Amplifier  
(not supplied)

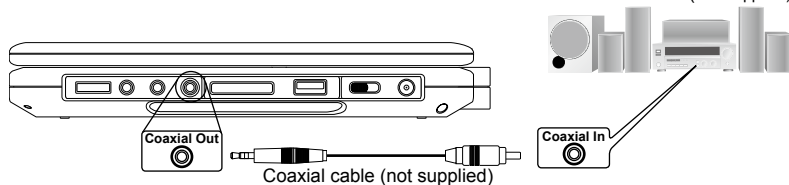





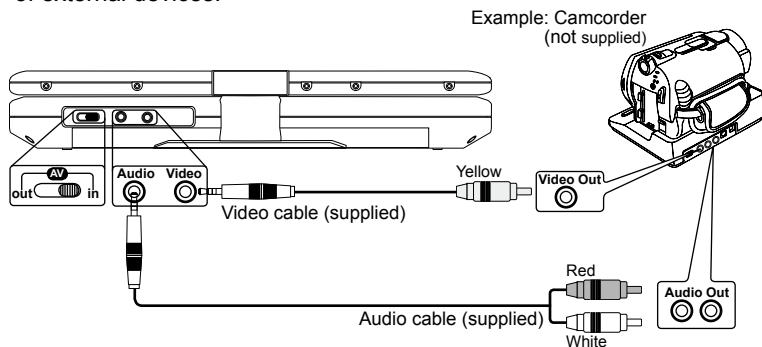

## Input from External Equipment

- 1 Switch to AV In.
- 2 Connect the Audio/Video In of the DVD Player to the Audio/Video Out of external devices.



### Basic DVD Playback




- 1 Turn on the player. Press  **Eject** to open the disc cover.
- 2 Hold the edge of the disc to put it in the disc tray with the printed side up.
- 3 Close disc cover.
  - Close the disc cover and the portable DVD player starts playback if the disc does not have any menus recorded on it.
  - If the disc has one or more titles recorded on it, a menu screen will appear on the screen.
- 4 To play a title, press  **Up** /  **Down** /  **Left** /  **Right** or **Number Button(s)** to highlight it and then press  **Play/Sel..**

### Stopping Playback and Returning to the Menu Screen



(If a Menu Screen is Available on the Disc)

Press  **Menu**.




### Stopping Playback

- 1 Press  **Stop** once to enter prestop mode. In prestop status, the disc can be played from where the playback has been stopped by pressing  **Play/Sel..**
- 2 To completely stop the disc playback, press  **Stop** again.



 
 
 
 
 
 
 
 
 
 

### Pausing Playback

- 1 Press  **Pause**.
- 2 To return to normal playback, press  **Play/Sel..**

### Frame Advance (Step)


- 1 Press  **Pause** to pause playback.
  - The disc is advanced by one frame each time pressing  **Pause**.
- 2 To return to normal playback, press  **Play/Sel..**

### Fast Forward and Backward

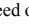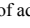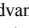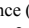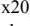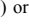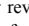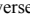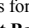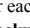
- 1 Press  **Fast Forward** or  **Fast Backward** during playback.  
The speed of advance (x2, x4, x8 and x20) or reverse (x2, x4, x8 and x20) changes for each press of  **Fast Forward** or  **Fast Backward**.
- 2 To return to normal playback, press  **Play/Sel..**

### Skipping a Chapter Ahead or Back

 

#### Skipping Ahead

- Press  **Next** during playback.
- Skip a chapter each time pressing the button.


#### Skipping Back




- Press  **Previous** during playback.
- When pressing the button once midway through a chapter, the player returns to the beginning of the chapter being played back. The player skips a chapter each time you press the button.

### Muting the Player

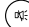


- 1 Press  **Mute**.
- 2 To resume the sound, press  **Mute** again.

### Repeat Viewing

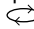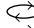  

During playback, press  **1/All Repeat** repeatedly to select the following options:

-  Chapter: Repeat Chapter
-  Title: Repeat Title
-  Off: Repeat Off

### Displaying Scene Information

- 1 Press  **Info.** during playback
  - Press  **Info.** a number of times, the title number, chapter number, and other information will show on the screen.
- 2 To stop displaying scene information, press  **Info.** a number of times until the information disappears.

### Changing Audio Soundtrack Language




- 1 Press  **Audio** during playback.
- 2 Press  **Audio** a number of times until a preferred language is selected.





#### Note:

- When the preferred language is not selected even after pressing the button several times, it may indicate that language is not available on the disc.

### Changing Subtitle Languages

- 1 Press  **Subtitle** during playback.
- 2 Press  **Subtitle** a number of times until a preferred language is selected.
- 3 To clear the subtitle display, press  **Subtitle** until **Subtitle: OFF** appears on the screen.

### Viewing from Different Angles








- 1 Press  **Angle** during playback.
- 2 Press  **Angle** a number of times until the preferred viewing angle is selected.





#### Note:

- This operation works only with discs on which multiple viewing angles are recorded.

### Using a DVD Menu

- 1 Press  **Title** in stop mode. The DVD menu available on the disc appears.
- 2 Press  **Up** /  **Down** /  **Left** /  **Right** to select the preferred item.
- 3 Press  **Play/Sel.** to enter to the selected item.
- 4 To return to the previous menu screen, press  **Title**.

 
### Using the Menu Function

- 1 Press  **Play/Sel.**
- 2 Press  **Menu**.
- 3 Press  **Up** /  **Down** /  **Left** /  **Right** or **Number Button(s)** to select the preferred title.


## Basic Audio CDs Playback

1 Load an Audio CD, a MMC/SD card or an USB Flash Drive. Press **(Mode)**, then press **(Up / Down)** to highlight the source you want to play, and press **(Play/Sel.)** **Play/Sel.** to confirm.


- For audio CDs without playback control, the DVD player starts playback.
- For audio CDs provided with playback control, a menu appears after a few seconds.

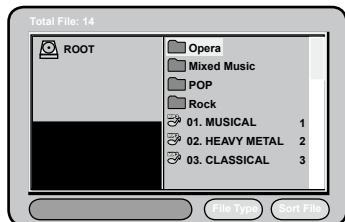

 2 To play a music track in the menu, press **(Up / Down)** to highlight a folder on the right of the screen, and then press **(Play/Sel.)** **Play/Sel.**

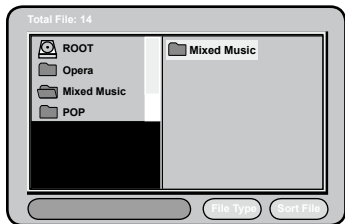

 3 Press **(Play/Sel.)** **Play/Sel.** to play the music.

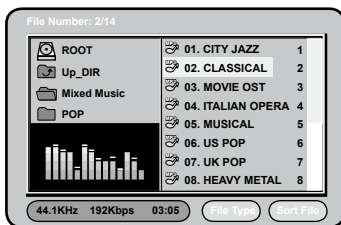

## Stopping Playback

Press **(Stop)** **Stop.**

## Pausing Playback

- Press **(Pause)** **Pause.**
- To return to normal playback, press **(Play/Sel.)** **Play/Sel..**

## Displaying Track Information

- Press **(Info)** **Info.** during playback.
- To stop displaying track information, press **(Info)** **Info.** again.

- Some music tracks may not display any information when you press **(Info)** **Info** button.

## Skipping a Track Ahead or Back

### Skipping Ahead

Press **(Next)** **Next** during playback.

- Skip a track each time you press the button.

 
### Skipping Back

Press **(Previous)** **Previous** during playback.


- When you press the button once midway through a track, the player returns to the beginning of the track being played back. The player skips a track each time you press the button.

## Basic Picture CDs Playback

- 1 Load a Picture CD, a MMC/SD card or an USB Flash Drive. Press **Mode**, then press **Up** / **Down** to highlight the source you want to play, and press **Play/Sel.** to confirm.
  - For Kodak Picture CDs, the DVD player starts slide show playback.
  - For picture CDs with a menu screen, the menu appears after a few seconds.
- 2 Press **Up** / **Down** to highlight a folder on the right screen, and then press **Play/Sel.**

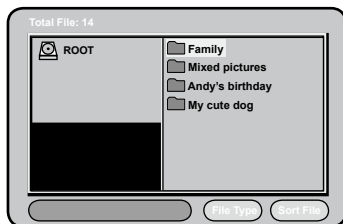

 - 3 Press **Up** / **Down** to highlight a picture on the right screen, then the picture review will show on the left bottom screen.

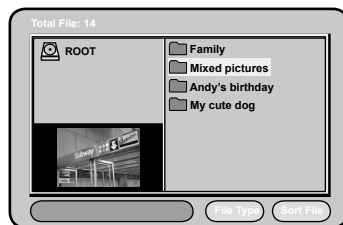

- 4 To play picture slide show, press **Play/Sel.**

## Pausing Playback

- 1 Press **Pause** playback.
- 2 To return to normal playback, press **Play/Sel.**

## Rotating Pictures

Press **Fast Forward** during playback to rotate the picture clockwise by 90° or press **Fast Backward** to rotate the picture counter-clockwise by 90°.

## Viewing the Next or Previous Picture

Press **Next** to view the next picture or **Previous** to view the previous picture.

 
## Thumbnail Function

- 1 Press **Stop** while you are playing the slide show.
- 2 Press **Up** / **Down** / **Left** / **Right** to select the preferred picture.
- 3 Press **Play/Sel.** to play.


## Basic MPEG-4 Playback

- 1 Load a disc or MMC/SD card containing MPEG-4 files. Press **(Mode)** **Mode**, then press **(Up)** **Up** / **(Down)** **Down** to highlight the source you want to play, and press **(Play/Sel.)** **Play/Sel.** to confirm.

- 2 Press **(Up)** **Up** / **(Down)** **Down** to highlight a folder and then press **(Play/Sel.)** **Play/Sel.**.

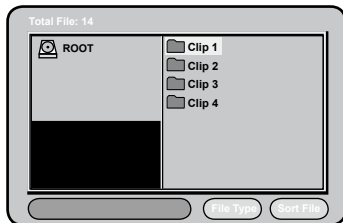

 - 3 Press **(Up)** **Up** / **(Down)** **Down** to highlight a file, and then press **(Play/Sel.)** **Play/Sel.** to play the file.

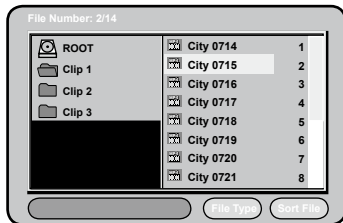

## Stopping Playback

To stop playback and return to the menu screen, press **(Stop)** **Stop**.

## Pausing Playback

 
- 1 Press **(Pause)** **Pause** playback.
- 2 To return to normal playback, press **(Play/Sel.)** **Play/Sel.**.

## Language Setup

- 1 Press **Setup** into setup main menu.
- 2 Press **Up** / **Down** to select **Language Setup**.


## OSD Language

- 3 Press **Right**, then press **Up** / **Down** to select **OSD**.
- 4 Press **Right**, then press **Up** / **Down** to select a preferred OSD language.
- 5 Press **Play/Sel.** to confirm.

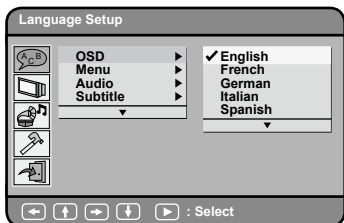


## Menu Language

 - 3 Press **Right**, then press **Up** / **Down** to select **Menu**.
- 4 Press **Right**, then press **Up** / **Down** to select a preferred menu language.
- 5 Press **Play/Sel.** to confirm.

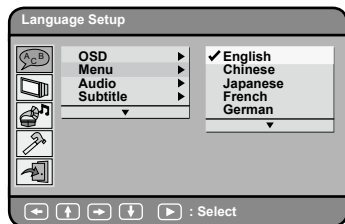


## Audio Language

 - 3 Press **Right**, then press **Up** / **Down** to select **Audio**.
- 4 Press **Right**, then press **Up** / **Down** to select a preferred audio language.
- 5 Press **Play/Sel.** to confirm.

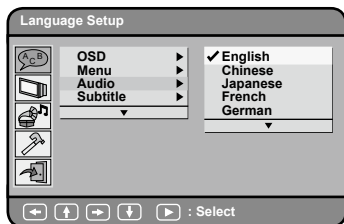

## Subtitle Language

 - 3 Press **Right**, then press **Up** / **Down** to select **Subtitle**.
- 4 Press **Right**, then press **Up** / **Down** to select a preferred subtitle language.
- 5 Press **Play/Sel.** to confirm.

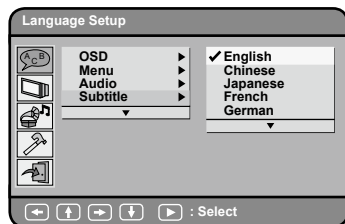

*Note: If the language selected is not recorded on the disc, the player will play the top-priority language of the disc.*




## Screen Setup

 - 1 Press **Setup** into setup main menu.
- 2 Press **Up** / **Down** to select **Screen Setup**.


## Screen Saver

- 3 Press **Right**, then press **Up** / **Down** to select **Screen Saver**.
- 4 Press **Right**, then press **Up** / **Down** to turn on/off the screen saver.
- 5 Press **Play/Sel.** to confirm.

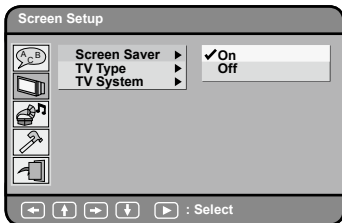

## TV Type

 - 3 Press **Right**, then press **Up** / **Down** to select **TV Type**.
- 4 Press **Right**, then press **Up** / **Down** to select a preferred TV type.
- 5 Press **Play/Sel.** to confirm.

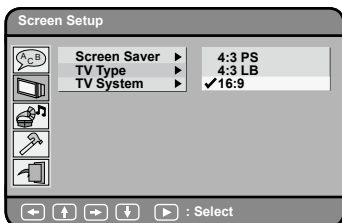

- 4:3 Pan Scan** : Select "4:3 PanScan" for a conventional size TV set.



- 4:3 Letter Box** : Select "4:3 Letter Box" for a conventional size TV set. Black bands appear at top and bottom of screen (letter-box style).





- 16:9 Wide** : Select "16:9 Wide" for a wide-screen TV set to played in "FULL" size.



## TV System

  - 3 Press **Right**, then press **Up** / **Down** to select **TV System**.
- 4 Press **Right**, then press **Up** / **Down** to select the TV system, it depends on the system is used in your location.
- 5 Press **Play/Sel.** to confirm.

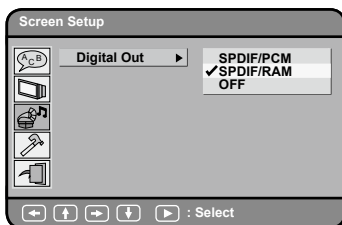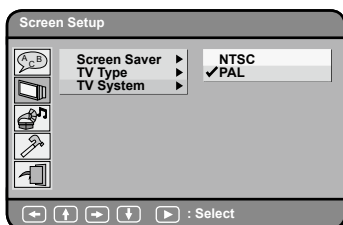


## Custom Setup

- 1 Press **Setup** into setup main menu.
- 2 Press **Up** / **Down** to select **Custom Setup**.

## Parental Control

 - 3 Press **Right**, then press **Up** / **Down** to select **Parental Control**.
- 4 Press **Right**, then press **Up** / **Down** to select a preferred option.
- 5 Press **Play/Sel.** to confirm.

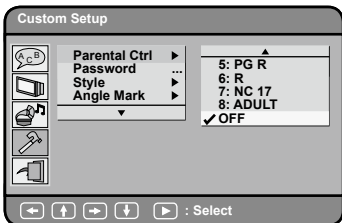

## Digital Out

- 3 Press **Right**, then press **Up** / **Down** to select **Digital Out**.
- 4 Press **Right**, then press **Up** / **Down** to select a preferred option.
- 5 Press **Play/Sel.** to confirm.

## Rating Explanations

- 1. KID:** Kid safe; it is safe even for kids.
- 2. G:** General audience; recommended as acceptable for viewers of all ages.
- 3. PG:** Parental Guidance suggested.
- 4. PG-13:** Material is unsuitable for children under the age of 13.
- 5. PG-R:** Parental Guidance-restricted; recommended that parents restrict children under age 17 from viewing or allow children to view only when supervised by a parent or adult guardian.
- 6. R:** Restricted, children under 17 would not be admitted without an accompanying parent or adult guardian.
- 7. NC-17:** No children under the age of 17, not recommended viewing for children under age 17.
- 8. ADULT:** Adult only.



### Note:

- You can use the parental control lock **ONLY** with DVD discs featured with the parental lock function.
- Please keep in mind that discs not encoded with rating lock protection will play regardless of rating and content.

 
## Password

- Press **Right**, then press **Up** / **Down** to select **Password**.
- Press **Play/Sel.**, enter the previously set password or factory pre-set password "0000".
- Enter new password and then press **Play/Sel.**.
- Enter the password again to verify and then press **Play/Sel.**.

Old:	----
New:	----
Verify:	----


## Style

- Press **Right**, then press **Up** / **Down** to select **Style**.
- Press **Right**, then press **Up** / **Down** to select a preferred style.
- Press **Play/Sel.** to confirm.

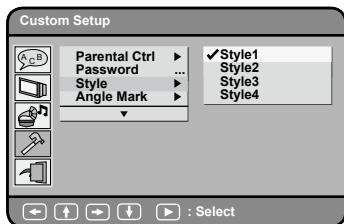

## Angle Mark

 - Press **Right**, then press **Up** / **Down** to select **Angle Mark**.
- Press **Right**, then press **Up** / **Down** to select a preferred option.
- Press **Play/Sel.** to confirm.

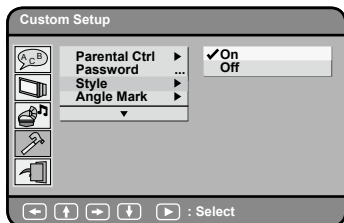


### Note:

- Pressing **Angle** will change camera angles for movies that support this feature regardless of whether the **ANGLE MARK** feature is "On" or "Off".

## DivX VOD

 - 3 Press **Right**, then press **Up** / **Down** to select **DivX VOD**.
- 4 Press **Play/Sel.**, a DivX display appears.
- 5 Press **Play/Sel.** to leave.

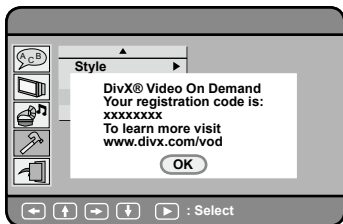

### Note:

- Please proceed **DIVX** to check Registration Code when you purchase or rent an encrypt movie file from VOD (Video-On-Demand) service agent.

## Default

- 3 Press **Right**, then press **Up** / **Down** to select **Default**.
- 4 Press **Right** to select **READ** and then press **Play/Sel.**

 


### Note:




- Selecting this function will erase all previously stored settings. It will restore the factory default settings.
- 6 To leave SETUP MENU, press **Setup**.

## Exit Setup Mode

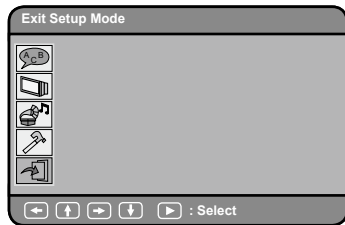- 1 Press **Setup** into setup main menu.
- 2 Press **Up** / **Down** to select **Exit Setup Mode.**, then press **Play/Sel.**




## Panel Setting




- 1 Press  **LCD** a number of times to select **PANEL**.
- 2 Press  **Left** /  **Right** to choose a preferred panel setting.

**PANEL:**  **NORMAL** 

**PANEL:**  **4:3** 

- Press  **LCD** again until the LCD setting box disappears.

## Colour Setting

- 1 Press  **LCD** a number of times to select **COLOUR**.
- 2 Press  **Left** /  **Right** to choose a preferred color setting.

**COLOUR:**  **+3** 

**COLOUR:**  **+2** 

 
**COLOUR:**  **+1** 

**COLOUR:**  **0** 




**COLOUR:**  **-1** 

**COLOUR:**  **-2** 

**COLOUR:**  **-3** 

- Press  **LCD** again until the LCD setting box disappears.

## Brightness Setting

- 1 Press  **LCD** a number of times to select **BRIGHTNESS**.
- 2 Press  **Left** /  **Right** to choose a preferred brightness setting.

**BRIGHTNESS:**  **+3** 

**BRIGHTNESS:**  **+2** 

 
**BRIGHTNESS:**  **+1** 

**BRIGHTNESS:**  **0** 




**BRIGHTNESS:**  **-1** 

**BRIGHTNESS:**  **-2** 

**BRIGHTNESS:**  **-3** 

 
- Press  **LCD** again until the LCD setting box disappears.

## LCD Setting

- 1 Press  **LCD** a number of times to select **LCD**.
- 2 Press  **Left** /  **Right** to choose "ON" or "OFF".

**LCD:**  **OFF** 

 **LCD:**  **ON** 

- Press  **LCD** again until the LCD setting box disappears.

This manual contains important information about how to safely and properly install, operate and care for this product.

Failure to properly install, operate and care for this product can increase the risk of electric shock or fire. It can also increase the risk of monitor failure and possibly personal injury. To reduce the risk of serious injury, death, or damage.

Read these instructions.  
Keep these instructions.  
Heed all warnings.  
Follow all instructions.



- Do not** attempt to service or repair the monitor & DVD Player yourself. Refer all servicing to qualified service personnel.
- Do not** block any ventilation openings. Do not place the Monitor and DVD Player on a bed, sofa, or other soft surface that may block ventilation openings.
- Do not** install the monitor and DVD Player near any heat sources, such as radiators, stoves, or other devices that produce heat.
- Do not** use this apparatus near water (for example, sinks, tubs, and pools) or expose it to rain, moisture, or dripping or splashing liquids. No objects filled with water (such as vases) should be placed on the apparatus.
- Do not** attempt to service or repair the monitor & DVD Player yourself. Refer all servicing to qualified service personnel.
- Do not** play headphones at a high volume to avoid exposure to excessive sound pressures. You should use extreme caution or temporarily discontinue use in potentially hazardous situation. Even if your headset is an open-air type designed to let you hear outside sounds, do not turn up the volume so high that you can not hear what is around you.



### General Electrical Precautions

As with any other electrical devices, failure to take the following precautions can result in serious injury or death from electrical shock or fire, and will lead to damage to the Monitor and DVD Player.

### Avoid Laser hazards

As the laser beam used in the DVD Player is harmful to eyes, and to avoid electrical hazards, do not attempt to disassemble the housing. Refer servicing to qualified personnel.

### Cleaning

Unplug the unit and turn power off before cleaning this unit.

### **IMPORTANT AUDIO SAFETY**

Your hearing is very important to you and to us, so please take care when operating this equipment. It is strongly recommended that you follow the listed guidelines in order to prevent possible damage to or loss of hearing.

#### **Establish a safe sound level**

Over time your hearing will adapt to continuous loud sounds and will give the impression that the volume has in fact been reduced. What seems normal to you may in fact be harmful. To guard against this before your hearing adapts set the volume at a low level.

#### **Decibel**

Level dB example

30dB quiet library, soft whisper.

40dB Living room, fridge freezer, bedroom away from traffic.

50dB normal conversation, quiet office, light traffic.

60dB Electric sewing machine

#### **The following noise can be harmful under constant exposure**

80dB Average city traffic, alarm clock buzzer at 2 feet, food mixer.

90dB Motorcycle, heavy goods vehicle, petrol lawn mower.

100dB Pneumatic drill, chain saw, garbage truck, discotec/night club.

120dB Rock bandconcert, thunderclap.

#### **Permanent loss of hearing**

140dB Threshold of pain, gunshot 2 feet away.

180dB Rocket launching pad.

*This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.*

**DO NOT** use non-circular DVD discs, otherwise it may lead to damage to this DVD player.

In order to keep the disc surface clean, please hold the DVD disc by its edge.

**DO NOT** touch the recorded surface of DVD disc.

**DO NOT** stick anything on the surface of DVD disc. If there is glue and other adhesive article, please remove it before loading the disc.

**DO NOT** leave the disc in direct sunlight.

**DO NOT** leave the disc near a heat source, such as heating pipe.

**DO NOT** leave a disc inside a car under direct sunlight.

After Playback, always remove the disc from the player and return it to the display/storage case.

To clean discs, use a dry soft cloth moving the cloth from the centre to the outside across the disc surface. **DO NOT** use a rotary motion as this can make the disc unplayable.

**DO NOT** use Petroleum products or aggressive cleaning agents, as these will damage the disc.

### Use of the in car power lead

This lead is specially designed for the unit. **DO NOT** use it for other in car products as this may result in damage to lead or the other equipment.



**Please read these precautions before operating this player.**

### ■ Placement

Avoid placing the player in areas of:

- direct sunlight radiators, or closed automobiles
- high temperature (over 35°C) or high humidity (over 90%)
- large amounts of dust as the internal parts may be seriously damaged

### ■ Non-use periods

When the player is not being used, turn it off. When left unused for a long period of time, the player should be unplugged from the household mains supply.

### ■ Do not insert fingers or other objects inside unit

- Touching internal parts of this unit is dangerous, and may cause serious damage to the player. Do not attempt to disassemble the player.
- Do not put any foreign object onto the player on the disc tray.

### ■ Keep away from water/magnet

- Keep the player away from flower vases, tubs, sinks, etc. If liquids are spilled into the player, serious damage could occur.
- Never bring a magnet or magnetized object near the player.

### ■ Stacking

- Place the player in a horizontal position, and do not place anything heavy on it.

### ■ Condensation

Moisture may form on the lens in the following conditions:

- immediately after a heater has been turned on
- in a steamy or very humid room
- when the player is suddenly moved from a cold environment to a warm one

If moisture forms inside this player, it may not operate properly. In this case, turn on the power and wait for one hour for the moisture to evaporate.

Before requesting service for the DVD Player, check the chart below for a possible cause of the problem you are experiencing. Some simple checkups or a minor adjustment on your part may eliminate the problem and restore proper operation.

SYMPTOM (COMMON)	REMEDY
No power.	<ul style="list-style-type: none"> <li>Insert the power plug securely into the power outlet.</li> <li>Check if the ON/OFF button on the top of the player is set to on.</li> <li>Check if no power at the AC outlet by plugging in another appliance for a test.</li> </ul>
The player does not start playback when PLAY is pressed.	<ul style="list-style-type: none"> <li>Condensation has formed: wait about 1 to 2 hours to allow the player to dry out.</li> <li>The player cannot play discs other than DVDs, audio CDs and picture CDs.</li> <li>Check if the disc is defective by trying another disc.</li> <li>Check the region (local) code.</li> </ul>
The player starts playback but stops immediately.	<ul style="list-style-type: none"> <li>The disc may be dirty and may require cleaning.</li> <li>Ensure that the disc is correctly placed in the disc frame.</li> </ul>
No picture.	<ul style="list-style-type: none"> <li>Ensure that the equipment is connected properly.</li> <li>Select the same channel and source on the TV as on the player.</li> </ul>
No sound.	<ul style="list-style-type: none"> <li>Ensure that the equipment is connected properly.</li> </ul>
Distorted sound.	<ul style="list-style-type: none"> <li>Ensure that the input settings for the TV and stereo system are proper.</li> <li>No sound is heard during still picture (pause) or slow-motion playback.</li> </ul>
No audio at Digital Output.	<ul style="list-style-type: none"> <li>Check the digital connections.</li> <li>Check the settings menu to make sure that the digital output is set to on.</li> <li>Check if the audio format of the selected audio language matches your receiver capabilities.</li> </ul>
Distorted picture.	<ul style="list-style-type: none"> <li>Check the disc for fingerprints and clean with a soft cloth, wiping from center to edge.</li> <li>Sometimes a small amount of picture distortion may appear. This is not a mal-function.</li> </ul>
Completely distorted picture or no colour in picture.	<ul style="list-style-type: none"> <li>The disc format is not according to the TV-set used (PAL/NTSC).</li> </ul>
Picture is distorted during rapid advance or rapid reverse.	<ul style="list-style-type: none"> <li>The picture will be somewhat distorted at times: this is normal.</li> </ul>
No rapid advance (or rapid reverse) playback.	<ul style="list-style-type: none"> <li>Some discs may have sections which prohibit rapid advance (or rapid reverse).</li> </ul>
No 4:3 (16:9) picture.	<ul style="list-style-type: none"> <li>Choose the correct setup "TV Aspect" item.</li> </ul>
No operations perform with the remote control.	<ul style="list-style-type: none"> <li>Check the batteries are installed with the correct polarities (+ and -).</li> <li>The batteries are depleted: replace them with new ones.</li> <li>Point the remote control unit at the remote control signal sensor and operate.</li> <li>Operate the remote control unit at a distance of not more than 7 meters from the remote control signal sensor.</li> <li>Remove the obstacles between the remote control unit and remote control signal sensor.</li> </ul>
No subtitles.	<ul style="list-style-type: none"> <li>Subtitles appear only with discs that contain them.</li> <li>Subtitles are hidden from the TV screen. Press SUBTITLE to display the subtitles.</li> </ul>
Alternative audio soundtrack (or subtitle) language available.	<ul style="list-style-type: none"> <li>An alternative language can not be selected may result of no more than one languages cannot be selected.</li> </ul>
No sound when connecting to 5.1 Channel speaker	<ul style="list-style-type: none"> <li>Check if the disc supports 5.1 Channel.</li> <li>Check if the speaker is properly connected.</li> <li>Check if the audio output setting is right.</li> </ul>
No key operation (by the DVD Player and/or the remote control) is effective.	<ul style="list-style-type: none"> <li>Turn the unit off and then back to on. Alternatively, turn off the unit, disconnect the AC power cord and then re-connect it. (The player may not be operating properly due to lightning, static electricity or some other external factor.)</li> </ul>
Distorted picture or no image OSD setting	<ul style="list-style-type: none"> <li>Check if the TV system setting is correct (Output is set to CVBS).</li> <li>Some setting must be stored by pressing left button.</li> </ul>

## Handling Precautions

- Hold the disc by the edges so the surface will not be soiled with finger-prints. (A)
- Fingerprints, dirt and scratches can cause skipping and distortion.
- Do not write on the label side with a ball-point pen or other writing utensils.
- Do not use record cleaning sprays, benzine, thinner, static electricity prevention liquids or any other solvent.
- Be careful not to drop or bend the disc.
- Do not install more than 1 disc on the disc tray.
- Do not try to close the disc tray when the disc is not installed properly.
- Be sure to store the disc in its exclusive case when not in use.

## If the surface is soiled (B)

Wipe gently with a soft, damp (water only) cloth.

When wiping discs, always move the cloth from the center hole toward the outer edge.

(If you wipe the discs using a circular motion, circular scratches are likely to occur, which will cause noise.)

If the disc is brought from a cold to a warm environment, moisture may form on the disc

Wipe the moisture off with a soft, dry, lint-free cloth before using the disc.

## Improper disc storage

You can damage discs if you store them in the following places:

- Areas exposed to direct sunlight
- Humid or dusty areas
- Areas directly exposed to a heat outlet or heating appliance

## Playable disc format

- DivX, MPEG4, DVD, DVD+RW, DVD+R, DVD-RW, DVD-R, CD-DA, Mixed CD-DA, JPEG file disc and Kodak Picture Disc.

 
## Disc which cannot be played with this player

- CD-ROM
- CVD
- CD-G


## Maintenance

- Be sure to turn the unit off and disconnect the AC power cord before maintaining the unit.
  - Wipe this unit with a dry soft cloth.
- If the surfaces are extremely dirty, wipe clean with a cloth which has been dipped in a weak soap-and-water solution and wrung out thoroughly, and then wipe again with a dry cloth.
- Never use alcohol, benzine, thinner, cleaning fluid or other chemicals.
- And do not use compressed air to remove dust.

(A)

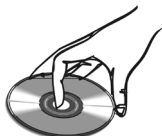

(B)

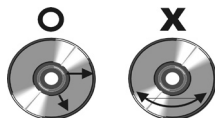 

<b>GDVD100W3</b>	
Disk Format	DVD/CD/CD-R/CD-RW
Video System	PAL
Video Decompression	MPEG4/MPEG-2(ISO/IEC-13818)/MPEG-1
LCD Display	10" active-matrix TFT type
<b>Terminals</b>	
Audio/Video Section	Audio Input/Output x 1 Video Input/Output x 1 SD/MMC Card Slot Input x 1 USB Port Input x 1
Audio Section	Coaxial Digital Output x 1
Headphone sockets	Headphone socket x 2
Line Voltage	AC 100-240 VAC 10% (50/60 Hz) Adaptor
Power Consumption	15W (12V, 1.25A)
Dimensions	282 mm (L) x 195 mm (W) x 45.6 mm (H)
<b>Supplied Accessories</b>	
Power adaptor	1
Cigarette lighter adaptor	1
Audio Cable	1
Video Cable	1
Remote Control	1
Carry Bag	1
Earphone	1
User guide	1
Quick guide	1