

Goodmans



GDVD143FM

DIGITAL VERSATILE DISC PLAYER
with Remote Control

User Guide

CONNECTIONS TO MAINS SUPPLY

This appliance may be fitted with a non-rewireable plug. If it is necessary to change the fuse in a non-rewireable plug the fuse cover must be refitted. If the fuse cover is lost or damaged, the plug must not be used until a replacement available from the appliance manufacturer is obtained. It is important that the colour of the replacement fuse cover corresponds with the colour marking on the base of the plug.

If the plug has to be changed because it is not suitable for your socket, or becomes damaged, it should be cut off and an appropriate plug fitted following the wiring instructions below. The plug removed must be disposed of safely as insertion into a 13A socket is likely to cause an electrical hazard.

For your own safety read the following instructions carefully before attempting to connect this unit to the mains.

Mains (AC) Operation


This unit is designed to operate on 230V, 50 Hz current only. Connecting it to other power sources may damage the unit.

The wires in this mains lead are coloured in accordance with the following code :

BLUE = NEUTRAL BROWN = LIVE

Important

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:-

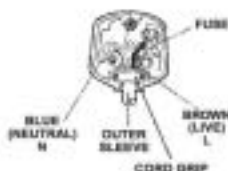

The wire which is coloured blue must be connected to the terminal which is marked with the letter N or coloured black.

The wire which is coloured brown must be connected to the terminal which is marked with the letter L or coloured red.

No connection is to be made to the earth terminal of the plug.

If a 13 Amp (BS 1363) Plug is used, a 3Amp Fuse must be fitted, or if any other type of Plug is used a 5 Amp Fuse must be fitted, either in the Plug, or on the Distribution Board.

Caution

To prevent electric shock disconnect from the mains before removing cover. No user serviceable parts inside. Refer servicing to qualified service personnel.

Safety Precaution



Do not allow this unit to be exposed to rain or moisture.

Mains Supply : 230 Volts 50 Hz - AC only.

This symbol means that this unit is double insulated. An earth connection is not required.

CAUTION

CLASS I LASER PRODUCT

Use of Controls or adjustments or performance of procedures other than those specified herein may result hazardous radiation exposure.

LASERSAFETY



This unit employs a laser, only qualify service personnel should attempt repair. DANGER : INVISIBLE LASER RADIATION WHEN OPEN AND INTERLOCK FAILED OR DEFEATED.AVOID DIRECT EXPOSURE TO BEAM.

CAUTION : HAZARDOUS LASER RADIATION WHEN OPEN AND INTERLOCK DEFEATED.

CAUTION

CLEANING : Always disconnect unit from mains supply before attempting to clean it. Use soft cloth moistened with soapy water, wipe gently. Do not use solvents or abrasive materials.

Contents

| | |
|--|-----------|
| Introduction | 4 |
| Safety is Important | 4 |
| Parts and Controls | 5 |
| Front panel | 5 |
| Rear Panel | 5 |
| Remote Control | 6 |
| Getting Started | 7 |
| In The Box | 7 |
| Turning the Unit On/Off | 7 |
| Screen Saver | 7 |
| The Remote Control | 8 |
| Installing the batteries | 8 |
| Using the Remote Control | 8 |
| Connecting External Equipment | 9 |
| Connecting to a stereo television | 9 |
| Connecting to a mono television | 10 |
| Connecting to a stereo audio system | 11 |
| Connecting to a decoder with Dolby Digital (AC-3) processing | 12 |
| Connecting to a FM wire aerial | 13 |
| Compatible Discs | 14 |
| Region code | 14 |
| Inserting a Disc | 15 |
| Menu systems | 15 |
| Language Setup | 15 |
| Screen Setup | 16 |
| TV Type | 16 |
| 4:3 PS (Pan and Scan) Mode | 16 |
| 4:3 LB (Letterbox) Mode | 17 |
| 16: 9 Mode | 17 |
| Screen saver | 18 |
| TV System | 18 |
| Brightness | 19 |
| Contrast | 19 |
| Video Out | 20 |
| Audio Setup | 20 |
| Custom Setup | 21 |
| Parental Control | 21 |
| Parental Control continued | 23 |
| Change Password | 24 |
| Default | 24 |
| Help and Advice | 25 |

| | |
|---|-----------|
| DVD Player Functions | 26 |
| Pausing Playback | 26 |
| Viewing Frame by Frame | 26 |
| Stopping Playback | 26 |
| Resume function | 26 |
| Fast Search Forward/Reverse | 27 |
| Skipping Chapters or Tracks | 27 |
| Slow motion (DVD only) | 27 |
| Special Functions | 28 |
| Search DVD's | 28 |
| Search - Audio Discs | 29 |
| Zoom Function (DVD only) | 30 |
| Title button (DVD only) | 30 |
| Menu button | 30 |
| Repeat Function (DVD) | 31 |
| Repeat Function (CD) | 31 |
| Repeat A-B | 31 |
| Selecting a Scene Angle | 32 |
| Subtitle Function | 32 |
| Audio Function | 33 |
| Display Function | 33 |
| Volume Buttons | 33 |
| Playing audio discs | 34 |
| Playing MP3 discs | 35 |
| Program Function - Audio and MP3 Discs | 36 |
| Playing Kodak picture CDs or JPEG picture CDs | 37 |
| Operating The FM Radio | 38 |
| Handling Discs | 39 |
| Safety Instructions | 40 |
| Power Source | 40 |
| Safety Considerations | 40 |
| Cleaning | 40 |
| Servicing | 41 |
| Electrical Information | 41 |
| Guarantee | 42 |

Introduction

Thank you for purchasing this product which has been designed and manufactured to give you many years of trouble-free service.

You may already be familiar with using a similar product, but do please take time to read these instructions - they have been written to ensure you get the very best from your purchase.

Safety is Important



To ensure your safety and the safety of others, please ensure you read the Safety Instructions **before** you operate this product.

Keep this information in a safe place for future reference.




WARNING: THIS PRODUCT UTILISES A CLASS 1 LASER. USE OF CONTROLS, ADJUSTMENTS OR PROCEDURES NOT LISTED IN THIS USER GUIDE MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.




This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright technology must be authorised by Macrovision Corporation, and is intended for home and other limited viewing uses only, unless otherwise authorised by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

Parts and Controls


Front panel

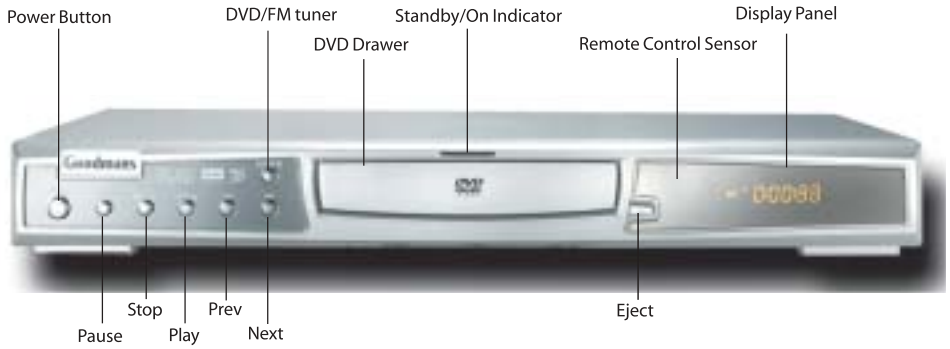

Rear Panel

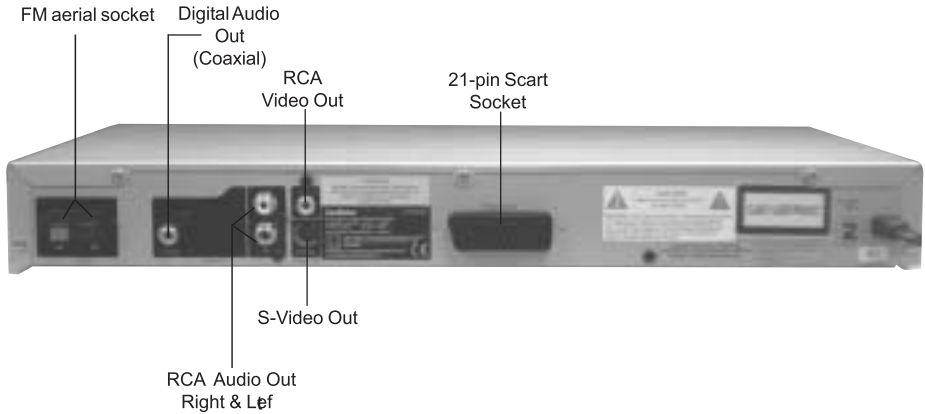

Remote Control

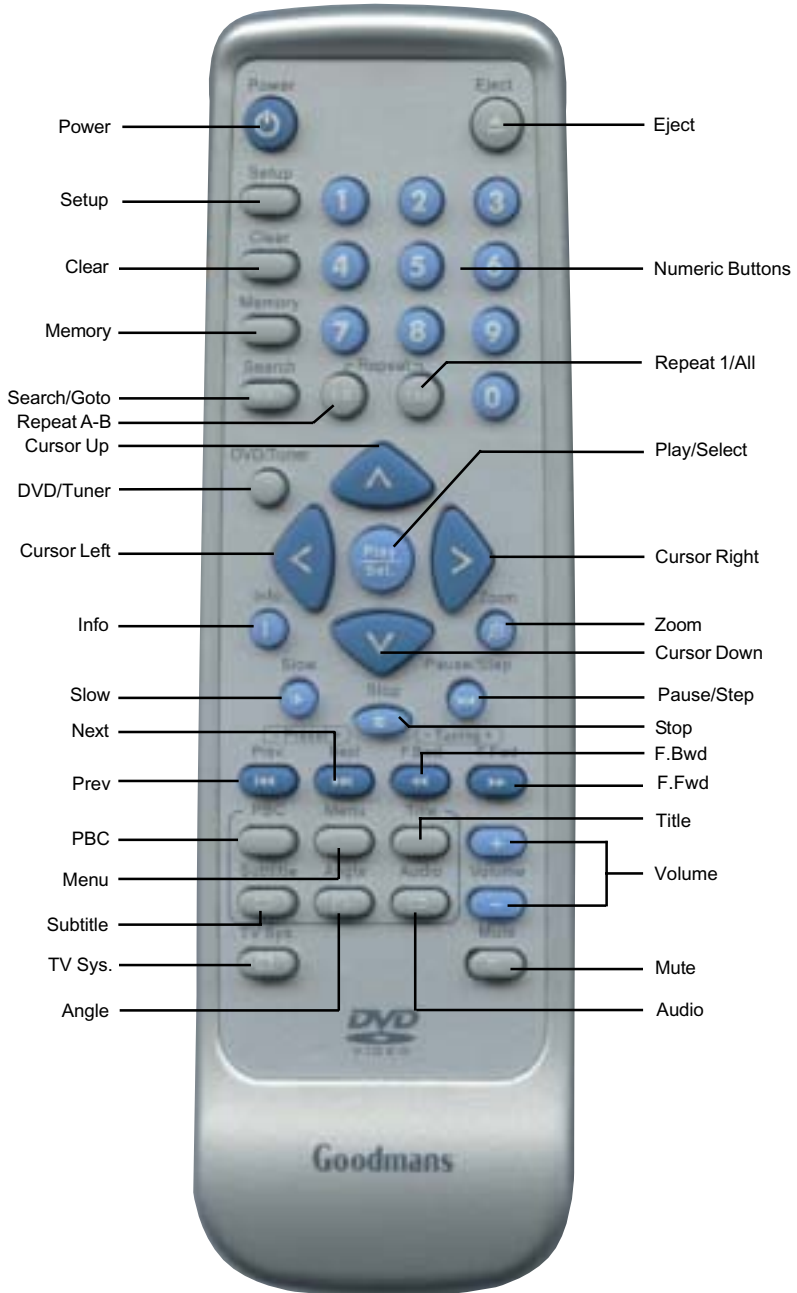

Getting Started

Remove your DVD player carefully from the box. You may wish to store the packaging for future use.

In The Box

Included in this package should be:

Goodmans DVD player

Remote control

User guide

Should any of these items be missing, please contact the helpline on **02392-391100**.



Note: Unless otherwise stated, all references to buttons refer to the remote control.

Turning the unit on/off

Press the **POWER** button on the front of the unit or the **POWER** button on the remote control.



Note: when you use the power button to turn the unit off, it is not disconnected from the mains AC supply. This state is called the standby mode.

Screen Saver

Television screens can sometimes be damaged by displaying a static images for prolonged periods of time. To prevent this, the DVD player is equipped with an automatic screen saver to protect your television screen.



Pressing any button will deactivate the screen saver.

The Remote Control

Installing The batteries

Locate the remote control, and remove the battery cover.

Insert two AAA size batteries into the compartment.



Note: Refer to the diagram inside the battery compartment for correct installation of batteries.



Using The Remote Control

To use the remote control, point it at the front of the DVD player, towards the sensor situated to the right of the DVD drawer.

The remote control has a range of up to 6 meters from the DVD player and at an angle of up to 60 degrees.

Do not block the path of the beam from the remote control to the DVD player.



Note: Sunlight or very bright light will reduce the remote control sensitivity.


Connecting External Equipment

Connecting to a stereo television


NOTE

Note: The following information is for guidance only

There are two ways to connect your DVD player to a stereo television.

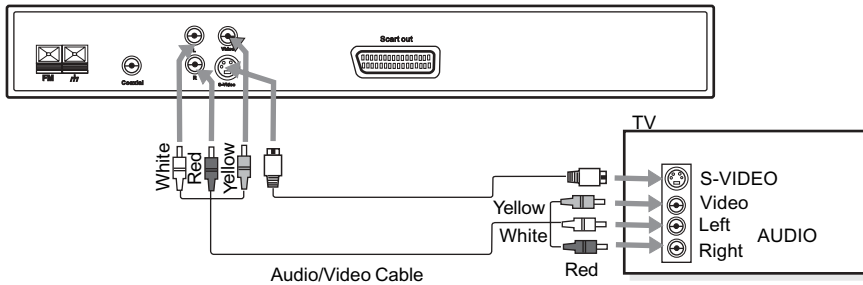

- Option 1: RCA left and right audio (DVD) to RCA left and right audio (TV), with RCA video (DVD) to RCA video (TV).

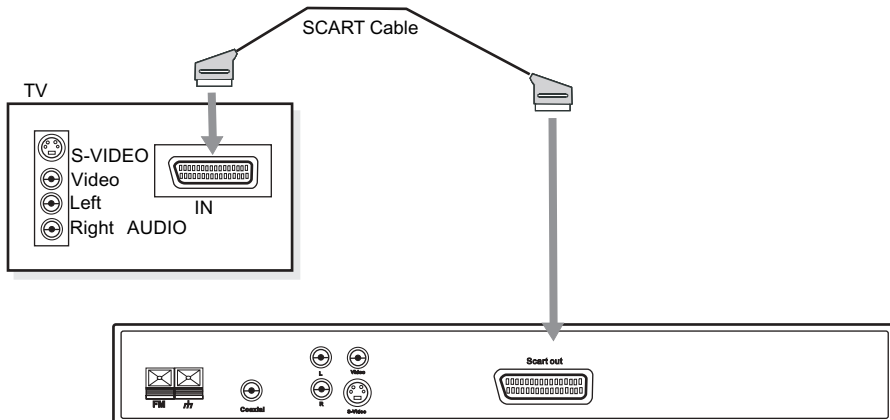

- Option 2: 21 Pin Scart (DVD) to 21 Pin Scart (TV).


NOTE

Note: Do not use a combination of options 1 and 2, as this may produce picture interference.

Connecting to a mono television



Note: The following information is for guidance only

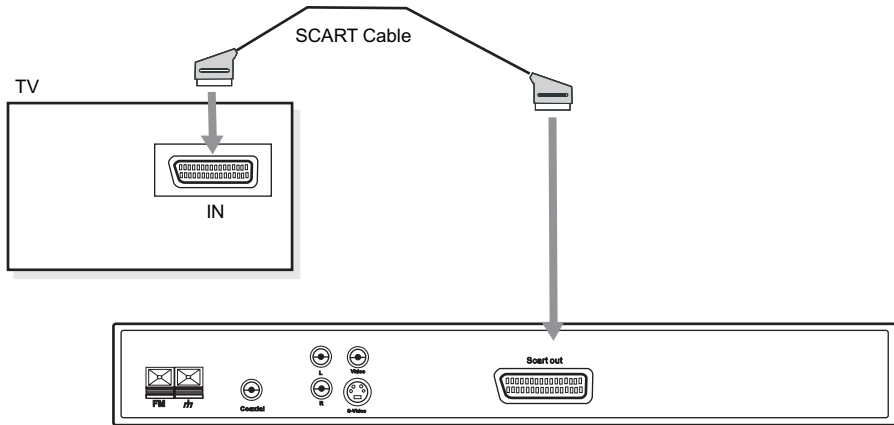


1. 21 Pin Scart (DVD) to 21 Pin Scart (TV).

Connecting to a stereo audio system

NOTE

Note: The following information is for guidance only

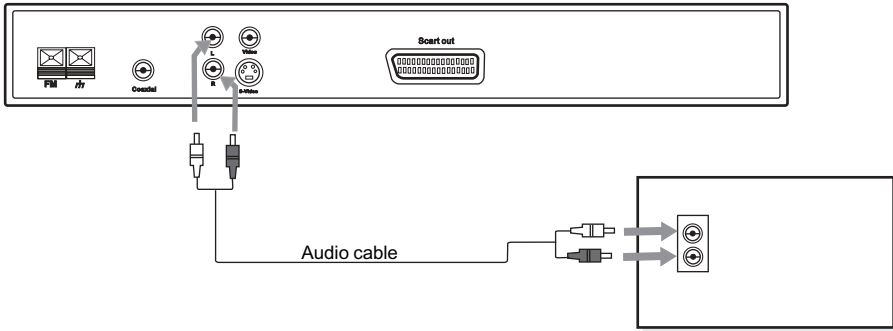


1. RCA left and right audio out (DVD) to left and right audio in (Audio System).

Connecting to a decoder with Dolby Digital (AC-3) processing




Note: The following information is for guidance only

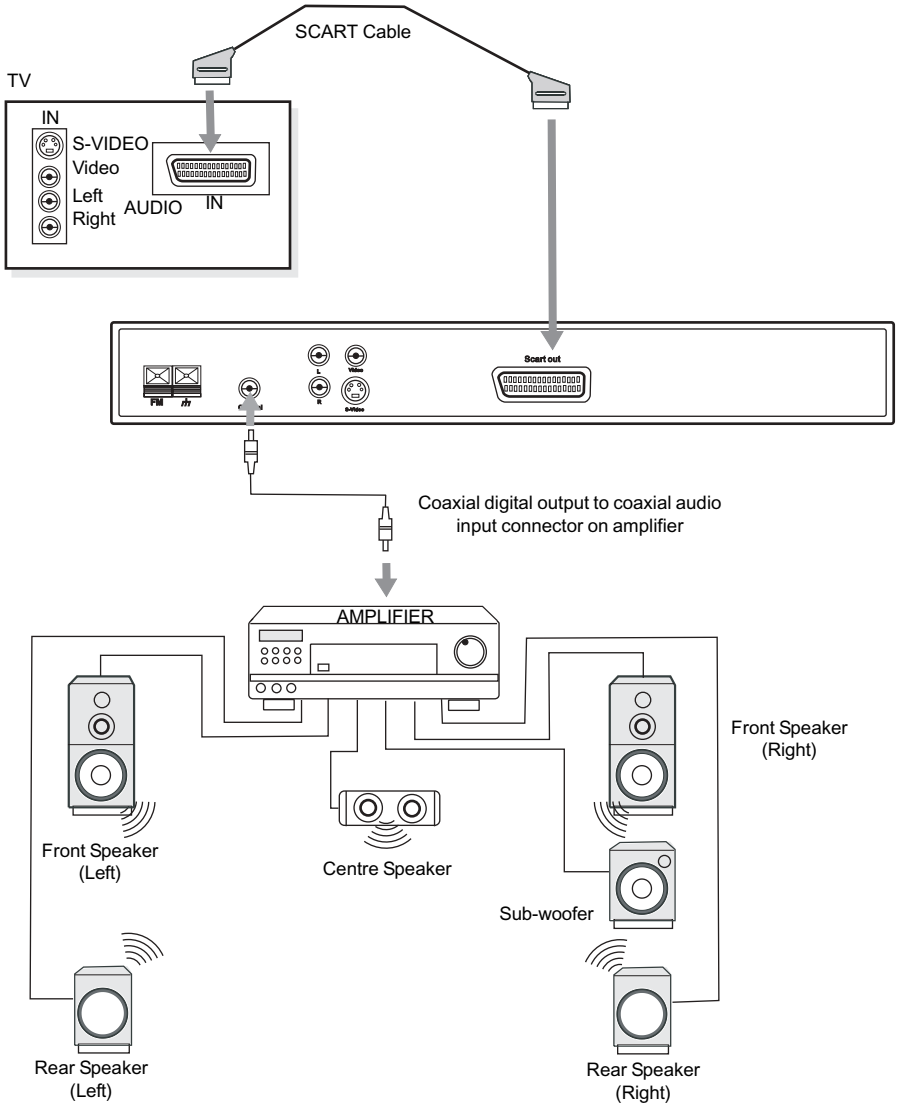

Connecting to a FM wire aerial

NOTE

Note: The following information is for guidance only

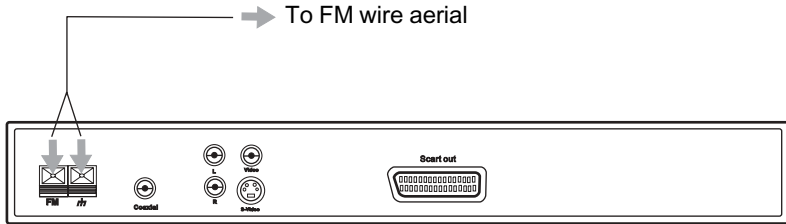

1. Connect the FM wire aerial to the aerial input socket (DVD).

Compatible Discs

Your DVD player can play discs that are marked with the following logos:



8cm/12cm DVD Video Discs.



12cm Compact Disc Recordable Discs.



12 cm Compact Disc Rewritable Discs.



8cm/12cm Compact Disc Audio Discs.



12cm MP3 Audio Discs.



12cm Photo Compact Discs.



The symbol left appears on the TV screen when the function requested is not available.

Region code

Since it is usual for DVD movies to be released at different times in different regions of the world, all players have region codes and discs can have an optional region code. If you load a disc of a different region code into your player you will see the region code notice on the screen. The disc will not playback and should be unloaded.

The region code for this player is 2 as indicated by the symbols below.



Inserting A Disc

Ensure the DVD player is connected to the mains and is correctly connected to your television.



Note: For instructions how to connect your DVD player to your television see the "Connecting To External Equipment" section (p9-12).


Press the **POWER** button on the front of your DVD player.

Press the **EJECT** button to open the DVD drawer.



*Note: **OPEN** will show on the DVD display panel and the top left of the screen.*

Place a compatible disc into the recess on the DVD disc tray. Make sure that the label is facing up. Place 8cm discs on the inner recess.

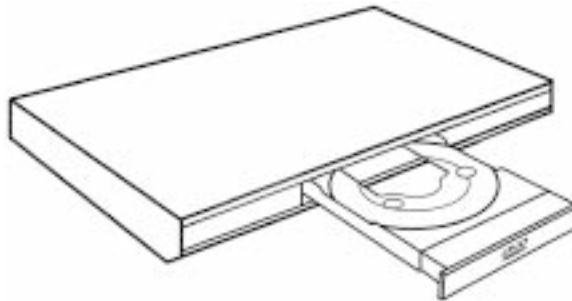

Note: for a list of compatible disc formats see page 13

Press the **EJECT** button to close the DVD drawer.



*Note: When the drawer has closed **LOAD** will show on the DVD display and **Loading** will be displayed in the top left corner of the screen.*

 
Menu systems

Ensure that the DVD player is in stop mode.



Press the **SETUP** button.

The setup menu will be displayed on the screen.

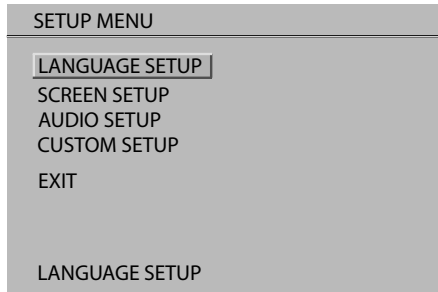


You can scroll through the menus using the arrow buttons on the remote control. Once the required menu is highlighted, use the **PLAY/SEL** button to select the menu.



To return to the normal display, press the **SETUP** button to exit the menu screen.



Language setup

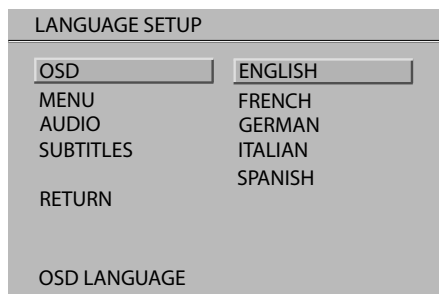


Various language settings for the Audio track, Subtitles and Disc menu can be preset on this DVD player. Choose from the options given.



Note: If the chosen language is not available on the DVD, the DVD will play in its default language.

Screen setup

TV type

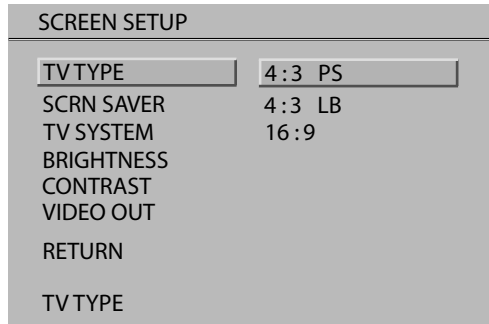

Use the arrow buttons to navigate to a required output format and press the **PLAY/SEL** button to select the option.

4:3 PS (Pan and Scan) mode

This mode will display movies in the centre of the screen, leaving a black border at the right and left edges of the screen if you are using a widescreen TV



4:3 LB (Letterbox) mode

This mode allows you to see movies in their original aspect ratio. The entire frame of the movie will be displayed, but it will occupy a smaller portion of the screen.

 


16: 9 mode

This mode should be used, when connected to a widescreen television.




Screen saver

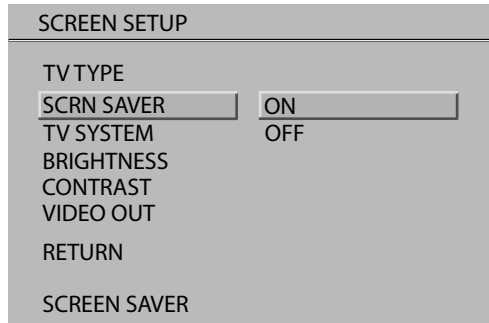

Turns the screen saver on or off.

 TV system

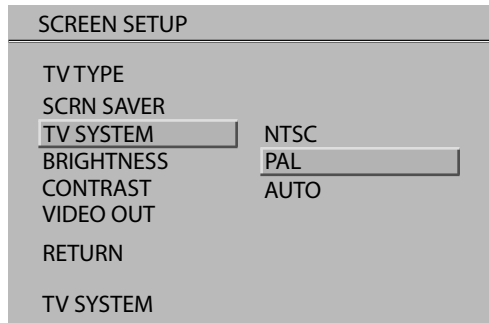

This DVD player supports NTSC, PAL and AUTO formats.

To select the relevant mode, ensure that the DVD player is in the stop mode.



Note: the PAL format is generally used by televisions in the U.K. Check your television user guide for advice.



Note: If NTSC is selected with a non-compatible television you may experience interference or an unstable picture.

Brightness

| SCREEN SETUP | |
|--------------|--------|
| TV TYPE | |
| SCRN SAVER | |
| TV SYSTEM | |
| BRIGHTNESS | NORMAL |
| CONTRAST | BRIGHT |
| VIDEO OUT | SOFT |
| RETURN | |
| BRIGHTNESS | |


Set the brightness to either normal, bright or soft depending on the ambient (surrounding) light level.

Contrast

| SCREEN SETUP | |
|--------------|----|
| TV TYPE | -4 |
| SCRN SAVER | -3 |
| TV SYSTEM | -2 |
| BRIGHTNESS | -1 |
| CONTRAST | 0 |
| VIDEO OUT | +1 |
| RETURN | |
| CONTRAST | |

The contrast can be adjusted from -4 to +4.

 Video out

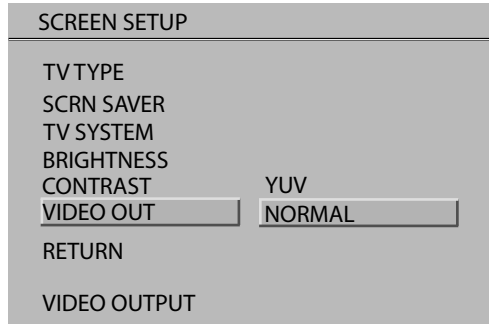


Navigate to select the required output of the scart socket and select by pressing the **PLAY/SEL** button.

YUV is commonly described as component connection and is commonly recognised as offering very high quality, using SCART to 3 phono outputs coloured green, blue and red. Component inputs are usually only found on top of the range televisions, and on video projectors.

NORMAL Select this option when using a normal scart to scart lead.

 Audio setup

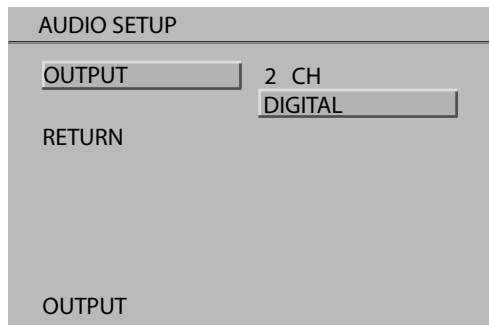


Navigate to select the required output format and select by pressing the **PLAY/SEL** button.

Select Digital when the DVD player is connected to a Dolby Pro Logic decoder (Coaxial output.) No sound will be heard from the TV when digital is selected.

Select 2 CH when the DVD is connected to a basic stereo TV or audio system.


Custom setup

Parental control

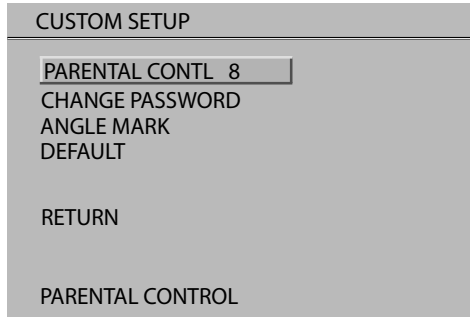

Press the **PLAY/SEL** button to select the parental control menu.

 The menu will change as follows.

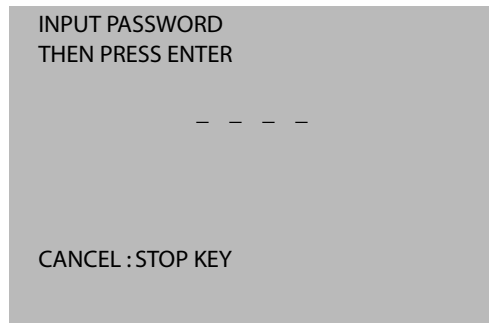


Enter the password.



Note: The password is set at 0000 in the factory , this can be changed by following the procedure described later in this book.

Parental control *continued*

 The parental control menu will be displayed

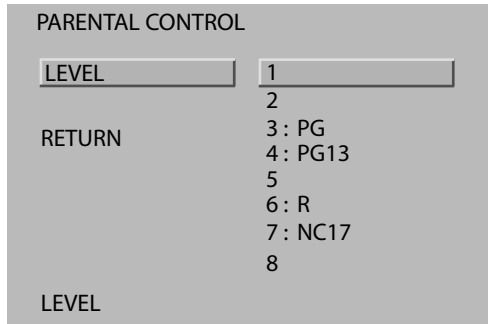

You can prevent the playback of unsuitable DVD's by setting the parental control to a lower level.

| | |
|---------|---------------------------|
| 3 PG | General |
| 4 PG 13 | Parental guidance advised |
| 7 NC17 | Adult content (over 18) |
| Off | No restrictions |




Note: This feature only works if the content rating is included within the disc.

Change password



You can change the current password by selecting **CHANGE PASSWORD** and pressing the **PLAY/SEL** button, the following menu will be displayed.

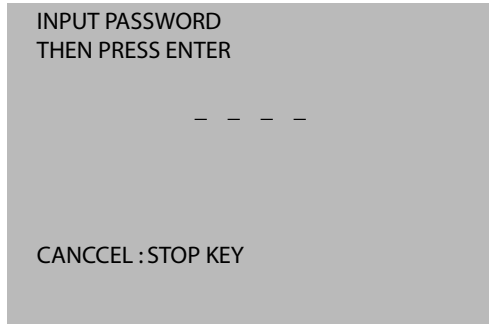

You will need to enter the current password (initially set to 0000) then press the **PLAY/SEL** button



Then type in your new password, press the **PLAY/SEL** button.

Default

To return the DVD player to the factory settings, highlight the **DEFAULT** setting and press the **RIGHT ARROW** button to select **READ** and then press the **PLAY/SEL** button.



Note the parental setting and password are not changed.

Help and Advice

| |
|---|
| The DVD Player Will Not Power Up |
| <ol style="list-style-type: none"> 1. Ensure that the plug is connected to the mains socket. 2. Replace the fuse in the plug. |
| Disc Does Not Play |
| <ol style="list-style-type: none"> 1. Check that the Disc has been correctly loaded, with the label facing up. 2. Check the format of the disc is supported. 3. Ensure the DVD disc is Region 2. |
| No Picture |
| <ol style="list-style-type: none"> 1. Ensure that the DVD Player and the Television is powered on. 2. Check that the scart cable is fitted securely. 3. Ensure that the Television has the AV channel or equivalent selected. 4. Try a different DVD disc, that you are sure works ok. |
| No Sound |
| <ol style="list-style-type: none"> 1. Check that the DVD Player has not been muted. 2. Ensure the volume on the television and DVD is set to an audible level. 3. If you are using a normal TV, make sure that the audio setup is set to 2CH. 4. Ensure that the scart lead is fitted securely. |
| The Picture Quality Is Poor |
| <ol style="list-style-type: none"> 1. Make Sure that the DVD disc surface is not damaged. 2. Clean the DVD disc, and try again. 3. Ensure that the scart lead is fitted securely. 4. Check that NTSC output format has not been selected. (Refer to the Setup section). |
| Incorrect OSD Language |
| <ol style="list-style-type: none"> 1. Refer to the Setup section of the user guide and change the OSD (On Screen Display) Language. |
| Some Functions Do Not Work (Angle, Zoom etc.) |
| <ol style="list-style-type: none"> 1. Refer to the DVD disc contents. Not all functions are available on all DVD discs. |
| No Response From The Remote Control |
| <ol style="list-style-type: none"> 1. Ensure that the path between the remote control and the front of the DVD Player is not obstructed. 2. Check that the batteries have been correctly fitted. 3. Replace the batteries. |



Note: If none of the above suggestions seem to work, try switching your DVD Player off and then on again.



Warning: If this does not work, contact either your supplier or a qualified DVD repair technician. Never attempt to repair a DVD Player yourself.

DVD Player Functions

Pausing Playback

PAUSE/STEP



Press the **PAUSE/STEP** button to pause the playback.



Note: Playback pauses and the pause symbol  will be displayed on the screen.



Press the **PLAY/SEL** button to resume normal playback.

Viewing Frame by Frame

PAUSE/STEP




Press the **PAUSE/STEP** button to pause the playback.

PAUSE/STEP



Each time you press the **PAUSE/STEP** button the still picture advances to the next frame.



Note: The pause symbol and play  symbol will be displayed on the screen.



Pressing **PLAY/SEL** returns to the normal playback mode.

Stopping Playback

STOP



Press the **STOP** button.



Note: Playback is stopped and "PRE STOP" will be shown on the LCD display.

Resume function

Playback can be resumed from the last played point by pressing the **PLAY/SEL** again, if the **STOP** button is pressed for a second time this will not happen and playback will begin from the beginning of the disc.

Fast Search Forward/Reverse

F.FWD



Press the **i f** button to search forwards through the disc.

F.RWD



Press the **h r** button, to search backwards through the disc.

Repeatedly pressing the search buttons will toggle through the various search speeds available x2, x4, x8, x16, x32

PLAY
SEL

To resume normal speed playback, press the **PLAY/SEL** button.

Skipping Chapters or Tracks

NEXT



Press the **i I** button to select the next track or chapter

PREV



Press the **I h h** button once to skip to the beginning of the previous chapter or track.

PREV



Press the **I h h** button repeatedly to select previous chapters or tracks.

Slow motion (DVD only)

During playback,

SLOW



Press the **SLOW** button repeatedly to toggle through the various playback speeds,

| Slow button | Display Shows | Action |
|-------------|---------------|---|
| 1st Press | 1/2 | Plays the title at 1 half normal speed. |
| 2nd Press | 1/4 | Plays the title at 1 quarter normal speed. |
| 3rd Press | 1/8 | Plays the title at eight times slower than normal speed. |
| 4th Press | 1/16 | Plays the title at sixteen times slower than normal speed. |
| 5th Press | 1/32 | Plays the title at thirty two times slower than normal speed. |
| 6th Press | No display | Return to normal speed. |



Note: The sound is muted during slow-motion playback.

Special Functions



Note: Some DVD discs do not support the SEARCH function.



Search DVD's

Search by chapter or title number



Press the **GOTO** button.

The following will be displayed on the screen

e.g.  **01/12**  **12/38**
 Title Chapter



Press the left or right arrow keys to move the cursor between title and chapter entry points.

Using the numeric buttons, enter the title or chapter number.


The playback will then jump to that point.

Search by title time



Press the **GOTO** button twice.

The following will be displayed on the screen

e.g.  **: 01/12** _ : _ _ : _ _
 Title

Using the numeric buttons, enter the time you want to jump to.

The playback will then jump to that point.

Search - Audio Discs

Disc search



Press the **GOTO** button.

e.g. **GO : : :** will be displayed on the screen.



Using the numeric buttons, enter the time and then press the **PLAY/SEL** button..

The playback will then jump to that point.



Note: The time entered is limited to the length of the disc.



To cancel the disc search, Press the **GOTO** button a second time before pressing the **PLAY/SEL** button.

Select track number

Using the numeric buttons, enter the track required.

The playback will then jump to the beginning of that track.

Zoom Function (DVD only)

During playback or pause.



Press the **ZOOM** button repeatedly to cycle through the zoom options.

| Zoom button | Display Shows | Action |
|-------------|---------------|--------------------------------------|
| 1st Press | x 2 | Multiplies the screen size by two. |
| 2nd Press | x 4 | Multiplies the screen size by four.. |
| 3rd Press | OFF | Return to normal picture. |



Note: When zooming in, you can use the cursor keys to pan across the picture.

Title button (DVD only)



While playing a DVD, press the **TITLE** button to return to the root menu.



Note: This function is not supported on all DVD discs.

Menu button



To return to the previous menu, press the **MENU** button.

Repeat Function (DVD)

1/ALL

Each time you press the **REPEAT 1/ALL** button, the repeat status changes as follows.

REPEAT CHAPTER (repeats the current chapter)

REPEAT TITLE (repeats the current title)

REPEAT DISC (repeats all titles and chapters on the disc)

1/ALL

To cancel the repeat function, press the **REPEAT 1/ALL** button again.

Repeat Function (CD)

1/ALL

Each time you press the **REPEAT 1/ALL** button, the repeat status changes as follows.

REPEAT TRACK (repeats the current track)

REPEAT DISC (repeats all tracks on the disc)

1/ALL

To cancel the repeat function, press the **REPEAT 1/ALL** button again.

Repeat A-B

The A-B function allows a selected portion of any length to be repeated.

A - B

When the film reaches the beginning of the section you want to repeat, press the **REPEAT A-B** button. “**Rep. A**” will be displayed on the screen.

A - B

Press the **REPEAT A-B** button again, when the film reaches the end of the section you want to repeat. “**Rep. A-B**” will be displayed on the screen.



Note: The selected portion will be repeated until the function is cancelled.

A - B

To cancel the A-B function, press the **REPEAT A-B** button again.

Selecting a Scene Angle



Note: the multi-angle feature may not be available on all scenes on a disc and may not be available on all discs.



Each time you press the **ANGLE** button, the scene angle changes.

If there are no other angles available,  will be displayed

Subtitle Function



Press the **SUBTITLE** button repeatedly to cycle through the available languages.



Note: See the DVD disc cover for supported languages.

Audio Function



Press the **AUDIO** button repeatedly to cycle through the available audio tracks



Note: See the DVD disc cover for details

Display Function

The **INFO** button is used to display information about the current disc.



Note: The display function can also be used with audio and mp3 discs. Although, different displays will be shown.











Press the **INFO** button once to display the elapsed time for the title (movie).

e.g.  **01/12**  **12** **0:34:24**
 Title Chapter Time



Press the **INFO** button again to display additional information.

| | |
|--|---|
|  01/12 Title |  12/38 Chapter |
|  0 : 33 : 59 Elapsed time | |
|  AUTO TV system |  1/4 Audio track |
|  OFF subtitles |  --- Scene angle |
|  : DD | 5.1CH |
| Audio type | |



Press the **INFO** button again to turn the information display off.

Volume Buttons



The **VOLUME** buttons are used to adjust the output volume.



Note: It is best to leave this set at 16 and adjust the volume through your TV or sound system.

Playing audio discs

Press the **POWER** button on the front of your DVD player.

Press the **EJECT** button on the remote control or the **EJECT** button on the DVD player to open the DVD drawer.



*Note: **OPEN** will show on the DVD display panel and the corner of the screen.*

 
Place an audio disc into the recess on the DVD disc tray, make sure that the label is facing up.

Press the **EJECT** button on the remote control or the **EJECT** button on the DVD player to close the DVD drawer.



*Note: When the drawer has closed **LOAD** will show on the DVD display and **Loading....** will be displayed in the top right of the screen.*

The DVD player will start to play the first audio track on the disc.



Press the **INFO** button once to display the track number and elapsed track time.

Press the **INFO** button again to remove the information.

Playing MP3 discs

Press the **POWER** button on the front of your DVD player.

Press the **EJECT** button to open the DVD drawer.



*Note: **OPEN** will show on the DVD display panel and will be displayed in the corner of the screen.*

Place a disc containing the mp3 files into the recess on the DVD disc tray. Make sure that the label is facing up. Place 8cm discs on the inner recess.

Press the **EJECT** button to close the DVD drawer.



*Note: When the drawer has closed **LOAD** will show on the DVD display and **Loading....** will be displayed in the corner of the screen.*

The following is an example menu of what will be displayed on the screen.

| | |
|------------|---------|
| TRACK LIST | 07/10 |
| DIR: ROOT | 01/01 |
| TRK 075/91 | 03:14 |
| SHAWN M | SHENNA |
| SNOOPD | SONIQU |
| MP3065 | STEPS - |
| STEPS- | STEPS - |
| STEPS- | STEPS - |




Note: The MP3 menu will only display the first 7 characters in the MP3 file name.

Program Function - Audio and MP3 Discs

The program function can be used to play a user preset sequence.

Press the **PROGRAM** button.

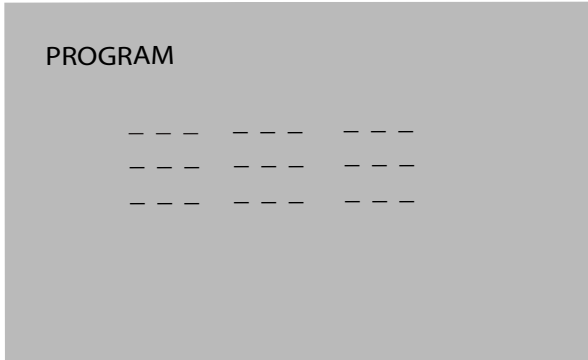

The cursor will be placed at the first program location.



Use the numeric buttons to enter the track number and then press the **PLAY/SEL** button.

The cursor will move to the next program location.

Use the numeric buttons to enter the next track number.

Continue to enter the tracks as required. A maximum of 9 entries can be entered.



Once all the entries have been entered, press the **PLAY/SEL** button to start the program sequence. The track number and elapsed track time will be displayed.

Playing Kodak picture CDs or JPEG picture CDs

Basic playback

Load a Kodak picture CD or a JPEG picture CD into the CD tray. After a few seconds, the unit shows the pictures 1 by 1 on the screen.

Pause, Next and Prev

PAUSE/STEP



Press the **PAUSE/STEP** button to pause the slideshow.



Press the **PLAY/SEL** button to resume the slideshow.

NEXT



During pause mode, press the **PREV** or **NEXT** button to view the next or previous image.

PREV



Rotating *(Kodak picture CD only)*



During pause mode, use the left or right **CURSOR** keys to rotate the image by ninety degrees.

Zoom and scrolling

ZOOM



Press the **ZOOM** button to view the pictures at different sizes.



*Note: You can use the **CURSOR** keys to pan across the picture (Kodak picture CD only).*

Thumbnail viewing *(Kodak picture CD only)*

STOP



Press the **STOP** button to display the thumbnail preview. 9 images per page.



Use the **CURSOR** keys to select an image, If you want to view the image full size, press the **PLAY/SEL** button.

PLAY
SEL



Info

INFO



Press the **INFO** button to view the image number and total number of images on the disc.

Operating The FM Radio

After operating the DVD Player it is possible to listen to the inbuilt FM radio. Leave all connections the same as for watching the DVD Player. The TV must be switched on to allow you to hear the audio from the radio, The TV will not display the tuner frequency or functions use the FL display on the DVD player.

Ensure that the Wire aerial is connected to the aerial input socket located at the rear of the player. Fully unravel and position it for best reception

DVD/Tuner



Press the DVD/Tuner button on the remote. The Blue Goodmans splash screen will disappear leaving just a blank screen. This is to protect the TV screen from being burnt through long exposure without a moving image

- Tuning +



The display on the DVD Player will show a 4 digit frequency. Now press the Tuning +/- (F.Bwd or F.Fwd) button to search through the FM band. The tuning will automatically stop at the first station received. The audio will be heard through your TV. Adjust the volume level accordingly on the remote or TV.

Memory



Storing Stations(30 Preset Memory)

To store the selected radio station press the MEMORY button on the remote F01 will flash display along with the frequency tuned.

- Preset +



Memory



Now press the PRESET +/- (Prev/Next) button on the remote to select which Press memory number to store this station(1-30).

Press the Memory button to store this station.

To store additional stations repeat above steps 5-7.Press the Preset +/- (Prev or Next) button repeatedly until the Preset station number is shown in the display.

Note 1: To change a station Preset memory simply retune to the desired station and memories that station into the desired Preset number, The new station will now be stored in that memory location.

Note 2: Tuning is cyclic, When the end of the frequency is reached the frequency shown in the display will be stationary. Press the opposite tuning search button Tuning +/- and tune back back through band



Care and Maintenance

Handling Discs



To remove a disc from its storage case, press down on the centre of the case and lift the disc out.



Hold the disc by the edges, to avoid touching the recorded side of the disc.



Fingerprints and dust should be carefully wiped from the disc's surface with a soft cloth. Audio discs and DVD discs have no grooves to collect dust and microscopic debris so gently wiping with a soft cloth should remove most particles. Wipe in a straight line from the inside to the outside of the disc. Small dust particles and light stains should have no effect on reproduction quality.

Never use chemicals such as record sprays, antistatic sprays, benzene, or thinners to clean the discs. These chemicals can irreparably damage the disc's surface.

Discs should be returned to their cases after use. This avoids serious scratches that could cause the laser pickup to skip.

Do not expose discs to direct sunlight, high humidity, or high temperatures for extended periods. Exposure to high temperatures can warp the disc.

Do not stick paper or write anything with a ball point pen on the label side of the disc.

Safety Instructions



Warning: Ensure that you read all of the safety instructions before using your DVD Player.

Power Source

This appliance must only be connected to a 230V AC, 50Hz mains supply.

Safety Considerations

- Position the power lead, and other connected leads, so that they are not likely to be walked on, pinched or where items can be placed on or against them.
- Do not use this appliance in humid or damp conditions. Do not place water filled items, such as a vase, on top of the appliance.
- Ensure that naked flame sources, such as candles are not placed on top of the appliance.

Cleaning

- Ensure that the appliance is disconnected from the mains supply before it is cleaned.
- Do not use any liquids or aerosol cleaners, as this may damage the unit.
- The appliance should be cleaned with a soft, damp (not wet) cloth.

Ventilation

- Do not cover any of the ventilation slots on the unit, as this may cause the appliance to overheat.
- Never allow children to insert foreign objects into holes or slots on the appliance.

Battery Disposal

- Please ensure that used batteries are disposed of safely.

Safety Instructions - Continued

Servicing

- There are no user servicable parts in your DVD player.
- When servicing, refer to qualified service personnel.
- Consult your dealer if you are ever in doubt about the installation, operation, or safety of your equipment.

Electrical Information

Make sure that the voltage of your electricity supply is the same as that indicated on the rating plate. This appliance may be fitted with a non-rewireable plug. If you need to change the fuse in a non-rewireable plug, the fuse cover must be refitted. If the fuse cover is lost or damaged, the plug must not be used until a replacement is obtained.

If the plug has to be changed because it is not suitable for your socket, or it becomes damaged, it should be removed and an appropriate plug fitted following the wiring instructions below. The waste plug must be disposed of safely, as insertion into a mains socket is likely to cause an electrical hazard.



CAUTION: IF A 13 AMP (BS1363) PLUG IS USED, A 3 AMP FUSE (BS1362) MUST BE FITTED.



As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

- **The blue wire must be connected to the terminal marked with the letter N or coloured black.**
- **The brown wire must be connected to the terminal marked with the letter L or coloured red.**
- **No connection must be made to the earth terminal inside the plug.**



This symbol indicates that this appliance is Class II Double insulated. An earth connection is not required.

Guarantee

This product is guaranteed for 12 months from the date of original purchase. If any defect arises due to faulty materials or workmanship, the unit will either be replaced, a refund given or repaired free of charge (where possible) during this period by the dealer from whom you purchased the unit.

The guarantee is subject to the following provisions:

- The guarantee is only valid within the boundaries of the country of purchase.
- The product must be correctly assembled and operated in accordance with the instructions contained in this booklet.
- The guarantee does not cover accidental damage, misuse, or consumable items.
- The guarantee will be rendered invalid if the product is resold or has been damaged by inexpert repair.
- The manufacturer disclaims any liability for incidental or consequential damages.

This guarantee is in addition to and does not diminish your statutory, or legal rights.

