

# Goodmans

To achieve the utmost in enjoyment and performance, please read this manual carefully before attempting to operate the unit in order to familiarise yourself with its features, and assure you years of faithful, trouble free performance and listening pleasure.

## Important Notes

This safety and operating instruction manual should be retained for future reference. Avoid installing the unit in locations described below:

- Places exposed to direct sunlight or close to heat radiating appliances such as electric heaters.
- On top of other stereo equipment that radiate too much heat.
- Places lacking ventilation or dusty places.
- Places subject to constant vibration.
- Humid or moist places.
- Make sure not to obstruct the ventilation openings. Operate tuning controls and switches as instructed in the manual.
- Before turning on the power for the first time, make sure the power cord is properly installed.

For safety reasons, do not remove any covers or attempt to gain access to the inside of the product. Refer any servicing to qualified personnel.

 
Do not attempt to remove any screws, or open the casing of the unit; there are no user serviceable parts inside, refer all servicing to qualified service personnel.



**CAUTION**  
RISK OF ELECTRIC SHOCK  
DO NOT OPEN



**CAUTION:** TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER( OR BACK), NO USER SERVICEABLE PARTS INSIDE, REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

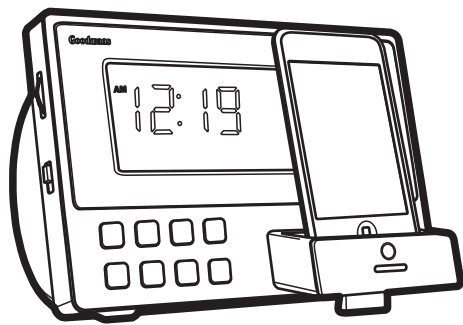


## GCR1875IP CLOCK RADIO WITH IPOD DOCKING


It is important to read this instruction prior to using your new product for the first time

## General controls

 
### Front view

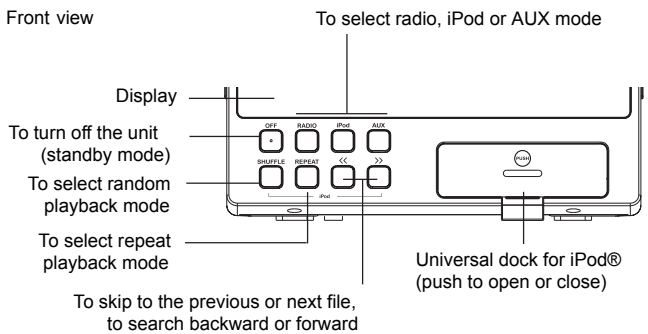


### Top view

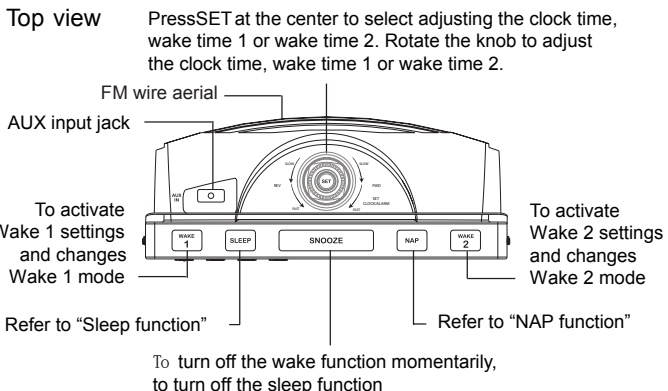 

### Side views

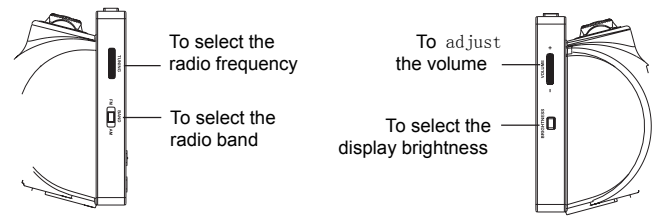 

### Bottom view

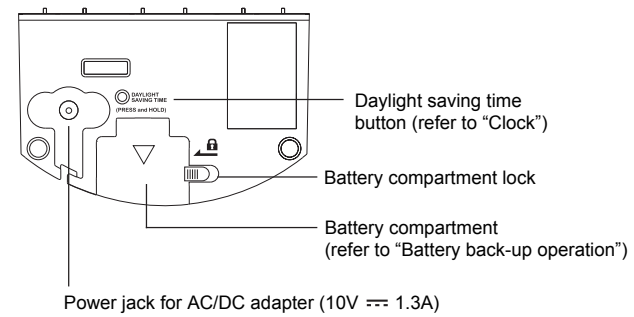 



### DANGEROUS VOLTAGE

Conductor dangerous voltage that may be of sufficient magnitude to constitute a risk of electric shock to persons is present within this product's enclosure.



### ATTENTION

The owner's manual contains important operating and maintenance instructions , for your safety. It is necessary to refer to the manual.

**WARNING:** TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

**CAUTION:** TO PREVENT ELECTRICAL SHOCK, MATCH WIDE BLADE PLUG TO WIDE SLOT, FULLY INSERT.

**Note:** This unit will become warm when used for a long period of time. This is normal and does not indicate a problem with the unit.

This unit includes micro-processors which may malfunction as a result of external electrical interference or noise. If the unit is not working properly, disconnect the power source and then reconnect it.

## Before you begin

### Plugging in for power

Insert the connector of the AC/DC adaptor to the power jack at the bottom of the unit.  
External AC/DC adaptor input power supply: 100-240V ~ 50/60Hz 0.7A

Power is fed to the unit even when it is not functioning. To cut the power supply off, the power cable must be unplugged.

### Battery back-up operation

This clock radio is equipped with a memory back up system that can be powered with 2 "AA" batteries (batteries not included). The power failure protection circuit will not operate unless batteries are installed. When normal household power is interrupted, or AC power is unplugged, the batteries will power the clock radio to keep track of time and alarm settings programmed into memory. When the battery backup functions, the digital display will not light, however, the function of alarm will still work during the power interruption if remaining battery power is adequate. Normal

operation will resume after AC power is restored so you will not have to reset the time or the alarm.

Install battery as follow:

1. Remove battery compartment door (located at the bottom of the radio) by applying thumb pressure to the tab on battery door and then lift the door out and off the cabinet.
2. Insert 2 AA batteries (batteries not included).
3. Replace the compartment door.

**Note:** we recommend that you replace the batteries every year.

### Power failure indicator

When external DC power is interrupted (disconnected) for a short period of time, both time and alarm settings will change (unless batteries are installed). After external DC power is restored (reconnected), the Digital Display will blink to indicate that power was interrupted and you should readjust the time and alarm settings.

## Clock

### Setting clock

set the clock manually as below:

1. Press SET on the top of the unit until the clock setting icon ☺ flashes on the display.
2. Rotate the knob on the top of the unit to set the clock time. The time decrements or increments follows by a faster rate when you rotate and hold the knob. The clock setting icon ☺ flashes when you are setting the time. AM or PM icon also shows beside the time.
3. To save and exit the clock setting, wait for about 5 seconds or press SET until the clock setting ☺, WAKE 1 or WAKE 2 icon is off. The clock time is now set.

### Daylight saving time

Press and hold DAYLIGHT SAVING TIME button on the bottom of the unit to turn on/ off in areas observing/ not observing such time change. The icon ☼ shows on the display when daylight saving time is active.

**WARNING:** Avoid playing with this button when setting clock or wake time.

## Radio

### Listening to the radio

1. Fully unwind the FM wire aerial
  2. Press RADIO on the front of the unit to turn on the radio.
  3. Slide BAND to select the radio band. The selected radio band shows on the display.
  4. Rotate TUNING to select frequency. The selected frequency shows on the display.
  5. Press OFF to turn off the radio.
- Built-in AFC  
The Built-in Automatic Frequency Control (AFC) works only on FM. It helps reducing drift on FM reception and keeping the radio locked in on the FM station to which it is tuned.

When tuning in FM stations, you may notice that the station you are tuning can be well-tuned on two or three nearby points on the dial. Always tune carefully at the loudest and clearest point.

### AM Antenna

A built-in ferrite rod antenna eliminates the need for an outside antenna for AM reception. Rotating the unit slightly may improve reception of distant AM stations.

## Display brightness

Press BRIGHTNESS to dim the display and press again to restore to the original brightness level. When the display is dimmed, the blue indicator on the universal dock for iPod will also be turned off.







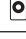

# iPod

## Connecting your iPod

1. Push the universal dock for iPod on the front of the unit to open it.
2. Eight adapters are supplied. Check the table on the right and use the appropriate adapter for your iPod.
3. Place the adapter and then your iPod on the universal dock for iPod.
4. Press iPod on the front of the unit to select the iPod mode.
5. Playback from the iPod starts automatically.

Made for:

- iPod with video (30GB, 60GB, 80GB) 5th generation
- iPod photo (20GB U2 Special Edition, 30GB U2 Special Edition, 40GB, 60GB) 4th generation
- iPod (20GB, 20GB U2 Special Edition, 40GB) 4th generation
- iPod nano (2GB, 4GB, 8G) 1st, 2nd & 3rd generations
- iPod mini (4GB, 6GB) 1st & 2nd generations
- iPod touch
- iPod classic

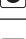iPods	Adaptor number
 iPod mini 4GB / 6GB	3
 iPod 20GB & U2 Special Edition	4
 iPod 40GB (4th Generation)	5
 iPod photo & colorU2 iPod iPod with color display 20GB / 30GB	6
 iPod photo iPod photo with color display 40GB / 60GB	7
 iPod nano 2GB / 4GB	8
 iPod with video 30GB	9
 iPod with video 60GB	10

\* For the latest iPod models, please use the adapter provided with your iPod.

# iPod

## Listening to iPod

1. During playback, press iPod to pause the playback and press again to resume.
2. Press << / >> to skip to the previous or next file. Press and hold << / >> to search backward or forward.
3. Press SHUFFLE to play the files in random order in the iPod. Random playback indication shows on the iPod when the function is activated. Press again to cancel the function.
4. Press REPEAT to select a repeat playback mode (repeat 1 or repeat all). Repeat playback indication shows on the iPod when the function is

activated. Press **REPEAT** until no repeat playback indication shows on the iPod to cancel the repeat playback.

Note:

- You may charge the battery of your iPod through the universal dock for iPod while the unit is turned off (standby mode) or in the iPod mode. Charging control should be operated on the iPod.
- If no iPod is connected in the iPod mode, the unit will exit the iPod mode and turn off automatically.

## Auxiliary Source

1. Connect your auxiliary source (e.g. mp3 player) to the AUX input jack on the top of the unit with an audio cable (not supplied).
  2. Press AUX to turn on the unit or to switch to listen to AUX from other modes. The AUX indicator on the front will turn on.
- Adjust the auxiliary player to mid-range volume and adjust the master volume on the unit. Do not turn the volume of the auxiliary player too high as this may affect the sound quality. For other playback operations, control them on your auxiliary player.

## Wake Function




### Turn off the wake function

- Silence the wake function momentarily: Press SNOOZE. The alarm will sound again when the snooze period is over.

OR



- Stop the wake function: Press OFF. The alarm will be on again the following day at the same time.

OR

- Disable the wake function permanently: Press WAKE 1 or WAKE 2 repeatedly until no corresponding wake indicator (e.g.    ) shows on the display.

## Sleep Function

In the sleep mode, the radio, iPod or AUX mode turns off automatically. To set the sleep time, simply:

1. Press SLEEP repeatedly to cycle through the sleep time available (90min, 60min, 30min, 15min and OFF. 90min is the default setting).
  - If necessary, press << / >> to further set the sleep time. Each press of the button will decrease or increase one minute. For example, to set 35 min, press SLEEP to select 30min and then press >> 5 times.
  - The icon  flashes while selecting.
2. When the desired sleep time is selected, release SLEEP and wait for about 5 seconds, the sleep time is now set. The radio (default) turns on and the icon  lights on the display.
  - If the iPod is selected in your last sleep function setting, the iPod will start to play, instead of the radio. The radio will be played whenever the iPod

mode is selected but without the corresponding device connected.

- If an auxiliary player (e.g. mp3 player) is connected, press AUX to select listening to it.
- 3. Select a radio station as usual, OR Press iPod and then press << / >> to select a file on the iPod. Playback will be in repeat all files mode automatically. OR Start playback on your auxiliary player.
- Press SLEEP once to check the remaining sleep time. Press SLEEP repeatedly to select another sleep time.
- If you decide to turn off the unit sooner, press **SNOOZE**, OFF or press SLEEP repeatedly to select "OFF".
- When the sleep mode is activated again, the sleep time will be the same as the one you have set before.

## NAP Function

For catnaps up to 2 hours without disturbing the regular alarm settings, the NAP function wakes you up after a short period of time. Simply:

1. Press NAP repeatedly to cycle among the NAP time available (10min, 20min, 30min, 60min, 90min, 120min and OFF. 20min is the default setting).
  - If necessary, press << / >> to further set the NAP time. Each press of the button will decrease or increase one minute. For example, to set 35min, press NAP to select 30 min and then press >> 5 times.
  - The icon **NAP** flashes while selecting.
2. When the desired NAP time is selected, release NAP and wait for about 5 seconds, the NAP time is now set. The current time shows and the icon **NAP** lights on the display.
3. Press NAP once to show briefly the NAP time left.
  - Only alarm tone can be selected in the NAP mode.
  - Press OFF to stop the NAP alarm, OR press and hold NAP until "OFF" is selected to cancel NAP function.

# Wake Function

## Set the wake time

This unit allows 2 wake times to be set.

1. Press **SET** on the top of the unit until the icon **WAKE1** or **WAKE2** flashes on the display.
2. Rotate the knob on the top of the unit to set the wake time. The time decrements or increments follows by a faster rate when you rotate and hold the knob.
3. To save and exit the wake time setting, wait for about 5 seconds or press **SET** until the clock setting ☼, **WAKE 1** or **WAKE 2** icon is off. The wake 1 or wake 2 time is now set.
- To check the wake time after setting, press **SET** until the icon **WAKE1** or **WAKE2** flashes and the respective assigned wake time shows on the display.

## Select the wake source

You may be woken up by the alarm, radio, or music from iPod.

above instructions).

2. Press **WAKE 1** or **WAKE 2** to select a wake mode. Corresponding icon lights on the front of the unit.
  - 1 ☼ – Wake time 1 by alarm
  - 1 ☼ – Wake time 1 by radio
  - 1 📱 – Wake time 1 by iPod
  - 2 ☼ – Wake time 2 by alarm
  - 2 ☼ – Wake time 2 by radio
  - 2 📱 – Wake time 2 by iPod

### Waking to Alarm ☼

- Note:
- The unit equips with GRAD-U-WAKE feature, the alarm tone volume will increase gradually to its maximum in about 30 to 45 seconds.
  - If you set the wake function with low volume level before going to bed, we advise using Waking to Alarm mode to wake you up since the volume will automatically increase.
  - When the AC power is disconnected, all wake mode will be reverted to alarm tone.

### Waking to RADIO ☼

3. Select a desired wake up radio channel (refer to "Listening to the radio"). If no wake up channel is set, your last listening radio station will be selected.
4. Adjust the volume to your desired level.
5. Press **OFF** to turn off the unit.

### Waking to iPod 📱

3. Adjust the volume to your desired level. The last played file on the iPod will be played when the wake function activates.
4. Press **OFF** to turn off the unit.

Note: If there is no iPod connected, the alarm tone will sound instead even if Waking to iPod mode is selected.

When the wake function activates, the corresponding wake icon will flash until the wake function is turned off. The icon will then stop flashing and stay lit.



## Snooze

This operation allows extra sleep time after the wake function is on. The alarm will be off by pressing **SNOOZE**, **SLEEP** or **NAP** until the snooze period is over. Snooze function can be used repeatedly up to 2 hours. After this, the wake function will turn off until the next day.

Set the "quiet" period as follow: While pressing **SNOOZE**, rotate the knob on the top of the unit to set the "quiet" period from 1 to 30 minutes (default: 9 minutes). Release **SNOOZE**, then the "quiet" period is set.

## Specification

### Technical information

Electrical consumption  
External AC adaptor output:  
10V~1.4A  
MAX. POWER  
CONSUMPTION 14W  
AMP.POWER 2WX2@10% THD

The AC/DC Adaptor supplied with this product is intended to be correctly orientated in a vertical or floor mount position

**Disposal and the Environment**  
This product is covered by the waste Electrical and Electronic Equipment (WEEE) regulations. It should not be discarded with normal household waste, but taken to your local collection center for recycling. For further information, Please contact the local authority or approved disposal agency.



### SPECIFICATION SUBJECT TO CHANGE WITHOUT FURTHER NOTICE

Dipping warning:

The product shall not be exposed dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the product

### Ventilation warning:

The normal ventilation of the product shall not be impeded for intended use

## Specification

This product is guaranteed for 12 months from the date of original purchase. If any defect arises due to faulty materials or workmanship, the unit will either be replaced, a refund given or repaired free of charge (where possible) during this period by the dealer from whom you purchased the unit. The guarantee is subject to the following provisions:

- The guarantee is only valid within the boundaries of the country of purchase.
- The product must be correctly assembled and operated in accordance with the instructions contained in this booklet.
- The guarantee does not cover accidental damage, misuse, or consumable items.

- The guarantee will be rendered invalid if the product is resold or has been damaged by inexperienced repair.
- The manufacturer disclaims any liability for incidental or consequential damages.
- This guarantee is in addition to and does not diminish your statutory, or legal rights.

Goodmans industries Ltd.

[www.goodmans.co.uk](http://www.goodmans.co.uk)