

Goodmans

USER GUIDE



GDVDI71HDIVX5 HDMI DVD PLAYER

Please read these instructions before use and keep for future reference

Content

Safety instructions	1
Features	2
Compatible Discs	3
Remote Control View	4
Wiring Instructions	5
Front and Rear Panel	6
Features Setup	7-11
Remote Control operation	12-15
Playing MP3 and JPEG	16
Trouble Shooting	17-18
Specification	19
Guarantee	20
Warning	

SAFETY INSTRUCTIONS

For safety, please conform to the following points when you use this unit

1. Read this manual;
2. Keep this manual;
3. Heed all warnings;
4. Follow all instructions;
5. Do not use this apparatus near water
6. Clean only with dry cloth;
7. DO not block any ventilation openings. Installing accordance with the manufacturers instructions;
8. Do not install near any heat sources such as radiators, heat registers, stoves or other apparatus (including amplifiers) that produce heat.
9. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles and the point where they exit from the apparatus:
10. Only use attachments/accessories specified by the manufacturer;
11. Use only with the cart, stand, tripod, bracket specified by the manufacturer or sold with the apparatus. When a cart is used, use with caution when moving the cart to avoid injury;
12. Unplug this apparatus during lightning storms or when unused for a long period;
13. To prevent fire or electric shock, do not expose the unit to rain or moisture;
14. Consult all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

Warning:

The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.

Where the mains plug is used as the disconnected device, the disconnect device shall remain readily operable.

This product incorporates copyright protection technology that is protected by U.S. patents and other intellectual property rights. Use of this copyright protection technology must be authorized by Macrovision, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision, Reverse engineering or disassembly is prohibited.

FEATURES

- Your DVD player is suitable for playing: DVDs, VCD, DVD+RWs, DVD-RWs, DVD+Rs, DVD-RsAudio CDs CD-Rs and CD-RWs with MP3 data and picture data (JPEG and picture CDs) CD-Rs and CD-RWs with video data (DivX)
- 5.1CH,2CH,optical and coaxial digital output
- Component(YPbPr),S-video and composite video ouput
- multi-language,multi-angle,multi-subtitle,multi-mode of image zoom multi-playback mode,parental control
- Progressive scan
- Scart output

Disc formats supported by this player:



Kodak picture C D



Multi-angle



Audio CD



Closed caption



Video CD



Subtitle choices



 
DVD video



Audio choices



Parental lock



TV aspect ratio modes

DVD SAFETY SYMBOL



Caution:to prevent fire or electric shock,do not open the cover of rear panel.



The lightning flash with arrowhead symbol inside an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the units cabinet that may be sufficient magnitude to constitute a risk of electric shock to persons.



CE Certification symbol:We have tested and documented to ensure conformity to all applicable European directives and requirement



The exclamation point inside an equilateral triangle is intended to alert the user to the presence of important operating and maintenance and servicing instructions in the manual accompanying the unit.







Laser product symbol:located on the rear panel of the unit,indicat this player is a class laser product,only use weak laser and no hazardous radiation outside of the unit.

Compatible Discs

DVD Information

The unit can play the following discs:

DISC TYPE	DVD	VCD	CVD	CD
TIME	DVD5 4.7GB=2HOURS DVD9 8.5GB=4HOURS DVD10 9.4GB=4.5HOURS DVD18 18GB=9HOURS	650M 74 MINUTES	650M 45 MINUTES	650M 74 MINUTES
DISC SIZE	12CM/8CM	12CM	12CM	12CM/8CM
CAPTION	MAX32	-	8	-
LANGUAGE	MAX8	2	4	-
MARKS				

Region code

 
DVD player and Disc are programed under the region code.
Please make sure the consistence of the disc and player.
Only under the region code consistency can the disc be played.



Remote Control View

Using the Remote Control

Unless stated other wise, the remote control can operate all the features of the DVD player. Always point the remote control directly at the remote sensor on the front of the DVD Player not the TV.

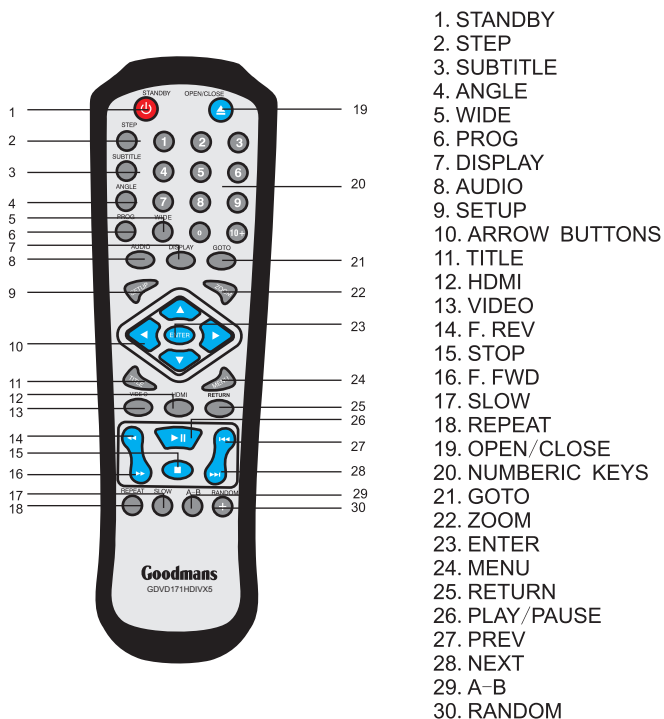

Loading Batteries into the Remote Control

Turn over the remote control and take down the cover of the remote. Load two AAA batteries into the battery house in accordance with polarities.

Close the cover of the battery house.

Caution:

Do not use charging batteries.

 
Do not use new and old batteries of different type together.

Do not disassemble, burn or heat the batteries.

Wiring Instructions

The supply cable will be either 2-core or 3-core. Follow the appropriate wiring instructions given below. In both cases ensure that the outer sheath of the cable is firmly held by the cable clamp.

2 - CORE

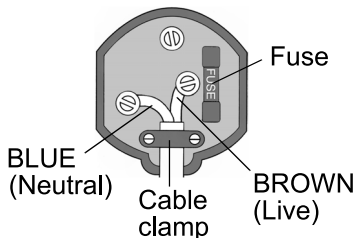

WARNING! Do not connect either wire to the earth terminal.

 


This symbol indicates that this 2-core appliance is Class II and does not require an earth connection.

The wire coloured blue must be connected to the terminal marked with the letter N or coloured black.

The wire coloured brown must be connected to the terminal marked with the letter L or coloured red.

3 - CORE

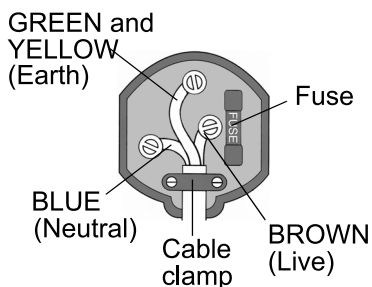

WARNING! This appliance must be earthed.

The wire coloured green and yellow must be connected to the terminal marked with the letter E, or by the earth symbol, \perp , or coloured green or green and yellow.

The wire coloured blue must be connected to the terminal marked with the letter N or coloured black.

 
The wire coloured brown must be connected to the terminal marked with the letter L or coloured red.

Front and Rear panel



1. POWER
2. DOOR TRAY
3. OPEN/CLOSE


4. STOP
5. PLAY/PAUSE

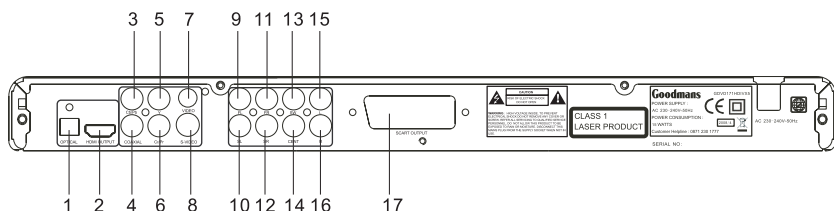

1. OPTICAL JACK
2. HDMI JACK
3. Cb/Pb JACK
4. COAXIAL JACK
5. Y Jack
6. Cr/Pr JACK
7. VIDEO JACK
8. S-VIDEO JACK
9. FL TRACK

10. SL TRACK
11. FR TRACK
12. SR TRACK
13. SW TRACK
14. CENTER TRACK
15. LEFT TRACK
16. RIGHT TRACK
17. SCART OUTPUT JACK

 BASIC CONNECTION

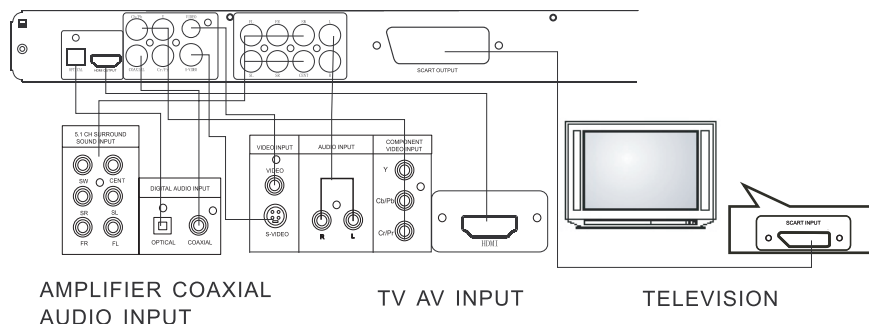

FEATURES SETUP

Setup Menus

The Setup Menu allow you to configure the Language, Video, Audio and General Settings of the player.

Press the SETUP button to access to the Setup menus.

Use the UP, DOWN, LEFT and RIGHT arrow button to adjust a setting

The language Menu

The Language menu allows you to select the languages for the OSD, DVD menu, Subtitle, DivX subtitle and Audio.

Press the SETUP button to display the Language menu as following:



The following options are available:

OSD Language

The OSD language function allow you to select the On-screen display language. The available options are: English, Français, español, Deutsch.

Subtitle

This function enables you to select the subtitle language. The available options are: English, French, Spanish, German, Multi, Off.

Divx Subtitle

This function enables you to select the Divx subtitle. The available options are : Western European, Central European.

Audio

You can use this function to select the following languages: English, French, Spanish, German as the Audio language.

DVD menu

 
You can select from the following languages: English, French, Spanish German. as your DVD menu language.

NOTE: Available languages of the above menu are disc specified.

FEATURES SETUP

The Video Menu

The video menu allows you to setup the display and video output options. Use the UP and DOWN button to select the video setup menu. Use the RIGHT and LEFT button to display the Video menu as below.

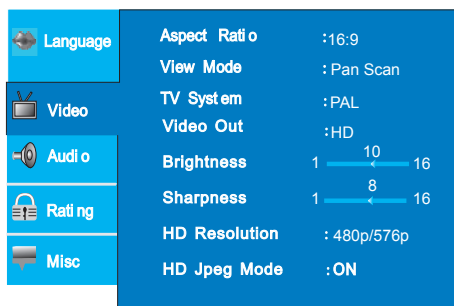

The following options are available:

Aspect Ratio

The Aspect Ratio function allows you to set the screen picture. Options are: 4:3PS, 4:3LB, 16:9.

View Mode

The function enables you to select the following: Fill, Original, Auto Fit, Pan scan picture compression.

TV System

There are 3 options for you to select: PAL, NTSC, Multi.

Video Out

The function enables you to select the video output system. options are: S-Video, Component, RGB, P-Scan, HD.

Brightness

Use the LEFT and RIGHT button to increase and decrease the digit.

In order to enable the below function, first you need to set the Video Out as HD selection first.

HD Resolution

The Resolution options are: Auto, 480p/576p, 720p, 1080i.

HD Jpeg Mode

You can enable and disable the function in the menu.

 
FEATURES SETUP

The Audio Menu

The audio menu allows you to setup the audio output.

Use the UP and DOWN button to select the Audio setup menu.

Use the RIGHT and LEFT button to display the Audio menu as below.

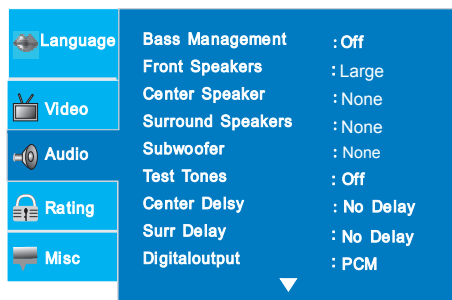

The following options are available:

Bass Management

Set Bass Management On or Off.

Front Speaker

For the Front Speakers, select the “Large” or “Small” setting.

Center Speaker

For the Center Speakers, select “Large”, “Small” or “None” setting.

Surround Speaker

For the Surround Speakers, select “Large”, “Small” or “None” setting.

Subwoofer

The “Subwoofer” option allows you to select the None” or “present” setting.

Test Tone

The “Test Tones” option allows you to test the tone. There are 7 options:

Off/Left/Right/Center/Left Surr/Right Surr/Subwoofe.

Center Delay

The “Center SpkrDelay” option allows you to adjust the delay for the central speaker. There are 6 options: “No delay”/ “0.3m”/ “0.6m”/ “1m”/ “1.4m”/ “1.7m”.

FEATURES SETUP

Surround Delay

The option "Surr Spkr Delay" allows you to adjust the delay for the surround speakers. There are 6 options: "No delay"/"1m"/"2m"/"3m"/"4m"/"5.1m".

Digital Output

The function enables you to select the digital audio output format. The available options are Off, PCM and RAW.

Night mode

You could set the night mode On or Off.

Prologic

OFF: set Prologic decoding off.

ON: set Prologic decoding on.

Auto: set Prologic decoding auto.

Down Sampling

 
The function allows you to turn the audio down sampling on or off.

The Rating Menu

The Rating Menu allows you to setup and control the Parental control options. Use the UP and DOWN buttons to display the Rating menu.

Set Password

You can change the password to prevent children adjusting the Parental Control settings. When selected, the following screen will appear.

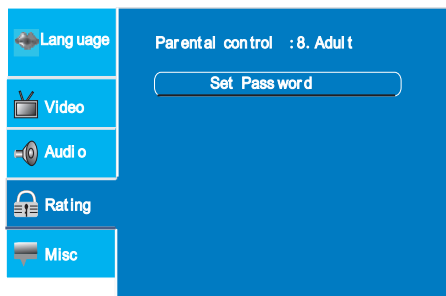

Use NUMERIC button to enter the password. The default password is 8888.

 
FEATURES SETUP

The Misc Menu


The Misc menu allows you to adjust general settings for the DVD Player.

Use default setting

The Use Default Setting resets the personal viewing settings saved in the DVD setup menus to the factory default.

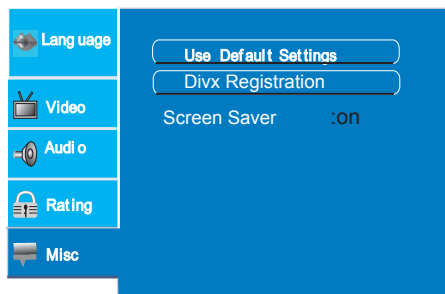

 Use the UP and DOWN buttons to display the Divx Registration.

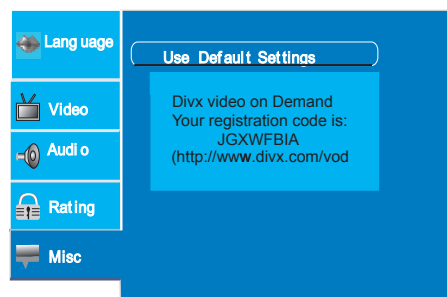

Screen Saver

You can set the Screen Saver ON/OFF.

 
Remote Control Operation

STANDBY

During playback, press Standby to stop the player and return to standby mode. Press again to resume normal operation.

PROG

The function can be used to play selected chapters and titles in a pre-set sequence. Press the PROG button. The following menu will appear:

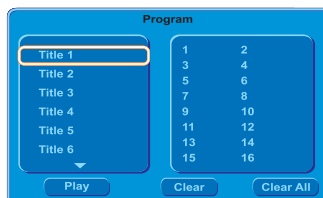

Note: please refer to the DVD cover for the title and chapter listings.

Use the UP and DOWN buttons to highlight the desired title, ENTER button to select. The selected title and chapter is listed in the first available slot in the program list.

Repeat the steps until all the desired title and chapters are selected. To remove selections from the program list, highlight and select Clear. To remove all selections from the program list, select Clear all. Use LEFT and RIGHT ARROW buttons to select Play, enter to playback mode.

ANGLE

During playback: press ANGLE to view scenes from different camera angels.

Press ANGLE to repeatedly change from one angle to another.

Note: This function is disc specific.

SUBTITLE

During playback, press SUBTITLE repeatedly to select your desired language.

Note: this function is disc specific (language will vary)

ZOOM

Press the ZOOM button repeatedly to cycle through the available zoom levels until you reach the level you require. The zoom level and zoom icon are displayed on screen.

Remote Control Operation

REV and FWD

During playback, press the F. FWD or F. REV button.

There are 4 search speeds. Each press increases the screen speed.

PLAY/PAUSE

Press PLAY/PAUSE during playback to pause. Press again to resume normal mode.

STOP

Press STOP once during playback to stop and hold playback.

Press PLAY to resume playback from the point you have pressed STOP.

Press STOP twice to stop playback completely.

DISPLAY

During playback, press this button to display the current time counter position.

GOTO

During playback, press the GOTO there will appear the below menu:

A blue rectangular menu box with rounded corners. At the top, the word "Search" is centered in white. Below it, there are three rows of text, each with a label on the left and a three-dot menu icon on the right. The first row is "Title ...", the second is "Chapter ...", and the third is "Time ...".

Search	
Title	...
Chapter	...
Time	...

Enter the chapter or title time or disc time you want using the NUMERIC buttons in an hours, minutes, and seconds format.

Press ENTER button, the player will automatically begin playing the title or chapter from the selected point in time.

Remote Control Operation

MENU

During playback, press MENU to return to root menu.

AUDIO

During DVD/VCD playback, press the button repeatedly to select the channel of audio-output: Left/Right/Mix/Stereo.

SLOW

Press this button to slow motion playback.

There are 4 options, press button repeatedly to change the options.

PREV

Press this button to play the previous chapter, title or track.

NEXT

Press the button to play the next chapter, title or track.

REPEAT

Each press of the REPEAT button will change the repeat mode.

During VCD, CD playback, there are three modes: repeat single, repeat all and off. During DVD playback, there are three modes: repeat chapter, repeat title and off.

Note: During VCD playback, the PBC mode must be set off.

OPEN/CLOSE

Press the button to open and close the disc door.

WIDE

Press the button to select the screen system: PS 4:3, LB 4:3, 16:9.

SETUP

Press button to enter and quit the system setup menu.

VIDEO

In no disc mode or to stop currently disc playing, you can press the button repeatedly to select the following video solution: S-Video/component/RGB, P-scan, HD.

Remote Control Operation

HDMI

Press the button to switch to HDMI video output resolution.

Note: this function only available under HDMI TV. And if you connect to TV other than specified, may be image mistakes will appear. In this case, press this button repeatedly to return to normal mode.

RETURN

Return to a previous menu screen on a VCD or return to VCD playback from the VCD menu screen.

STEP

Press the key, you can play the disc step by step, in this way, you can catch any picture on the disc. The function is disc specified.

RANDOM

Set the playback procedures follow the system.

NUMERIC BUTTONS

These buttons are used to input the time, as well as title, chapter and rack numbers. When a numeric item is displayed on the screen, press the NUMERIC buttons to select the desired entry, and press ENTER confirm.

ENTER

Press the button to confirm your choice on screen.

 
TITLE

Press the button once return to the root menu, press again continue the former playback.

Playing Mp3 and JPEG

Playing Mp3 (Maxium 500 files)

Load a MP3 or MP4/Divx disc into tray. The player will automatically play the first file in the menu.

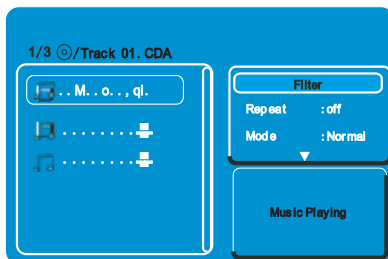


Press UP and DOWN to choose a folder form the folder list on the right side of screen.

Press ENTER button to player the highlighter folder.

Playing JPEG File

 Load a JPEG disc into tray. The player will automatically start to play.

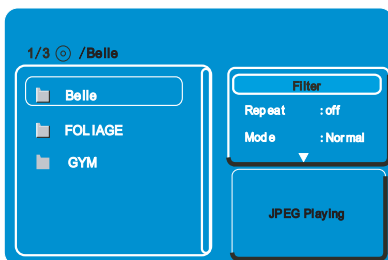

Press UP and DOWN to choose a folder form the folder list on the right side of screen.

Press ENTER button to player the highlighter folder.

Trouble shooting

Please read the user's manual carefully before using the DVD player. If you have any troubles in using this player, try to solve the problems by the suggestions mentioned below. If you can not remove the trouble after using all the suggestions, please contact the company or the technical service center authorized by us. For the sake of your safety, please do not open the cover and repair the player by yourself, if that, it may cause electric shock.

NO PICTURE, SOUND AND INDICATION

Ensure that the power switch is on.

Ensure that the wall inlet is ok.

Ensure that the power cord is not damaged.

Ensure that the power plug is connected to the inlet tightly.

NO SOUND BUT HAVE PICTURE

Ensure that the audio output of the player is properly connected with the audio input of TV set.

Check whether the audio connector is damaged.

Check whether you have turned down the volume.

Ensure that you have set the right AUDIO setup of the player.

Ensure that you have turned your TV to the AV input channel connecting to your player.

Ensure that the audio is not under mute.

NO PICTURE BUT HAVE SOUND

Ensure that the video output of the player is properly connected with the video input of TV set.

Ensure that you have turned your TV to the AV input channel connecting to your player.

Check whether the video connector is damaged.

Ensure that you have set the right VIDEO settings of the player.

BLACK AND WHITE PICTURE OR SCREEN ROLLING

Ensure that you have set the right TV SYSTEM (e.g. PAL, NTSC) setting.

Trouble shooting

FLAWS OF PICTURE OR SOUND

Check whether the setting of AUDIO is right.

Check whether the disc is scratched or stained.

Check whether the AV connector and the output terminal is stained.

DISPLAY NO DISC

Ensure that you have put the disc on the tray.

Check whether the disc is put in the reverse side.

Check whether the disc is distorted.

Check whether the disc is stained or scratched badly.

DISPLAY BAD DISC

Check whether the disc has had bad quality.

Ensure that the disc is not stained or damaged badly.

Ensure that the disc format is compatible to the player.

Ensure that the disc is not deformed.

REMOTE CONTROL IS INSENSITIVE OR DOES NOT WORK

Check the batteries of remote control and make sure that they are to be powerful and good conductivity.

Direct the remote control to the IR sensor of the player.

Check whether there are some obstacles between the remote control and IR sensor.

ABNORMAL FUNCTION OPERATION

Turn off the power, and then turn on again.

DISC IS LOCKED IN THE TRAY

The disc can not be taken out of the tray when the player is reading, so you have to turn off the power and turn on again, and press OPEN/CLOSE key immediately to open the tray.

Specification

Type of Disc	DVD CD MP3
Video Format	MPEG1 MPEG2 MPEG4
Audio Format	MPEG 1, LAYER 1, LAYER 2 , LAYER 3
Signal Output	Color System: PAL /NTSC Audio System: DTS digital output Audio DAC 16bit/48KHz Video Output: 1 Vpp (at 75 ohm) Audio Output: 2 Vpp
Frequency Response	CD: 4Hz-20KHz (EIAJ) DVD: 4Hz-22KHz (48K) 4Hz-44KHz (96K)
S/N ratio	> 92 dB
THD	< 0.04%
Output Terminals	Video (composite) output X 1 S-Video output X 1 5.1ch output X 1 Digital coaxial output X1 Digital Optical output X1 SCART output X1 YPbPr output X1 L/R Audio output X1
Power input	AC 230V-240V, 50Hz, <1A

Note: design and specification is subject to change without notice.

Guarantee

This product is guaranteed for twelve months from the date of the original purchase. In the unlikely event of any defect arising due to faulty materials or workmanship, the unit will be either replaced, a refund will be given or the unit will be repaired free of charge (where possible) during this period by the dealer from whom you purchased the unit.

This guarantee is subject to the following provisions:

- The guarantee is only valid within the boundaries of the country of purchase.
- The product must be correctly installed and operated in accordance with the instructions contained in these operating instructions.
- It must be used solely for domestic purposes.
- The guarantee does not cover accidental damage or misuse.
- The guarantee will be rendered invalid if the product is resold or has been damaged by inexperienced repairs. The manufacturers disclaim any liability for incidental or consequential damages.

The guarantee is in addition to, and does not diminish, your statutory or legal rights.

Warning

To prevent children from watching programs which have a rating above their age, please be sure to set the rating in the setup menu appropriately. Before you set this rating, the password must be unlocked. If you forget your unique password, then please use the universal password asset by the manufacturer. The universal password is 8888, please detach this sheet and keep it in a safe place, away from children.

© 2008

Issue 13 - May 2008

support@goodmans.co.uk
www.goodmans.co.uk/support