

Goodmans

USER GUIDE



GDVD171X5 DVD PLAYER

Please read these instructions before use and keep for future reference

Content

Features of This Unit	1
Warning and Importance	2-3
Wiring Instructions	4
DVD Information	5-7
Remote Control	8
Preparation	9
Rear Panel and connections	10
Basic Functions	11-15
Menu Operations	16-19
Remote Control Operation	20-22
Kodak Picture CD Playback	23
Troubleshooting	24-25
Product Specifications	26
Guarantee	27





Features of This Unit

DVD is the best signal source of your home theatre. Every index of DVD is far more superior to any other audio studio equipment. It adopts the latest digital technique to compress image and acoustics on a 12cm disc the same size as a CD disc. Dolby Digital can produce advanced digital surround 3-dimension high fidelity acoustic effect. The player is compatible with SVCD,MP3,VCD,CD,CD-G,KODAK Picture CD,CD-R,CD -RW.

- 8 languages and 32 subtitles.
- For DVD disc, this unit supplies multi-angles watching.
- Display aspects ration(4:3 or 16:9) conversion to match different TV set.
- PAL/NTSC Video output; S-Video/ Y,Cb,Cr / Y,Pb,Pr terminal output to improve image resolution.(optional)
- Parental Control function. Different control levels to cater to customers.
- Display and OSD(on screen display) function.(optional)
- Standard/Search/Slow/Time Playing.
- Repeat/Program Playing; PBC and Zoom functions.
- English and Chinese conversion.
- Wide voltage range AC 100V~240V/ 50Hz / 60Hz avoids the unit working improperly because of fluctuation voltage.

Warning and Importance

Please DO Not expose the unit to rain or moist environment in case of fire or electric shock!

 <div> CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN </div> 	ATTENTION: DO NOT OPEN THE COVER OF THE UNIT IN CASE OF FIRE AND ELECTRIC SHOCK, ANY MALFUNCTION SHOULD BE SERVICED BY PROFESSIONAL PERSON.
	THE LIGHTNING SIGN IN THE BLACK TRIGON REMINDS THE USER OF THE HIGH VOLTAGE OF THE UNIT.
	THE EXCLAMATORY PUNCTUATION IN THE BLACK TRIGON REMINDS THE USER OF THE INCIDENTAL MAIN OPERATION AND SERVICE NOTE WITH THE UNIT.
<div> CLASS1 LASER PRODUCT </div>	LASER PRODUCTION SIGN: THE SIGN SHOWS ON THE REAR PANEL OF THE UNIT.

Notice:

Please read through this manual before using the unit.

- *The unit can only be used with the power source the manual and the unit itself specified.**
- *Make sure to hold the isolated terminal of the plug to operate when connecting or pulling out the power cord. Anyway to service or recreate the power cord is prohibited.**
- *Turn off the power if you do not use the unit. Make sure to pull out the power plug if the unit is not used for a long time or when thundering or lightning.**
- *Do not place the unit in high-temperature, vibrating, stuffy environment or directly expose to sunlight. Do not put this unit together with high-power electric appliance to ensure good ventilation.**
- *Make sure the unit is far away from fire, heating source and magnetic source. Do not use alcohol, gasoline or any other chemical solvent to clean the unit.**
- *Do not spray any liquid or insert any object into the unit. Do not disassembly the unit.**
- *Do not use the unit in watery place or put heavy objects on it.**
- *Take out the disc before moving the unit.**
- *Make sure to turn off the power and pull out the plug when there is smoke or unusual smell and make it serviced by professional person.**

Warning and Importance

Warning:

 
- The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloths, curtains, etc.
- No naked flame sources, such as lighted candles, should be placed on the apparatus;
- The product use in tropical climates;
- Do not install this equipment in a confined space such as a book case or similar unit .
- The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.

This product incorporates copyright protection technology that is protected by U.S. patents and other intellectual property rights. Use of this copyright protection technology must be authorized by Macrovision, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision. Reverse engineering or disassembly is prohibited.

Wiring Instructions

The supply cable will be either 2-core or 3-core. Follow the appropriate wiring instructions given below. In both cases ensure that the outer sheath of the cable is firmly held by the cable clamp.

2 - CORE

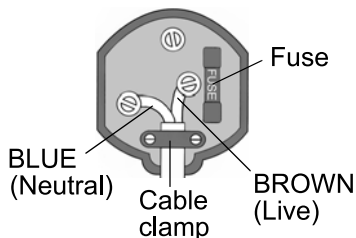

WARNING! Do not connect either wire to the earth terminal.

 


This symbol indicates that this 2-core appliance is Class II and does not require an earth connection.

The wire coloured blue must be connected to the terminal marked with the letter N or coloured black.

The wire coloured brown must be connected to the terminal marked with the letter L or coloured red.

3 - CORE

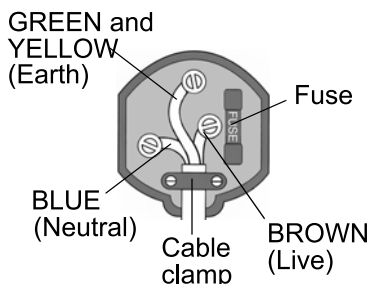

WARNING! This appliance must be earthed.

The wire coloured green and yellow must be connected to the terminal marked with the letter E, or by the earth symbol, \perp , or coloured green or green and yellow.

The wire coloured blue must be connected to the terminal marked with the letter N or coloured black.

The wire coloured brown must be connected to the terminal marked with the letter L or coloured red.

DVD Information

The unit can play following discs:

DVD5

DVD9

DVD10

DVD18

VCD1.0/1.1/2.0

SVCD

CVD

CD -G

CD -DA





MP3

KODAK Picture CD

CD -R

CD -RW

1. Disc Information

DISC TYPE	DVD	VCD	SVCD CVD	CD
FORMAT	MPEG II	MPEG I	MPEGII	DIGITAL
TIME	DVD5 4.7GB=2HOURS DVD9 8.5GB=4HOURS DVD10 9.4GB=4.5HOURS DVD18 18GB=9HOURS	650M 74 MINUTES	650M 45 MINUTES	650M 74 MINUTE S
DISC SIZE	12CM/8CM	12CM	12CM	12CM/8 CM
PICTURE	≧ 500 LINES	≧ 240 LINES	≧350 LINES	-
CAPTION	MAX32	-	8	-
LANGUAGE	MAX8	2	4	-
MARKS				

DVD Information

2. How to purchase DVD disc.


 

 





 

DVD discs like DVD players have a code of region. A DVD player can only play DVD disc which meets the code of it.

Regions and codes

REGION CODE	REGIONS
1	U. S. A., CANADA
2	EUROPEAN COUNTRIES, JAPAN, MIDDLE EAST, SOUTH AFRICA
3	WEST ASIA(SOUTH KOREA, HONGKONG, TAIWAN), SOUTHEAST ASIA
4	AUSTRALIA, CARIBBEAN, MEXICO, NEW ZEALAND
5	AFRICA, RUSSIA, INDIA, NORTH KOREA, PAKISTAN
6	CHINA

* The characteristics of DVD players.

Different DVD disc has different characteristics. This is because of the programmer and manufacturer of DVD disc. The following marks represent the characteristics of DVD discs.

	REGION CODE AND VIDEO OUTPUT SYSTEM		5.1 CHANNEL
	DOLBY DIGITAL SURROUND		HIDE CAPTION
	DTS DIGITAL CINEMA SURROUNDING		DUAL CHANNEL STEREO
	NUMBER OF AUDIO TRACKS		AGE LIMITING
	NUMBER OF SUB-TITLES		
	SCREEN MODES		
	CHILD LOCK		

DVD Information

REMARK

 
Some features of this unit are related to the DVD disc's software. Some features of this unit cannot be performed if the disc does not support the features or requires special settings. Check the features of the disc before playing it or follow the instruction on screen menu of the disc.

3. Care of Disc


- **Video disc contains high density compressed data needs proper handling.**
- **Hold the disc with fingers, holding the hole at center and the edge.**



- **Do not bend or press the disc. Do not expose the disc to direct sunlight or heating source.**
- **Store the discs in cabinet, vertically, in dry condition, prevent moisture or humidity.**
- **Clean the disc with soft dry cloth only, wipe gently, radially from center to the edge. Do not apply thinner, alcohol spray when cleaning.**

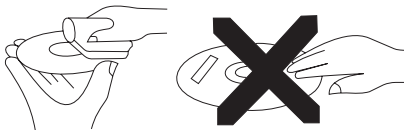

Remote Control

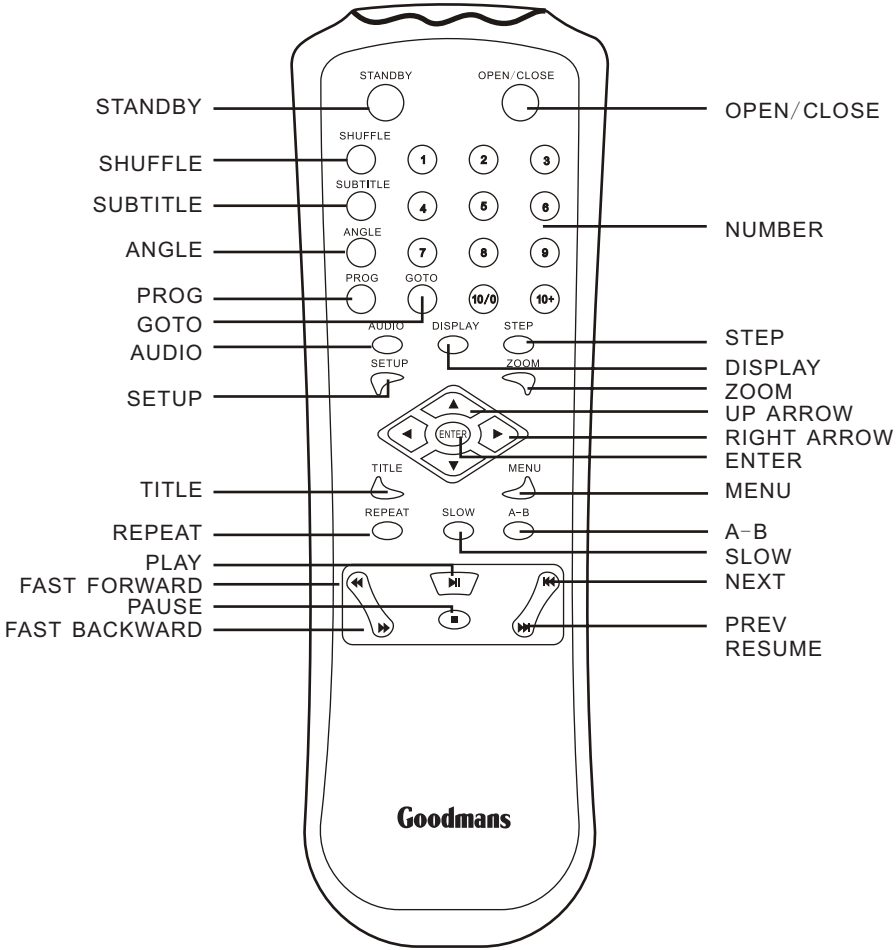 

Preparation

 
1. Unpack the Unit.

Check the following attachments in the packing:

- Remote Control (1)
- AV Cable (1)
- User's Instruction Manual (1)

2. Loading Batteries into the Remote Control.

- Turn over the remote control and take down the cover of the remote.
- Load two AAA batteries into the battery house in accordance with the polarities.
- Close the cover of the battery house.

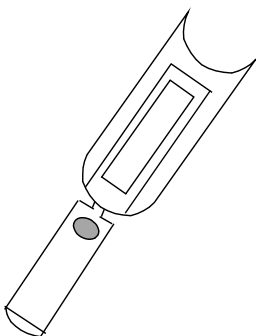

Caution:

 
- Do not use charging batteries.
- Do not use new and old batteries of different types together.
- Do not charge the batteries or make them short-circuit.
- Do not disassemble, burn or heat the batteries.
- If there is battery leakage, please clean the remote casing and load new batteries.
- If the remote is hard to control when very near the unit, please load new batteries.
- Do not expose the remote sensor direct to sunlight to avoid signal interruption.
- The effect of the remote is the best within the range of 7m distance and 30 angle.

Front and Rear panel



1. POWER
2. DOOR TRAY
3. OPEN/CLOSE


4. STOP
5. PLAY/PAUSE

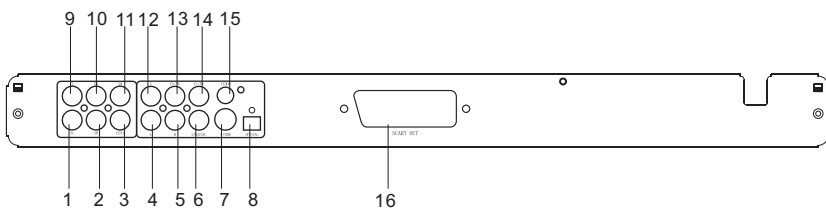

1. SL TRACK
2. SR TRACK
3. CENTER TRACK
4. LEFT TRACK
5. RIGHT TRACK
6. COAXIAL JACK
7. S-VIDEO JACK
8. OPTICAL JACK
9. FL TRACK

10. FR TRACK
11. SW TRACK
12. Y Jack
13. Cb/Pb JACK
14. Cr/Pr JACK
15. VIDEO JACK
16. SCART OUTPUT JACK

 BASIC CONNECTION

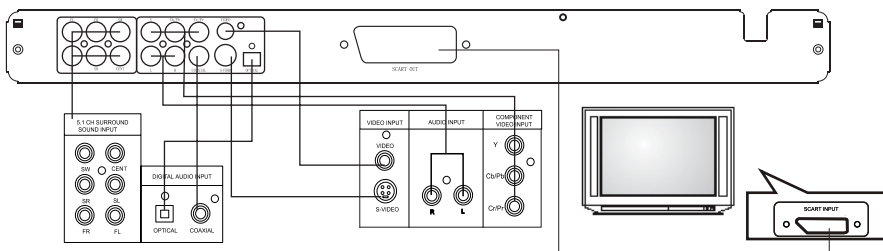

AMPLIFIER COAXIAL AUDIO INPUT

TV AV INPUT

TELEVISION

Basic Functions

Standby

When the player is set up, switch on the unit, and the television set .

The player come on and now ready to play the disc. The player will display NO DISC in the player.

Open/close

Open the tray by pressing Open/Close button, the tray will automatically come out.

Insert a disc in the tray and close the disc tray by pressing the Open/Close button again.

Press Stop button for memory stop function. If you are not going to use for an extended

period of time, be sure to disconnect the player from the wall outlet.

Play/Pause

When playing a DVD disc, you can press this button to play or pause.

Basic Functions

Menu

When playing the disc, press this button to return root menu, you can choose menu item again.

Zoom

The maximum zoom is $\times 4$. Press the Zoom button to select $\times 2$, $\times 3$, $\times 4$, $1/2$, $1/3$, $1/4$. In zoom mode, you can press UP, DOWN, LEFT, RIGHT to move the picture upwards, downwards, leftwards, rightwards.



 
 
SUBTITLE LANGUAGES

This function enables you to select subtitle languages displayed on TV screen as many as 32 subtitle languages (only applicable to disc with same function), repeatedly press the Subtitle button which indicated the subtitles, and you can begin to select.

ANGLE

While watching a game, a concert or an opera program, you can:

1. Press the Angle button on the remote control to select angle one, the diagram angle one will indicate in the upper right corner of the TV screen.
2. Press the Angle button again to select different angle. Or you can choose to watch the same action taken from different points of view.

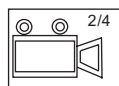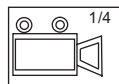

AUDIO TRACK

Selecting a voice language, you can have as many as eight different selections of channels (4 kinds for SVCD or CVD). You can choose among eight voice languages by pressing the AUDIO button.

Mp3 Music Discs

This unit will play MP3 files recorded on CD-R and CD-RW discs.

Playing a MP3 file disc

1. Press the OPEN/CLOSE button, the disc tray opens.
2. Insert a MP3 file disc on the disc tray with the label side up.
3. Press the OPEN/CLOSE button, the disc tray closes.
4. The unit will take a short while to load the disc and automatically playback.

To pause playback

- Press the PAUSE button. To resume playback again, press the PLAY button.

To stop playback

- Press the STOP button.

To skip to the next or previous file

- Press the NEXT button of the remote control while playing, to skip ahead to the beginning of the next file. Each time you press the button consecutively, the beginning of the next file is located and played back.
- Press the PREV (Previous) button of the remote control while playing, to skip back to the beginning of the previous file. Each time you press the button consecutively, the beginning of the previous files is located and played back.

On-Screen Display

Turn on your TV to view the on-screen display of MP3 files.

1. Press the MENU button of the remote control to view in DIR (directory) folders name.
2. Press the , , or CURSOR button of the remote control to select the folder, then press ENT (Enter) button to confirm.
3. Press the , , or CURSOR button of the remote control to select the file you want to listen to, then press ENTER button and this selected file is located and played back.

Basic Functions

Next Chapter Playing

Next Chapter Jump over the current title to the next one.

Next Title Press ►► button on remote control to jump to next title.

Previous Title Press ◄◄ button on remote control to playing previous title.

Single step

You can play the discontinuous pictures frame by frame showing in the screen, press the Step button for this function. First press to freeze the picture. Press again for moving a frame. Press Play button to resume normal play.

Select Playing

You can also select your desire track by using numeric button (but only under PBC off mode). Press numeric button (0-9, 10+) for selecting.

E.g. Track No.22 Press numeric button 10+ for two times, then press numeric button 2. You can also press Title button on remote control for this function.

Repeat Playing

When playing a DVD disc, you can repeat playing segment, single title, chapter ... etc. Pressing repeat button repeatedly. As for repeat segment, press A-B button on remote control to operate. Press A-B button once to finish repeat setting A. Press A-B again to finish repeat setting from A to B. Press A-B for the third time to cancel repeat function.

Program Playing

When the DVD have stopped, press PROG button on remote control for processing edit program. Then by pressing Numeric button, it will reveal the program procedure in the left hand side, whereas the sequent number of track in the right.

P 00:00

Basic Functions

Fast Forward

Press the Fast Forward button on the remote control unit, the movie plays rapidly. Keep continuously to press the Fast Backward button, and the title of the picture will start playing disc with normal speed.

Slow Forward

Press the Slow Forward button on the remote control until, the movie plays slowly. Keep continuously to press the Slow Backward button, and the title of the picture will start playing disc with normal speed.

Time Selection

1. While playing VCD disc, press Time button, screen will show the track, PBC and time of the disc:

VCD TRK 06/17  PBC  02-12-03

2. Use the directional arrow buttons to select the position, then input enter numbers, after that press ENTER to affirm, the disc will play from your selection.

3. While playing DVD disc, press Time button, screen will show the titles and chapters of the disc. Then do as 2. .

DVD TT 06/17 CH 00/00  02-12-03

Note:

Never input an overtime manifest to the player than the disc playable. Only select the time button when playing.

Title

When playing a disc, press this button to return title, you can choose title again.

Setup Menu Options

Various features of the player can be adjusted in the Setup Menu:

- Press the SETUP button.
- Setup Menu appears.
- Highlight the desired icon. Press the ENTER/ ► button to activate the setting submenu.

Language

Enter this menu to setup another language in the OSD display, DVD disc subtitle, DVD disc audio and DVD disc Start Menu.

 
Press the SETUP button.

Highlight "Language." language submenu appears.

Using the DIRECTION KEYS. Highlight the desired item and press the ENTER/ ► button. Highlight the desired item.

Press the ENTER/ ► button to confirm.

Press the SETUP button to save the setting and exit.

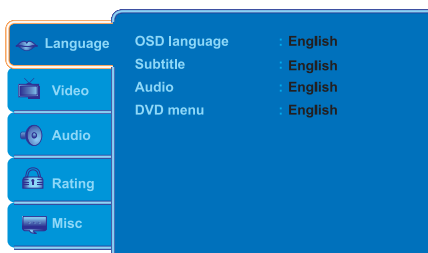

Video Output Selection

Enter this menu to setup the Video setting. Press the SETUP button.

Navigate DIRECTION KEYS to highlight "Video."

 
Video sub menu appears.

Highlight the desired item and press the ENTER/ ► button.

Highlight the desired item.

Press the ENTER/ ► button to confirm.

Press the SETUP button to save the setting and exit.

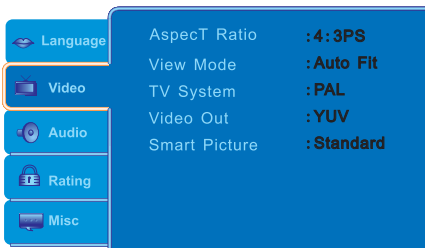

Setup Menu Options

- 1) Aspect Ratio: If your TV is a standard 4:3 type, select 4:3PS or 4:3LB. If you desire to view widescreen (16×9) DVDs. If your TV is 16×9. Select 16×9 wide.
- 2) View Mode: select the view mode from Fill/Original/Auto Fit/Pan Scan.
- 3) TV System: you can change the TV system from NTSC/PAL/AUTO.
- 4) Video Out: Select based on your connection from the DVD player to your TV. There are 4 selections: S-VIDEO/YUV/P-SCAN
- 5) Smart Picture: You can change the picture effect as you like. There are 4 selections "Standard/vivid/Cool/Personal.

TV Shape

The aspect ratio of the picture can be varied in line with the features available on the TV in use.

4:3 Letter Box

Allows you to view movies in their original aspect ratio. The entire frame of the movie will be displayed on screen but will occupy a smaller portion of the screen.



16:9 Widescreen

When you connect to a widescreen TV (16:9), this setting will allow the original aspect ratio to be displayed.



4:3 Pan Scan

The image will fit the screen. The left and right edges of the image may be cut off from the screen.

 


Setup Menu Options

Audio Output Selection

Enter this menu to setup the Audio setting. Press SETUP button. Highlight "Audio". Audio submenu appears.

Highlight the desired item and press ENTER/ ► button. Highlight the desired item. Press ENTER/ ► button to confirm. Press SETUP button to save the setting and quit.

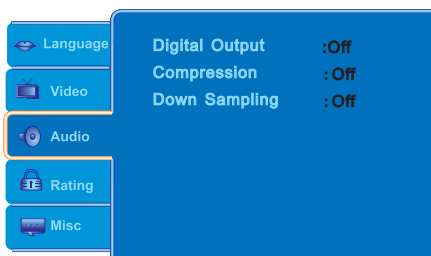


- 1) Select the Digital Output between PCM/RAW or Off.
- 2) Set the Compression on or off.
- 3) Set the Down Sampling on or off.

Rating

Enter this menu to setup the Rating setting. Press SETUP button. Highlight "Rating", rating sub menu appears.

 Highlight the desired item and press ENTER/ ► button. Highlight the desired item. Press ENTER/ ► button to confirm. Press SETUP button to save the setting and quit. The pre-set password is 0000.

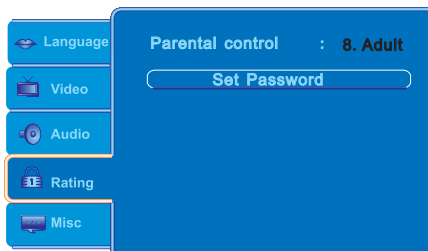

Setup Menu Options

 
Misc

Enter this menu to setup the Misc setting, Press SETUP button Highlight "Misc", Misc submenu appears.

Highlight the desired item and press ENTER/ ► button. Highlight the desired item. Press ENTER/ ► button to confirm. Press SETUP button to save the setting and quit.

1) Use Default settings, Choose to reset the system to the Default settings.

2) Screen Saver: You can set the screen saver on or off.

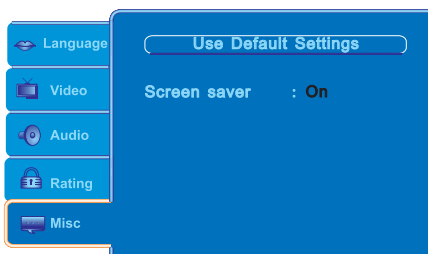

Remote Control Operation

POWER

During playback, Press POWER to stop the player and return to standby mode. While the player is in standby. Press POWER to resume normal operation.

OPEN/CLOSE

To open the disc tray .Press OPEN/CLOSE.

To close the disc tray.Press OPEN/CLOSE again.

TITLE

During DVD playback.Press TITLE to display the DVD title menu or play the first title.

Note:this function is disc-dependent.

MENU

During DVD playback.Press MENU to display the disc menu of the current title.

Note:this function is disc-dependent.

P-SCAN

When the disc tray is ejected, press this button to set video output to one of S-Video/YUV/YPbPr

DISPLAY

During VCD/CD/DVD playback.Press DISPLAY to display the current time counter position as follows.

VCD

Time 00:01:23

Remain Time 00:01:23

Track 1/12

DVD

Time 00:01:23

Remain Time 00:01:23

Title 3/55 chapter 1/1

Audio 1/2 DOLBY DIGITAL 5.1ch ch1

Angle 1/1

PBC

During VCD/SVCD playback,Press PBC to select either PBC On or PBC Off
PBC is :playback control used to navigate VCD/SVCD

0-9 Keys

 
These keys are used to input the time,as well as title,chapter and track numbers
When a CD or VCD is playing(with PBC off),press the 0-9 keys to select a track directly,then press ENTER to confirm.

When a numeric item is displayed on the screen,press the 0-9 keys to select the desired entry,and press ENTER to confirm.

Remote Control Operation

SLOW

During DVD,VCD or SVCD playback,press SLOW for slow motion playback. Once you press SLOW,the disc will play at 1/2,1/4,1/6 and 1/8 normal speed as follows:

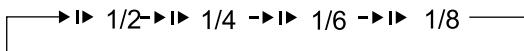

Press PLAY to resume normal playback.

PREV

During DVD,CD,or VCD playback,press PREV to play the previous chapter,title or track.

NEXT

During DVD,CD,or VCD playback,press NEXT to play the next chapter,title or track.

REPEAT

Each press of the REPEAT button will change the repeat mode.

During VCD,CD playback,there are three modes:repeat Single,repeat ALL and Off.

During DCD, playback,there are three modes:repeat Chapter, repeat Title and Off.

Note:During VCD playback,the PBC mode must be set to Off

A-B

During playback,press A-B to select point A

Press it again to select point B.The player will repeat the section from A to B automatically.

Press A-B a third time to cancel A-B repeat and clear points A and B.

Note:During CD /VCD/SVCD playback,points A and B must be within the same track.

During DVD playback,points A and B can be selected from different chapters.

F.REV

During DVD,CD or VCD playback,press F.REV to scan inreverse.

The player will review the disc at 2,4,8,and 16 times the normal speed as follows:



Press PLAY to resume normal playback.

F.FWD

During DVD,CD or VCD playback,press F.FWD to scan forward.

The player will cue the disc at 2,4,8,and 16 times the normal speed as follows:



Press PLAY to resume normal playback.

Remote Control Operation

PLAY/PAUSE

Press PLAY/PAUSE during playback to pause playback.

Press PLAY/PAUSE to resume normal playback.

NOTE: the step function is not available during CD playback

STEP

Press the key, you can play the disc step by step, in this way, you can catch any picture on the disc. The function is disc specified.

 
STOP

Press STOP once during playback to stop and hold playback.

Press PLAY to resume playback from the point at which STOP was pressed, or Press STOP a second time to stop playback completely.

ZOOM

During VCD/SVCD/DVD playback, press ZOOM to magnify the image as follows :

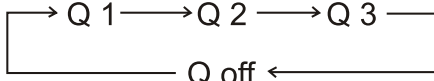

VOL

Press VOL+ to increase the volume. Press VOL- to reduce the volume.

SUBTITLE

During DVD playback,

Press SUBTITLE repeatedly to select from up to 32 subtitle languages.

Note: this function is disc specific (language availability will vary).

ANGLE

During DVD playback, Press ANGLE to view scenes from different camera angles. Press ANGLE to repeatedly change from one camera angle to another. Note: this function is disc dependent

LANGUAGE

Press LANGUAGE repeatedly to select from up to 8 audio language/formats during DVD playback.

Note: this function is disc dependent.

Kodak Picture CD Playback

A Kodak picture CD has the size and shape of a regular CD

The max. size of JPEG picture can be supported is 3840*3840 Pixels JPEG stands for Joint Picture Experts Group. It is a compressing standard. It is the first international standard on Still Pictuer Compressing: ISO10918-1 constituted by the Committee on Still Picture Compressing Standard of ISO. The pictures on Kodak Picture CD are stored in this format(JPEG). This player can decode the JPEG picture file in a Kodak Picture CD and display the picture in different modes.

Operation instructions:

Press PAUSE key to stop playback temporarily.

Press PREV or NEXT key to select.


You can use number keys to select a particular picture.

Image rotation

There are three modes to rotate a picture: 90° clockwise, 180° clockwise and 90° counter-clockwise operations are allowed only When a picture is being displayed normally and will be cancelled automatically when a new picture is displayed. Press ANGLE repeatedly, you can select the different rotation modes: original, 90deg cw, 180deg cw, 90degccw.

Zoom function

 The player provides both Zoom in and pan function. Each press of the ZOOM button will zoom the picture as follows:

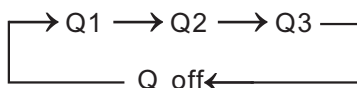

Note: During the ZOOM function, slide show transitions and image rotation are disabled.

Note: the quality of the pictures displayed on your screen will depend on the quality of your display equipment, and of the original picture quality.

Trouble shooting

Please read the user's manual carefully before using the DVD player. If you have any troubles in using this player, try to solve the problems by the suggestions mentioned below. If you can not remove the trouble after using all the suggestions, please contact the company or the technical service center authorized by us. For the sake of your safety, please do not open the cover and repair the player by yourself, if that, it may cause electric shock.

NO PICTURE, SOUND AND INDICATION

Ensure that the power switch is on.

Ensure that the wall inlet is ok.

Ensure that the power cord is not damaged.

Ensure that the power plug is connected to the inlet tightly.

NO SOUND BUT HAVE PICTURE

Ensure that the audio output of the player is properly connected with the audio input of TV set.

Check whether the audio connector is damaged.

Check whether you have turned down the volume.

Ensure that you have set the right AUDIO setup of the player.

Ensure that you have turned your TV to the AV input channel connecting to your player.

Ensure that the audio is not under mute.

NO PICTURE BUT HAVE SOUND

Ensure that the video output of the player is properly connected with the video input of TV set.

Ensure that you have turned your TV to the AV input channel connecting to your player.

Check whether the video connector is damaged.

Ensure that you have set the right VIDEO settings of the player.

BLACK AND WHITE PICTURE OR SCREEN ROLLING

Ensure that you have set the right TV SYSTEM (e.g. PAL, NTSC) setting.

Trouble shooting

FLAWS OF PICTURE OR SOUND

Check whether the setting of AUDIO is right

Check whether the disc is scratched or stained.

Check whether the AV connector and the output terminal is stained.

DISPLAY NO DISC

Ensure that you have put the disc on the tray.

Check whether the disc is put in the reverse side.

Check whether the disc is distorted.

Check whether the disc is stained or scratched badly.

DISPLAY BAD DISC

Check whether the disc has had bad quality.

Ensure that the disc is not stained or damaged badly.

Ensure that the disc format is compatible to the player.

Ensure that the disc is not deformed.

REMOTE CONTROL IS INSENSITIVE OR DOES NOT WORK

Check the batteries of remote control and make sure that they are to be powerful and good conductivity.

Direct the remote control to the IR sensor of the player.

Check whether there are some obstacles between the remote control and IR sensor.

ABNORMAL FUNCTION OPERATION

Turn off the power, and then turn on again.

DISC IS LOCKED IN THE TRAY

The disc can not be taken out of the tray when the player is reading, so you have to turn off the power and turn on again, and press OPEN/CLOSE key immediately to open the tray.

Specification

Type of Disc	DVD CD-DA CD-MP3 Kodak Picture CD CD-R / CD-RW
Video Format	MPEG1 MPEG2 MPEG4
Audio Format	MPEG 1, LAYER 1, LAYER 2, LAYER 3
Signal Output	Color System: PAL /NTSC Audio System: DTS digital output Audio DAC 16bit/48KHz Video Output: 1 Vpp (at 75 ohm) Audio Output: 2 Vpp
Frequency Response	CD: 4Hz 20KHz (EIAJ) DVD: 4Hz 22KHz (48K) 4Hz 44KHz (96K)
S/N ratio	> 92 dB
THD	< 0.04%
Output Terminals	Video (composite) output X 1 S-Video output X 1 5.1ch output X 1 Digital coaxial output X1 Digital Optical output X1 SCART output X 1 YPbPr output X 1 L/R Audio output X 1
Power input	AC 100V–240V, 50/60Hz, <1A

Guarantee

This product is guaranteed for twelve months from the date of the original purchase. In the unlikely event of any defect arising due to faulty materials or workmanship, the unit will be either replaced, a refund will be given or the unit will be repaired free of charge (where possible) during this period by the dealer from whom you purchased the unit.

This guarantee is subject to the following provisions:

- The guarantee is only valid within the boundaries of the country of purchase.
- The product must be correctly installed and operated in accordance with the instructions contained in these operating instructions.
- It must be used solely for domestic purposes.
- The guarantee does not cover accidental damage or misuse.
- The guarantee will be rendered invalid if the product is resold or has been damaged by inexperienced repairs. The manufacturers disclaim any liability for incidental or consequential damages.

The guarantee is in addition to, and does not diminish, your statutory or legal rights.

Warning

To prevent children from watching programs which have a rating above their age, please be sure to set the rating in the setup menu appropriately. Before you set this rating, the password must be unlocked. If you forget your unique password, then please use the universal password asset by the manufacturer. The universal password is 8888, please detach this sheet and keep it in a safe place, away from children.

© 2007

Issue 25 - May 2007

support@goodmans.co.uk
www.goodmans.co.uk/support