

Goodmans



GDVD145VCR

**DVD/VCR/CD/MP3 Player
with Remote Control**

User Guide

VIDEO *plus+*

DVD/VCR/CD/MP3 Player

Thank you for buying this DVD/VCR/CD/MP3 Player which is designed to give you many years of trouble-free service.

You may already be familiar with using a DVD/VCR/CD/MP3 Player but do please take time to read these instructions. They are designed to familiarise you with the DVD/VCR/CD/MP3 Player's many new features and to ensure you get the very best out of your new purchase.

Safety is important

Your safety and the safety of others is important. Please, therefore, ensure you read the Safety Instructions on Page 41 **before** you operate this DVD/VCR/CD/MP3 Player.

Contents

Getting started	4
In the box	4
Switching on	4
Switching off	4
Using the remote control	4
Quick view	6
General features	9
Child lock	9
Switching the On Screen Display (OSD) On or Off	9
Setting up your DVD/VCR/CD/MP3 Player to receive TV stations	9
Using the VCR	14
Playback	14
Recording	15
VCR functions	19
Using the DVD	23
DVD playback	23
MP3 playback	23
Function buttons	26
Connecting to external equipment	34
Connecting the DVD/VCR/CD/MP3 Player to a TV	34
Connecting the DVD/VCR/CD/MP3 Player to a digital decoder	35
Connecting the DVD/VCR/CD/MP3 Player to a Dolby Digital amplifier and a TV with S-Video	36
Connecting the DVD/VCR/CD/MP3 Player to an audio system	37
Help and advice	38
DVD	38
VCR	38
General	39
Care and maintenance	40
Handling discs	40
Cleaning discs	40
Cleaning VCR heads	40
VCR condensation	40
Record safety tab	40
Safety instructions	41
Guarantee	43
Technical specification	43

Getting started

Remove your DVD/VCR/CD/MP3 Player carefully from the box. You may wish to store the packaging for future use.

In the box

Inside this package you should have:

- DVD/VCR/CD/MP3 Player
- Remote control
- User guide

Should any of these items be missing please call the helpline on 020 8787 3111 or Email: Customercare@albablc.co.uk.

Read these instructions before use.

Unless stated otherwise, all references to buttons refer to the remote control.

Switching on

Mains power

Connect the 3-pin mains plug into the mains socket and switch on.

Please Note

When not in use, disconnect the mains plug from the power socket.

The DVD/VCR/CD/MP3 Player will go to standby mode with the LCD displaying --:--.

Standby



When the DVD/VCR/CD/MP3 Player is in standby mode, you can press the **Standby** button on the remote control to turn it on. The display will show ON.



Alternatively, press the **Standby/On** button or **Select** button on the front of the DVD/VCR/CD/MP3 Player. Either the DVD or VHS LED will illuminate and the LCD will show ON.

The DVD/VCR/CD/MP3 Player will switch to Standby after 5 minutes with no tape or disc loaded.

Do not leave the DVD/VCR/CD/MP3 Player on standby when unattended or overnight.

Switching off



Press the **Standby/On** button on the front of the DVD/VCR/CD/MP3 Player or the **Standby** button on the remote control. Unplug from the mains supply. The display will show OFF.

Using the remote control

Installing the batteries

Remove the battery cover. Insert two (AA) size batteries in the compartment. Refer to the diagram in the battery compartment for correct installation of the batteries.

We recommend the use of Ever Ready Energizer Batteries.




To use the remote control, point it at the front of the DVD/VCR/CD/MP3 Player. The sensor is to the left of the display window.

The remote control will work up to 7 metres from the DVD/VCR/CD/MP3 Player and at an angle of up to 60 degrees.


Do not block the path of the beam from the remote to the DVD/VCR/CD/MP3 Player. Dark walls, direct sunlight or very bright light will reduce the remote control sensitivity.

Quick view


Front view

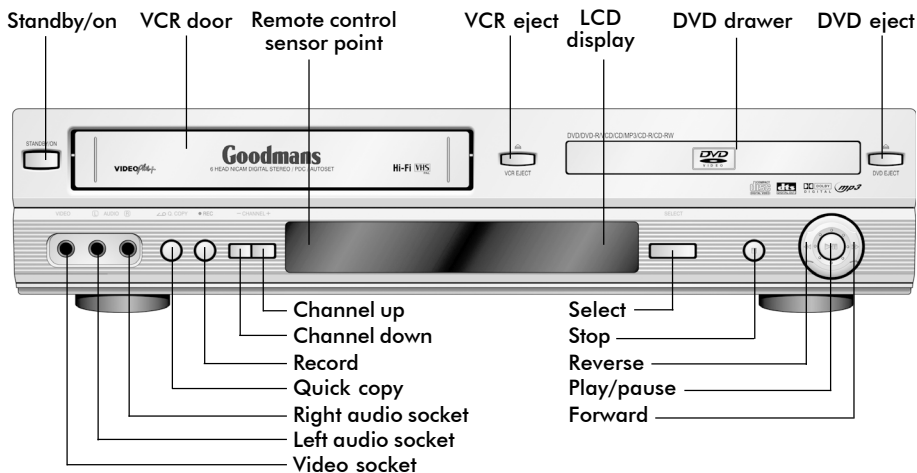


Rear view

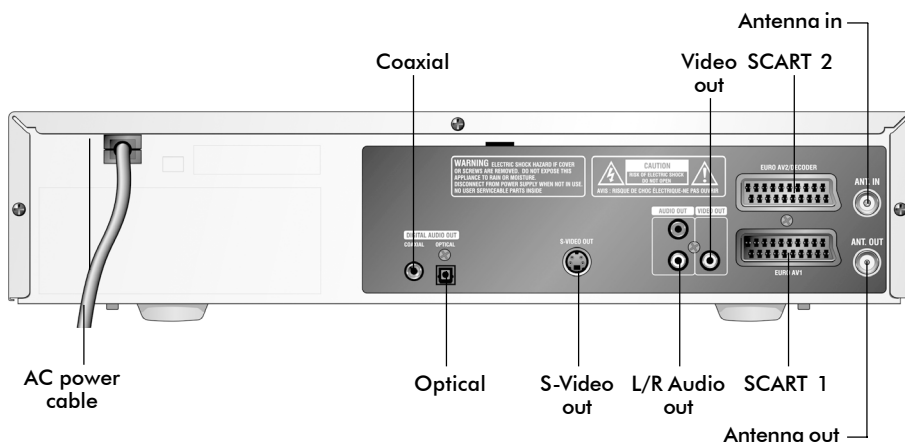

Digital display window

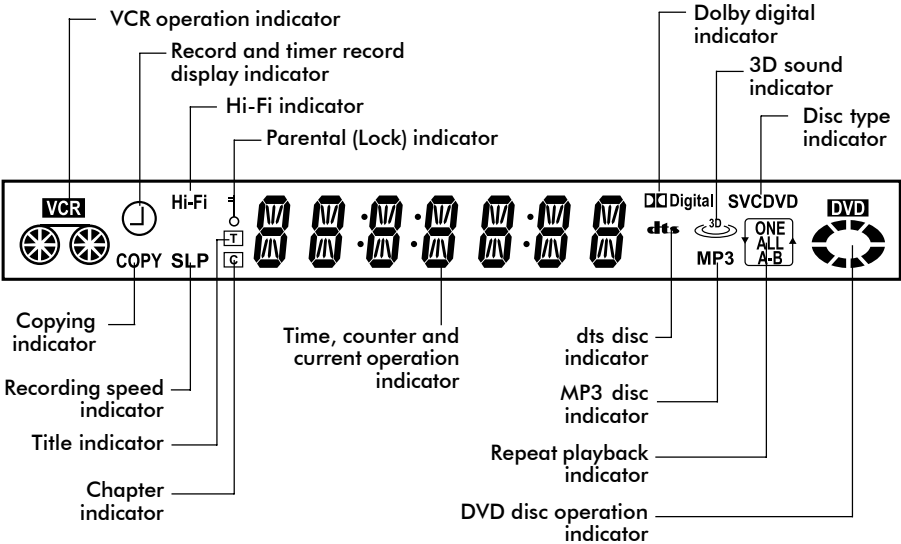

Remote control

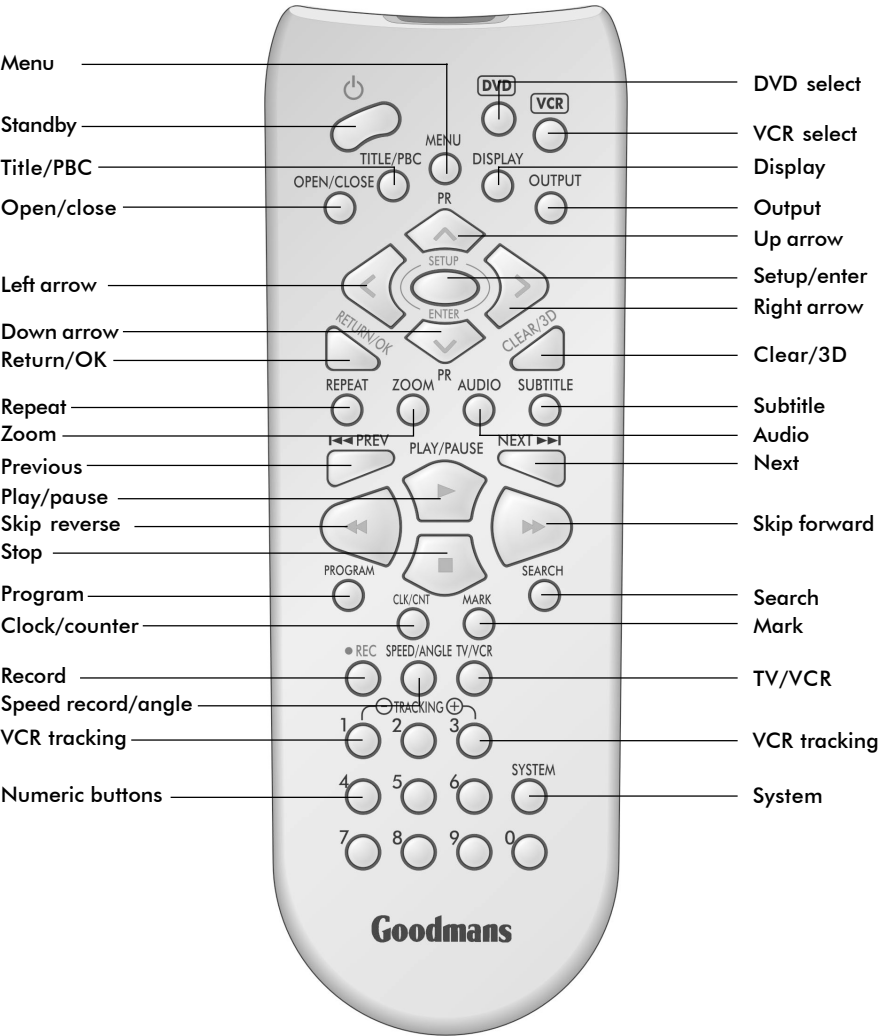

General features

Child lock

When child lock is on, none of the buttons on the front of the DVD/VCR/CD/MP3 Player will operate.



Press the **Standby** button on the remote control until the LCD shows LOCK (about five seconds).

To release the child lock, press any button on the remote control.

Switching the On Screen Display (OSD) On or Off



Press the **VCR** button on the remote control to change to VHS mode.

Press the **Setup/enter** button to enter the Setup menu.

Select VCR SETUP, press the **Return/OK** button and then OSD ON/OFF using the **Arrow** buttons.

To turn the OSD off, select OFF using the **Arrow** buttons and press the **Return/OK** button.

Setting up your DVD/VCR/CD/MP3 Player to receive TV stations

Important

Before you start, unplug all equipment from the mains supply.

Connect your aerial to the ANT IN socket on the rear of the DVD/VCR/CD/MP3 Player.

You can either connect the DVD/VCR/CD/MP3 Player to the TV with an RF lead or a Scart lead.

Plug the RF lead into the ANT OUT socket on the rear of the DVD/VCR/CD/MP3 Player and into the aerial lead of the TV.


or

Plug the Scart lead into the Scart socket on the rear of the DVD/VCR/CD/MP3 Player and into the Scart socket on the TV.

To connect a satellite system through an RF lead, consult the satellite system user guide and connect the aerial to the RF in socket on the rear of the satellite decoder.

Connect an RF lead from the RF out socket on the decoder to the ANT IN socket on the rear of the DVD/VCR/CD/MP3 Player.


Plug the RF lead into the ANT OUT socket on the rear of the DVD/VCR/CD/MP3 Player and into the aerial lead of the TV.

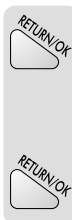

Press the **Return/OK** button on the remote control until the LCD shows RF 52 (about 5 seconds). The DVD/VCR/CD/MP3 Player is now transmitting its test signal on channel 52. To turn the test signal off, press the **Return/OK** button again for more than five seconds.

Consult your TV user guide for instructions of how to tune the TV to the DVD/VCR/CD/MP3 Player.

When tuning your TV, the following OSD will be shown:

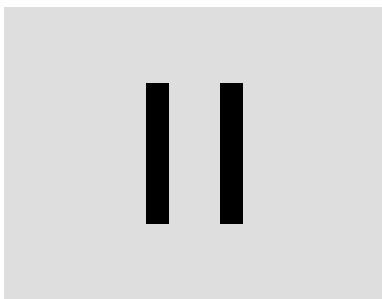


To connect a satellite system using Scart leads, connect the Scart out socket of the decoder to the EUROAV2/DECODER Scart socket on the rear of the DVD/VCR/CD/MP3 Player. Connect the EUROAV1 Scart socket to the TV Scart socket.

Consult your TV user guide for instructions of how to tune the TV to the DVD/VCR/CD/MP3 Player.


Autoset

The first time you switch the DVD/VCR/CD/MP3 Player on, the TV should show AUTO SET.

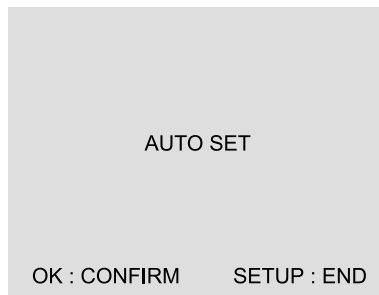

Press the **Return/OK** button to start AUTO SET.

If this does not appear, press the **Setup/enter** button, select PR PRESET with the **Down arrow** button and press the **Return/OK** button. A new screen will appear with AUTO SET highlighted, press the **Return/OK** button again to start AUTO SET.

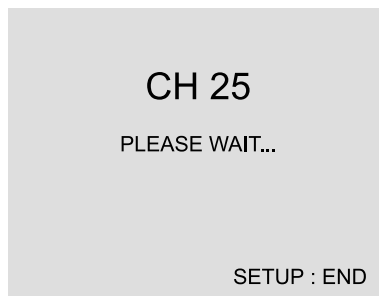

AUTO SET tunes in all the available stations and then puts them into the most common order i.e. BBC1, BBC2, ITV1, CH4, CH5, SKY 1 etc.

If, during AutoSet, a station is found that is on the same channel as the RF output channel of the DVD/VCR/CD/MP3 Player, the DVD/VCR/CD/MP3 Player will recommend a new channel for RF output.

RF OUTPUT SET

CURRENT CH 52
RECOMMENDED CH 54

0-9 : SELECT (21-69)
OK : CONFIRM SETUP : END



To accept this change, press the **Return/OK** button.

IMPORTANT!

PLEASE CHANGE THE TV
CH TO 54.

You will then have to retune your TV.

Manual tuning



Press the **Setup/enter** button.

SETUP

TIMER PROGRAM
➔ PR PRESET
VCR SETUP

PR+/- : SELECT
OK : CONFIRM SETUP : END



Select PR PRESET and press the **Return/OK** button.

PR PRESET

AUTO SET
➔ MANUAL SET
PR ERASE
PR ALIGN

PR+/- : SELECT
OK : CONFIRM SETUP : END



Select MANUAL SET and press the **Return/OK** button.

MANUAL SET

➔ PR01 BBC1 PR08 ----
PR02 BBC2 PR09 ----
PR03 ITV1 PR10 ----
PR04 CH4 PR11 ----
PR05 ---- PR12 ----
PR06 ---- PR13 ----
PR07 ---- PR14 ----

PR+/- : SELECT
OK : CONFIRM SETUP : END



Select the program number you require to tune. Press the **Return/OK** button.

MANUAL SET	
→PR	01
RECEPTION	AERIAL
AUTOSEARCH	CH31
FINE TUNING	
DECODER	OFF
NAME	BBC1
PR+/- : SELECT	
OK : CONFIRM	SETUP : END

PR



Set the program number with the **Left** or **Right arrow** button.

Reception



Select the broadcast system, Aerial (CH) or Cable(CC) with the **Left** or **Right arrow** button.

Autosearch



If you know the channel number, you can enter it directly using the **Numeric** buttons or search using the **Right arrow** button. When you press the **Right arrow** button, the autosearch will search for the next station. When it finds one, it will be displayed. If it is the one you require stop searching, if not, continue the search.

Fine tuning

In some areas where reception is poor, it may be necessary to adjust the fine tuning to get the best picture or sound.



In the MANUAL SET menu, select FINE TUNING and press the **Return/OK** button.



Use the **Left** or **Right arrow** button to adjust the fine tuning to get the best picture or sound.

Decoder



If you have a decoder connected to the EUROAV2/DECODER socket, press the **Left** or **Right arrow** button to select On or Off.

Name



You can change or create a name for the program you have selected. Press the **0** button to change the name. Press the **1** button to create a new name. Use the **Up** or **down arrow** button to change the letters and the **Left** or **Right arrow** button to move to the next letter.

When you have finished tuning, press the **Return/OK** button to store the station. You will be returned to the program list menu ready to start tuning the next program.




You can exit the Setup menu at any time by pressing the **Setup/enter** button.

Sorting program locations

You can change the order of the programs to suit your yourself.



Press the **Setup/enter** button to enter the Setup menu.

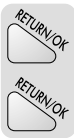

In the **SETUP** menu, select **PR PRESET** and press the **Return/OK** button. In the **PR PRESET** menu, select **PR ALIGN** and press the **Return/OK** button.



Select the program you require to delete. To review the program you are about to delete, hold down the **Left arrow** button. To delete the program, press the **Return/OK** button.

PR ALIGN

➔PR01 BBC1 PR08 ----

PR02 BBC2 PR09 ----

PR03 ITV1 PR10 ----

PR04 CH4 PR11 ----

PR05 ---- PR12 ----

PR06 ---- PR13 ----

PR07 ---- PR14 ----

PR+/- : SELECT

⬅ : PR VIEW

OK : CONFIRM SETUP : END



Select the program you require to move and press the **Return/OK** button. Use the **Up** or **down arrow** button to move the program to its new location. Press the **Return/OK** button.

Deleting programs



Press the **Setup/enter** button to enter the Setup menu.



In the Setup menu, select **PR PRESET** and press the **Return/OK** button. In the **PR PRESET** menu, select **PR ERASE** and press the **Return/OK** button.

PR ERASE

➔PR01 BBC1 PR08 ----

PR02 BBC2 PR09 ----

PR03 ITV1 PR10 ----

PR04 CH4 PR11 ----

PR05 ---- PR12 ----

PR06 ---- PR13 ----

PR07 ---- PR14 ----

PR+/- : SELECT

⬅ : PR VIEW

 
OK : ERASE SETUP : END

Using the VCR



To select the VCR, press the **VCR** button on the remote control or the **Select** button on the front of the DVD/VCR/CD/MP3 Player. The VHS LED will illuminate.

Playback

Insert a video cassette into the video slot.  will appear on the left of the LCD.

 
Please Note

Allow the VCR to automatically load the video cassette. If you try and push the video cassette into the DVD/VCR/CD/MP3 Player you may damage the video cassette or the VCR.



To eject the video cassette, press the **VCR eject** button on the front of the DVD/VCR/CD/MP3 Player.

Press the **Play/pause** button.

VCR will appear above the  symbol, which will appear to start turning and PLAY will appear briefly in the middle of the LCD.

The OSD will show PLAY SP or LP (short play or long play) and the sound output i.e. HI FI L & R.

Please Note

Some pre-recorded cassettes may start to play automatically when they are loaded. The LCD and OSD displays will be the same as above.

Pausing playback



Press the **Play/pause** button to pause the playback.

The LCD will show STILL.

 


Press the **Play/pause** button again to resume normal playback.

Stopping playback



Press the **Stop** button.

The LCD will show STOP and VCR will disappear from above the  symbol which will stop turning.

Fast skip forward/reverse



During playback, press the **Skip forward** button to fast forward through the cassette. The LCD will show CUE 1.



Press the **Skip forward** button again to increase the speed of the search. The LCD will show CUE 2.



To resume normal playback, press the **Play/pause** button.



Press the **Skip reverse** button to go fast backwards through the cassette. The LCD will show REV 1.



Press the **Skip reverse** button again to increase the speed of the search. The LCD will show REV 2.



To resume normal playback, press the **Play/pause** button.

Slow skip forward/reverse



Press the **Play/pause** button to pause playback.



Press the **Skip forward** button. The cassette will advance very slowly and the LCD will show SLOW.

Frame advance



Press the **Play/pause** button to pause playback.



Press the **Next** button. Each time you press the button, the tape will advance by one frame.



To resume normal playback, press the **Play/pause** button.

Tracking

The VCR is fitted with an automatic tracking system, however manual tracking adjustment is provided.

The manual tracking should only be used if:

- The picture is poor in playback.
- There is noise at the top or bottom of the screen in slow search.
- The paused picture is unstable.



To adjust the tracking, use the **VCR tracking +/-** buttons until the picture is watchable.

Rewind/Fast forward



To rewind a video cassette, press the **Skip reverse** button whilst the VCR is in the stop mode.



To fast forward through a video cassette, press the **Skip forward** button whilst the VCR is in the stop mode.




To stop Rewind or Fast forward, press the **Stop** button.

The rewind/fast forward will stop automatically when the end of the tape is reached.

Recording

Copyright Notice Warning

Most DVDs, compact discs, video cassettes, television broadcasts contain material which is the subject of copyright. It is unlawful to record such material in any form whatsoever, whether on disc or tape, without the permission of the copyright owner concerned. Any person who makes a recording of such material without the consent of the copyright owner infringes copyright and may be liable, to pay substantial damages to the copyright owner, and in some cases to criminal prosecution.

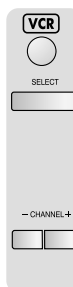

To select the VCR, press the **VCR** button on the remote control or the **Select** button on the front of the DVD/VCR/CD/MP3 Player. The VHS LED will illuminate.

Switch on the TV and select the video channel using the **Channel up** or **Channel down** button on the front of the DVD/VCR/CD/MP3 Player.

Insert a blank, recordable video cassette into the VCR.

 
If you are recording a program from the TV, select the channel on the VCR. Confirm the program is showing on the TV.




If you are recording from an external input, press the **Output** button until the external input appears on the TV screen.

Select the recording speed (LP - long play or SP - short play) with the **Speed record/angle** button.


Press the **Record** button on the front of the DVD/VCR/CD/MP3 Player to start recording. The LCD will show REC and the program you are recording.


O will appear next to the .


The LCD will show REC, the recording speed and the program being recorded.

 If you want to pause the recording, press the **Play/pause** button. If you leave the recording paused for more than five minutes, the recording is switched off automatically.

 To stop recording, press the **Stop** button.

 
 Whilst you are recording, you can watch a DVD. Press the **DVD** button on the remote control or the **Select** button on the front of the DVD/VCR/CD/MP3 Player so that the DVD LED is illuminated.


 Insert a DVD into the DVD tray and press the **Play/pause** button.

 You can watch another TV channel whilst recording. Press the **TV/VCR** button to view another channel.

Recording from DVD to Video cassette

 Select the DVD with the **DVD** button.

 Insert a DVD into the DVD tray and insert a blank, recordable video cassette into the VCR.


 Press the **Quick copy** button on the front of the DVD/VCR/CD/MP3 Player or press the **Play/pause** button. Press the **VCR** button and press the **Record** button on the front of the DVD/VCR/CD/MP3 Player. The DVD will start to play and the VCR will start to record.

Please Note

Some DVDs have a copy prevention system. If this is the case the OSD will show:

NO COPY DISK
PLEASE CONFIRM THE DISK


and the recording will stop.


 To stop the recording, press the **VCR** button and then press the **Stop** button.

One touch recording


If you want to record from the TV but do not have time to set up the timer, you can use the one touch recording.

Follow the instructions under Recording on Page 15 but do not press the record button.

 Press the **Record** button on the front of the DVD/VCR/CD/MP3 Player once to start the recording and then press it again. The LCD will show REC 0:30. The VCR will record for 30 minutes and then switch off.

 Every subsequent press of the **Record** button will increase the recording time by 30 minutes up to a maximum of 10 hours.

The LCD will continue to show the recording time as it counts down.

 To stop recording, press the **Stop** button until the LCD shows STOP (about five seconds).

Recording using the timer

You have two methods of timer recordings, VideoPlus and normal.

Please Note

The clock and date must be correct and the stations tuned before attempting to set the timer.

Normal timer recording



Press the **Setup/enter** button to enter the Setup menu.

Highlight Timer program and press the **Return/OK** button twice.

HOW OFTEN DO YOU WANT TO RECORD THIS PROGRAM?

➔ ONCE
WEEKLY (ONCE A WEEK)
DAILY (MON-FRI)
DAILY (MON-SAT)
DAILY (MON-SUN)

PR+/- : SELECT
OK : CONFIRM SETUP : END



Select how often you require to record the program and press the **Return/OK** button.

TIMER PROGRAM (ONCE)

PR 03
START TIME 21:30
END TIME 22:20
START DATE 14/03 (THU)
TAPE SPEED SP
VPS/PDC ON

PR+/- : SELECT (AV1/AV2)
0-9 : SETUP (PR)
</> : CORRECT SETUP : END

Enter the Program number, start time for the recording, end time for the recording, date of the recording (if not today), whether you require Short Play or Long Play. Switch VPS/PDC off as you are manually setting the timer.



Check your settings. If you wish to make any changes use the **Left** or **Right arrow** button. When you are happy with your setting, press the **Return/OK** button.

The OSD will then tell you to insert a video cassette and turn off your VCR. The LCD will show **J** next to the **OO**.

Please Note

If program timings overlap, the VCR will give a warning message. If you do not adjust the times, the VCR will record the first program completely and then continue with the second one.

If there is insufficient free space for the recording on the video cassette, the VCR will switch to LP to increase the recording capacity.

The VCR will eject a video cassette if the safety tab has been removed.

Timer review - changing and erasing



Press the **Setup/enter** button to enter the Setup menu.



Highlight Timer program and press the **Return/OK** button once.

TIMER PROGRAM

PR	START	END	DATE
→03	21:20	22:20	14/03
01	18:10	20:30	22/03
--	--:--	--:--	--/--
--	--:--	--:--	--/--
--	--:--	--:--	--/--
--	--:--	--:--	--/--

OK : CONFIRM SETUP : END
PR+/- : SELECT



Select the program to change or erase and press the **Return/OK** button.

TIMER PROGRAM (ONCE)

PR	03
START TIME	21:30
END TIME	22:20
START DATE	14/03 (THU)
TAPE SPEED	SP
PDC/VPS	ON

0 : ERASE
</> : CORRECT SETUP : END



To erase the program, press the **0** button followed by the **Return/OK** button.



If you require to make changes, move to the position with the **Left** or **Right arrow** button. Change the settings using the **Up** or **Down arrow** button and the **Numeric** buttons. When the settings are




correct, press the **Left** or **Right arrow** button until OK CONFIRM appears on the bottom line. Press the **Return/OK** button to confirm and the **Setup/enter** button to exit the menu.

Copying



To copy to your VCR from another VCR, connect both machines with a cable between their Scart sockets. Select AV1 or AV2 using the Output button or the **Up** or **Down arrow** button.

Set the other VCR to playback and yours to record.

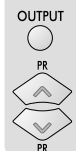

To copy from your VCR to another VCR, connect both machines with a cable between their Scart sockets. Select AV1 using the **Output** button or the **Up** or **Down arrow** button.

Please Note

You cannot use AV2 for this purpose as it is an input only socket.

Set the other VCR to record and yours to playback.



To copy from equipment such as a camcorder, you can use the RCA sockets on the front of the DVD/VCR/CD/MP3 Player. Press the **Output** button to select AV-F and record as previously described.

VCR functions

Clock/counter display

CLK/CNT Press the **Clock/counter** button, the counter counts in real time from the point the tape is at when you load the video cassette. The counter does not count unrecorded parts of the tape. Pressing the **Clock/counter** button again, reverts the LCD to the current time.

If you rewind beyond the zero position, the counter will show a negative value.

DISPLAY Press the **Display** button once to show, initially, the Time and date and the current status at the bottom of the screen. After a few seconds the status will disappear.

DISPLAY Press the **Display** button twice to show, initially, the counter and the current status at the bottom of the screen. After a few seconds the status will disappear.

DISPLAY Press the **Display** button three times to turn the display off.

Remaining time and Video cassette length

This tells you how much time remains on a video cassette so that you will know, for example, if there is sufficient space for a recording.

SETUP/ENTER Press the **Setup/enter** button to enter the Setup menu.

RETURN/OK Select Tape control and press the **Return/OK** button.

TAPE CONTROL

→ TAPE REMAIN
GO TO ZERO
COUNTER RESET
INDEX +
INDEX -

PR+/- : SELECT
OK : CONFIRM SETUP : END



Select Tape Remain and press the **Return/OK** button.

TAPE REMAIN

E-180
→ E-240
E-300

PR+/- : SELECT
OK : CONFIRM SETUP : END



Select the length of video cassette currently loaded and press the **Return/OK** button.

The remaining tape will be displayed at the bottom of the screen.


Counter zero position



Press the **Setup/enter** button to enter the Setup menu.



Select Tape control and press the **Return/OK** button.

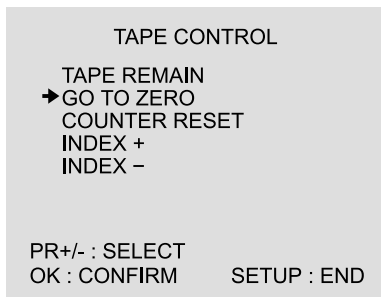


Select GO TO ZERO and press the **Return/OK** button. The VCR will wind to the zero position and stop.

Reset the Counter



Press the **Setup/enter** button to enter the Setup menu.

Select Tape control and press the **Return/OK** button.

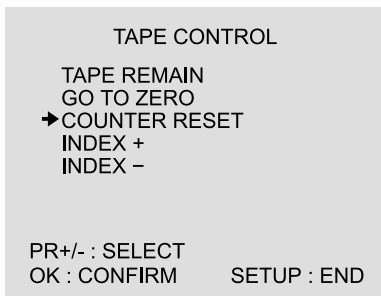

Select COUNTER RESET and press the **Return/OK** button. The counter will go to zero.

Wide screen format Playback/recording

You can record or play programs in 16:9 format.




Press the **Setup/enter** button to enter the Setup menu.



Select VCR SETUP and press the **Return/OK** button.



Select 16:9 and press the **Return/OK** button.

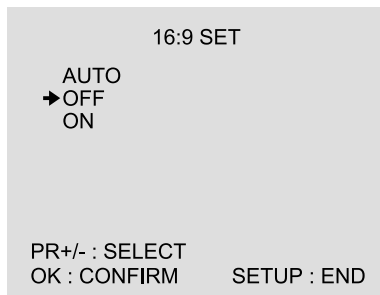

Auto

The VCR automatically detects the program format (16:9 or 4:3) and records or plays this program in the same format.

On

The VCR will play and record all programs in 16:9 format.

Off

The VCR will play and record all programs in 4:3 format.

Please Note

To watch a program which is recorded in 16:9 format by the VCR, your TV must have 16:9 wide screen function and you have to use a Scart lead.


For the above formats to work, your TV must be able to automatically detect a 16:9 program. If you turn the 16:9 format off, your TV may override this setting and display the picture in 16:9 format.

Auto clock

Some broadcasting stations transmit the time and date along with the signal. The DVD/VCR/CD/MP3 Player will automatically use this time and date during the initial setting up procedure, during normal use and every time you switch the DVD/VCR/CD/MP3 Player off at the mains. If you find that this time and date is incorrect, you can turn this feature off and set the time manually.




Press the **Setup/enter** button to enter the Setup menu. Select VCR SETUP and press the **Return/OK** button.

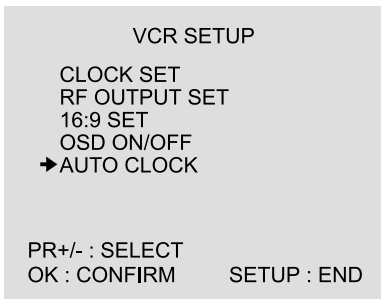

In the Setup menu, select VCR SETUP and press the **Return/OK** button.

Select AUTO CLOCK and press the **Return/OK** button.

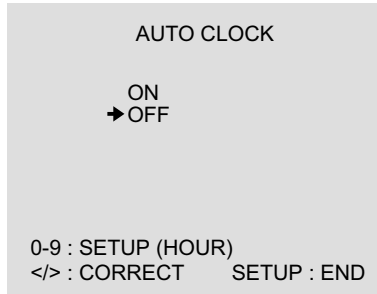

If you require AUTO CLOCK OFF, select OFF and press the **Return/OK** button.


Setting time and date



Press the **VCR** button on the Remote control to change to VHS mode.

Press the **Setup/enter** button to enter the Setup menu.

Select VCR SETUP and then CLOCK SET.

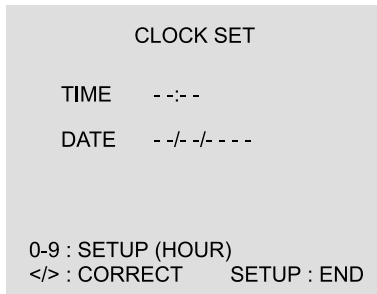

4



RETURN/OK

SETUP
ENTER

Enter the time and date using the **Numeric** buttons. If you enter a single digit number, wait a few seconds for the DVD/VCR/CD/MP3 Player to enter the number properly. To store the time and date, press the **Return/OK** button. Press the **Setup/enter** button to exit the menu.

AUDIO



During a bilingual program playback, press the **Audio** button to select from:

Main language (original soundtrack).
Sub language (dubbed sound track).
Both main and sub languages.
Bilingual off.

VCR Audio

The VCR is equipped with a high quality Hi Fi sound system.

AUDIO



While the VCR is in stop mode the OSD displays the current program being broadcast. If you switch to another program, or the sound mode of the current program changes, the OSD will display the program details and sound mode (STEREO BIL I/ BIL II). If this is not visible, press the **Audio** button. If there is still no display of the sound mode this is because the sound is monaural.

AUDIO



During playback, the OSD will display the sound mode recorded on the video tape (Hi Fi). If this is not visible, press the **Audio** button. If there is still no display of the sound mode this is because the sound is monaural.

AUDIO



To change the Hi Fi output during playback, press the **Audio** button.

You can select from:

Hi Fi L + R
Hi Fi LEFT
Hi Fi RIGHT
Hi Fi OFF

Using the DVD

Important


This product utilises a laser.


Danger – Invisible laser radiation when opened and interlock failed or defeated. Avoid direct exposure to the beam.

Caution

Use of controls, adjustments or procedures not listed in this manual may result in hazardous radiation exposure.

The DVD can play discs with the following Logos:

 8 cm/12 cm disc

 Audio 8 cm/12 cm.


 MP3 CD-R

 MP3 CD-RW

Do not try to play Photo CDs as the data on the disc may be damaged.

The DVD is compatible with PAL/NTSC DVD.

Please Note

When the symbol  appears in the top left hand corner of the screen display, this indicates that the operation being attempted can not be activated at this time.

DVD playback

With no disc in place and the DVD drawer closed, the DVD/VCR/CD/MP3 Player LCD will display 'no disc' and the television on-screen display (OSD) will display No Disc.

 Press the **Open/Close** button to open the DVD drawer.

LCD will display OPEN and the OSD will display OPEN.

Place a disc, label side up onto the DVD drawer.

 Press the **Open/Close** button to close the DVD drawer.

LCD will display CLOSE followed by LOAD and will then show the type of disc loaded. The OSD will display Close followed by Loading and will indicate the type of disc loaded.

In the case of DVDs, the DVD will pause at the disc start menus to enable you to make appropriate playback selections. MENU may be shown on the LCD.

With DVDs, the LCD will show the Chapter and elapsed time.

With VCDs and CDs the LCD will show the Title and elapsed time.

With audio discs, the LCD will initially show the number of tracks and total play time for the disc. When playing, the LCD will show the track number and elapsed time.

MP3 playback

Once the MP3 disc has been loaded, the OSD will display the disc type (MP3), the total number of tracks and the Album titles on the disc.

You can select the album you require to listen to with the **Up** or **Down arrow** button.

When you press the **Play/pause** button, the OSD will display the number of the track being played, total number of tracks, elapsed play time and the names of the tracks on the album.

Pausing playback

Press the **Play/pause** button to pause the playback.

The LCD will display PAUSE. The OSD will display ■ Pause briefly.

Press the **Play/pause** button to resume normal playback.

The LCD will display PLAY. The OSD will display ► Play briefly.

Stopping playback

Press the **Stop** button. The DVD stops playing.

The LCD will display STOP.

The OSD will display ■■ Resume Stop briefly.

The DVD remembers the place on the disc where it stopped playing.

Press the **Play/pause** button to resume playback. The disc will start

from the position at which it stopped.



If, having pressed the **Stop** button once, you press it again the LCD will display STOP and the OSD will show ■ Stop briefly.



The DVD will start from the beginning of the disc when you press the **Play/pause** button.

Fast skip forward/reverse



Press the **Skip forward** button to fast forward through the disc and **Skip reverse** to go fast backwards through the disc.



Repeatedly pressing the **Skip forward** or **Skip reverse** button will increase forward/reverse search speeds. There are four speeds: x2, x4, x8 or x20.



Press the **Play/pause** button to resume normal playback.

Slow search forward



Press the **Play/pause** button.



Repeatedly pressing the **Skip forward** button causes the DVD to advance at 1/2, 1/4, or 1/8th of normal playback speed.



Press the **Play/pause** button to resume normal playback.

Slow search backward



Press the **Play/pause** button.



Repeatedly pressing the **Skip reverse** button causes the DVD to go backwards at 1/2, 1/4, or 1/8th of normal playback speed.



Press the **Play/pause** button to resume normal playback.

Skipping to the next/previous chapter/track



Press the **Next** button to skip forward to the next chapter (DVD) or track (Audio CD or MP3).



Press the **Previous** button to skip backward to the start of the current chapter (DVD) or track (Audio CD or MP3).



Press the **Previous** button again to skip backward to the start of the previous chapter (DVD) or track (Audio CD or MP3).

Please Note

Playback resumes at normal speed after skipping to the beginning of a chapter.

Frame (DVD Only)



To move the film forward a frame at a time, press the **Play/pause** button and then the **Next** button. Each press of the **Next** button moves the film forward one frame.



The OSD will display **|| ► Step**.



Press the **Play/pause** button to resume normal playback.

Search mode (DVD) Title and chapter search



Whilst in playback, press the **Search** button.

The OSD will show, for example:

Search1	DVD
Title --- 1-9	Chapter --- 1-28



Enter a new title and chapter number with the **Numeric** and **Right arrow** button. Press the **Setup/enter** button and the DVD will start to play from the selected position.

Time search (DVD)



Whilst in playback, press the **Search** button twice.

The OSD will show, for example:

Search2	DVD
Time ---:--:--	01:37:58



The total play time is displayed. Use the **Numeric** buttons to enter the time you require the DVD to start to play from and then press the **Setup/enter** button. The DVD will start to play from the selected time.


Search mode (Audio CD and MP3) Track search



Whilst in playback, press the **Search** button.


The OSD will show, for example:

Search1	CD
Track ---	1-12

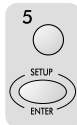


Enter the track number (1 to 12) with the **Numeric** buttons. Press the **Setup/enter** button and the CD will start to play the selected track.

Time search (CD only)

 Whilst in playback, press the **Search** button twice.


The OSD will show, for example:

Search2	CDDA
Track Time	--:--:-- 00:03:20
Disc Time	--:--:-- 01:03:20


 You can enter either a new track time or a new disc time using the **Numeric** buttons and then press the **Setup/enter** button. The CD will start to play from your selected time.

Function buttons

Zoom

 While playing a DVD, press the **Zoom** button to zoom into the picture.

The OSD will display Q x1.3 and then disappear.


 Press the **Zoom** button again to zoom to Q x1.5 and then Q x2.

 Press the **Zoom** button again to turn the zoom off.

The OSD will display Q Off.


Title

Some DVDs may contain more than one title.


 While playing a DVD, press the **Title/PBC** button to return to the title page of the DVD.


Please Note

The following step may not apply to some discs.

 Press the **Play/pause** button and the DVD starts from where you previously stopped the DVD.


Menu

 While playing a DVD, press the **Menu** button to return to the DVD root menu.


 On some DVDs, press the **Menu** button again and the DVD starts from where you previously stopped the DVD.

On other DVDs you may have to select play from the menu.

 
Subtitle

 Press the **Subtitle** button to change the language of the subtitles or switch the subtitles off, while a DVD is playing, (if supported by the DVD).


Audio

 Press the **Audio** button to change the language of the sound, while a DVD is playing, if supported by the DVD.

3D audio

 To select 3D audio, press the **Clear/3D** button.


The OSD will display 3D On.


 To switch 3D audio off, press the **Clear/3D** button again.


The OSD will display 3D Off.

Angle button

Some DVDs may contain the same scene filmed from different angles.


 Press the **Speed record/angle** button to change the viewing angle when playing a DVD.

The OSD will show (for example)  1/4. This indicates there are four viewing angles and you are viewing number one.


 Press the **Speed record/angle** button repeatedly until you see the angle you require.

Repeat play (DVD)


Repeat A-B


 While the DVD is playing, press the **Repeat** button. The OSD will display:

Mode	DVD			
Repeat				
A-B	Chapter	Title	Off	

 At the beginning of the section you require to repeat, press the **Setup/enter** button. The OSD will display:

Mode	DVD			
Repeat				
A-	Chapter	Title	Off	

 At the end of the section you require to repeat, press the **Setup/enter** button. The OSD will disappear and the section will repeat continuously.

 To stop the repeat, press the **Repeat** button.




Use the **Left** or **Right arrow** button to select Off and press the **Setup/enter** button.


Mode	DVD			
Repeat				
A-B	Chapter	Title	Off	


Repeat chapter

 While the DVD is playing, press the **Repeat** button.

 Use the **Right arrow** button to select Chapter and press the **Setup/enter** button. The current chapter will be repeated.


Mode	DVD			
Repeat				
A-B	Chapter	Title	Off	

 To stop repeating the chapter, press the **Repeat** button.


 Use the **Right arrow** button to select Off and press the **Setup/enter** button.

Mode	DVD			
Repeat				
A-B	Chapter	Title	Off	


Repeat title




While the DVD is playing, press the **Repeat** button.




Use the **Right arrow** button to select Title and press the **Setup/enter** button. The current title will be repeated.




Mode	DVD			
Repeat	A-B	Chapter	Title	Off



To stop repeating the Title, press the **Repeat** button.




Use the **Right arrow** button to select Off and press the **Setup/enter** button.




Mode	DVD			
Repeat	A-B	Chapter	Title	Off

Repeat play (CD)
Repeat A-B




While the CD is playing, press the **Repeat** button. The OSD will display:

Mode	CDDA			
Repeat	A-B	Track	Disc	Off




At the beginning of the section you require to repeat, press the **Setup/enter** button. The OSD will display:


Mode	CDDA			
Repeat	A-	Track	Disc	Off




At the end of the section you require to repeat, press the **Setup/enter** button. The OSD will disappear and the section will repeat continuously.



To stop the repeat, press the **Repeat** button.




Use the **Right arrow** button to select Off and press the **Setup/enter** button.




Mode	CDDA			
Repeat	A-B	Track	Disc	Off


Repeat track



While the CD is playing, press the **Repeat** button.




Use the **Right arrow** button to select Track and press the **Setup/enter** button. The current track will be repeated.




Mode	CDDA			
Repeat	A-B	Track	Disc	Off




To stop repeating the track, press the **Repeat** button.



Use the **Right arrow** button to select Off and press the **Setup/enter** button.



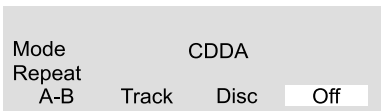


Repeat disc




While the CD is playing, press the **Repeat** button.

Use the **Right arrow** button to select Title and press the **Setup/enter** button. The current disc will be repeated.

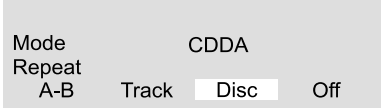

To stop repeating the disc, press the **Repeat** button.

Use the **Right arrow** button to select Off and press the **Setup/enter** button.

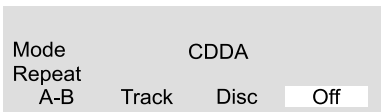

Clear



Press the **Clear/3D** button to delete any Time, Title or Chapter numbers input in error.

Display DVD



Press the **Display** button to display:

Title number.
Chapter number.
Elapsed play time.
Repeat on or off.

CD



Press the **Display** button to display:


Track number.
Elapsed play time.
Repeat on or off.

Saving a scene




A scene, once saved can be viewed at any time.

While playing a DVD, press the **Mark** button. The OSD will display:

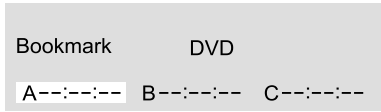


Press the **Setup/enter** button and the current scene is stored.

To store a second scene, select B with the **Right arrow** button. The OSD will display:

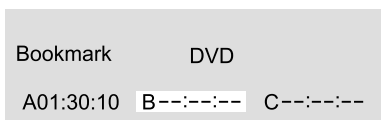

Press the **Setup/enter** button and the current scene is stored.

To store a third scene, select C with the **Right arrow** button. The OSD will display:

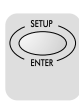

Press the **Setup/enter** button and the current scene is stored.



Press the **Mark** button again when you have finished storing your scenes.



To play a stored scene, press the **Mark** button.

The OSD will display, for example:

Bookmark DVD

A01:30:10 B02:12:00 C---:---:---



Use the **Right arrow** button to select the scene you require to see and press the **Setup/enter** button to play it.

Programmed selection

You can set your DVD/VCR/CD/MP3 Player to play a selection of titles and chapters or tracks from your DVD or CD.

Programming disc play cannot be carried out during disc play.



Stop the disc and press the **Repeat** button. The OSD will display:

Mode1 DVD

Program

Title 1-9

Chapter 1--

T	C	T	C	T	C	T	C
1	---	4	---	7	---	10	---
2	---	5	---	8	---	11	---
3	---	6	---	9	---	12	---

Clear ALL

Play Program

This represents the display for a DVD; the CD display will show T instead of T C.

3



Use the **Numeric** buttons to enter title number and chapter number (DVD) or track number (CD).



When you have finished entering titles/chapters or tracks, select Play Program and press the **Setup/enter** button. The titles/chapters or tracks will be played in the stored order.



REPEAT



To stop the playback, press the **Stop** button. To clear the program, stop the disc and press the **Repeat** button, select Clear All and press the **Setup/enter** button.

Random play

REPEAT



Stop the disc and press the **Repeat** button twice. The OSD will display:

Mode2

DVD

Shuffle



Press the **Setup/enter** button and the DVD/VCR/CD/MP3 Player will play titles/chapters or tracks in a random order.

Set up



With the DVD in stop mode, press the **Setup/enter** button.



Use the **Arrow** buttons to navigate the menus.

Language menu

This option allows you to select from the following:

OSD language

All OSDs will appear in the selected language.

Audio/subtitle/disc menu

The DVD/VCR/CD/MP3 Player will use the selected language for the AUDIO, SUBTITLE or DISC MENU. If the disc is not recorded in the selected language, the DVD/VCR/CD/MP3 Player will use the defaults of the disc.

OSD

You can switch the OSD On or Off.

Default

When switched on, returns all settings to the manufacturer's original set up.

Video menu

TV aspect

The aspect ratio of the picture provided by the DVD/VCR/CD/MP3 Player can be varied in line with the features available on the TV in use.

The options available are:

16x9 Wide screen

Choose this setting if your DVD/VCR/CD/MP3 Player is connected to a widescreen TV.


Please Note

Depending on the format of the DVD disc, e.g. 2.35:1 the picture may still have black lines above and below the picture.




4x3 Letterbox

Allows you to see movies in their original aspect ratio. You will see the entire frame of the movie, but it will occupy a smaller portion of the screen.

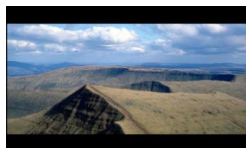

4x3 Pan & Scan

Fills the centre of your TV screen leaving a black border at the right and left edges.

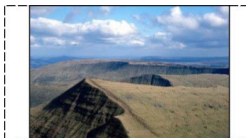

TV type

The video standard of the DVD/VCR/CD/MP3 Player output can be selected from NTSC or PAL.

SYSTEM



Pressing the **System** button will provide an OSD of which TV type is in use.

If PAL is selected, the video output will be converted to PAL standard irrespective of disc standard.

If NTSC is selected, the video output will be converted to NTSC standard irrespective of disc standard.

Video out

You can select between RGB and S-Video. S-Video separates the colour and luminance signals before transmitting them to the TV to achieve a sharper picture.

Please Note

Your TV must have a S-Video input to use the S-Video output.

Brightness

You can select normal or bright.

Sharpness

You can select normal, soft or sharp.

Audio menu

Digital out

Bitstream:

When this mode is selected, the digital audio contained in the disc is passed to the amplifier without being decoded.

PCM:

When this mode is selected, the digital audio contained in the disc is DECODED by the DVD/VCR/CD/MP3 Player and passed to the amplifier through the digital output in PCM format.

OFF:

No digital output.

Dual mono

Dual mono consists of 2 mono channels.

You can select:

STEREO:

Left channel to left speaker.

Right channel to right speaker.

L-MONO:

Left channel to both speakers.

R-MONO:

Right channel to both speakers.


MIXED MONO:

A mixture of both channels to both speakers.

Dynamic range

When watching a DVD, if some of the loud sounds are too loud and yet some of the quieter sounds cannot be heard, you can

increase the dynamic range. Start with 1/4 and work up to full. When you can hear all the sound without having to alter the volume, the dynamic range is correct.

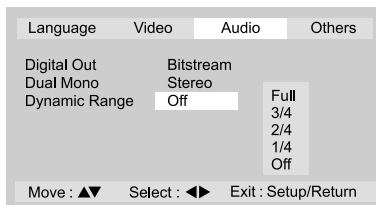

Please Note

If an active digital audio output signal is supplied to a receiver or other equipment without a corresponding digital decoding capability, a very loud noise may be produced which could permanently damage the loudspeakers.


Other menu



OSD

You can turn the OSD (On Screen Display) On or Off.

Angle mark

If you are playing a disc with multi angle scenes, select Angle Mark and the angle mark symbol  will be displayed when angled scenes are available.

Screen saver

With the screen saver on, the screen saver will appear if the DVD is left in Resume Stop, Stop or Open mode for more than 5 minutes.

Defaults


Resets all settings, except parental lock, to factory settings.

Parental


Not all DVDs have this facility.



Parental contains eight levels of parental control, from Adult where any DVD can be viewed to Kids Safe where only DVDs suitable for small children can be viewed.

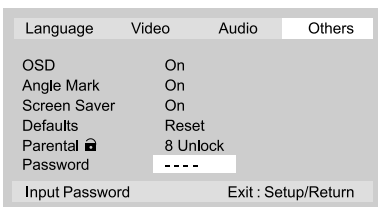

Select 8 Unlock using the **Right arrow** button and Password will appear below it. Enter a four digit password (factory default is 3308).

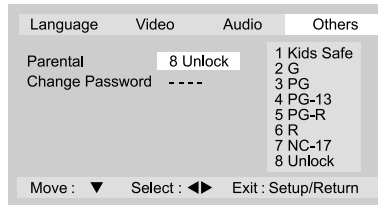

You can now select the parental level you require.



Press the **Setup/enter** button to exit the menu.

Once you have set the parental lock, a red key will appear on the LCD.

You will now only be able to watch DVDs with a rating the same or lower than your setting.

If you try to play a DVD rated above your parental selection, the OSD will display:

INPUT PASSWORD - - - - to turn off the parental control. If you input the password the DVD will start.




To change the password, while in the parental menu, select change password and enter a new password and press the **Return/OK** button.

DO NOT FORGET YOUR PASSWORD.


Connecting to external equipment

Connecting the DVD/VCR/CD/MP3 Player to a TV

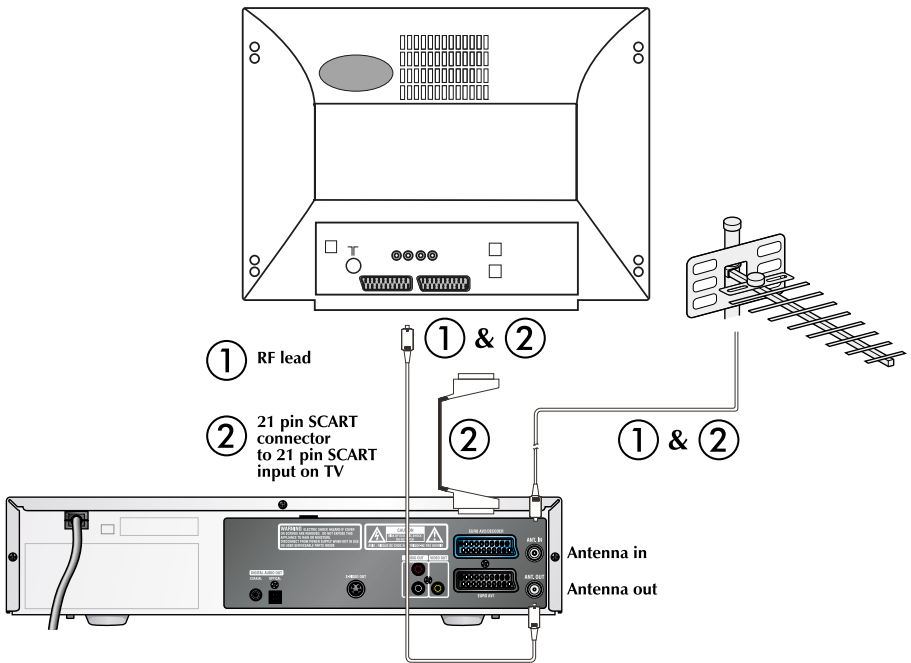


There are two ways to connect the DVD/VCR/CD/MP3 Player to the TV set. Option 1 via RF lead. Option 2 via SCART to SCART and RF lead.

Connecting the DVD/VCR/CD/MP3 Player to a digital decoder

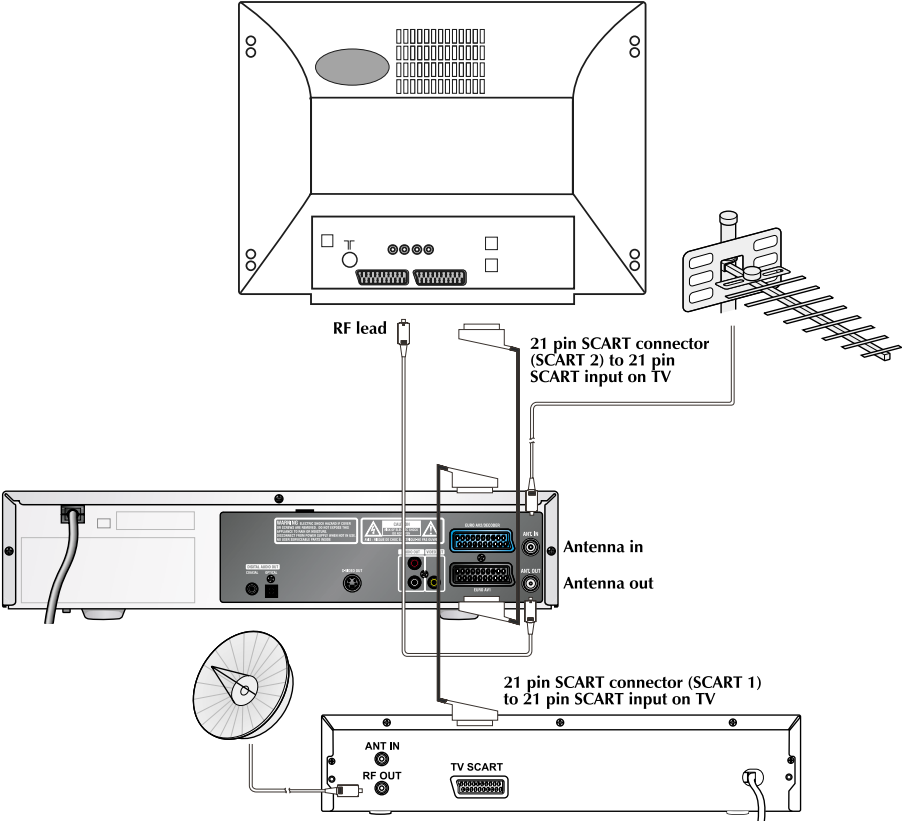


Connecting the DVD/VCR/CD/MP3 Player to a Dolby Digital amplifier and a TV with S-Video

36

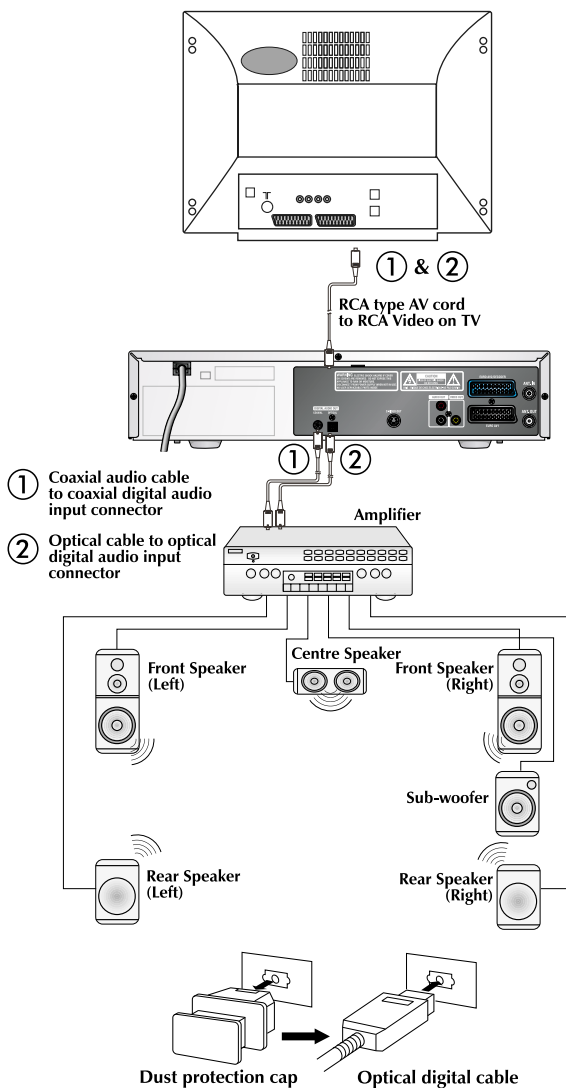

Connecting the DVD/VCR/CD/MP3 Player to an audio system

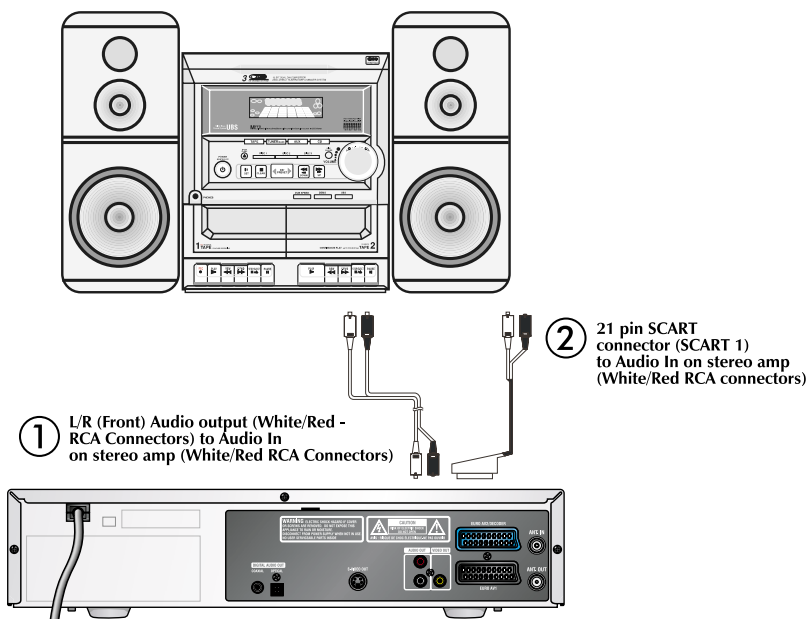

Your DVD/VCR/CD/MP3 Player can be connected to an audio system to give surround sound and other audio effects.

Help and advice

DVD

The picture quality is poor

Ensure that the DVD disc is in the drawer with the label uppermost.

Make sure the DVD disc surface is not damaged.

Clean the DVD disc and try again.

The DVD/VCR/CD/MP3 Player may be affected by a damp DVD disc or condensation. Wait for 1 to 2 hours in Standby to dry the equipment.

Disc does not play

No disc in the machine.

Disc incorrectly loaded.

Wrong type of disc. The DVD/VCR/CD/MP3 Player cannot play CD-ROMS etc.

Wrong OSD language

Select the language in the Setup menu.

The language for the sound or subtitles on a DVD cannot be changed

Multilingual sound and subtitles not recorded on the DVD.

Some functions (Angle, Zoom etc.) do not work

These functions are not available on the DVD.

Angle can only be changed when the angle symbol is displayed.

No picture

Check the scart lead is connected properly and that all connections between the DVD/VCR/CD/MP3 Player and other attached equipment are secure.

Have you pressed the correct buttons on the remote control? Try once more.

No sound

Check the volume is set to an audible level. Make sure you have not switched the sound off accidentally.

Distorted sound

If the sound output suffers from poor stereo separation, missing channels/spoken dialogue or general distortion, check the speaker setup menu. Ensure that only those channels in use are selected. Check also that the appropriate listening mode setting is correct.

VCR

Cannot load a video cassette

There is already a video cassette in the VCR. The video cassette is the wrong way round.

A video cassette will not eject

If the video cassette has been in the VCR cassette a long time, it may have stretched the tape. Unplug the DVD/VCR/CD/MP3 Player, wait 10 minutes and try again.

Noise (screen noise) appears on the screen

Tracking may need adjustment.

Worn video cassette.

Dirty VCR heads.

Cannot record

Safety tab missing from video cassette.

General

No response from remote control

Make sure the remote control is in the correct mode.

Check batteries are fitted correctly.

If nothing works

If you have tried the above solutions and none seem to work, try switching your DVD/VCR/CD/MP3 Player off and on again.

If this does not work, contact your supplier or qualified repair technician. Never attempt to repair a defective DVD/VCR/CD/MP3 Player yourself.

Care and maintenance

Handling discs

Hold the disc by the edges so that you do not get fingermarks on the playing surfaces. Fingerprints dirt and scratches can cause skipping and distortion.

Do not write on the non-label areas with any writing utensil.

Do not try to install more than one disc on the disc tray.

Do not expose discs to direct sunlight, high humidity or high temperatures for long periods.

Make sure you store the disc in its case when not in use.

Cleaning discs

Use a soft cloth to wipe off any fingerprints or dust from the disc surface. Wipe in a straight line from the centre to the outside of the disc. Small dust particles and light stains will not affect reproduction quality.

Never use chemicals such as record sprays, antistatic sprays, benzene or thinners to clean your disc.

Cleaning VCR heads

Insert a head cleaner in the VCR. Press play for 5 seconds and then fast forward for ten seconds. Eject the head cleaner. If the heads are still dirty, repeat the cleaning 2 or 3 times.

VCR condensation

If the DVD/VCR/CD/MP3 Player is brought into a warm room from the cold outside, condensation will form on the heads. If you try and use the VCR, damage may occur to the heads or the cassette.

Turn the DVD/VCR/CD/MP3 Player on and allow it to stand for about 2 hours before playing a video cassette.

Record safety tab

At the rear of a blank video tape is a safety tab. If this tab is removed you cannot record on the video cassette.

This is a safety feature to prevent pre recorded video cassettes being recorded over.

Safety instructions

! Read all the safety instructions before first use of your DVD/VCR/CD/MP3 Player.

Power source

You should only plug the DVD/VCR/CD/MP3 Player into a 230V to 240VAC, 50Hz supply.

Safety considerations

- Position the power supply lead and other leads so that they are not likely to be walked on or pinched by things placed on or against them.
- Do not use the DVD/VCR/CD/MP3 Player in humid or damp conditions. Do not allow the DVD/VCR/CD/MP3 Player to get wet, i.e. dripping or splashing, as this may be dangerous. Do not place water filled objects, such as vases, on top of the DVD/VCR/CD/MP3 Player.
- Make sure that no naked flame sources, such as candles, are placed on top of the DVD/VCR/CD/MP3 Player.

Cleaning

- Unplug the DVD/VCR/CD/MP3 Player before you clean it.
- Do not use liquid or aerosol cleaners.
- Clean your DVD/VCR/CD/MP3 Player with a soft, damp (not wet) cloth.

Ventilation

- Any slots and openings on the DVD/VCR/CD/MP3 Player are for ventilation. Do not cover or block them as it could lead to overheating.
- NEVER let children push anything into the holes or slots on the case.

Servicing

- There are no user serviceable parts in your DVD/VCR/CD/MP3 Player.
- When servicing, refer to qualified service personnel.
- Consult your dealer if you are ever in doubt about the installation, operation or safety of your DVD/VCR/CD/MP3 Player.

Battery disposal

Please ensure batteries are disposed of safely.

Electrical information

Make sure that the voltage of your electricity supply is the same as that indicated on the rating plate. This DVD/VCR/CD/MP3 Player may be fitted with a non-rewireable plug. If you need to change the fuse in a non-rewireable plug, the fuse cover must be refitted. If the fuse cover is lost or damaged, the plug must not be used until a replacement is obtained (available from the DVD/VCR/CD/MP3 Player manufacturer). It is important that the colour of the replacement fuse cover corresponds with the colour marking on the base of the plug.


If the plug has to be changed because it is not suitable for your socket, or becomes damaged, it should be removed and an appropriate plug fitted following the wiring instructions below. The plug removed must be disposed of safely as insertion into a mains socket is likely to cause an electrical hazard.

If a 5 Amp (BS1363) plug is used, a 5 Amp fuse (BS1362) must be fitted, or if any other type of plug is used a 5 Amp fuse must be fitted, either in the plug, adaptor or on the distribution board.

Important

As the colours of the wires in the mains lead of this DVD/VCR/CD/MP3 Player may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:-

- The blue wire must be connected to the terminal marked with the letter N or coloured black.
- The brown wire must be connected to the terminal marked with the letter L or coloured red.
- **No connection is to be made to the earth terminal of the plug.**

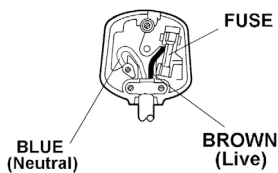

- ☐ This symbol means this DVD/VCR/CD/MP3 Player is double insulated.
An earth connection is not required.



Guarantee

This product is guaranteed for twelve months from the date of original purchase. If any defect arises due to faulty materials or workmanship, the unit will either be replaced, a refund given or repaired free of charge (where possible) during this period by the dealer from whom you purchased the unit.

The guarantee is subject to the following provisions:

- The guarantee is only valid within the boundaries of the country of purchase.
- The product must be correctly installed and operated in accordance with the instructions contained in this manual.
- It must be used solely for domestic purposes.
- The guarantee will be rendered invalid if the product is re-sold or has been damaged by inexperienced repair.
- The manufacturer disclaims any liability for incidental or consequential damages.
- The guarantee is in addition to, and does not diminish, your statutory or legal rights.

Technical specifications

Power requirement	100/240 VAC, 50/60 Hz
Power consumption	27 Watts
Signal type	PAL COLOUR
Antenna Input	75 ohms unbalanced
Video output (DVD & VCR)	RCA Jack, Scart
Video output (DVD only)	S-Video, RGB
Audio output (DVD)	Analogue, Digital Optical and Coaxial
Disc type	DVD, CD (12 & 8 mm), MP3, CD-R, CD-RW
Tape Type	Very high density with VHS marks
Tape speed	
SP	23.39 mm/s
LP	11.7 mm/s
Playtime (E180 tape)	
SP	2 hrs
LP	6 hrs
Dimensions	W 430 mm x H 91 mm x D 355.5 mm
Weight	5.7 kg

