



Goodmans

GDVD67LCD

Portable DVD Player
User Manual



Table of Contents

User Manual

Important Safety Information	3
Disc Use and Care	5
Precautions	6
Portable DVD Player Remote Control Diagram	7
Portable DVD Player Front View Diagram	8
Chapter 1. DVD	
1-1 DVD Playback.....	9
Basic Playback.....	9
Stopping Playback and Returning to The Menu Screen (If a Menu Is Available on The Disc).....	9
Stopping Playback.....	9
Rapid Advance (Rapid Reverse).....	10
Skipping Ahead or Back to Chapters.....	10
Still Picture(PAUSE).....	10
Repeat Viewing.....	10
Repeating Sections Between Two Specific Points (A-B Repeat).....	10
1-2 Convenient functions.....	11
Displaying the Information of the Scene.....	11
Changing Audio Soundtrack Language.....	11
Clearing/Displaying Subtitles(A).....	11
Changing Subtitle Language(B).....	11
Viewing From Another Angle.....	12
To Mute the DVD Player.....	12
Using a DVD Menu.....	12
Using the Menu Function.....	12
Playing Kodak Picture CDs and JPEG picture CDs.....	13
Playing a JPEG picture with MP3 music.....	14
Chapter 2. Audio CD	
2-1 Audio CD Playback.....	15
Basic Playback.....	15
Playing MP3 Music Discs.....	15
Stopping Playback.....	15
Rapid Advance (Rapid Reverse).....	16
Skipping Ahead or Back to Tracks.....	16
Pause Playback.....	16
2-2 Information [Audio CDs].....	16
Displaying the Information of the Playing Track.....	16
Chapter 3. Setup	
3-1 Language Setup.....	17
On Screen Display (OSD) Language Setting.....	17
MENU Language Setting.....	17
AUDIO Soundtrack Language Selection [DVD].....	18
SUBTITLE Language Selection [DVD].....	18
3-2 Screen Setup.....	19
SCREEN SAVER Setting.....	19
TV SYSTEM Setting.....	20
BRIGHTNESS Setting.....	21
CONTRAST Setting.....	21
3-3 Custom Setup.....	22
PARENTAL CONTROL Setting [DVD].....	22
CHANGE PASSWORD Setting [DVD].....	22
ANGLE MARK Setting [DVD].....	23
DEFAULT Setting.....	23
3-4 AUDIO Setup.....	24
OUTPUT Setting [DVD].....	24
Chapter 4. For Your Reference	
4-1 Troubleshooting.....	25
4-2 Disc Handling and Maintenance.....	26

Important Safety Information

This manual contains important information about how to safely and properly install, operate and care for this product.

Failure to properly install, operate and care for this product can increase the risk of electric shock or fire. It can also increase the risk of monitor failure and possibly personal injury. To reduce the risk of serious injury, death, or damage.

Read these instructions.
Keep these instructions.
Heed all warnings.
Follow all instructions.



- Do not** attempt to service or repair the monitor & DVD Player yourself. Refer all servicing to qualified service personnel.
- Do not** block any ventilation openings. Do not place the Monitor and DVD Player on a bed, sofa, or other soft surface that may block ventilation openings.
- Do not** install the monitor and DVD Player near any heat sources, such as radiators, stoves, or other devices that produce heat.
- Do not** use this apparatus near water (for example, sinks, tubs, and pools) or expose it to rain, moisture, or dripping or splashing liquids. No objects filled with water (such as vases) should be placed on the apparatus.
- Do not** attempt to service or repair the monitor & DVD Player yourself. Refer all servicing to qualified service personnel.
- Do not** play headphones at a high volume to avoid exposure to excessive sound pressures. You should use extreme caution or temporarily discontinue use in potentially hazardous situation. Even if your headset is an open-air type designed to let you hear outside sounds, do not turn up the volume so high that you can not hear what is around you.



General Electrical Precautions

As with any other electrical devices, failure to take the following precautions can result in serious injury or death from electrical shock or fire, and will lead to damage to the Monitor and DVD Player.

Avoid Laser hazards

As the laser beam used in the DVD Player is harmful to eyes, and to avoid electrical hazards, do not attempt to disassemble the housing. Refer servicing to qualified personnel.

Cleaning

Unplug the unit and turn power off before cleaning this unit.

Important Safety Information

Avoid damaging the AC adaptor cord.

- A. Protect the AC adaptor cord from being walked on or pinched particularly at plugs, and the point where they exit from the apparatus.
- B. Do not jerk, knot, sharply bend, or otherwise abuse the AC adaptor cord.
- C. Do not expose the AC adaptor cord to the sources of heat.
- D. Keep children and pets away from the AC adaptor cord do not allow them to bite or chew on it.
- E. When disconnecting the AC adaptor cord from DVD Player or a power outlet, pull on the plug. Do not pull on the cord.

If the AC adaptor cord becomes damaged in any way, stop using it immediately.

IMPORTANT AUDIO SAFETY

Your hearing is very important to you and to us, so please take care when operating this equipment. It is strongly recommended that you follow the listed guidelines in order to prevent possible damage to or loss of hearing.

Establish a safe sound level

Over time your hearing will adapt to continuous loud sounds and will give the impression that the volume has in fact been reduced. What seems normal to you may in fact be harmful. To guard against this before your hearing adapts set the volume at a low level.

Decibel

Level dB example

30dB quiet library, soft whisper.

40dB Living room, fridge freezer, bedroom away from traffic.

50dB normal conversation, quiet office, light traffic.

60dB Electric sewing machine

The following noise can be harmful under constant exposure

80dB Average city traffic, alarm clock buzzer at 2 feet, food mixer.

90dB Motorcycle, heavy goods vehicle, petrol lawn mower.

100dB Pneumatic drill, chain saw, garbage truck, discotec/night club.

120dB Rock bandconcert, thunderclap.

Permanent loss of hearing

140dB Threshold of pain, gunshot 2 feet away.

180dB Rocket launching pad.

This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

For DVD Players with 525p, but not 625p, progressive scan output:

"Consumers should note that all high definition television sets are fully compatible with this product and may cause artifacts to be displayed in the picture. In case of 525 progressive scan picture problems, it is recommended that the user switch the connection to the 'standard definition' output. If there are questions regarding our TV set compatibility with this model 525p DVD player, please contact our customer service number.

Disc Use and Care

DO NOT use non-circular DVD discs, otherwise it may lead to damage if this DVD player.

In order to keep the disc surface clean, please hold the DVD disc by its edge.

DO NOT touch the surface of DVD disc.

DO NOT stick anything on the surface of DVD disc. If there is glue and other adhesive article, please remove it before loading the disc.

DO NOT leave the disc in direct sunlight.

DO NOT put the disc near a heat source, such as heating pipe.

DO NOT leave a disc inside a car under direct sunlight.

After Playback, always remove the disc and return it to the display/storage case.

To clean discs, use a dry soft cloth moving the cloth from the centre to the outside across the disc surface. DO NOT use a rotary motion as this could make the disc unplayable.

DO NOT use benzene or aggressive cleaning agent, as these will damage the disc.

Use of the in car power lead

This lead is specially designed for the unit. **DO NOT** use it for other in car products as this may result in damage to lead or the other equipment.

Precautions

Please read these precautions before operating this unit.

■ Power cord protection

To avoid any malfunctions of the unit, and to protect against electric shock, fire or personal injury, please observe the following.

- Hold the plug firmly when connecting or disconnecting the AC power cord.
- Keep the AC power cord away from heating appliances.
- Never put any heavy object on the AC power cord.
- Do not attempt to repair or reconstruct the AC power cord in any way.

■ Placement

Avoid placing the unit in areas of:

- direct sunlight or heating radiators, or closed automobiles
- high temperature (over 35°C) or high humidity (over 90%)
- much dust as the internal parts may be seriously damaged.

■ Non-use periods

When the unit is not being used, turn it off. When left unused for a long period of time, the unit should be unplugged from the household AC outlet.

■ Do not insert fingers or other objects inside unit

- Touching internal parts of this unit is dangerous, and may cause serious damage to the unit. Do not attempt to disassemble the unit.
- Do not put any foreign object on the disc tray.

■ Keep away from water/magnet

- Keep the unit away from flower vases, tubs, sinks, etc. If liquids are spilled into the unit, serious damage could occur.
- Never bring a magnet or magnetized object near the unit.

■ Stacking

 
- Place the unit in a horizontal position, and do not place anything heavy on it.

■ Condensation

Moisture may form on the lens in the following conditions:

- immediately after a heater has been turned on
 - in a steamy or very humid room
 - when the unit is suddenly moved from a cold environment to a warm one
- If moisture forms inside this unit, it may not operate properly. In this case, turn on the power and wait about one hour for the moisture to evaporate.


Portable DVD Player Remote Control Diagram

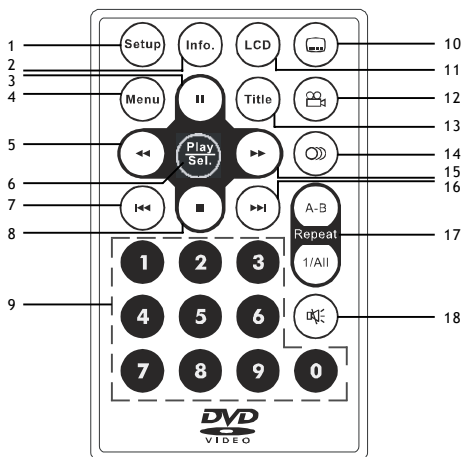

- | | |
|---------------------|-----------------------|
| 1.SETUP button | 11.LCD button |
| 2.INFO. button | 12.ANGLE button |
| 3.PAUSE/UP button | 13.TITLE button |
| 4.MENU button | 14.AUDIO button |
| 5.F.BWD/LEFT button | 15.F.FWD/RIGHT button |
| 6.PLAY/SEL. button | 16.NEXT button |
| 7.PREVIOUS button | 17.A-B REPEAT button; |
| 8.STOP/DOWN button | REPEAT(1-ALL) button |
| 9.Number buttons | 18.MUTE button |
| 10.SUBTITLE button | |

***Data is subject to change without further notice.**

 Portable DVD Player Front View Diagram

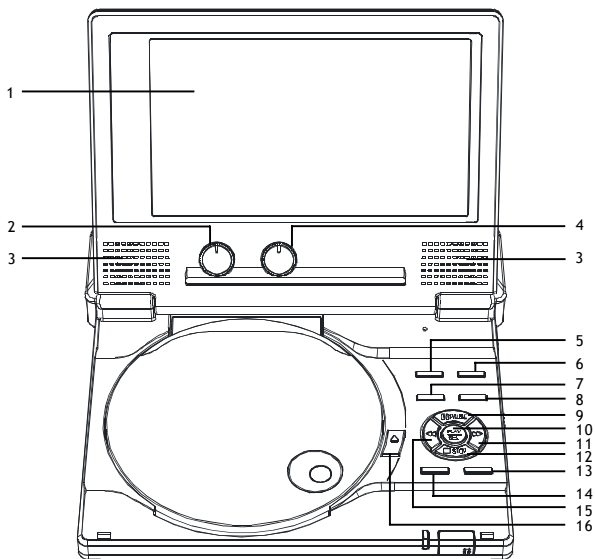

- | | |
|--------------------------|-------------------------|
| 1. LCD screen | 9. PAUSE /UP button |
| 2. COLOUR Adjustment | 10. PLAY /SEL. button |
| 3. SPEAKERS | 11. F.FWD /RIGHT button |
| 4. BRIGHTNESS Adjustment | 12. STOP /DOWN button |
| 5. LCD button | 13. NEXT button |
| 6. SETUP button | 14. PREVIOUS button |
| 7. INFO. button | 15. F.BWD /LEFT button |
| 8. MENU button | 16. OPEN button |

Note: You can adjust the screen to 16:9, 4:3, or NORMAL by pressing LCD button several times.

1-1 DVD Playback

Preparations

Please connect this portable DVD player to Power and connect it with phones or connect it to other equipments.

If connect it to other equipment:

- Press on the power button of the TV set, and select "Video" as the TV input.
- Turn on the power to the stereo system if the player has been connected to a stereo system.
- Slide the AV OUT/IN slide switch to AV OUT on your DVD player.

Basic Playback

1 Press **POWER** on.

2 Press **OPEN** to open the disc cover.

3 Hold the edge of the disc to put it in the center with the printed side up.

Hold the disc without touching its surfaces, position it with the printed title side facing up, align it with the guides, and place it in its proper position.

4 Close the disc cover.

- Close the disc cover and this portable DVD player starts playback if the disc does not have any menus recorded on it.
- If the disc has one or more titles recorded on it, a menu screen will appear on the screen.

NOTE: Proceed with steps 5 and 6 when a menu is available on the disc.

5 Press ◀ / ▶ / ▲ / ▼ or the number button(s) to select the preferred title.

NOTE: To select a title, input the number, i.e. 1 for chapter 1, 10 for chapter 10, and etc.

6 Press **PLAY/SEL**.

The player now starts playback the selected item.

Stopping Playback and Returning to The Menu Screen (If a Menu Screen Is Available on The Disc)

Press **MENU**. This portable DVD player stops playback, and then displays the menu screen.

After operation

When this portable DVD player is not in use, remove the disc and press **POWER** to turn off the player. Then close the display panel.

NOTE:

- The disc continues to rotate while the menu is displayed even after the player has finished playing a particular disc. When no further selections are to be played, be sure to press the **STOP** button to clear the menu screen.
- If the disc is placed in upside down (and it is a single sided disc), the player's display will appear "NO DISC".

For your reference:

- When "⊞" appears on the screen when a button is pressed, it means that the corresponding operation is prohibited by the player.

Stopping Playback

To stop playback, press the **STOP** button.

1-1 DVD Playback-continued

Rapid Advance (Rapid Reverse)

Press **◀◀ F.BWD** or **F.FWD ▶▶** during playback.

- To resume normal playback, press **PLAY/SEL**.
- The speed of advance **▶▶** x2, **▶▶** x4, and etc) or reverse (**◀◀** x2, **◀◀** x4, and etc.) changes for each press of the **F.FWD** or **F.BWD** button.

Skipping Ahead or Back to Chapters

You can skip a specific chapter or track to playback.

Skipping Ahead

Press **NEXT ▶▶▶** during playback.

Skips a chapter each time you press the button.

Skipping Back

Press **◀◀◀ PREVIOUS** during playback.

When you press the button once midway through a chapter, this portable DVD player returns to the beginning of the chapter. The player skips a chapter each time you press the button.

Still Picture (PAUSE)

Press **PAUSE** once during playback to pause.

To return to normal playback

Press **PLAY/SEL**.

Repeat Viewing

1 Press **1/ALL REPEAT** during playback.

Each time you press the button, the disc will repeat a chapter or title.

Press once: REP CHAPTER (Repeat chapter)

Press twice: REP TITLE (Repeat title)

Press three times: REP DISC (Repeat disc)

Press four times: REP off (Repeat cancelled)

To return to normal playback

Press **1/ALL REPEAT** several times until "REPEAT Off" appears.

NOTE:

- Repeat playback works only with discs for which the elapsed playing time appears on the player's display during playback.
- Repeat playback may not work correctly with some DVDs.

Repeating Sections Between Two Specific Points (A-B Repeat)

1 Press **A-B** during playback at the point where repeat play is to start (A).

"REP A" appears on the screen.

2 Press **A-B** again at the point where repeat play is to end (B).

"REP B" appears on the screen. Repeat playback of points A to B starts playback.

To return to normal playback

Press **A-B** again. ("REPEAT Off" appears on the screen.)

NOTE: A-B repeat playback works only within a chapter.

1-2 Convenient functions

Displaying the Information of the Scene

Displaying the Information of the Scene

1 Press **INFO** during playback.

Press **INFO**. a number of times, the title number, chapter number, and other information will show on the screen.

Stop Displaying the Information of the Scene

Press **INFO**. a number of times until the information disappears.

Changing Audio Soundtrack Language

You can change the audio language from the one selected at the initial settings to a different language, if available. (This operation functions only with discs on which multiple audio soundtrack languages are recorded.)

1 Press **AUDIO** repeatedly during playback until the preferred language is selected.

For your reference:

- When the preferred language is not available even after pressing the button several times, it may indicate that language is not available on the disc.
- When you turn on or insert a disc, this portable DVD player will playback the language which is selected at the initial setting. If you select a language which is not recorded on the disc this portable DVD player will playback the default language programmed on the disc.

Clearing/Displaying Subtitles (A)

If a disc provides subtitles, you can choose to hide or display them. (This operation works only with discs that provide subtitles.)

Press **SUBTITLE** during playback to display subtitles or hide them.


When you press **SUBTITLE** once, the first subtitle recorded on the disc will display. The rest of the subtitles recorded will display in sequence as you press the button.

- You may change to another language with this function, or you can clear the subtitle by pressing this button a number of times until "SUBTITLE OFF" appears on the screen.

Changing Subtitle Language (B)

You can change the subtitle language with the initial settings, if available. (This operation works only with discs on which multiple subtitle languages are included.)

1 Press **SUBTITLE** during playback.

When no subtitles are recorded "  " will display instead of the language number.

2 Press **SUBTITLE** a number of times until the preferred language is selected.

NOTE:


- In some cases, the subtitle language may not change immediately to the selected one.

For your reference:


- When the preferred subtitle language is not selected even after pressing the button several times, it may indicate that the language is not available on the disc.
- When you turn on or insert the disc, this portable DVD player will playback the subtitle language which is selected at the initial setting. If you select a subtitle language which is not recorded on the disc this portable DVD player will playback the default subtitle language programmed on the disc.

1-2 Convenient functions-continued

Viewing From Another Angle

Some DVD discs may contain scenes which have been shot simultaneously from a number of different angles. For these discs, the same scenes can be viewed from each of these different angles using the **ANGLE**  button. (The recorded angles vary depending on the disc.)

- 1 Press **ANGLE** during playback.
- 2 Press **ANGLE** a number of times until the preferred viewing angle is selected.

Press the **ANGLE**  button a number of times to change the viewing angle.

NOTE:

- ANGLE will only function on discs where different angles have been recorded.
- The viewing angles are shown on the player's display and you can select one from them for viewing.

To Mute the DVD Player

In some cases, you may need to mute this portable DVD player temporarily. This portable DVD player provides a MUTE function.

- 1 Press **MUTE** button during playback.



 
 
- When "MUTE" appears on the screen, this portable DVD player is muted. To resume the sound, press the MUTE button again and "MUTE OFF" will appear on the screen.

Using a DVD Menu

Some DVD discs have unique menu structures called DVD menus. For example, DVDs programmed with complex contents provide guide menus, and those recorded with various languages provide menus for audio and subtitle language. Although the DVD menu's contents and operation vary from disc to disc, the following explains basic operation when this feature is used.

- 1 Press **TITLE** in stop mode

The DVD menu available on the disc now appears.

- 2 Press  /  /  /  to select the preferred item.
- 3 Press **PLAY/SEL.**



 

To enter other menu screen

Repeat steps 2 and 3.

To return to the previous menu screen

Press **TITLE**.

Using the MENU Function

- 1 Press **PLAY/SEL.**
 - 2 Press **MENU.**
- A DVD chapter menu with brief broadcast of each paragraph now appears. You may see the introduction of each chapter and then decide with which chapter to start with.
- 3 Press  /  /  /  or number button(s) to select the preferred item.

Note: The menu details vary depending on how the discs are recorded.

1-2 Convenient functions-continued

Playing Kodak Picture CDs and JPEG picture CDs

You can play Kodak picture CDs and JPEG pictures for viewing on the screen.

Basic Playback

- 1 Load a kodak picture CD or a JPEG picture CD. After few seconds, this portable DVD player starts to play back the pictures in slide show automatically.
- 2 You can press the number corresponding to the order of the picture. This portable DVD player will begin the slide show from the selected picture.

To stop slide show

Press **STOP**.

PAUSE, NEXT and PREV.

- 1 Press **PAUSE** to pause the slide show.
- 2 Press **NEXT**  and **PREVIOUS**  to view the next or previous picture.

To resume slide show

Press **PLAY/SEL.** again.

Rotating

- 1 When the picture is paused, press  /  to rotate the picture by 90 degree.

INFO.

- 1 Press **INFO**. Information will appear on the TV screen, for example, TRK: 3/150 (The sequential order of the current picture/ Total pictures.)

NOTE:

 
- Rotating feature will only work on Kodak Picture CDs.

1-2 Convenient functions-continued


Playing a JPEG picture with MP3 music

You can select your favorite JPEG picture to display on the TV screen while playing MP3 music.

- 1 Load a disc containing MP3 music and JPEG pictures. This portable DVD player starts playing the JPEG pictures in slide show automatically.
- 2 Press **STOP** at the picture you like during slide show. The following screen will appear.

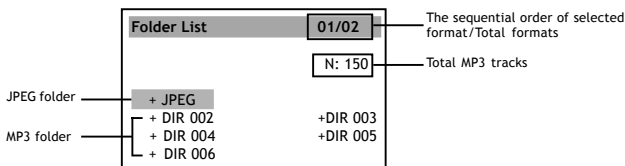

 - 3 Press **◀/▶** to select a MP3 folder, and then press **PLAY/SEL**. The next screen appears:

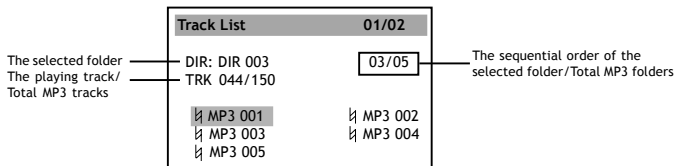

- 4 To play the track, you can
 - a. press **NEXT ▶▶** or **PREVIOUS ◀◀** to play the next or previous track,
 - b. press **◀/▶** to select the MP3 track, and then press **PLAY/SEL**.
 - c. press the track number (i.e. 1), and then press **PLAY/SEL**.

NOTE:

- This feature allows displaying only one JPEG picture at a time with MP3 music playback.
- In some cases, MP3 music and JPEG pictures cannot be played accordingly. This may result by the data on the disc was recorded using options that are not supported by this portable DVD player.

2-1 Audio CD Playback

Preparations

Please connect this portable DVD player to Power and connect it with phones or connect it to other equipments.

If connect it to other equipment:

- Press on the power button of the TV set, and select "Video" as the TV input.
- Turn on the power of the stereo system if the player has been connected to a stereo system.
- Slide the AV OUT/IN SWITCH button to AV OUT.

Basic Playback

1 Press **POWER** on.

2 Press **OPEN** to open the disc cover.

3 Hold the edge of the disc to put it in the center with the printed side up.

Hold the disc without touching its surfaces, position it with the printed title side facing up, align it with the guides, and place it in its proper position.

4 Press **PLAY/SEL.**

For audio CDs without playback control:

This portable DVD player starts playback.

Playing MP3 Music Discs

1 Press **POWER** on.

2 Press **OPEN** to open the disc cover.

3 Hold the edge of a MP3 disc to put it in the center with the printed side up.

4 Press **PLAY/SEL.**

Close the disc cover, playback will start automatically.

Normally, MP3 discs are divided into Root directories (main menu) which are sub-divided to MP3 music. You may select a specific MP3 music to playback.

With Root Directories

- Press **STOP** to enter to the directories.
- Select a specified track to playback by pressing ◀/▶ buttons or the numerical keys.
- Press **PLAY/SEL.**

Without Root Directories

- During playback, select a specified track to playback by pressing ◀/▶ buttons or the numerical keys.
- Press **PLAY/SEL.**

Stopping Playback

To stop playback, press **STOP.**

2-1 Audio CD Playback-continued

Rapid Advance (Rapid Reverse)

Press **◀◀ F.BWD** or **F.FWD ▶▶** during playback.

- Normal play is resumed when you release the button.
- The speed of forward (▶▶ x2, ▶▶ x4, and etc.) or reverse (◀◀ x2, ◀◀ x4, ◀◀ x8, and etc.) changes with every press of the **F.FWD** or **F.BWD** button.

Skipping Ahead or Back to Tracks

Skipping Ahead

Press **NEXT ▶▶** during playback.

A track is skipped each time you press the button.

Skipping Back

Press **◀◀ PREVIOUS** during playback.

When you press the button once midway through a track, this portable DVD player returns to the beginning of the track to playback. Then the player skips a track each time the button is pressed.

Pause Playback

Press **PAUSE** during playback.

The player will pause playback.

To return to normal playback

Press **PLAY/SEL**.

2-2 Information [Audio CDs]

Displaying the Information of the Playing Track

Displaying the Information of the Playing Track

1 Press **INFO.** during playback.

Press **INFO.** a number of times, the elapsed time, track number, and other information will appear on the screen.

Stop Displaying the Information of the Playing Track

Press **INFO.** a number of times until the information disappears.

3-1 Language Setup

On Screen Display (OSD) Language Setting

Allows you to set various languages for the on screen display (OSD).

- 1 Press **SETUP** in the stop mode.
- 2 Press **▲ / ▼** to select "LANGUAGE SETUP" then press **PLAY/SEL.**
- 3 Press **▲ / ▼** to select "OSD" then press **PLAY/SEL.**
- 4 Press **▲ / ▼** to select the preferred language.
- 5 Press **PLAY/SEL.**

To return to the SETUP MENU screen

Select "RETURN" and press **PLAY/SEL.**

To finish Setup

Press **SETUP** to exit or select EXIT from SETUP MENU screen.

MENU Language Setting

You can select a preferred language among various languages that has been recorded on discs for the disc menu messages display.

- 1 Press **SETUP** in the stop mode.
- 2 Press **▲ / ▼** to select "LANGUAGE SETUP" and press **PLAY/SEL.**
- 3 Press **▲ / ▼** to select "MENU" then press **PLAY/SEL.**
- 4 Press **▲ / ▼** to select the preferred language.
- 5 Press **PLAY/SEL.**

To return to the SETUP MENU screen

Select "RETURN" and press **PLAY/SEL.**

To finish Setup

Press **SETUP** to exit or select EXIT from SETUP MENU screen.

3-1 Language Setup-continued

AUDIO Soundtrack Language Selection [DVD]

You can select a preferred soundtrack language among various languages that have been recorded on DVD discs.

- 1 Press **SETUP** in the stop mode.
- 2 Press **▲ / ▼** to select "LANGUAGE SETUP" then press **PLAY/SEL.**
- 3 Press **▲ / ▼** to select "AUDIO" then press **PLAY/SEL.**
- 4 Press **▲ / ▼** to select a preferred language.
- 5 Press **PLAY/SEL.**

To return to the SETUP MENU screen

Select "RETURN" and press **PLAY/SEL.**

To finish Setup

Press **SETUP** to exit or select EXIT from SETUP MENU screen.

For your reference:

- If the language selected is not recorded on the disc, the DVD player will use the default language of the disc.

SUBTITLE Language Selection [DVD]

You can select a preferred subtitle language among various languages that have been recorded on DVD discs.

- 1 Press **SETUP** in the stop mode.
- 2 Press **▲ / ▼** to select "LANGUAGE SETUP" and press **PLAY/SEL.**
- 3 Press **▲ / ▼** to select "SUBTITLE", then press **PLAY/SEL.**
- 4 Press **▲ / ▼** to select a preferred language.
- 5 Press **PLAY/SEL.**

To return to the SETUP MENU screen

Select "RETURN" and press **PLAY/SEL.**

To finish the setup operation

Press **SETUP** to exit or select EXIT from SETUP MENU screen.

For your reference:

- If the language selected is not recorded on the disc, the subtitle will display the default subtitle language of the disc.

3-2 Screen Setup

SCREEN SAVER Setting

If you have set the screen saver ON by the following method then you will see it in the stop mode. This will ONLY function in the stop mode.

- 1 Press **SETUP**.
- 2 Press **▲ / ▼** to select "SCREEN SETUP" and press **PLAY/SEL**.
- 3 Press **▲ / ▼** to select "SCREEN SAVER".
- 4 Press **▲ / ▼** to select "ON" or "OFF" and press **PLAY/SEL**.

The waiting time of the screen saver is set to 10 minutes. In other words, when you are in the stop mode and have not operated this portable DVD player for 10 minutes then the screen saver will appear automatically on the screen.

To return to the SETUP MENU screen

Select "RETURN" and press **PLAY/SEL**.

To finish Setup

Press **SETUP** to exit or select EXIT from SETUP MENU screen.

3-2 Screen Setup-continued

TV SYSTEM Setting

The player provides "PAL", "NTSC" and "AUTO" settings for your selection. Video output changes according to the playback disc's recorded format. When connecting this portable DVD player to your TV, set the "TV SYSTEM" from the on-screen display to the format that is compatible with your TV's system. Select "NTSC" from on-screen display if connecting to a NTSC TV system, set "PAL" if it is a PAL TV, or set "AUTO" if it is a multi-TV system that supports both PAL and NTSC.

- 1 Press **SETUP**.
- 2 Press **▲ / ▼** to select "SCREEN SETUP" and press **PLAY/SEL**.
- 3 Press **▲ / ▼** to select "TV SYSTEM" then press **PLAY/SEL**.
- 4 Press **▲ / ▼** to select the appropriate TV system for your clearest view.
- 5 Press **PLAY/SEL**.

To return to the SETUP MENU screen

Select "RETURN" and then press **PLAY/SEL**.

To finish Setup

Press **SETUP** to exit or select EXIT from SETUP MENU screen.

3-2 Screen Setup-continued

BRIGHTNESS Setting

You can adjust the brightness of the video with this setting.

By the **BRIGHTNESS Adjustment** button:

1. Gently touch the **BRIGHTNESS Adjustment** button, turn it in a clockwise or an counterclockwise direction for the preferred setting.
2. Turn it in a clockwise direction to increase the brightness of the screen.
3. Turn it in an anticlockwise direction to decrease the brightness of the screen.

CONTRAST Setting

You can adjust the contrast of video with this setting.

By the **COLOUR Adjustment** button:

1. Gently touch the **COLOUR Adjustment** button, turn it in a clockwise or an counterclockwise direction for the preferred setting.
2. Turn it in a clockwise direction to increase the **COLOUR** of the screen.
3. Turn it in an counterclockwise direction to decrease the **COLOUR** of the screen.

3-3 Custom Setup

Note: "Custom Setup" only works without disc inside this portable DVD player.

PARENTAL CONTROL Setting [DVD]

A built-in viewer rating setting enables you to lock the videos that you do not want children to view. For example, if you set it to PG-13 then the player will not play the videos rated R, NC-17 or X unless the correct password is entered.

- 1 Press **SETUP** in the stop mode.
- 2 Press **▲ / ▼** to select "CUSTOM SETUP" and press **PLAY/SEL.**
- 3 Press **▲ / ▼** to select "PARENTAL CONTROL" and press **PLAY/SEL.**
- 4 Enter a 4-digit password and press **PLAY/SEL.**
Factory pre-set password : 9999

You need to enter "9999" to set the rating for the first time after purchasing your DVD from the store.

- 5 Press **▲ / ▼** to select ratings and press **PLAY/SEL.**

To return the screen to the SETUP MENU

Select "RETURN" and then press **PLAY/SEL.**

To finish Setup

Press **SETUP** to exit or select EXIT from SETUP MENU screen.

For Your Reference:

- You can use the parental control lock ONLY with DVD video discs featured with the parental lock function.
- Some discs may not be encoded with specific rating level information though its disc jacket says that is for "adults". For those discs, PARENTAL CONTROL lock will not function.

CHANGE PASSWORD Setting [DVD]

You can change the password to your DVD by selections.

- 1 Press **SETUP** in the stop mode.
- 2 Press **▲ / ▼** to select "CUSTOM SETUP" and press **PLAY/SEL.**
- 3 Press **▲ / ▼** to select "CHANGE PASSWORD" and press **PLAY/SEL.**
- 4 Enter your old password, and then press **PLAY/SEL.**
- 5 Enter your new password, and then press **PLAY/SEL.**

To return the screen to the SETUP MENU

Select "RETURN" and then press **PLAY/SEL.**

To finish Setup

Press **SETUP** to exit or select EXIT from SETUP MENU screen.

3-3 Custom Setup-continued

ANGLE MARK Setting[DVD]

You can choose to display or hide the angle mark "◻" on screen.

- 1 Press **SETUP** in the stop mode.
- 2 Press **▲ / ▼** to select "CUSTOM SETUP" and press **PLAY/SEL.**
- 3 Press **▲ / ▼** to select "ANGLE MARK", and then press **PLAY/SEL.**
- 4 Press **▲ / ▼** to select "ON" or "OFF" and press **PLAY/SEL.**

NOTE:

Whether the ANGLE MARK is set to ON or OFF with this setting, when you press the **ANGLE** button, this portable DVD player will still playback multi-angles that are available on the video discs (if available).

DEFAULT Setting

You may re-set the previous settings in CUSTOM SETUP to the default setting.

- 1 Press **SETUP** in the stop mode.
- 2 Press **▲ / ▼** to select "CUSTOM SETUP" and press **PLAY/SEL.**
- 3 Press **▲ / ▼** to select "DEFAULT" and select READ
- 4 Press **PLAY/SEL.**

Exceptions:

The viewer rating and the password setting will NOT be changed even though you re-set to the DEFAULT setting.

To return the screen to the SETUP MENU

Select "RETURN" and then press **PLAY/SEL.**

To finish Setup

Press **SETUP** to exit or select EXIT from SETUP MENU screen.

3-4 Audio Setup

OUTPUT Setting [DVD]

This portable DVD player provides two types of audio output to set and that include 2-channel stereo sound and digital sound output.

- 1 Press **SETUP** in the stop mode.
- 2 Press **▲ / ▼** to select "AUDIO SETUP" and press **PLAY/SEL.**
- 3 Press **▲ / ▼** to select "OUTPUT" and press **PLAY/SEL.**
- 4 Press **▲ / ▼** to select a preferred output setting.
- 5 Press **PLAY/SEL.**

NOTE:

- The digital output connectors are used to output the digital audio signal recorded on discs. You can output the digital signal via coaxial output jack to an amplifier. If you set Audio Output to <Digital> from on-screen display, the sound will be output as the original sound recording format on discs (for example; Dolby Digital).

WARNING:

- Do not set "AUDIO SETUP" to "Digital" via the on-screen display unless you are connecting (via the DOLBY DIGITAL AUDIO OUT jack) an A/V decoder that has the Dolby Digital (AC-3) decoding function. High volume sound may damage your hearing as well as the speakers.

To return to the SETUP MENU

Select "RETURN" and then press **PLAY/SEL.**

To finish Setup

Press **SETUP** to exit or select EXIT from SETUP MENU screen.

4-1 Troubleshooting

Before requesting service for this portable DVD player, check the chart below for a possible cause of the problem you are experiencing. Some simple checks or a minor adjustment on your part may eliminate the problem and restore proper operation.

SYMPTOM (COMMON)	REMEDY
No power.	<ul style="list-style-type: none">• Insert the power plug securely into the power outlet.• Check if the ON/OFF button on the right of the player is set to on.• Check if no power at the AC outlet by plugging in another appliance for a test.
The player does not start playback when PLAY is pressed.	<ul style="list-style-type: none">• Condensation has formed: wait about 1 to 2 hours to allow the player to dry out.• This player cannot play discs other than DVDs and audio CDs.• Check if the disc is defective by trying another disc.• Check the region (local) code.
The player starts playback but stops immediately. No picture.	<ul style="list-style-type: none">• The disc may be dirty and may require cleaning.• Ensure that the disc is installed with the label side up.• Ensure that the equipment is connected properly.• Ensure that the input setting for the TV is "AV".• Check if external equipment is on.• Select the same channel and source on the TV as on the player.• Check if the LCD is on.
No sound.	<ul style="list-style-type: none">• Ensure that the equipment is connected properly.• If using a HiFi amplifier, try another sound source.• Check the Audio Output Setting menu to make sure that Analog Output is selected.• Check the Volume Adjustment.
Distorted sound.	<ul style="list-style-type: none">• Ensure that the input settings for the TV and stereo system are correct.• No sound is heard during still picture (pause).
No audio at Digital Output.	<ul style="list-style-type: none">• Check the digital connections.• Check the settings menu to make sure that the digital output is set to on.• Check if the audio format of the selected audio language matches your receiver capabilities.
Distorted picture.	<ul style="list-style-type: none">• Check the disc for fingerprints and clean it with a soft cloth, wiping it from center to edge.• Sometimes a small amount of picture distortion may appear. This is not a malfunction.• The disc format is not according to the TV-set used (PAL/NTSC).
Completely distorted picture or no color in picture.	
Picture is distorted during rapid advance or rapid reverse.	<ul style="list-style-type: none">• The picture will be somewhat distorted at times: this is normal.
No rapid advance (or rapid reverse) playback.	<ul style="list-style-type: none">• Some discs may have sections which prohibit rapid advance (or rapid reverse).
No 4:3 (16:9) picture. No operations perform with the remote control.	<ul style="list-style-type: none">• Choose the correct setup "TV DISPLAY" item which matches the TV set used.• Check the batteries are installed with the correct polarities (+ and -).• The batteries are depleted: replace them with new ones.• Point the remote control unit at the remote control signal sensor and operate.• Operate the remote control unit at a distance no more than 7 meters from the remote control signal sensor.• Remove the obstacles between the remote control unit and remote control signal sensor.
No key operation (by the DVD player AC power and/or the remote control) is effective. PLAY does not start playback even when title is selected.	<ul style="list-style-type: none">• Turn the unit off and then back to on. Alternatively, turn off the unit, disconnect the cord and then re-connect it. (The player may not be operating properly due to lightning, static electricity or some other external factor.)• This may be a result of the parental lock function that has been set. Confirm the "PARENTAL" setup.
Audio soundtrack and/or subtitle language is not the one selected at the initial settings.	<ul style="list-style-type: none">• If the audio soundtrack and/or subtitle language does not exist on the disc, the language selected at the initial settings will not be seen/heard.
No subtitles.	<ul style="list-style-type: none">• Subtitles appear only with discs that contain them.• Subtitles are hidden from the TV screen. Press SUBTITLE to display the subtitles.
Alternative audio soundtrack (or subtitle) languages cannot be selected.	<ul style="list-style-type: none">• An alternative language can not be selected may result of no more than one language available.
Angle cannot change.	<ul style="list-style-type: none">• This function depends on software availability. Even if a disc has a number of angles recorded, these angles may be recorded for specific scenes only.

4-2 Disc Handling and Maintenance

Handling Precautions

 
- Hold the disc by the edges so the surface will not be soiled with fingerprints. (A)
Fingerprints, dirt and scratches can cause skipping and distortion.
- Do not write on the label side with a ball-point pen or other writing utensils.
- Do not use record cleaning sprays, benzine, thinner, static electricity prevention liquids or any other solvent.
- Be careful not to drop or bend the disc.
- Do not install more than 1 disc on the disc tray.
- Do not try to close the disc cover when the disc is not installed properly.
- Be sure to store the disc in its case when not in use.

If the surface is soiled (B)

Wipe gently with a soft, damp (water only) cloth.

When wiping discs, always move the cloth from the center hole toward the outer edge.

(If you wipe the discs using a circular motion, circular scratches are likely to occur, which will cause noise.)

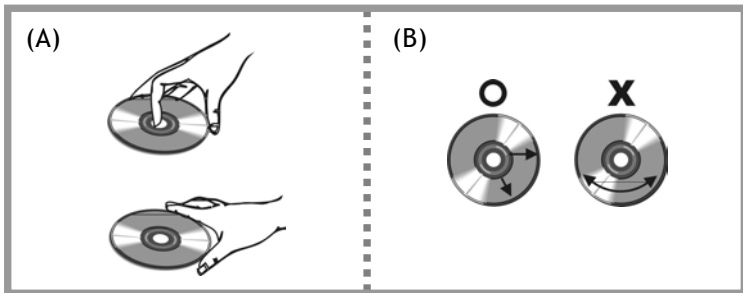

If the disc is brought from a cold to a warm environment, moisture may form on the disc

Wipe this moisture off with a soft, dry, lint-free cloth before using the disc.

Improper disc storage

You can damage discs if you store them in the following places:

- Areas exposed to direct sunlight
- Humid or dusty areas
- Areas directly exposed to a heat source or heating appliance

Disc which cannot be played with this player

- CD-ROM (Application Program)
- CVD
- CD-G
- DVD with a Locale No. other than that shown on the DVD unit's Region Code Label on the rear panel

Maintenance

- Be sure to turn the unit off and disconnect the AC power cord before cleaning or maintaining the unit.
- Wipe this unit with a dry soft cloth. If the surfaces are extremely dirty, wipe clean with a cloth which has been dipped in a weak soap-and-water solution and wrung out thoroughly, and then wipe again with a dry cloth.
- Never use alcohol, benzine, thinner, cleaning fluid or other chemicals. And do not use compressed air to remove dust.