 


Goodmans

GDVD 147 DVD PLAYER INSTRUCTION MANUAL

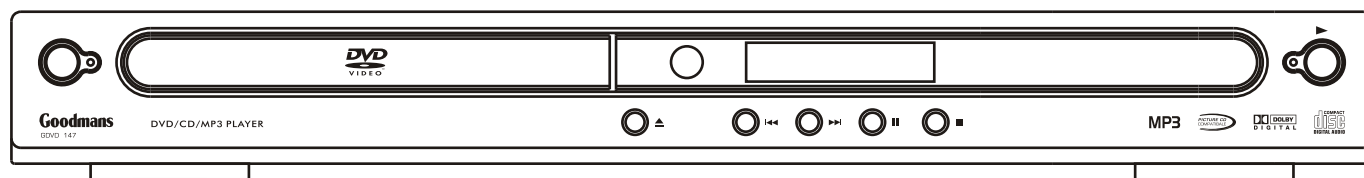

HELPLINE : 02392 391100

**Before operating this unit,
please read this Owners manual carefully.**

IMPORTANT SAFEGARDS

PRE FITTED MAINS PLUG

For your convenience a main plug with a fuse has been fitted to this appliance. For your safety please observe the following instruction.

1. Should the fuse fail in the plug remove the plug from the wall socket and replace the fuse with a 3 Amp ASTA approved to BS 1362 fuse.
2. NEVER use the plug without the fuse cover fitted. Replacement fuse covers are available from your dealer or most electrical retail outlets.
3. If the main plug is cut off from the cable, rewire the replacement plug in accordance with the instruction given in this manual.

 
CAUTION: Under no circumstances should the discarded plug be inserted into the mains socket. To prevent a shock hazard, dispose the discarded plug with care. Do not leave the plug lying around where children might see it.

WARNING: To prevent fire or shock hazard do not expose this unit to rain or moisture.

CAUTION: DANGEROUS VOLTAGES EXIST INSIDE THIS UNIT. DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS ARE INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL. DISCONNECT FROM MAIN SUPPLY WHEN NOT IN USE.

MAIN PLUG WIRING DETAILS:

Accordance with the following wiring codes:

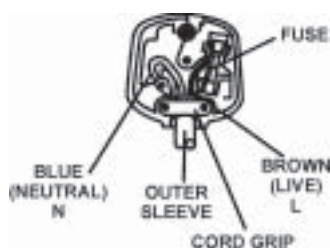

The wires in this mains lead are colored in

Blue ----- Neutral

Brown ----- Live

The wires in this mains lead must be connected to the terminal in the plug as follows:

Blue Wire ----- N or black

Brown Wire ----- L or Red

Only a 3 Amp. fuse should be fixed in the plug or a 5 Amp. fuse at the distribution board.

WARNING: UNDER NO CIRCUMSTANCES MUST THE LIVE OR NEUTRAL WIRES BE CONNECTED TO THE EARTH TERMINAL IN A 3-PIN MAINS PLUG.



THIS SYMBOL MEANS THAT THIS UNIT IS DOUBLE INSULATED. AN EARTH CONNECTION IS NOT REQUIRED.

CAUTION: WHEN OPERATING THIS UNIT ON 230V MAINS SUPPLY, PLEASE NOTE THAT WHEN THE POWER SWITCH IS IN THE OFF MODE, THIS DOES NOT DISCONNECT THE UNIT FROM THE MAINS SUPPLY. HOWEVER, PLEASE BE ASSURED THAT IT IS PERFECTLY SAFE TO LEAVE THE UNIT CONNECTED TO THE MAINS SUPPLY.

CAUTION

CLASS I LASER PRODUCT

Use of Controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

CLEANING : Always disconnect unit from mains supply before attempting to clean it. Use soft cloth moistened with soapy water, wipe gently. Do not use solvents or abrasive materials.

LASER SAFETY

This unit employs a laser, only qualified service personnel should attempt to repair.



DANGER: INVISIBLE LASER RADIATION WHEN OPEN AND INTERLOCK FAILED OR DEFEATED AVOID EXPOSURE TO BEAM.

CAUTION: HAZARDOUS LASER RADIATION WHEN OPEN AND INTER LOCK DEFEATED.

SOME DO'S AND DONT'S ON THE SAFE USE OF EQUIPMENT

This equipment has been designed and manufactured to meet European safety standards but like many electrical equipment, care must be taken if you are to obtain the best results and safety to be assured.

DO read the operating instructions before you attempt to use the equipment.

DO ensure that all electrical connections (including the mains plug, extension leads and interconnections between pieces of equipment) are properly made in accordance with the supplied instructions. Switch off and withdraw the mains plug when making or changing connections.

DO consult your dealer if you are ever in doubt about the installation, operation, or safety of your equipment.

DO be careful when glass panes or doors on equipment.

DON'T continue to operate the equipment if you are in any doubt about it working normally, or if it is damaged, in any way - switch off, withdraw the mains plug and consult your dealer.

DON'T leave equipment switched on when it is unattended unless it is specially stated that it is designed for unattended operations or has a standby mode. Switch off using the switch located on the equipment and make sure that your family knows how to do this. Special arrangement may need to be made for infants or handicapped people.

DON'T listen to headphones at high volume, as such use can permanently damage your hearing.

DON'T obstruct the ventilation of the equipment, for example with curtains or flourishing. Overheating will cause damage and shorten the life of the equipment.

DON'T use makeshift stands and never fix legs with wood screws - to ensure complete safety always fit the manufacturer's approved stand or legs with the fixing provided according to the instructions.

DON'T allow electrical equipment to be exposed to rain or moisture.

Above:

- . NEVER let anyone, especially children, push anything into holes, slots or any other openings in the case this could result in fatal electric shock.
- . NEVER guess or take chances with electrical equipment of any kind.
- . It is better to be safe than sorry!

CONTENT

Important Safeguards	1
Some Do's and Dont's on the Safe Use of Equipment	2
Contents & Package	3
Disc You Can Play	4
Installation	5
Remote Control	6
Front Panel	7
Rear Panel	7
Connections	8
Playing A DVD / CD / VCD Disc	10
Setup Menu	13
Example shows how to Create a Program and Play the last Selection for DVD	16
Example shows how to Create a Program and Play the last Selection for CD	17
Playing MP3 / WMA / JPEG PICTURE Disc	19
Controls (MP3 / WMA / JPEG PICTURE Disc)	20
Play Modes (MP3 / WMA Disc)	21
Problems	22

Software Licence and Copyright Notice

All software that is supplied as part of this equipment is protected by copyright laws and international copyright treaties, as well as other intellectual property laws and treaties. This software is licensed, not sold and is intended for use on this device only.

All title and copyrights in and to the software (including but not limited to any images, photographs, animations, video, audio, music, text, instructions, code and 'applets' incorporated into the software) are owned by Orient Power Video Manufacturing Ltd. or its suppliers.

You may not reverse engineer, decompile, or disassemble this software for any purpose. No part of this software may be copied, reproduced, loaned, rented, leased or transmitted in any form or by any means electronic or mechanical, without the express written permission of Orient Power Video Manufacturing Ltd.

©Orient Power Video Manufacturing Ltd. All rights reserved.

This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

Apparatus Claims of U.S. Patent Nos. 4,631,603, 4,577,216, 4,819,098, and 4,907,093 licensed for limited viewing uses only.

Manufactured under license from Dolby Laboratories. "Dolby" and the double-D symbol are trademarks of Dolby Laboratories.

PACKAGE

Examine the contents of the box for your DVD player.

There should be the following:

- DVD Player
- Remote Control
- 2 batteries
- A/V Cable
- Scart Cable
- Warranty Card

DISC YOU CAN PLAY

While advances have been made to ensure that your disc player is compatible with the largest number of discs possible, it cannot be guaranteed that you will be able to play discs which might not be compliant with audio CD standards. In the case of writable and rewritable discs, compatibility with this player depends on the DVD writer, the right software and the disc used.

DVD-Video

Digital video discs - 12 cm and 8 cm, single or double sided, single or dual layer. DVDs are high-density optical discs on which high quality picture and audio are recorded by means of digital signals.

DVD-R, DVD-RW

Most DVD-R and DVD+R (one recording only), DVD-RW and DVD+RW discs (rewritable). Depending on the DVD writer and discs used. Recordings using DVD-R and DVD-RW discs must be made in Video DVD mode. Recordings using DVD+RW discs must be made in accordance with the specifications for DVD+RW discs with a 4.7 GB capacity.

Video CD(VCD)

VCD stands for Video Compact Disc on which contains video associates with still images, audio tracks and interactive menus.

Audio CDs

Audio CDs (8 and 12 cm).

CD-R & CD-RW

Most CD-R (one recording only) and CD-RW discs (rewritable). This player can play most CD-R discs. CD-Rs written during a multi-session recording can also be played, provided that the session has ended before the disc is played (depending on the write software). However, depending on the condition of the CD writer, computer and the disc used, you may find that not all discs will play successfully. When playing a CD-R disc, it is completely normal for the unit to take up to 20 seconds to recognize the disc before starting to play. If the disc is not recognized after a period of 20 seconds, remove the disc, and then insert it again.

- Irrespective of the actual recording capacity of the CD-R, do not use its full capacity.
- CD-Rs should be preferably used instead of CD-RWs (rewritable CDs) as, in certain cases, CD-RW playback may be faulty.
- Use reliable, good-quality CD write software.
- Close all other applications on the computer to ensure reliable CD-R disc recording.

MP3 Files

CD-R and CD-RW discs containing audio files in MP3 format. As for CD-R MP3 discs, please follow all the recommendations for CD-R above, along with the comments below:

- Your MP3 files should be ISO 9660 or JOLIET format. ISO 9660 format and Joliet MP3 files are compatible with Microsoft's DOS and Windows, as well as with Apple Mac. These two formats are the most widely used.
- MP3 filenames should not exceed 12 characters, and should end with the ".MP3" extension. General name format: "Title.MP3". When composing your title ensure that you use 8 characters or less, have no spaces in the name, and avoid the use of special characters including (. , / , \ , = , +).
- Use a decompression transfer rate of at least 128kB/sec (kilobytes/second) when recording MP3 files. Sound quality with MP3 files basically depends on the rate of compression / decompression you choose. Obtaining audio CD quality sound requires an analog/digital sampling rate, that is conversion to MP3 format, of at least 128kB/sec and up to 160kB/sec. Choosing higher rates, such as 192 kB/sec or more, only rarely produces even better sound quality. Conversely, files with sampling rates below 128kB/sec will not play properly.
- Do not try recording copyright-protected MP3 files. "Secured" files are encrypted and code-protected to prevent illegal copying. You must not copy such files.

Important:

The above recommendations cannot be taken as a guarantee that the DVD player will play MP3 recordings, or as an assurance of sound quality. You should note that certain technologies and methods for MP3 file recording on CD-Rs prevent optimal playback of these files on your DVD player (i.e. degraded sound quality and even, in some cases, inability of the player to read the file).

WMA Files

CD-R with WMA files. Usable format similar to MP3 files; also see "MP3 Files" for reference.





JPEG Files

CD-R and CD-RW with JPEG files. Certain JPEG files, including progressive JPEG files, cannot be read by this player.




Region 2

    INSTALLATION

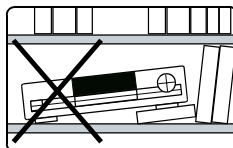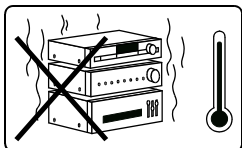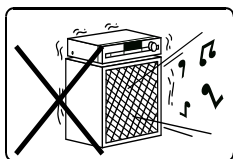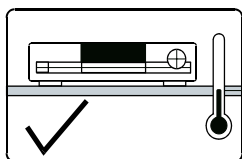



Single-sided DVD

 Single-sided discs usually have the title printed on the top side while bottom is the playing side.

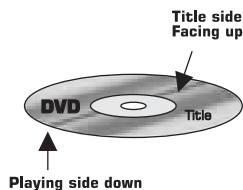

Double-sided DVD

  Double-sided discs have only a thin title strip. The title you want to view should be on the top.

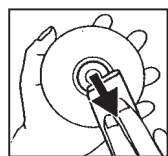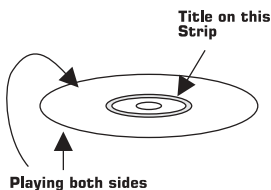

Player Zones

For the purpose of distribution of DVD Discs, the world has been separated into 6 zones. The zone your unit is intended for is indicated on the Zone Label. This should be the same as the label on discs available in your region. If you have any difficulties in playing a disc, make sure that the disc is for the same zone as your player.

Anti-Copy Disc Protection

Some DVD discs have anti-copying devices.

With these discs the playback on a Television will give the highest quality picture, however you will not be able to record this signal on a VCR.

- Install your unit on a stable flat surface. There must be sufficient room in front of the unit for the drawer to be opened and the unit should be positioned so that it can see the remote control.
- Do not expose your unit to extremes of temperature or humidity.
- Avoid standing it on a hot surface such as on top of other hot running equipment and ensure that there is adequate ventilation to the unit.

Caution:

Do not install this equipment in confined space such as a book case or similar unit!

DVD Discs

There are several types of DVD Disc:

Single-sided discs	plays for approximately	2 Hours
Single-sided disc with 2-layer	plays for approximately	4 Hours
Double-sided disc	plays for approximately	4 Hours
Double-sided disc with 2-layer on both sides	plays for approximately	8 Hours

DVD discs have Titles and Chapters:

- * There can be several Titles on one disc and each Title can contain several Chapters. Titles and Chapters are numbered, e.g. Title 1, Title 2, Chapter 1 and etc.
- * Usually Title one will show the disc publisher and studio logos. The next Title will be the film. Other Titles contain trailers for other films, production notes, or alternative endings for the film. There are many possibilities with Digital Versatile Disc.
- * Chapters within the main Title allow you to search quickly for a specific point on the disc. Many discs have a Chapter Menu sometimes called Scene Index or Scene Menu that displays the first shot from each Chapter, which allows you to select a shot and play the disc from that point onwards.

DVD discs can be PAL or NTSC. This player can play both types (if the player zone is correct).

DVD discs allow up to 8 Languages and 32 subtitles on a single disc. You can select and change the language and subtitle to suit yourself and play the whole disc or just part of it and view it from different angles.

Note: User can set one of 7 languages as a default language for player subtitle. Refer to page 15 for details.

Cleaning Disc

 
 
Picture freezing & sound skipping or repeating can occur if the disc inside the player is dirty.

- When a disc becomes dirty, clean it with a cleaning cloth. Wipe the disc from the center out.
- Do not wipe in a circular motion. Circular scratches can cause picture distortion or render the disc unplayable.

Caution:


Do not use solvents, commercially available cleaners, or antistatic spray intended for analog discs.

REMOTE CONTROL

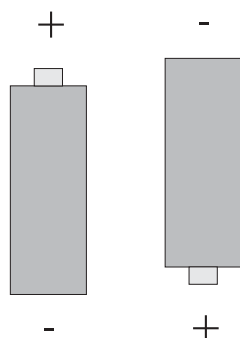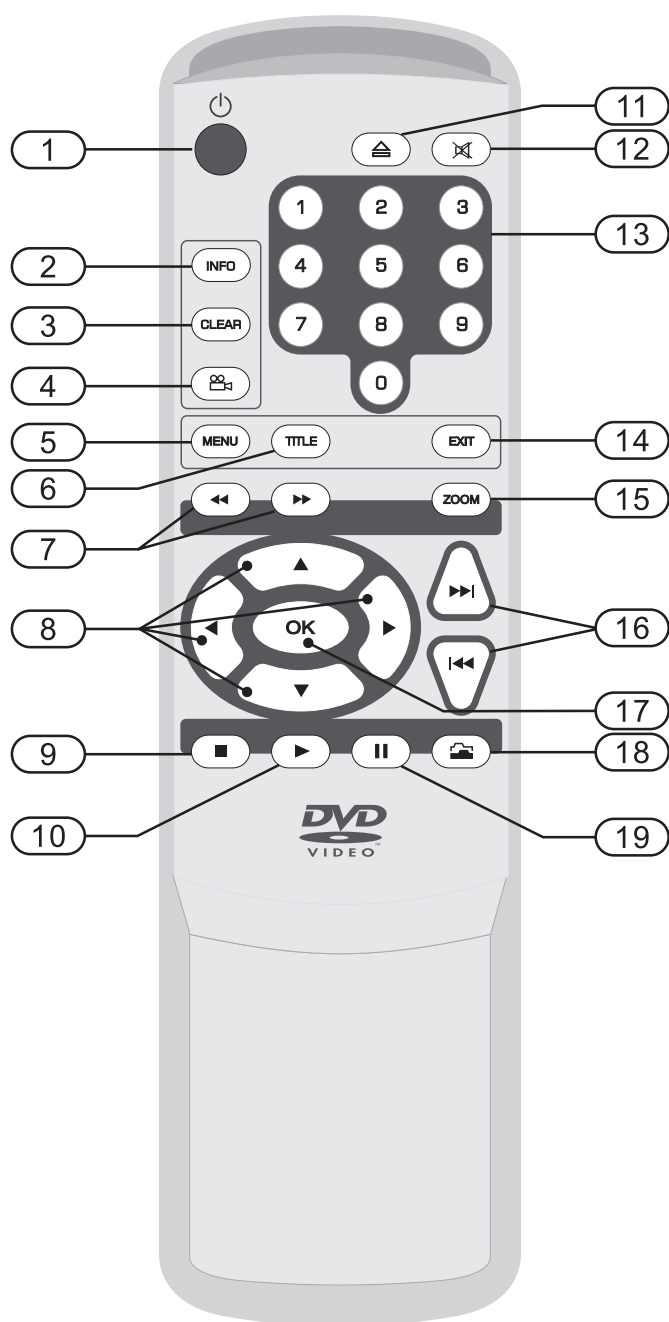


1. **Power On / Standby**
switches the player between Standby and On
2. **"INFO" key**
enters and exits Active Navigation mode
3. **"CLEAR" key**
 - exits menus and Active Navigation mode
 - deletes the last selection in program mode
4. **View Angle Selection & "ROTATE" key**
 - displays angle menu if present on discs
 - rotates images on JPEG discs
5. **"MENU" key**
displays disc menu when playing
6. **"TITLE" key**
displays title menu if present on discs
7. **Fast Search Forward & Backward**
plays backward and forward quickly
8. **Active Navigation keys**
advance in the indicated directions for making selections in menus and Active Navigation mode
9. **Stop**
stops playback
10. **Play**
starts playback
11. **Open/Close**
opens or closes disc loading tray
12. **Mute**
reduces volume to minimum level, press again to restore volume level
13. **Numeric Keys**
0 - 9 are used for direct access of title, chapter, track and time
14. **"EXIT" key**
exits menus and Active Navigation mode
15. **"ZOOM" key**
selects zoom ratio when playing disc
16. **Skip a track**
skips to previous or next chapter or track
17. **"OK" key**
confirms selections
18. **Index**
opens index menu of disc
19. **Pause**
pauses playing

 FRONT PANEL

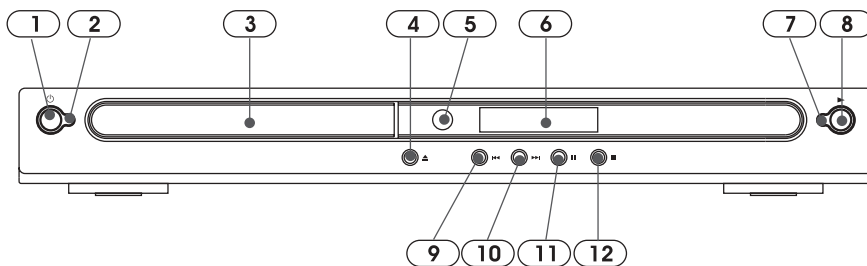


1. Power on/off
2. LED Indicator
Standby Mode - RED Light
OFF Mode - No Light
3. Disc loading tray
4. Opens/closes disc loading tray
5. Infra-Red receiver window
6. VFD display
7. Play indicator
8. Starts playback
9. Skip backward
10. Skip forward
11. Pause
12. Stop

 DISPLAY

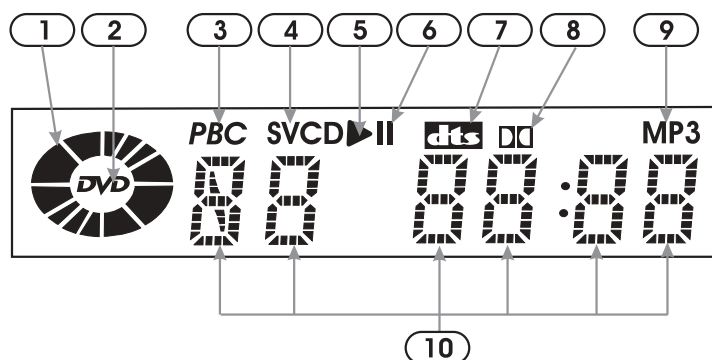

1. Disc Rotation Speed Indicator
2. DVD Disc Indicator
3. PBC Status Indicator (only for VCD compatible model)
4. Disc Formats (CD, VCD & SVCD) Indicator (only for VCD/SVCD compatible model)
5. Disc Play Status
Lights up during Playback
6. Pause Indicator
7. DTS Detect Indicator
8. Dolby Digital Detect Indicator
9. MP3 Playback Indicator
10. Alphanumeric Display

 REAR PANEL

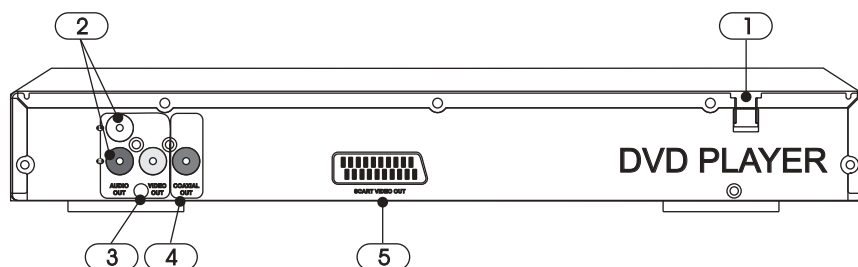

1. Power Cord
2. Audio Output - Left and Right
3. Video Output
4. Coaxial Output
5. S-Video Output

 
CONNECTIONS

Video Connections


The way in which you connect your DVD player and the type of cabling you choose can make a noticeable difference in picture and sound quality. Before you select one of the options, please make sure that your other equipment (e.g. TV, receiver) has the required input/output channel.

Use either option of below:

For good picture quality, use COMPOSITE VIDEO CABLE

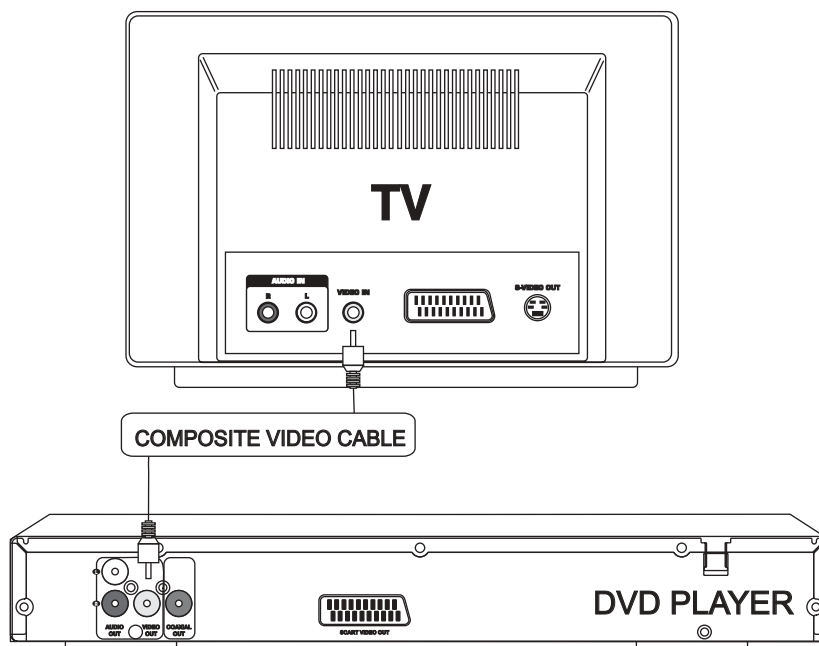

 For better picture quality, use SCART CABLE(SUPPLIED)

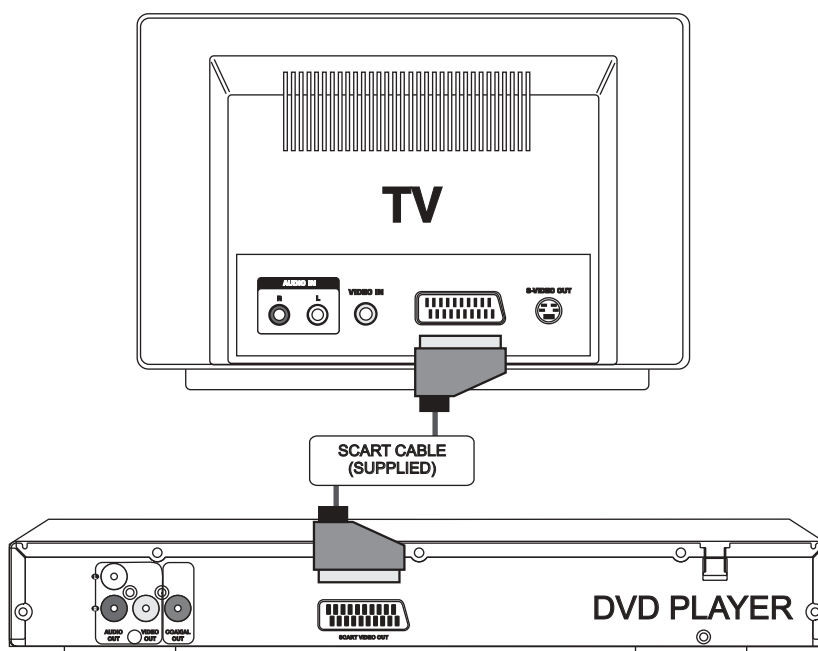


Audio Connections

Before you select one of the options, please make sure that your other equipment (e.g. TV, receiver) has the required input/output channel.

Use either options of below:

 **For better sound quality, use RCA AUDIO CABLE
or SCART CABLE**

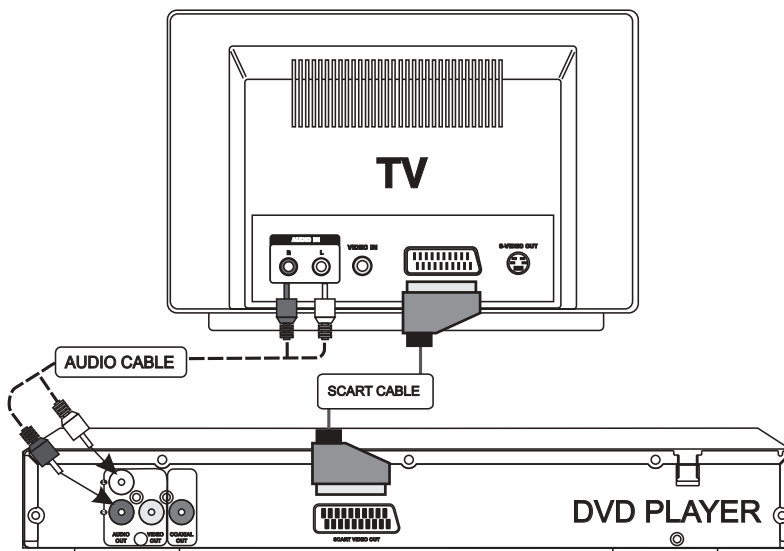


Connecting a 5.1 CH Amplifier

Do not connect the L-R Audio sockets to the TV (in case the L-R connections are made, you need to set the TV volume control to zero).

Connect the Digital Audio Out socket from the DVD to the Input jack of a 5.1 Ch. Receiver. Use Coaxial Audio Cable.

 **For best sound quality, use Coaxial Audio Cable
(not included)**

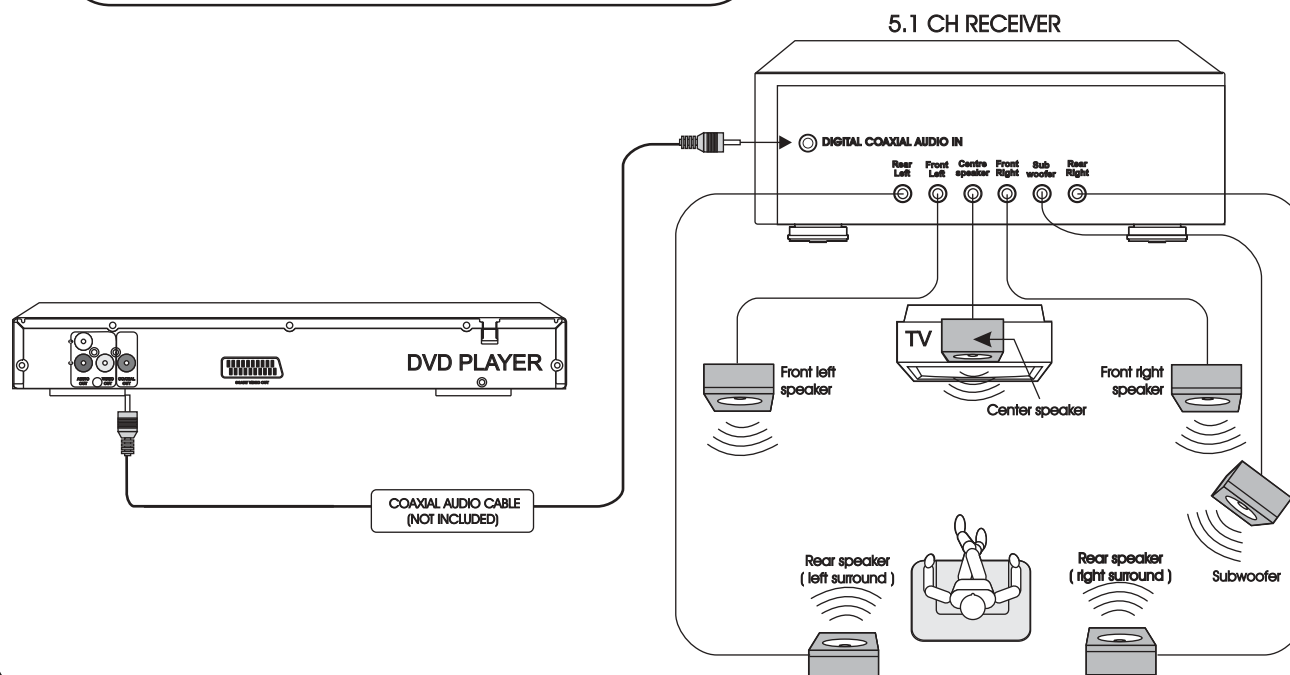

PLAYING A DVD/CD/VCD DISC



1. Press to open the disc tray.
2. Load disc on the tray with label side facing upward.
3. Press to close the tray.

During Playback

Pause / Freeze

Press to temporarily hold the playback. Press repeatedly to switch between Pause and Freeze.

Slow Motion / Frame-by-Frame Advance


In "pause" mode, press   to start forward or backward slow motion play.

In "Freeze" mode, press   to move forward or backward frame by frame.

Press  to resume normal playing.

Note: Not applicable to CD Playback.


Fast Search Forward / Backward



Press to search forward or backward quickly. Press  to resume normal playing.

Skip Forward / Backward

Press to skip forwards or backwards a chapter/track.

Stop & Resume Stop

Press once to enter "Resume Stop" mode; press  to resume playback from the stop point.



Press  twice to stop playback completely. Pressing  will start playback from the beginning.

Menu

Press **MENU** to display the disc's menu.

 
Note: Playback will be stopped to display the menu.

Press **INFO** to display the control bar on TV screen to make menu selections without interrupting the playing.


Select options by pressing  .

Press **CLEAR** to quit selection and return to previous screen.


Press **EXIT** to quit selection menu.

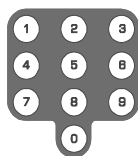

ZOOM

 

00:33:10

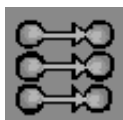 

Numeric keys (0-9)

Press to input track number for direct track selection.

Zoom

Press to zoom in (2x, 3x, 4x and 5x) pictures during disc playback.

Info Banner

DVD

|

VCD/SVCD



|

CD



Time Search

Input with numeric keys the time you want to play from.



Title / Track Selection

Press   to select the title you want to play. Use numeric keys to make direct selections.



Chapter Selection

Press   to select the chapter you want to play. Use numeric keys to make direct selections.



Subtitle Selection

Press   to select subtitle language according to the availability on disc.

Audio Output Selection

Press   to select audio output mode according to the availability on disc.

Play Mode Selection

Press   repeatedly to select play mode and repeat mode as below:

For DVD disc:

Standard > Random > Program > Disc Repeat
> Title Repeat > Chapter Repeat > Repeat A-B

For CD disc:

Standard > Random > Program > Disc Repeat
> Track Repeat > Repeat A-B > IntroScan

For VCD disc:

Standard > Disc Repeat > Track Repeat
> Repeat A-B

Press **OK** to confirm.



Resume Play Disc name: Great Movie
00:10:55

for DVD

Play mode	◀ Standard
	Random
	Program

for CD

Play mode	◀ Standard
	Random
	Program
	IntroScan

for VCD/SVCD



Play mode	◀ Standard
-----------	-------------------

Repeat A-B allows a passage to be repeated continuously. Press **OK** at the start of the required passage (A), then press **OK** again at the end of required passage (B). The passage will then be repeated continuously between point A and B.

Index Menu (on Remote Control)

Press OK to enter Index menu.

You can set at maximum 12 indexes on a disc.

To play/cancel indexes, use Active Navigation keys to select  (Play) or  (Cancel) in an index and press **OK**.

View Angle Selection

Press   or **ROTATE** key to select viewing angles (if available on disc).



Playback Control

Press   to select **PBC on/off**

(if available on disc). The PBC menu consists of a list of titles, you can select a title directly with numeric keys.

When Playback is Stopped

Resume Play

To start Resume Play, press **OK** or . Press  and then  to start playing from the beginning.

Play Modes

Select "Standard" and press **OK** to play chapters/tracks in default order.

 
 
 
 
 
 
Select "Random" and press **OK** to play chapters in random order.

Select "Program" and press **OK** to create or edit program.

(To create program, see Example on next page)

Select "IntroScan" and press **OK** to play the first 10 seconds of each track.

SETUP MENU

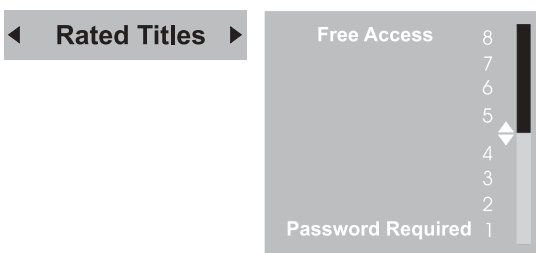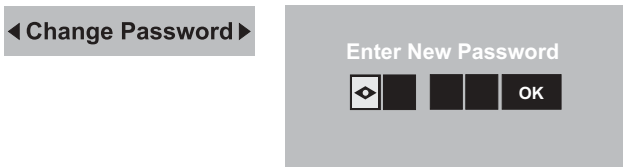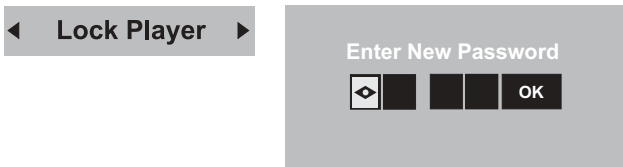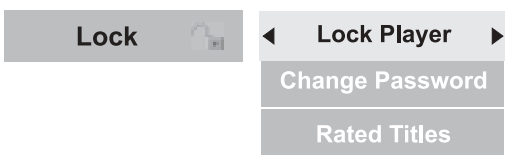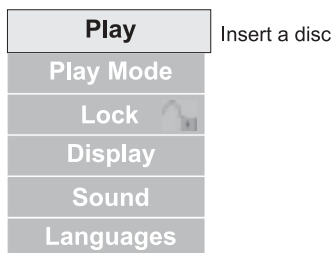

To access the setup menu the unit must be in **STOP** mode. Use Active Navigation keys to make selections and then press OK to confirm.

1. Play

Press OK to list the content of disc

(No menu available without disc loaded.)

2. Play Mode

Press OK to select a play mode

(See "When Playback is stopped", No menu available without disc loaded.)

3. Parental Lock

Use Active Navigation keys to select a sub-menu

3.1 Lock Player



Press **OK** and create your password with numeric keys

Note: You must know this password in order to change it in future. Refer to "Problems" section if you forgot the password.

3.2 Change Password

Change your existing password to a new one with numeric keys. You must know your existing password in order to do so.

 
3.3 Rated Titles

Pressing   to set the player's parental control level

Parental levels are assigned to DVD disc. The range of parental controls is from 1 to 8.

If the unit's rating limit is set to 8, it will play all discs. If the player's rating limit is set below 8, only discs with a higher or equal parental level will play.

Note: Some discs do not have parental control level assigned and will play irrespective of the player setting.

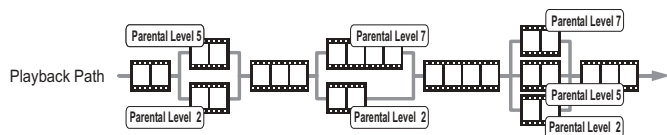

3.3 Rated Titles (continue)

 
If alternative scenes with lower rating are included, the player plays the highest rated scene that the parental setting allows. For example, consider a disc which is generally suitable for most audiences, and is rated as level 2 for most part. However, in the middle there are also scenes rated at 5 & 7 (not suitable for children).

A section of the disc can have several different sequences which vary in parental control level. In the above example of a disc with parental control, the player will show a different section depending on the parental control level set in the player menu.

In this way, parents can control the content of films and there is no indication that any censorship has occurred.

The meaning of the levels 1 to 8 varies depending upon the country and the type of content of the disc.

The player's behavior depends on the setting in the parental menu.

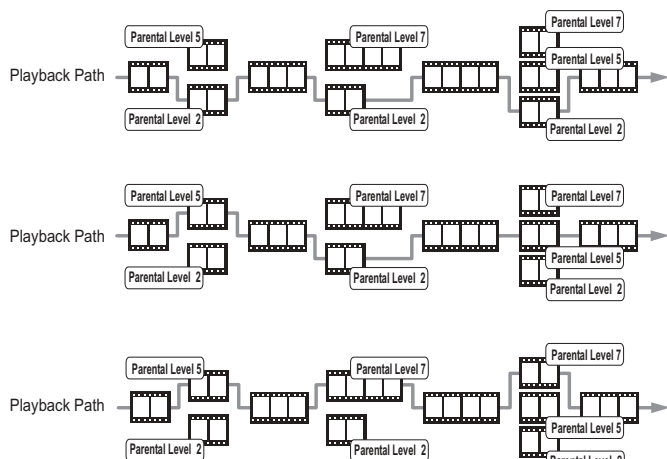

Playback path with Parental Level Set between 2 & 4

Playback path with Parental Level Set between 5 or 6

Playback path with Parental Level Set between 7 or 8



4. TV Display

Use Active Navigation keys to select a sub-menu

4.1 TV Image

 
Select TV Image option according to your TV type:

 
 
 
For wide-screen (16:9) TV, select "16x9 wide screen"

- for 16:9 movie, you will have full screen viewing.
- for 4:3 movie, black bars show on left and right sides of screen.

For conventional 4:3 TV, select either "Letterbox" or "Standard"

- if you select 4:3 Letter Box for 16:9 movie, black bars show on top and bottom of screen.
- if you select 4:3 Standard for 16:9 movie, left and right edges of the screen are hidden.
- if you select either 4:3 Letter Box or 4:3 Standard for 4:3 movie, you will have full screen viewing.

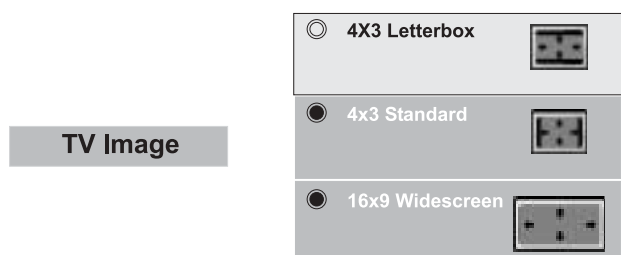

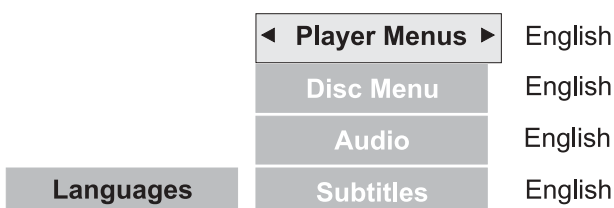

4.2 PAL/NTSC

Press **OK** to select PAL or NTSC output to match your TV or other video equipment.

*Warning: You **MUST** have a PAL system TV if you choose to select the PAL setting. If you have an NTSC North American television set and you switch the setting to PAL, you will lose your ability to switch the DVD Player back to NTSC because the On Screen Menu will no longer be readable.*

5. Sound

Use Active Navigation keys to select a sub-menu

5.1 Dynamic Range Compression (DRC)

Press **OK** to turn on/off.

Note: This controls the Dynamic Range Compression (DRC) for night time listening. DRC reduces difference between normal voices and sounds like an explosion without waking your neighbors. The amount of range control available depends on the disc.

5.2 Digital Output

Press **OK** to check the box if you have connected the player's digital audio output to a receiver with Dolby Digital or DTS decoding.

6. Languages

 
Use Active Navigation keys to select a sub-menu and then press **Ok**

Select one of the 7 languages as default language for player menus, disc menus, audio and subtitle language.

Press OK to confirm selection

Note: The selected default language is only applicable if the playing disc has the selected language available.


Example shows how to create a program and play the last selection for DVD

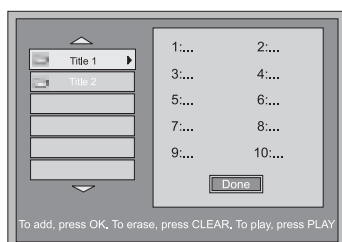

Step 1:


Use Active Navigation keys to make selections

 Select Title “1”

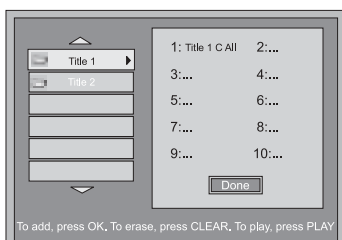


Step 2:

 Press **OK** to add Title “1”

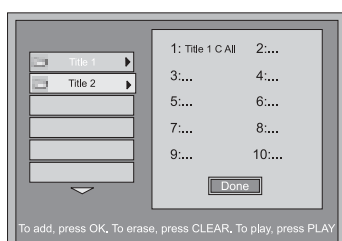


Step 3:

 Select Title “2”

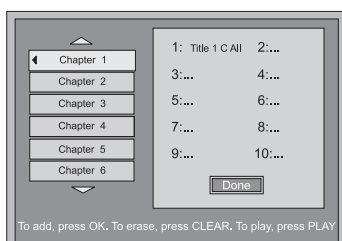


Step 4:

 Select Chapter “1”

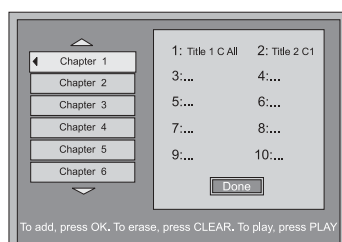


Step 5:

 Press **OK** to add Chapter “1”

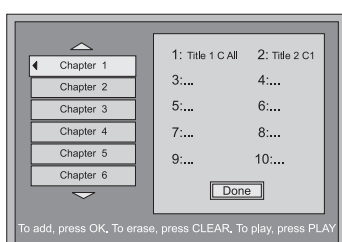


Step 6:

 Select “Done” to save the Program List” and start to play

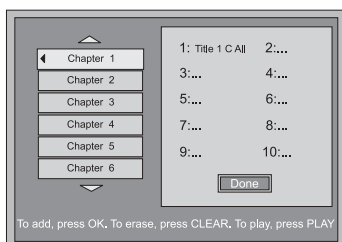


 Step 7: Press **CLEAR** to delete the last selection

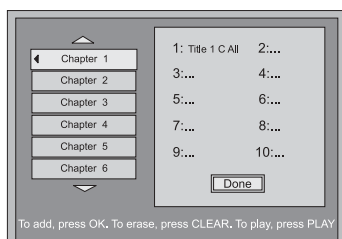

Step 8: Select **“Done”** to save the **“Program List”** and start to play

 Example shows how to create a program and play the last selection for CD

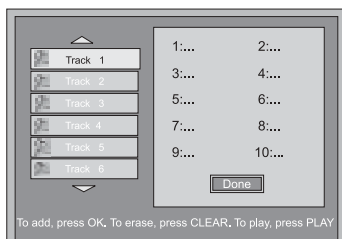

Step 1: Select Track **“1”**



Step 2: Press **OK** to add Track **“1”**



Step 3: Select Track **“3”**



Step 4: Press **OK** to add Track “3”



Step 5: Select “Done” to save the “Program List” and start to play



Step 6: Press **CLEAR** to delete the last selection



Step 7: Select “Done” to save the “Program List” and start to play

PLAYING MP3 / WMA / JPEG PICTURE DISC

Play mode

◀ Standard

Random

Program

Main menu: for MP3/WMA disc only

Play mode

Main menu: for MP3+JPEG or JPEG disc only

General

- Press ■ twice to stop MP3/WMA playback and display the main menu.
- Use Navigation Keys to select the menu

Standard
> Random
> Program

- Press ■ twice to stop JPEG or MP3+JPEG playback and display the main menu.

MP3

MP3 is compressed audio file format that makes possible large quantity storage of sound tracks on a single disc. Files can be grouped in folders or albums, a folder can also contain other folders.

WMA

Windows Media Audio (WMA) is another compressed audio file format that is similar to MP3. WMA files can also be grouped in folders or albums as MP3 files.

Note:

Simultaneous playback of JPEG files with WMA is not possible.

 
JPEG

JPEG is compressed image file format. Your player can play JPEG files with a resolution up to five million (5 mega) pixels. However, there is no perceptible improvement in the quality of pictures displayed on your TV screen beyond 400,000 pixels.

Note:

Display time will vary according to the file size and number of pixels of JPEG files.


CONTROLS (MP3 / WMA / JPEG PICTURE DISC)

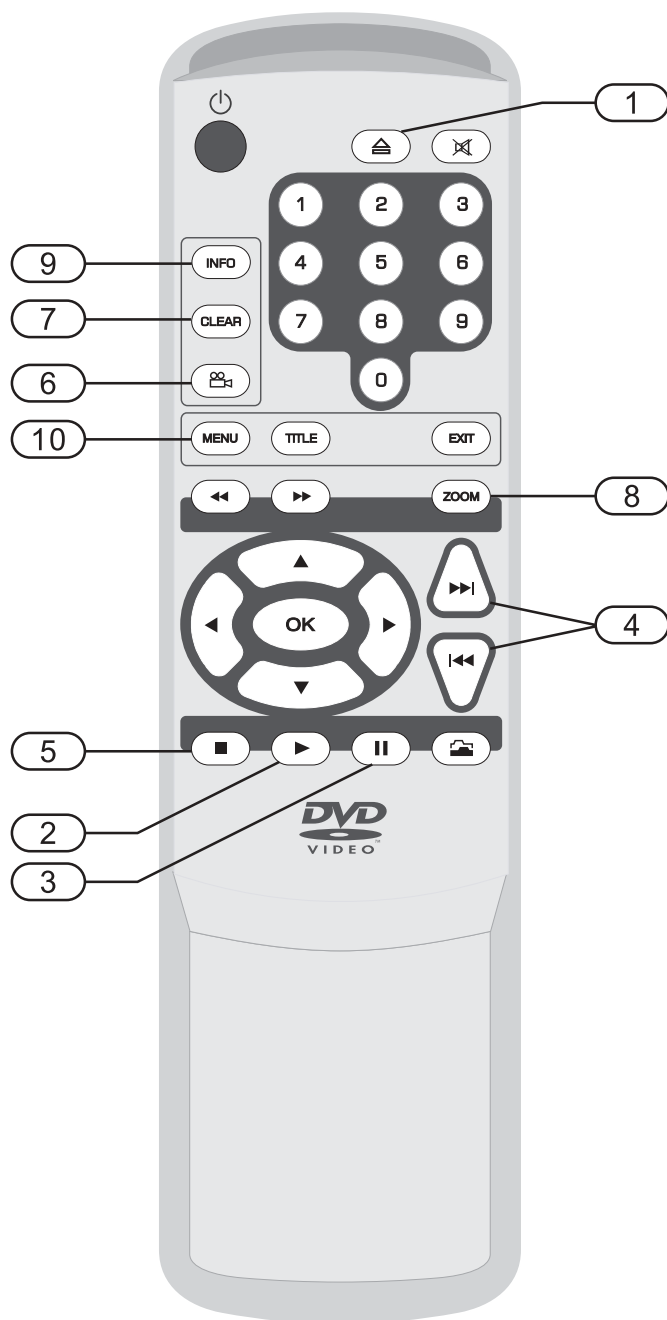

Remote Control



 Play Mode

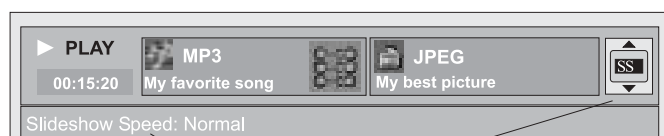

Slideshow Speed

Info Banner

1. Open / Close

- Press to open the tray
Note: Load disc on the tray with label facing upward.
- Press to close the tray and play automatically

2. Play

- Press to start playing

3. Pause

- Press to stop playing temporarily
- Press again to resume playing

4. Skip

- Press to skip a track forward or backward

5. Stop and Resume Stop

- Press once to "Resume Stop" mode
Note: Press ► to resume play from the stop point.
- Press twice to stop playing completely
Note: Press ► to play from the beginning.

6. "ROTATE" key (for JPEG only)

- Press to rotate picture

7. "CLEAR" key

- Press to exit menus and delete the last selection in program mode

8. "ZOOM" key (for JPEG only)

- Press to zoom in (2X-5X) picture during slideshow

9. "INFO" key

- Press to display the info banner on TV screen

10. "MENU" key

- Press to display the selection menu

Notes:

1. MP3/WMA disc only:

Press to select play mode:

Standard > Program > Random > Track Repeat > Folder Repeat > Disc Repeat

Press **OK** to confirm

2. MP3 + JPEG or JPEG only:

 
Press to select a slideshow speed:

Slow > Normal > Fast

Press **OK** to confirm

(Speed adjustment is applicable for slideshow only; MP3 playback speed cannot be altered in this mode.)

PLAY MODES (MP3 / WMA DISC)




Standard



Random




 Program

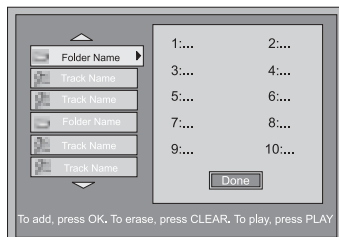


STEP 1: **SELECT (Folder or Track)**

 - Use Navigation Keys to select the folder or track

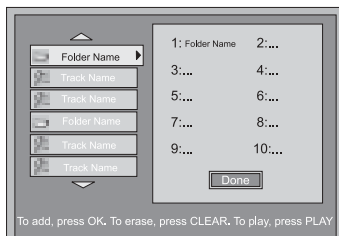

STEP 2: **ADD**

 - Press **OK** to add the selection to the play list

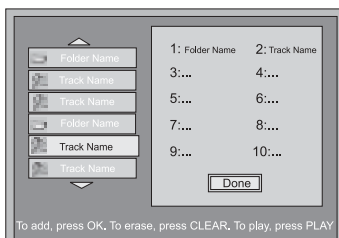

STEP 3: **SAVE**

- Use Navigation Keys to select "Done"

STEP 4: **PLAY**

- Press ► to save and start playing

Delete Program (for last selection)

STEP 5: **EDIT**

- Press **CLEAR** to delete the last selection
- Use Navigation Keys to select "Done"
- Press ► to save and start playing

4. Repeat

- Press **INFO** to launch the Info Banner
- Use Navigation Keys to select "Repeat Mode"
- Press OK to confirm

5. IntroScan

- Use Navigation keys to highlight an MP3 file
- First 10 seconds of file will be played back

Notes:

IntroScan playback will not skip to next file automatically.

PROBLEMS

If it appears that your DVD-Video player is faulty, first consult this checklist. It may be that something simple has been overlooked.

Under no circumstances should you try to repair the player yourself; as this will invalidate the warranty. Only qualified service personnel can remove the cover or service this player.

NO POWER

- Check if the on/off button on the front of the player is set to on.
- Check if power plug of the mains cord is properly connected.
- Check if there is power at the AC outlet by plugging in another appliance.

NO PICTURE

- Check if the TV is switched on.
- Select the correct AV input on the TV.
- Check the video connection.
- Check if channel selector is set to AV on the TV.
(See your TV manual for instructions).

DISTORTED PICTURE

- Check the disc for fingerprints and clean with soft cloth, wiping from center to edge.
- Sometimes a small amount of picture distortion may appear. This is not a malfunction.

COMPLETELY DISTORTED PICTURE

- The disc format is not according to the TV-set used (PAL/NTSC).

NO COLOR IN PICTURE

- The disc format is not according to the TV-set used (PAL/NTSC).
- Ensure DVD player is not connected through VCR.

PICTURE SWING

- Relocated the unit further away from possible interference or emission source (e.g. Radio, Power Amplifier, radiator etc.).

DISC CANNOT BE PLAYED

- Ensure the disc label is upwards.

NO SOUND

- Check audio connections.
- If using a Hi-Fi amplifier, try another sound source.
- Check that DTS is selected in the Audio Menu if a DTS disc is played.
- Ensure there is a DTS decoder connected when selecting DTS.
- Clean the disc.
- Check if the disc is defective by trying another disc.

NO RETURN TO START-UP SCREEN WHEN DISC IS REMOVED

- Check to see if the program requires another disc to be loaded.
- Reset by unplugging the player from the power, then connect the power again.

THE PLAYER DOES NOT RESPOND TO THE REMOTE CONTROL

- Aim the remote control directly at the sensor on the front of the player.
- Avoid all obstacles which may interfere with the signal path.
- Inspect or replace the batteries.

DISTORTED OR B/W PICTURE

- The disc format does not match the TV-set used (PAL/NTSC).

NO AUDIO AT DIGITAL OUTPUT

- Check the digital connections
- Check the Digital Out menu to make sure that the digital output is correctly set.
- Check if the audio format of the selected audio language matches your unit capabilities.

YOU HAVE FORGOTTEN THE PASSWORD

- Under no disc condition, press Number Key 7, Number Key 6, Number Key 4, Number Key 1 and Number 8 on Remote Control in order.

THE DISC IS STUCK INSIDE THE PLAYER

- In case the disc is stuck inside the tray, please switch the unit off, unplug the power cord and wait for 2 minutes. The player will resume normal operation after switching on.