 


Goodmans

User Manual

PORTABLE DVD/VCD/CD PLAYER

MODEL:GDVD90W13

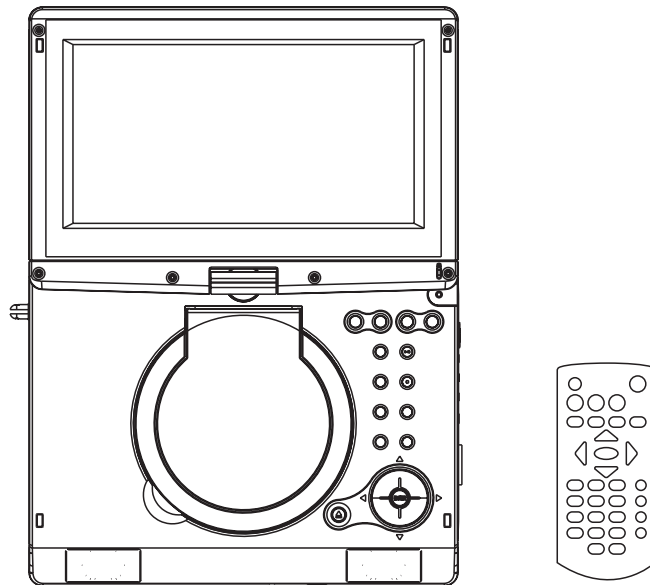

Before attempting to connect, operate or adjust this player, please read these instructions completely.
All the illustrations included are for reference purpose only and subject to any change without prior notice.
Retain this manual for future reference.

MAINS PLUG WIRING FITTED TO YOUR AC ADAPTOR

 
Electrical Information

This appliance is fitted with a BS1363/A 13 amp plug. If it is not suitable for your supply sockets it must be removed and replaced with an appropriate plug. If the plug becomes damaged and/or needs to be replaced please follow the wiring instructions below. The plug removed must be disposed of immediately. It must not be plugged into a supply socket as this will be an electrical hazard. If the fuse needs to be replaced it must be of the same rating and ASTA approved to BS1362. If the plug is changed, a fuse of the appropriate rating must be fitted in the plug, adapter or at the distribution board. If the fuse in a moulded plug is replaced, the fuse cover must be refitted before the appliance can be used.

Wiring Instructions

The supply cable will be either 2-core or 3-core. Follow the appropriate wiring instructions given below. In both cases ensure that the outer sheath of the cable is firmly held by the cable clamp.

2 - CORE

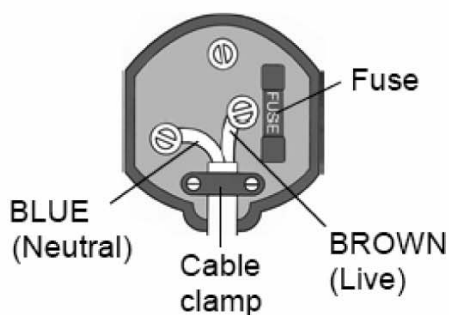

WARNING! Do not connect either wire to the earth terminal.

 


This symbol indicates that this 2-core appliance is Class II and does not require an earth connection.

The wire coloured blue must be connected to the terminal marked with the letter N or coloured black.

The wire coloured brown must be connected to the terminal marked with the letter L or coloured red.

3 - CORE

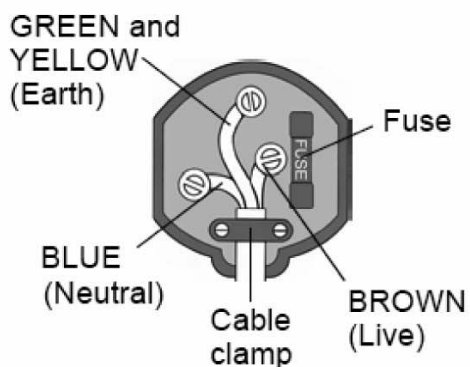

WARNING! This appliance must be earthed.

The wire coloured green and yellow must be connected to the terminal marked with the letter E, or by the earth symbol, \perp , or coloured green or green and yellow.

The wire coloured blue must be connected to the terminal marked with the letter N or coloured black.

The wire coloured brown must be connected to the terminal marked with the letter L or coloured red.

WARNINGS

- Use the adapter supplied only to supply power for your unit.
- Unqualified attempts to repair this TV are not allowed. Refer repairs to this unit to a qualified technician only.
- Do not disassemble this unit. There are dangerous-voltage parts inside that may cause electric shock even after power is disconnected.
- Store your unit only in a clean, dry environment. Unplug the unit immediately it gets wet, and consult your servicing technician.
- Always unplug the unit before cleaning it. Wipe dust off the cabinet of the unit with clean&dry&soft cloth. Apply non-ammonia cleansing lotion onto the cloth, not directly onto the screen.
- Keep your unit away from magnetic objects, motors, TV sets, and transformers.
- Do not place heavy objects on top of the unit.
- Avoid exposing your unit directly to sunlight or other heat sources.
- Put your unit in a well-ventilated area away from high humidity.
- The apparatus and AC/DC adaptor shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on apparatus.

Safety Tips

- If smoke, abnormal noise or odour comes out of your unit, power it off immediately and call your local service centre.
- Never try to repair the your unit on your own. Always call your local service center for repairs.
- Watching TV while driving is illegal and dangerous!

Note

This user's manual contains for-reference-only graphics and information that are subject to change without notice.

Table of contents

Getting Started:

Mains plug wiring fitted to your ac adaptor.....	1
Warnings.....	2
Features	4
Precautions	5
Control reference guide	6,7
Basic connection	8,9,10
Optional audio connections.....	11,12
Connecting Headphones.....	12
Remote control unit preparation.....	13

Basic Operation:

Basic play	14
Preparations	14
Basic play	14
Stopping play.....	15
Skipping ahead or back.....	15
Rapid advance / (Rapid reverse).....	15
Slow-motion play [DVD/VCD].....	16
MP3 playback.....	16
Kodak/JPEG Picture CD.....	17,18
Play mode.....	17
Skip to next/previous pictures.....	17
Rotating pictures.....	17
Flipping pictures.....	17
Picture shrink/zoom.....	17
Slide show effects.....	18
Enjoying Video CDs with playback control....	18
ON Screen display information.....	19

Advanced Operation:

Program play	19
Repeat play.....	20
Changing subtitle language [DVD only]	21
Changing audio soundtrack language [DVD/VCD disc]	21
Viewing from different angle [DVD only]	22
Search for preferred scene	22

Initial Settings:

system setup.....	23
language setup.....	23
audio setup.....	23
video setup.....	24
speaker setup.....	24

FOR REFERENCE:

Definition of terms	24
Troubleshooting.....	25
Disc handling and maintenance.....	26

Dear Customers

May we take this opportunity to thank you for purchasing this DVD/VCD/CD player. We strongly recommend that you carefully study the Operating Instructions before attempting to operate the player and that you note the listed precaution.

Features

HIGH QUALITY SOUND AND PICTURE

● 96 kHz/24 bit audio D/A converter

This player enables 96 kHz/24 bit linear PCM signals, which constitute the highest specifications in the DVD standards, to be reproduced faithfully. To support 96 kHz sampling/24 bit sound, the shaping noise of this multi-level digital sigma type of D/A converter is kept flat up to 44 kHz, thus preventing the important audio signals from being affected in any way. In terms of the bottom line, the sound in all of its various modes is reproduced faithfully.

● 10 bit video D/A converter

With its 10 bit capability, this D/A converter reproduces images faithfully.

7" TFT DISPLAY

This player built in 7" TFT display window, provide you clear vision, and low radiation.

ENCLOSED LITHIUM BATTERY PACK

This 7.2V rechargeable lithium battery pack can last about 2 hours, provide you playing disc everywhere.

MULTI TV SYSTEM SUPPORT

The player can play back discs with signal system of PAL and NTSC.

GRAPHICAL USER INTERFACE SCREEN

Simply by pressing the DISPLAY button on the remote control unit, information on the player and disc can be displayed on the TV screen for easy identification. The player's operations and settings can easily be performed by operating the remote control while monitoring the TV screen.

MULTI-AUDIO FUNCTION

The audio soundtrack can be heard in up to 8 languages. (The number of audio sound languages depends on the software.)

MULTI-SUBTITLES FUNCTION

Subtitles may be displayed in one of a maximum of 32 languages depends on the software.

MULTI-ANGLE FUNCTION

This function allows you to choose the viewing angle of scenes which were shot from a number of different angles. (Limited to DVD recorded with multiple camera angles.)

PARENTAL LOCK FUNCTION

This can prevent play of DVD unsuitable for children.

DISC FORMATS SUPPORTED BY PLAYER

The player can play back discs bearing any of the following marks:



Precautions

Please read these precautions before operating this player.

Power Cord Protection

To avoid any malfunctions of the player, and to protect against electric shock, fire or personal injury, please observe the following.

- **Hold the plug firmly when connecting or disconnecting the AC power cord.**
- **Do not connect or disconnect the AC power cord when your hands are wet.**
- **Keep the AC power cord away from heating appliances.**
- **Never put any heavy object on the AC power cord.**
- **Do not attempt to repair or reconstruct the AC power cord in any way.**
- **Remove dust, dirt, etc. on the plug at regular intervals.**
- **If the player has been dropped or otherwise damaged, set the player to the standby mode and disconnect the AC power cord.**
- **If the player has fumes, odours or noise, set the player to the standby mode and disconnect the AC power cord.**

Placement

- Avoid placing the player in areas of:
- direct sunlight or heating radiators, or closed automobiles
- high temperature (over 35°C) or high humidity (over 90%)
- Excessive dust
- vibration, impact or where the surface is tilted as the internal parts may be seriously damaged.

Non-use periods

When the player is not being used, set the player to the standby mode.

When left unused for a long period of time, the player should be unplugged from the household AC outlet.

No fingers or other objects inside

- Touching internal parts of this player is dangerous, and may cause serious damage to the player. Do not attempt to disassemble the player.
- Do not put any foreign object on the disc tray.

Keep away from water and magnetic object

- Keep the player away from flower vases, tubs, sinks, etc. If liquids are spilled into the player, serious damage could occur.
- Keep magnetic objects such as speakers, at a distance from the player.

Stacking

- Place the player in a horizontal position, and do not place anything heavy on it.
- Do not place the player on amplifiers or other equipment which may become hot.

Condensation

moisture may form on the lens in the following conditions:

- immediately after a heater has been turned on.
- In a steamy or very humid room.
- when the player is moved from a cold environment to a warm one.

If moisture forms inside this player, it may not operate properly. In this case, turn off the power and wait about one hour for the moisture to evaporate.

 
If there is noise interference on the TV while a broadcast is being received

Depending on the reception condition of the TV, interference may appear on the TV screen while you are watching a TV broadcast and the player is left on. This is not a malfunction of the player or the TV. To watch a TV broadcast, set the player to the standby mode.


Control reference guide

Main unit


OPEN VIEW

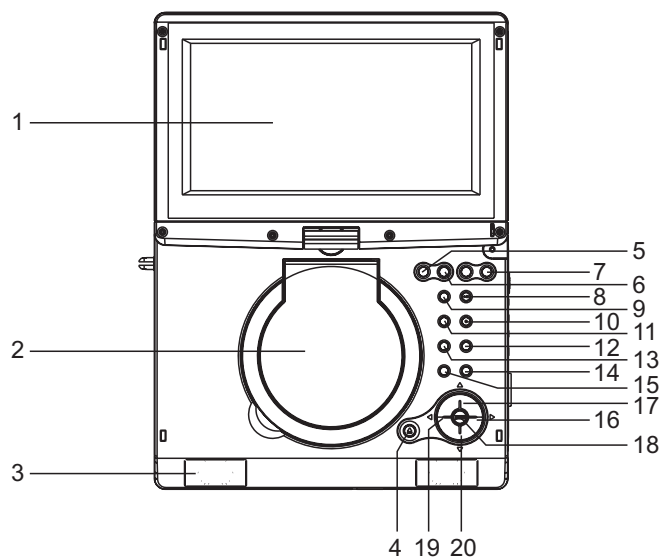

RIGHT VIEW

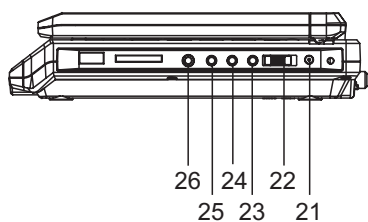 

FRONT VIEW

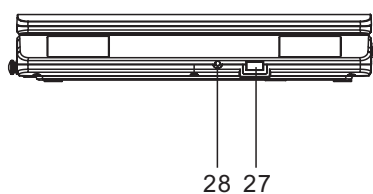 

1. TFT SCREEN
2. CD DOOR
3. SPEAKERS
4. CD DOOR OPEN BUTTON
5. TITLE BUTTON
6. MENU BUTTON
7. VOLUME BUTTONS
8. NEXT BUTTON
9. SETUP BUTTON
10. PREVIOUS BUTTON
11. AUDIO BUTTON
12. STOP BUTTON
13. DISPLAY BUTTON
14. PLAY/PAUSE BUTTON
15. SUBTITLE BUTTON
16. NAVIGATION RIGHT & FAST FORWARD BUTTON
17. NAVIGATION UP BUTTON
18. ENTER BUTTON
19. NAVIGATION LEFT & FAST BACKWARD BUTTON
20. NAVIGATION DOWN BUTTON
21. DC IN 9V JACK
22. POWER ON/OFF SWITCH
23. COAXIAL JACK
24. S-VIDEO OUT JACK
25. VIDEO/AUDIO OUT JACK
26. PHONES JACK
27. REMOTE SENSOR
28. STANDBY INDICATOR

Control reference guide

Remote control unit

1. LCD BUTTON: Press this button to adjust the color and brightness of the screen, press and hold this button to turn on or turn off the TFT screen.
2. TITLE BUTTON: Play the title (DVD).
3. PREV BUTTON: Press this button, the scene will skip the previous chapter or the next track.
4. NEXT BUTTON: Press this button ,the scene will skip the next chapter or the next track.
5. NAVIGATION BUTTONS
(Navigation left button & Fast Backward button
Navigation right button & Fast Forward button)
6. NUMERIC BUTTONS
7. PROGRAM/ANGLE BUTTON: During playing DVD disc, pressing this button will display the angle number and change to different angles; and playing the other discs, pressing this button can setup the memory order tracks.
8. VOLUME DOWN BUTTON
9. ON/STANDBY BUTTON
10. SETUP BUTTON: Press this button will enter initial settings menu.
11. MENU (PBC) BUTTON: Select Playback Control for VCD if PBC is on, when you press return button, the player will start at the VCD root.
12. DISPLAY BUTTON: press this button, the screen will display the elapsed time and remaining time.
13. STOP BUTTON: Press this button, the player will stop playing.
14. OK(PLAY/PAUSE) BUTTON: Press this button to confirm what you select; press this button to play or halt the disc.
15. SUBTITLE BUTTON: Press this button will display the different subtitle language on the screen.
16. AUDIO BUTTON: Select the sound track.
17. SEARCH BUTTON: Press this button during play then press numeric button to choose number corresponding to the desired play point.
18. REPEAT BUTTON: Press this button once, the player will repeat play the current track or the whole track, press this button twice, the player will repeat play one chapter or one title ,or whole tracks, press this button three times, the player will repeat sections between two specific points(A-B).
19. ZOOM/SLOW BUTTON: Press this button to enlarge picture size; Press and hold this button during playback the play speed will be reduced.
20. VOLUME UP BUTTON

