

Goodmans

User guide



GIPDV701

IPOD DOCK WITH 7" LCD DISPLAY

Contents

Contents	2
Safety Information and Notice	3
Important Safety Precautions	3
Compatibility	3
Product Overview	4
Top	4
Front	4
Rear	4
Remote Control	5
Remote control	5
Remote control operation range	6
Battery installation for the remote control	6
Connections	7
Connecting the power	7
Inputting external media source	7
Inserting a memory card	7
Inserting a USB device	7
Inserting iPod	8
AV In	8
Line In	8
Outputting signals	9
Connecting with AV equipment	9
Connecting with audio equipment	9
Basic Operation	10
iPod mode	10
Viewing photos and slide show	11
Thumbnail mode	11
Rotation	12
Playing MP3 music	12
Playing a movie	12
AV In mode	13
Line In mode	13
Setup mode	13
Troubleshooting	14

Important Safety

Precautions

- Keep away from water or moisture and dusty areas.
- Ambient Temperature 0~40°C. Never store in hot and very cold areas.
- Care must be taken not to drop the unit.
- Do not try to open the case alone without technical support.
- Connect the AC adapter to the DC IN jack and to power outlet.
- Only use attachments/accessories specified by the manufacturer.
- When left unused for a long period of time, the unit should be unplugged from the household AC outlet.

Warning: To reduce the risk of fire or electric shock, do not expose to rain, moisture, dripping or splashing.

Compatibility

- This device supports iPod 4th/5th generation iPods including the special edition U2 and HP iPods, the iPod mini 1st/2nd and iPod nano 1st/2nd. This device doesn't support the latest iPod series including the iPod classic, iPod Touch and iPod nano 3rd.
- This device supports the following file formats: JPEG, MP3 and MPEG4(*.avi). Please note that not all images, audio and MPEG4 formats are compatible with this device. If playing other formats, please convert the files to a supported format on your computer.




This symbol on the product or in the instructions means that your electrical and electronic equipment should be disposed at the end of its life separately from your household waste. There are separate collection systems for recycling in the EU. For more information, please contact the local authority or your retailer where you purchased the product.

- Before attempting to connect, operate or adjust this product, please save and read the User Guide completely.

Product Overview


Top

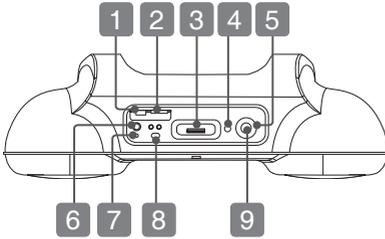

- 1 USB Jack
- 2 SD/MMC/MS Slot
- 3 iPod Dock connector
- 4 MODE/ STOP button
- 5 Cursor buttons
(Up/Down/Right/Left)
- 6 Power ON/OFF switch

The LED indicator lights up in green when the power is turned on, no light when the power is turned off.


Front

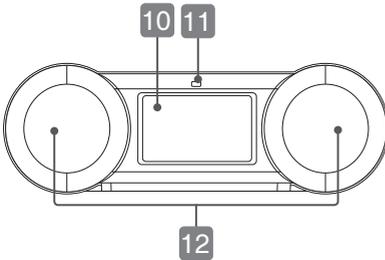

- 7 Power LED indicator
 - 8 3D Surround button
- Press this button to simulate a virtual three-dimensional surround sound.
- 9 PLAY/Pause/confirm button

- 10 LCD screen
- 11 Remote sensor


Rear

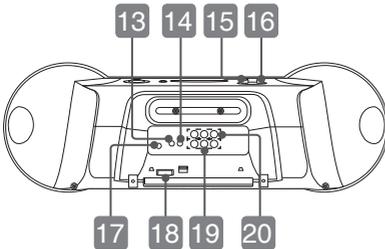

- 12 Speakers
- 13 Earphone jack
- 14 LINE-IN jack
- 15 Volume +
- 16 Volume -
- 17 DC-IN jack
- 18 Battery connector
- 19 Composite AV in jack
- 20 Composite AV out jack

Remote Control

Remote control

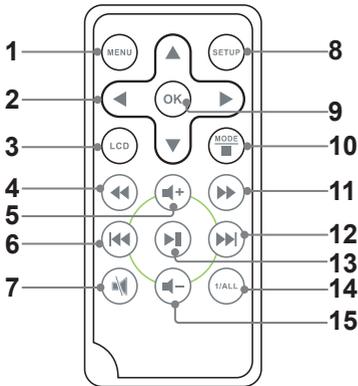

1. MENU button
2. CURSOR buttons

Up/Down/Left/Right buttons

Note: Pressing <◀▶> button go back to the previous menu or press <▶> button to go to the next level of menus when using iPod.

3. LCD button
4. F.BWD button
5. VOLUME + button
6. PREVIOUS button
7. MUTE button
8. SETUP button
9. OK button
10. MODE/STOP button
11. F.FWD button
12. Next button
13. PLAY/PAUSE button
14. 1/ALL REPEAT button

During playback, press <1/ALL> button repeatedly to select the following options:

Track: Repeat within a track

Folder: Repeat within a folder

All: Repeat all files

OFF: Repeat off


15. VOLUME - button

Note: The remote control can operate the iPod even if the iPod's Hold switch is ON.

Remote Control-continued


Remote control operation range

Point the remote control unit no more than 6 meters from the remote control sensor and within 60° of the front of the unit. The operating distance may vary according to the brightness of the room.

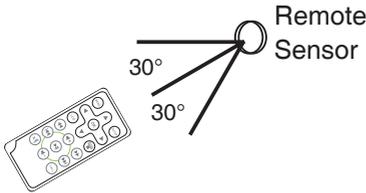

Battery installation for the remote control

Insert the battery and match the (+) and (-) on battery to the marks inside the battery compartment. Remember to remove the plastic insulating strip from the battery before first use.

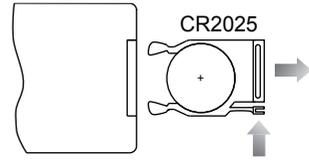


Note:

- The battery in the Remote Control normally lasts for about one year, although this depends on how often and for what operations the Remote Control is used.
- If the remote control unit fails to work even when it is operated near the player, replace the battery.
- Use a 3V lithium battery (No. CR2025 or equivalent).

Connecting the power

- Plug the power adapter into an outlet.
- Use only with the specified power adapter (12Vdc, 1.66A).

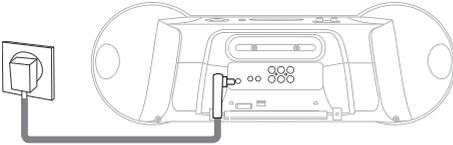


Inputting external media source

- This device can only play one media you input at a time. If more than one input source is connected, press  (remote control) or  (device) button to select which source you want to play.
- This device can only play JPEG, MP3 and MPEG 4* .avi formats. Not all images, audio and MPEG4 format files are compatible with this device. If the files cannot be played in this device, please convert these files to readable formats using your computer.

Inserting a memory card


- Insert your memory card into the appropriate slot according to the orientation marked on the machine.

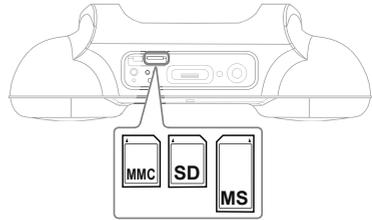

Inserting a USB device

- Insert an USB memory stick into the USB port.


Note: this port can not connect to PC directly.

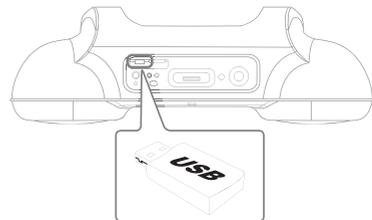

Connection-continued

Inserting iPod

- Insert an iPod into the iPod dock connector. Please select the supplied iPod dock according to your iPod model, then fit it onto the device's iPod connector before connecting iPod.

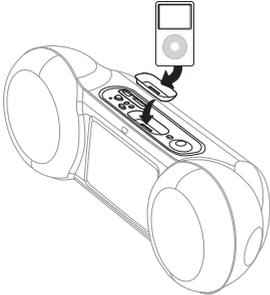


- Before inserting your iPod into the iPod dock, please refer to the table below to select an adaptor. Each adaptor is labelled with a number as shown in the table.

iPod nano 1,2 Generation	1
iPod mini 1,2 Generation	2
iPod video 30GB	3
iPod photo 30GB	4
iPod video 60GB, 80G, Colour 20G	5
iPod photo 40GB, 60GB	6

Note: The iPod will be automatically charged when connected to the power socket whether the power is ON or OFF.


AV In

- Input AV source from other AV device (e.g. Camcorder) with connection to Audio/Video input jack.
- Be sure to match up the correct colour with the cable connectors.

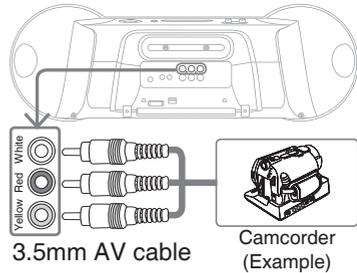

Line In


- Input audio source from MP3 Player's earphone jack to the device Line-In jack with 3.5mm audio cable (not supplied).

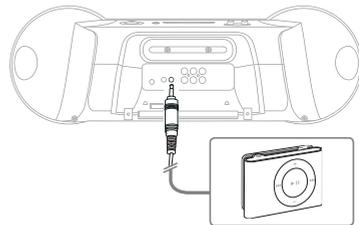

Outputting signals

Connecting with AV equipment

- Connect AV-OUT jack with other AV device's AV IN jack via AV cable.
- Be sure to match up the correct colour with the cable connectors.

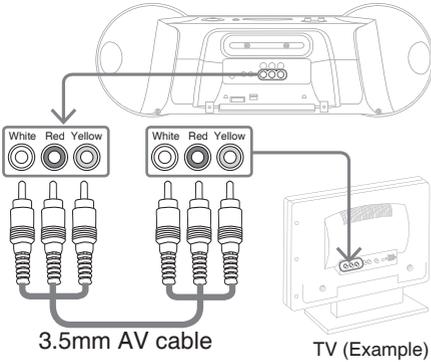


Connecting with audio equipment

- Connect the earphone jack with earphones with 3.5mm audio cable.

⚠ CAUTION:

To avoid possible damage to your hearing, do not play earphones at a high volume for long periods of time.

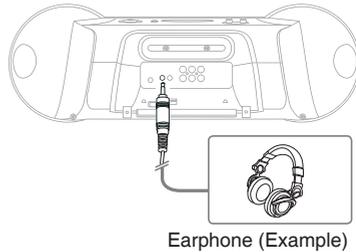

Basic Operation

- After turning on the power, the main operation page will be appeared on the screen. Press \blacktriangle / \blacktriangledown / \blacktriangleleft / \blacktriangleright buttons to select iPod, Photo, Music, Movie, AV IN, Line IN, or Setup functions.



- Please refer to the following table to select the proper mode to play the files.

Mode	Display format
Photo:	JPEG
Music:	MP3
Movie:	MPEG 4*.avi

Please note that not all images, audio and MPEG4 formats are compatible with the device.

- This device can only display one storage media's contents at a time. If more than one input source is connected, press \langle \rangle to select which source you want to play. If you insert SD/MMC card and USB pen drive at same time, the device will only play the files from SD/MMC card. To play the files from USB pen drive, please remove the SD/MMC card.
- When you input the external signals via AV composite jack or audio cable, only the volumes can be adjusted (AV In and Line In mode).

iPod Mode

1. Plug iPod into iPod dock (for connection details, refer to page 8).
2. Press the Power switch ON.
3. Press \blacktriangle / \blacktriangledown / \blacktriangleleft / \blacktriangleright buttons to select iPod from the main menu, then press OK .
4. Press \blacktriangleleft or MENU button can go back to the previous menu or press \blacktriangleright button to go to the next level of menus. Press \blacktriangle or \blacktriangledown buttons to select the item you wish to perform.
5. To view photos:
 - Press \blacktriangle / \blacktriangledown buttons to select the photo you wish to playback when you are in thumbnail mode, then press OK to display the selected photo by full screen on the iPod. Press OK again to display on the device screen.
 - In slide show mode, photos are accompanied with background music. You can not select the previous or next song while you are in the slide show mode. Press \blacktriangleleft / \blacktriangleright to go to next or previous photo.
6. To play music/video (using remote control):
 - Press \blacktriangle / \blacktriangledown buttons to select a music/video file you wish to playback, then press OK to play. Press OK again to display the video file on the device screen.
 - It is suggested to use the audio format preference in following order: Apple lossless, ACC then MP3.

Note:

1. To play music/video files using the device's cursor buttons, press the ◀ button to return to the previous menu and press ▲ / ▼ buttons to select the file you wish to play. Press ▶ button to play the file.
2. Full screen display with this device is not available for iPod shuffles and nanos because these iPod models do not support CVBS signal output.
3. When iPod is inserted into this device, it is suggested that the iPod settings should be set as below:

To view photo ➡ Photos ➡ Slide show
Settings ➡ TV Out ➡ On

To play music ➡ Settings ➡ EQ ➡
Classical

To play music ➡ Settings ➡ Sound
Check ➡ On

To play video ➡ Videos ➡ Video Set-
tings ➡ TV Out ➡ On

Viewing photos and slide shows

1. Turn the POWER switch to ON.
2. Press ▲/▼/◀/▶ buttons to select  **Photo** from the main menu, then press .
3. The slide show starts to play.
4. To pause the slide shows, press  button.
 - Displaying pictures bigger than 480 x 234 will take longer to load.
 - When the device is not operative in few second, the screen saver will be activated automatically. To stop the screen saver, press any button on the device or remote control.

Thumbnail Mode

1. Press  or  button to enter Thumbnail mode when you are in the slide show mode.
2. Press ▲/▼ buttons to select “**Page Up**” or “**Page Down**” if more pages are selectable, then press . Alternatively, press ◀ or ▶ buttons to navigate from page to page.
3. Press ▲/▼/◀/▶ buttons to select the photo you wish to play, then press  button to display the selected photo by full screen.
4. Press  button again to return to the main menu.



Note: Refer to  **Setup mode** to set up the slide show settings (page 13).

Basic Operation-continued

Rotation

1. Press \blacktriangle / \blacktriangledown / \blacktriangleleft / \blacktriangleright buttons to select the photo in the thumbnail mode.
2. Press OK button to enter full screen display mode.
3. Press \blacktriangleright button to rotate the photo 90 degree clockwise, press \blacktriangleleft button to rotate the photo 90 degree counterclockwise. Press \blacktriangle button to rotate the photo horizontally, press \blacktriangledown button to rotate the photo vertically.
4. The rotated picture will restore to its original rotation angle when you press HOME button to return the main menu.



Playing MP3 music

1. Turn the POWER switch to ON.
 2. Press \blacktriangle / \blacktriangledown / \blacktriangleleft / \blacktriangleright buttons to select Music from the main menu, then press OK button.
 3. The music starts to play automatically.
 4. Press \blacktriangleleft / \blacktriangleright button to increase or decrease the volumes.
 5. To stop playing, press HOME button.
- If selecting a folder, the folder list will display on the left screen and the file list on the right. Press \blacktriangleleft / \blacktriangleright buttons to enter the left or right screen, and then \blacktriangle / \blacktriangledown buttons to select the file you wish to play.

Playing a movie

1. Turn the POWER switch to ON.
 2. Press \blacktriangle / \blacktriangledown / \blacktriangleleft / \blacktriangleright buttons to select Movie from the main menu, then press OK button. The movie file will be played automatically.
 3. Press \blacktriangleleft / \blacktriangleright button to increase or decrease the volumes.
 4. To stop playing, press HOME button.
- If selecting a folder, the folder list will display on the left screen and the file list on the right. Press \blacktriangleleft / \blacktriangleright buttons to enter the left or right screen, and then \blacktriangle / \blacktriangledown buttons to select the file you wish to play.

AV In mode

1. Turn the POWER switch to ON.
2. Input AV source (for connection details, refer to page 8).
3. Press /// buttons to select **AV In** from the main menu, then press button to display the media files inputted from external device.

Line In mode

1. Turn the POWER switch to ON.
2. Insert audio source using 3.5mm audio cable (for connection details, refer to page 8).
3. Press /// buttons to select **Line In** from the main menu, then press button to play the music inputted from external device.

Note: When you input external signals via AV composite jacks or audio cable, only the , and buttons can be adjusted in AV In and Line In mode. Besides, the screen will remain black screen after connecting with external signal.

Setup mode

1. POWER switch to ON.
2. Press /// buttons to select **Setup** from the main menu, then press button.
3. To leave **Setup** mode, press again.

Setup	
Interval Time	5 Sec., 15 Sec., 30 Sec., 1 Min., 5 Min., 30 Min., 1 Hour, 4 Hours, 12 Hours, 1Day
Transition	No Effect, Random, Cover Up, Cover Down, Uncover Left, Push Right, Wipe Up, Wipe Down
Contrast	-4, -3, -2, -1, 0, +1, +2, +3, +4
OSD Language	English, French, German, Italian, Spanish, Portuguese, Dutch, Polish
TV System	NTSC, PAL
Reset	Confirm
Exit Setup Mode	

Troubleshooting

No power

- Check to make sure the power plug is plugged into the power outlet.
- Make sure there is power to the outlet.

Unable to view photos

- Not all JPEG files are compatible. Please open the files in the computer and resave them as JPEG files and try to playback in the device.
- Check if using compatible memory cards.

If picture display seems slow

- Use lower resolution picture.

Unable to view films

- Not all MPEG 4(*.avi) files are compatible. Please open the files in the computer and convert into readable formats.

Memory card

- If you want to insert MS Duo, MS Duo Pro, M2 or MS PRO-HG card into this device, use only with Memory Stick Duo Replacement Adapter or Memory Stick Micro Adapter (not supplied).
- This device does not support SDHC card.

iPod does not respond to the device

- Check the connection, if the iPod is not installed properly. Remove the iPod and reinsert the iPod into the iPod dock connector.
- Check any obstruction on the iPod or device's dock connectors.

iPod does not recharge

- The iPod may be not installed properly. Remove and reinsert the iPod into the iPod dock connector.
- Verify that the iPod is working before inserting into device's dock connector.

Remote control does not respond

- Check the battery if the remote control does not work.
- Check the battery is installed with the correct polarities (+ and -).

© 2007
Issue 1 - October 2007