


Goodmans

GMC1042MP3

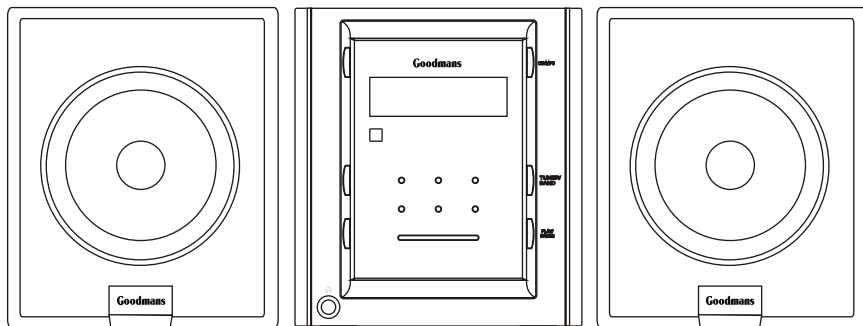

INSTRUCTION MANUAL



**Before operating this unit,
please read this Owners manual carefully.**

WARNINGS

TO Prevent fire or shock hazard, do not use this plug with an extension cord, receptacle or add other outlet unless the blades can be fully inserted to prevent blade exposure. To prevent fire or shock hazard, do not expose this appliance to rain or moisture.

	<p>WARNING</p> <p>RISK OF ELECTRICSHOCK DO NOT OPEN DO</p>	
<p>The lightning flash with arrowhead symbol, within an equilateral triangle is intended to alert the user to the presence of 'uninsulated' dangerous voltage' within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.</p>	<p>CAUTION : TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK),NO USER SERVICEABLE PARTS INSIDE REFER SERVICING TO QUALIFIED SERVICE PERSONNEL</p>	<p>The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompany-ing the appliance</p>


IMPORTANT SAFETY INSTRUCTIONS

1. Read these instruction.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this product near water (swimming pool, beach, lake etc.).
6. Clean only with a dry cloth.
7. Do not block any of the ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, Stoves or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug, A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at receptacles and the point where they exit from the stereo.
11. Only use attachments/accessories specified by the manufacturer.
12. Unplug this apparatus during lightning storms or when unused for long periods of time
13. Refer all servicing to qualified service personnel. Servicing is required when the system has been damaged in any way, such as a damaged power-supply cord or plug. Has been exposed to rain or moisture, does not operate normally, or has been dropped.
14. This appliance should not be exposed to dripping water or splashing water and objects filled with water, such as vases, should not be placed on this unit


Quick View

To get the maximum enjoyment and performance from this product, please read this manual and familiarize yourself with the functions and controls before attempting to operate it. Correct usage will assure years of trouble free performance and listening pleasure.

Front View

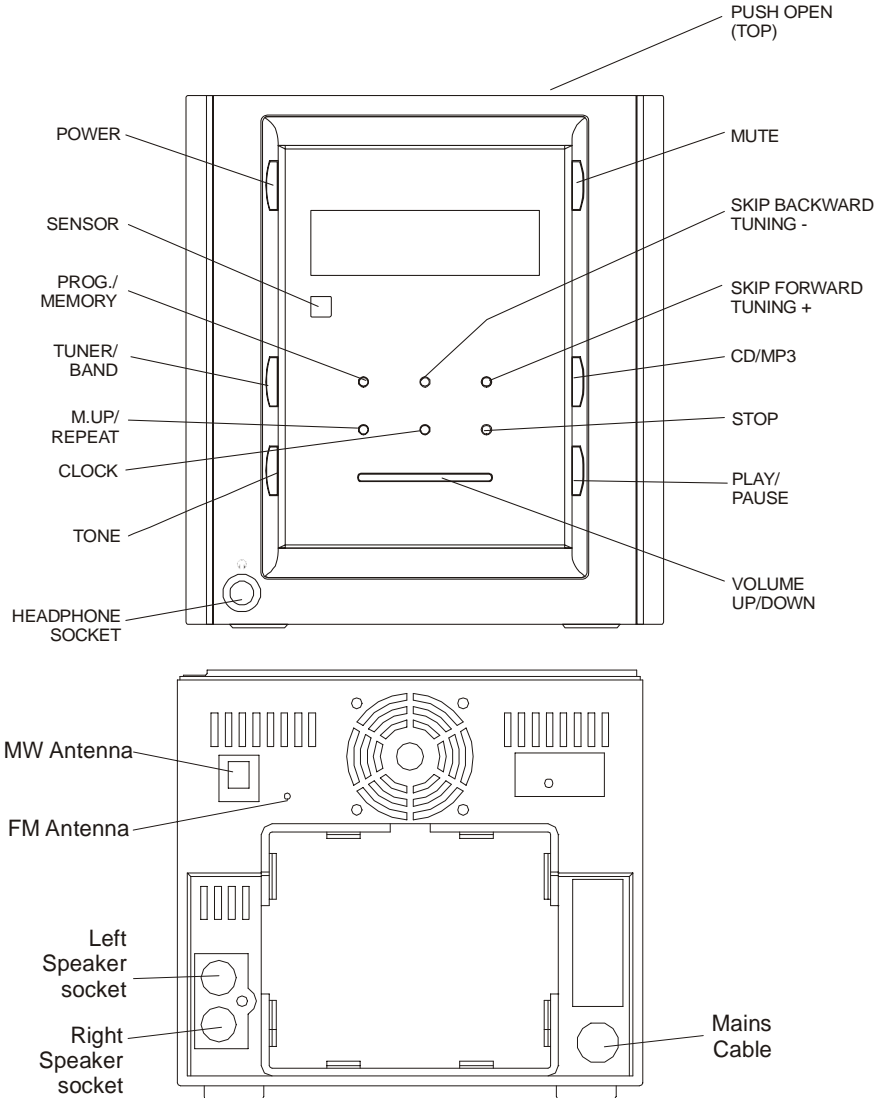

Remote Control

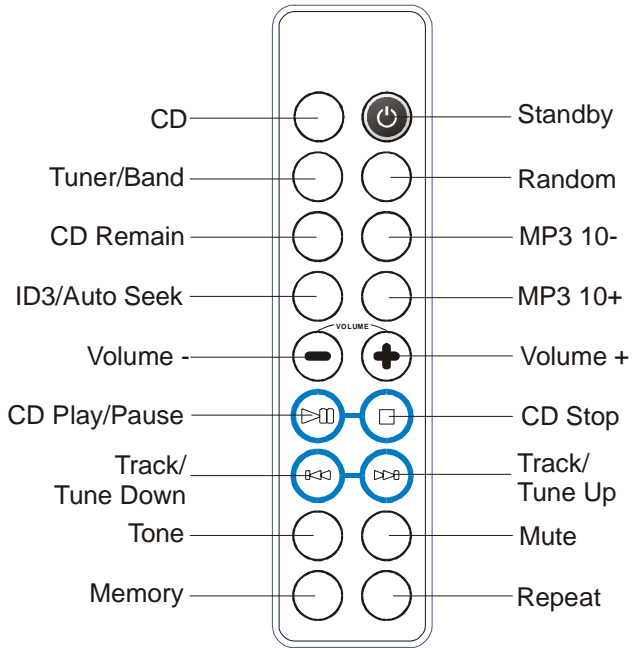

Getting Started

Unpacking your GMC1042MP3 Micro System

Carefully remove your CD micro system from its packaging. You may wish to store the packaging for future use.

Box Contents:

- CD/MP3/WMA micro system
- 2 speakers (speaker cables attached)
- Remote control
- MW Loop Antenna
- User Guide

AC CONNECTION

Plug the power cord into an AC outlet having 230v,50Hz only. Connecting this unit to other power sources may damage the unit.

NOTES:

*The AC polarized to help minimize the possibility of electric shock. If the polarized plug does not fit into a nonpolarized AC outlet, do not file or cut the wide blade; it is the user's responsibility to have an electrician replace the obsolete outlet.

*The power cord should be unplugged from the outlet when the unit is not going to be used for a long period of time.

Installation

Speaker Connection

1. Unwind the cable from each speaker.
2. At the rear of the CD micro system there are two speaker sockets.
3. Plug the speaker located on the right into the socket marked 'R' and coloured red.
4. Plug the speaker located on the left into the socket marked 'L' and coloured white.
5. For optimal stereo effect, place the speakers approximately 1.5m apart.

AC Power Connection

1. Connect the mains plug to a mains supply socket and switch on the supply.
2. At the front of the CD micro system unit, press the POWER button.
3. The LCD display will light up.

Antenna

The FM antenna is attached to the back of the unit. Unwind the wire. Positioning is described in the Radio section.

The MW antenna is a separate loop aerial that plugs into the back of the unit at the socket marked 'MW ANT.'. Its assembly is described in the Radio section.

Remote Control

The remote control requires 1 x 3V Lithium Battery, (CR2025).

Battery Installation

1. Press the small clip down a little as shown in the first picture then slide the battery holder out and remove.



2. Refer to polarity (+ or -) markings on the battery holder and insert a new battery.
3. Replace the battery holder

Note: The remote control will cease to function when the battery becomes weak.

Operating the remote control

Point the remote control at the front of the CD micro system, to operate. The IR sensor is located below the LCD display.

The remote control will work up to 7m away from the IR sensor.

Do not block the path of the beam from the remote control to the unit. Dark walls, direct sunlight or very bright light will reduce the sensitivity of the IR sensor

Setting the Clock

The clock can be set by using the buttons on the front of the unit or the remote control.

Setting the Clock

1. Connect the main plug to a main supply socket.
2. Press and hold the PROG./MEMORY button.
3. Press TONE button, the display will show the time with the hours flashing, use either of the SKIP buttons to select the hours and press PROG./MEMORY button, the hours stops flashing.
4. The display will show the time with the minutes flashing, Use either of the SKIP buttons to select the minutes and press PROG./MEMORY button, the minutes stops flashing.

The clock is now set.

Operation

Now your CD micro system is installed and ready for use, please refer to the following instructions for correct operation.

AC Power Operation

The CD micro system will be in standby mode, when the AC power supply is connected and switched on.

At the front of the CD micro system, or using the remote control, press POWER, to switch the CD micro system on. The LCD display will light up.

Volume Control

WARNING

Do not turn off the CD micro system when the volume is set at high level. When it is subsequently turned on, a sudden blast of sound may damage your hearing and the external speakers.

The volume level can be adjusted either using the controls on the unit or by the remote control.

On the unit press the (+) button to increase the volume and press the (-) to reduce the volume. The volume level will be displayed while adjustments are being made.

To adjust the volume level using the remote control, press the VOLUME +/- buttons.

Press MUTE on either the unit or the remote control to mute the sound. Press MUTE again to resume sound.

Note: Pressing any of the volume control buttons will also resume sound.

Headphones

Note: Reduce the volume to a low level before putting on headphones. Adjust volume to a comfortable level.

A headphones socket is provided for private listening. It is located on the front of the unit. see page 3

A pair of stereo headphones with a 3.5mm stereo plug is required. Insert the stereo plug into the socket for headphone use.

The external speakers are automatically disconnected when headphones are in use.

TONE

Your CD micro system has " BASS/TREBLE" sound effect setting. The setting can be selected by pressing the TONE button on the remote control or on the unit.

- a. Press once to Bass mode.
- b. Press again to Treble mode.
- c. Press Vol Up/Down button to adjust the Bass/Treble effect.

Radio

Operation

At the front of the CD micro system, or using the remote control, press **POWER**, to switch the CD micro system on. The LCD display will light up.

Press either the **TUNER/BAND** button on the remote control or the **TUNER/BAND** button on the unit to select the radio tuner.

Tuning

Press either **TUNER/BAND** on the remote control or **TUNER/BAND** on the unit to select between FM and MW bands.

Use the tuning buttons on the remote control or on the unit to select the desired station. The frequency will display on the LCD display.

Pressing any of the tuning buttons briefly will change the frequency by one increment. Pressing and holding the button for a couple of seconds will cause the tuner to search for the next radio station.

Pressing any of the tuning buttons during a search will stop the search.

FM

FM Antenna

Fully extend the FM antenna wire and position it to obtain the best FM reception.

FM Stereo

The CD micro system is capable of receiving stereo FM broadcasts. When you are tuned to a stereo broadcast, 'STEREO' will be displayed.

MW

MW Loop Antenna

For MW reception broadcasts are picked up through a loop antenna that plugs into the back of the unit.

The antenna assembly has a fixing system attached that can be folded to form either a stand or wall mounting as shown in the figures opposite. The wall mounting has two holes for round head screws. These are not supplied.

Note: It is normal for the position of the antenna to be adjusted to achieve the best reception. If selecting the wall mounted option ensure that you can receive the radio stations you listen to before fixing.



Preset Memory Stations

Your CD/MP3/WMA micro system can store up to 20 preset radio stations, 20 FM and 20 MW.

Once a station is in a preset memory it can be retuned by pressing the M-UP/REPEAT button on either the remote control or the front of the unit until the desired preset number is displayed.

To Preset Stations using the Remote Control

1. Press the Tuning buttons to select the desired frequency.
2. Press the MEMORY button.
MEMORY will flash on the display.
3. Press the **◀ ▶** button until the desired preset memory number is displayed.
4. Press the MEMORY button, to store the frequency into the selected memory location. MEMORY will stop flashing and remain on the display.
The frequency is now preset.

To Preset Stations using the Unit Controls

1. Press the SKIP/TUNING buttons to select the desired frequency.
2. Press the PROG./MEMORY button.
MEMORY will flash on the display.
3. Press the M-UP/REPEAT button until the desired preset memory number is displayed.
4. Press the PROG./MEMORY button, to store the frequency into the selected memory location. MEMORY will stop flashing and remain on the display.
The frequency is now preset.

CD player

Operation

At the front of the CD micro system, or using the remote control, press POWER, to switch the CD micro system on. The LCD display will light up.

Push the CD / MP3 button to switch to CD mode. The display will initially flash zeros then show 'no dISC'.



Only use CDs that bear the CD logo.

Loading and Unloading CDs

1. Press the PUSH OPEN button on the CD door to open the CD compartment.
Note: If using the CD micro system for the first time, remove the protective sheet from inside the compartment, before use.
2. Remove the CD from its case, place carefully into disc compartment over the centre spindle and lock in place, with the label side up.
3. Press the OPEN/CLOSE button to close the CD door. The display will show the total number of tracks and the total playing time. The CD door can be opened at any time.

First press either STOP on the remote control or STOP on the unit, then press the OPEN/CLOSE button.

Please Note:

- Do not place foreign objects into the CD compartment, this may damage the mechanism.
- Always keep the CD door shut, to prevent dust or dirt from getting into CD mechanism.
- Never place more than one CD into the CD compartment at any time.
- *After CD door is closed, CD information may not appear on the LCD display, this means the CD cannot be read by the CD mechanism. Refer to the 'Care and maintenance' section.*

Playing a CD

On CD micro system, or remote control:

1. Press the play/pause button ▶ II . The display will show the track number and the elapsed playing time.
2. To pause playback, press the play/pause button ▶ II . The elapsed time will hold.
3. To resume playback press play/pause ▶ II again.
4. To stop playback, press either STOP on the remote control or STOP on the unit.

Track Selection

Using the remote control:

1. Press either the ◀▶ buttons to select the desired track number.
2. Press play/pause, ▶ II to start playing.

Using the unit controls:

1. Press either of the SKIP/TUNING buttons to select the desired track number.
2. Press PLAY/PAUSE, to start playing.

Track Selection During Play Using the remote control:

1. During play, press either of the ◀▶ buttons to select the desired track number. The selected track will automatically start to play.

Using the unit controls:

1. During play, press either of the SKIP/TUNING buttons to select the desired track number. The selected track will automatically start to play.

Stop Play

1. Press STOP/■ on the remote control or the unit. The display will show the total number of tracks and total playing time.
2. Press the OPEN/CLOSE button, to remove the CD from the compartment.

Programmed Playback

Up to 20 tracks can be programmed for playback.

Using the remote control:

1. Press the MEMORY button. MEMORY will flash on the display, the track number is shown on the left and the program number on the right, as below.



2. Use the «» buttons to select the desired track number to be played back first.
3. Press the MEMORY button. The display will increment the program playback number.
4. Use the «» buttons to select the track number to be played back second in the programmed sequence.
5. Press the MEMORY button.
6. Repeat this process until you have entered all of the tracks you wish to play back in the programmed sequence..
7. Press PLAY/PAUSE to start playback. Play back will start with first track selected.
8. To stop playback press STOP/■
9. Opening the CD door will clear program.

Using the unit controls:

1. Press PROG./MEMORY. MEMORY will flash on the display, the track number is shown on the left and the program number on the right, as above.
2. Use the SKIP/TUNING buttons to select the desired track number to be played back first.
3. Press PROG./MEMORY. The display will increment the program playback number.

4. Use the SKIP/TUNING buttons to select the track number to be played back second in the programmed sequence.
5. Press the PROG./MEMORY button.
6. Repeat this process until you have entered all of the tracks you wish to play back in the programmed sequence.
7. Press PLAY/PAUSE to start playback. Play back will start with first track selected.
8. To stop playback, press the STOP/■ button.
9. Opening the CD door will clear program.

Random Play

1. With the CD loaded, press RANDOM on the remote control. The tracks will be played in a random order.
2. To cancel random play, either press RANDOM or STOP on the remote control, or STOP on the unit.



Repeat Play

1. Press the REPEAT on either the remote control or the unit once, to repeat playback of the same track. The REPEAT indicator will flash on the display.
2. To repeat all tracks, press M-UP/REPEAT twice. The REPEAT indicator will stop flashing and remain on.
3. To cancel, press M-UP/REPEAT on the unit until the REPEAT indicator extinguishes.

You can also cancel the repeat function by pressing either STOP on the remote control or STOP on the unit.

1. Place in the MP3/WMA formatted disc, after reading TOC (Table of Content)
2. The player will automatically detect the MP3/WMA formatted disc and <MP3>/<WMA> will be shown on the LCD Display.
3. Press PLAY button to start playback.
4. To stop playing, press STOP button.

Note:

- It is normal to take longer time for the player to read MP3/WMA disc, as the content of MP3/WMA formatted disc is much more than ordinary CD disc.
- Because of non-standardized format definition/production of MP3/WMA disc, playback quality and performance are not guaranteed.
- If no sound comes out or any problem happen when playing MP3/WMA disc, you are suggested to remove the MP3/WMA disc and change to ordinary CD disc.

TRACK SELECTION BY REMOTE

1. Press the MP3 10-/MP3 10+ buttons to get every ten tracks on accumulated basis.
2. Press PLAY/PAUSE to start playing.

MP3 MOD

- Press once at stop mode to activate the ID3 ON- to show the MP3 text.
- To switch off this function, press once ID3 button during stop mode.

Compact Disc Care

CD Handling

When handling CDs:

- Do not touch the recorded surface.
- Do not stick paper, or write, on either side of the CD.
- Do not bend the CD.

CD Storage

- To avoid scratches/damage, always put CDs back in their cases, after use.
- Do not expose CDs to direct sunlight, high temperature/humidity, for long periods.

Cleaning CDs

When cleaning CDs:

- Use a soft cloth, to wipe fingerprints and dust from the disc surface.
- Wipe in a straight line from the centre to the outside of the disc. Small dust particles and light stains, will not affect playback.
- Never use benzene, thinners, record cleaner fluid, or antistatic spray to clean CDs.

Care of the CD Micro system

Cleaning

- Always unplug the product before you clean it.
- Do not use liquid or aerosol cleaners.
- Clean your product with a soft, damp (not wet) cloth.

Ventilation

- Do not block or cover ventilation slots. Blocking of ventilation slots, may lead to overheating of the product.

Fault Finding

Product will not operate.

- Ensure product is connected to the mains supply and switched ON.
- Ensure the POWER button has been pressed.

No sound

- Ensure speakers are properly connected.
- Adjust volume level.
- Check, headphones are not plugged in.

Poor radio reception

- Ensure aerial is positioned to receive best signal.
- Adjust tuning to improve reception.
- Possible interference from electrical equipment (e.g. Television). Reposition product, to reduce interference.

No sound/poor sound quality from CD player

- Ensure CD is correctly loaded, label side up.
- Ensure CD is free from dust, dirt or scratches. CD may require replacement.
- Condensation on optic lens. Wait 30 minutes, then retry operation.
- CD skipping. Ensure CD is free from dust, dirt or scratches, clean CD. Ensure product is not subject to vibrati