 


Goodmans

PERSONAL ENTERTAINMENT SYSTEM

GPDR 40

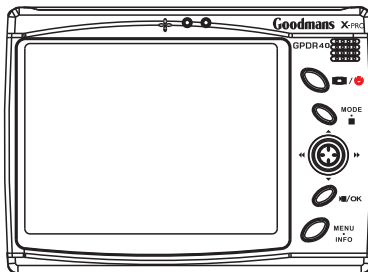

USER GUIDE



This symbol on the product or in the instructions means that your electrical and electronic equipment should be disposed at the end of its life separately from your household waste. There are separate collection systems for recycling in the EU. For more information, please contact the local authority or your retailer where you purchased the product.

 
SAFETY INSTRUCTION




Do not plug/unplug the power cord with wet hands.




Do not drop the device. Handle with care.

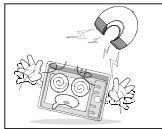


Keep away from magnetic sources.

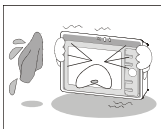 

 Do not clean the device with wet cloth. Use only dry and soft cloth.

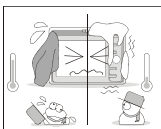

 
Do not subject the device to low temperatures or high humidity.

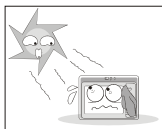


Do not expose to direct sunlight or extreme heat.



 Do not try to disassemble or repair the device.

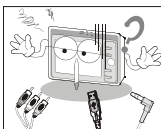

Always connect the cables correctly.

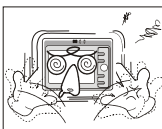 

Do not shake the device violently while operating.

Important Battery Information

- The battery used in this device may present a risk of fire or chemical burn if mistreated.
- Do not separately recharge, disassemble, heat above 60°C (140°F), or incinerate.
- Use only the supplied charger. Use of a different charger may present a risk of fire or explosion.
- Should the battery become exhausted, recharge the unit using the Supplied AC adapter as soon as possible. This unit has to be recharged for at least 30 minutes before further operation. To fully charge the unit will take approximately 3.5 hours.
- Keep the unit away from children.

Copyright Caution

- Copying CDs or loading music, video, or picture files for sale or other business purposes is or may be a violation of copyright law.
- Copyrighted materials, works of art, and/or presentations may require authorization to be fully or partially recorded.
- Please be aware of all such applicable laws concerning the recording and use of such for your country.

 
HDD Formatting Caution

Do not use the formatting command on any PC to format this unit, use only the format option accessible in the “Setup menu” (Please note this function will not be available when connected to a PC). Ensure that the unit is restarted to restore the system data and bootup files before connecting the unit to a PC. Failure to do this may result in the unit not functioning correctly.

Battery Recharge

Before the GPDR40 is used for the first time, recharge the battery for at least 3.5 hours BEFORE operation.

1. Plug one end of the power adapter to the DC IN socket of the GPDR40, the other end in to the appropriate wall socket.
2. The red recharge indicator will illuminate.
3. When the power is fully recharged, the indicator will extinguish.

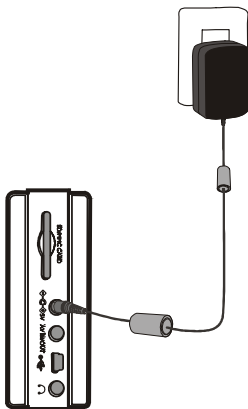

Date and Time Set Up

1. Use the joystick to highlight **Calendar**.
2. Press the **▶▶ / OK** button.
3. Press **MENU / INFO** button.
4. Press the joystick right to highlight **DATE** and press the joystick right to enter.
5. Press **▶▶ / OK** to highlight **DAY** and press the joystick up / down to set the day. Press **▶▶ / OK** button to confirm and continue.
6. Press the joystick up / down to set the month and press **▶▶ / OK** button to confirm and continue.
7. Press the joystick up / down to set the year and press **▶▶ / OK** button to confirm.
8. Press the joystick down to highlight **SAVE**.
9. Press **▶▶ / OK** to save.

Note: The default date format is DD/MM/YY.
To change the format, go to **SETUP Menu**.

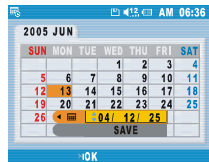 
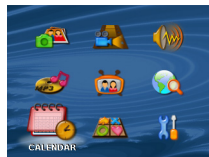 


Table of Contents


SAFETY INSTRUCTION	II
IMPORTANT BATTERY INFORMATION	III
COPYRIGHT CAUTION	III
HDD FORMATTING CAUTION	III
BATTERY RECHARGE	IV
DATE&TIME SET UP	V
OVERVIEW	1
SOFTWARE INSTALLATION	4
CONNECTING TO PC	6
Adding Files to the GPDR40 (Mass Storage)	6
Converting and Transferring Files	9
PVR Console	13
BASIC FUNCTIONS	14
Photo Player	14
Photo Playback	14
Zoom	15

Record Voice Clip for a Photo	16
Playback/Delete the Voice Clip Attached to a Photo	17
Slide Show Playback	19
Effects	20
Memory Mix	21
Video Player	22
Video Playback	22
Repeat Playback	24
Delete	27
Voice Player	29
Voice Playback	29
Record Voice Clip	30
Repeat Playback	31
Alarm	35
Delete	36


Music Player	37
Music Playback	37
Alarm	38
AV Center	40
Record from External Equipment to the GPDR40	40
Timer Record	44
File Browser	47
Sort	48
Rename	49
Create New Folder	50
Calendar	52
Game	53
TIC-TAC-TOE	53
PUZZLE	54
MINESWEEPER	55

OTHER FUNCTIONS	56
PVR Console	56
Change the Startup Screen	56
Change the Startup Sound & Button Sound	58
DPS Menu	60
DPS	60
How to Print	61
OSD Menu	66
Photo Player Menu	66
Video Player Menu	68
Voice Player Menu	69
Music Player Menu	71
AV Center Menu	72
File Browser Menu	73
Calendar Menu	75
Setup Menu	76
Specifications	79

 OVERVIEW

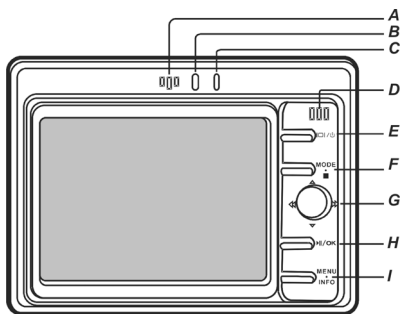

Joystick

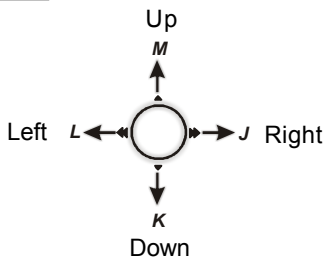 

A. Microphone

B. Power indicator

C. Recharge indicator

D. Speaker

E. LCD / Power button

Press briefly to turn the LCD Display on/off.

 
Press and hold for approximately 3 seconds to power off.

F. Mode / Stop button

G. Joystick

H. Play / OK button

I. Menu / Info button

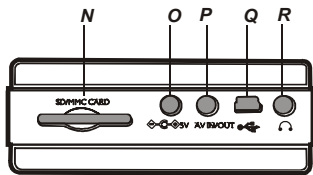

N. SD/MMC Card slot

O. DC IN socket

 
P. AV IN/OUT socket

Q. USB socket

R. Earphone socket

S. Reset

Press the button to shut down the device in the unlikely event that no buttons function. To power on after resetting, press the **POWER** button.

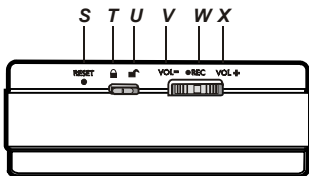

T. Lock

Slide the switch to this position to activate the key lock.

U. Unlock

Slide the switch to this position to release the key lock.

 
V. Volume-down

Scroll down to decrease the volume.


W. Record

X. Volume-up


Scroll up to increase the volume.

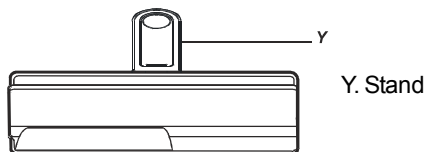


Installation of the Stand

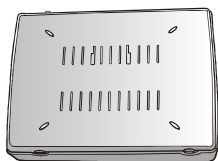 

Turn over the
GPDR40

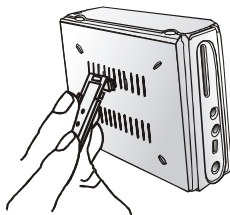 

 Align the tabs on
the stand with the
guide holes on
the GPDR40

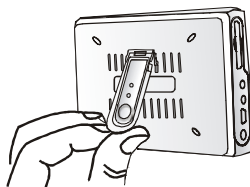

Slide the stand
upwards into
place

Software Installation

The bundled CD contains many useful software tools. Follow the instructions below to complete the installation.



1. Insert the Installation CD into CD-ROM drive on a PC. The **Select Language** dialog box appears.
2. Select your preferred language and click "**OK**" to continue.
3. A **Welcome** dialog box appears. Click "**Next**".
4. The **Select Components** dialog box appears. Select the software to install by ticking and unticking the relevant checkboxes and then click "**Next**".




5. The **Select Program Folder** dialog box appears. You can change the folder name listed in the text box, or simply click **“Next”** to continue.



6. The **Start Copying Files** dialog box appears confirming that the listed software will be installed. Click **“Next”** to continue.



7. Follow the on-screen instructions to continue and complete the installation.
8. When the installation is complete, the icon  will be shown in the windows' taskbar.

Connecting to PC

Note: Before connecting the unit to the PC, ensure that the software has been installed.

Adding Files to the GPDR40 (Mass Storage)

Via PC USB port

To transfer or copy files to/from a personal computer:

- Locate the USB cable from the supplied accessories and plug the large plug of the cable into an available USB socket on the PC. Try to connect directly to the PC and avoid connecting via passive USB hubs as this may cause transfer problems.
- Plug the smaller plug into the USB socket on the unit.
- Switch ON the unit.

Windows should now identify the unit and initialise the relevant mass storage driver for it. A mode switch screen appears on the GPDR40. Highlight “MASS STORAGE” and press ► / OK.




- Double click on “My Computer” icon, a window will open and two removable drives will be shown (one for the unit and the other for the SD/MMC card), typically designated E: and F: if the computer has one hard drive or partition and one CD ROM drive.



Note for Windows 2000 users: Windows 2000 will only support one mass storage device from a single USB port. Therefore, only one of the drives will be shown. To fix this problem, download service pack 4 from the following website:

[http://www.microsoft.com/windows2000/downloads/servicepacks/.](http://www.microsoft.com/windows2000/downloads/servicepacks/)”

 
- The removable drives can be used in the same way as a normal hard drive and any files can be dragged into the drives to add them to the unit or the SD/MMC memory.


Once the required files have been copied to the removable drives, double click on the  icon in the system toolbar to stop or eject, Windows will report when the drives have been safely stopped.

Remove the USB cable from the USB sockets on the unit and computer.


Converting and Transferring Files

1. Power on the GPDR40 and connect it to the computer with the provided USB cable. (For details on connection, see page 6)

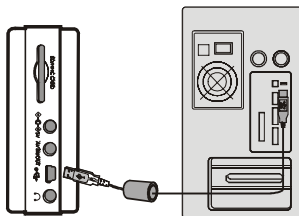

2. After connecting the GPDR40 to the PC, the **PVR Console** (Refer to Page 13 for more information) will be shown on the computer. If it does not show, double click on the icon  in the taskbar.



- Click on the  icon to open **MediaConverter** application. The following appears.
- Click the **Select Media** button to choose the files.



- Click the **Select Destination** button and choose the destination where the converted files will be uploaded to. The “To Folder” option will save the converted files to the folder list below. The “To Device” will upload the converted files directly to the Device. (Please note this option will only be available if the GPDR40 is connected to the computer and powered on).
- Click the **Convert** button to start the conversion.

Note: Use only **MediaConverter** to convert and transfer video files to the GPDR40. The source video can come from a variety of different sources and in a number of different formats. However **MediaConverter** does not support all video formats or codecs.


MediaConverter™ Supported File Type	
File Type (Format)	Extension File Name
Windows Media Audio and Video File Format	.asf, wmv
Windows Audio and Video File Format	.avi (DivX 3.x/4.0/5.0, Xvid, Motion JPEG AVI)
Audio File Format	.mp3
Moving Picture Experts Group (MPEG)	.mpeg, mpg, dat
IMAGE	.bmp, tif, gif, png, jpg

Important notice:

“If a file copied to the unit using the mass storage drag and drop method does not playback or cannot be viewed, delete the file from the unit and then convert it to a compatible format using the file converter. This tool will convert the file to a format that the GPDR40 can recognise (When converting, please ensure that all the required CODECs are installed before opening the file converter tool. If the video file plays on the PC then the CODEC is most likely already installed. If the file does not play then the CODEC will have to be installed.) If the file still does not playback after converting it with the file converter, it will not be possible to play/view the file on the GPDR40.

PVR Console

 PVR Console consists of 4 applications.

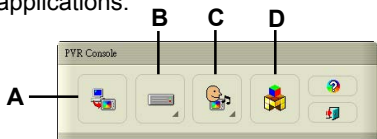

A. MediaConverter

Converts multimedia files into playable formats on the GPDR40.
(See Page 10)

B. Disk Tools

Opens Microsoft's **Disk Checkup** and **Disk Defragmenter** programs for system diagnosis and defragmentation.

C. Personal Style

Changes the **Startup Screen** and **Sound Effects** for the GPDR40.

D. MAX Console


Opens MAX Console software for image editing and retouching.

Note: To allow the above applications to function correctly, please download and install Media Player 9 from Microsoft's website.



Photo Playback

 Select **PHOTO PLAYER** in the **Main Menu** using the joystick and press **▶▶** / **OK** button to enter.

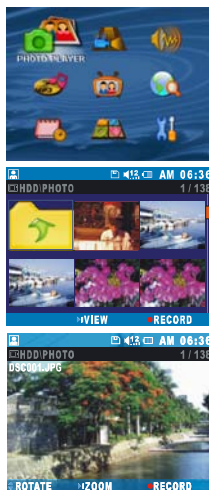

Thumbnail View (Default):

The photos will be displayed as thumbnails with 6 to a page.

Single Photo View:

To view a single photo in full screen, use the joystick to select the photo and press **▶▶** / **OK** button.


To return to Thumbnail View, press the **MODE** / **■** button.




Zoom



While viewing a photo as full screen, press **►||** / **OK** button. The selected photo will be magnified by 2X. To magnify to 4x, press **►||** / **OK** button again.

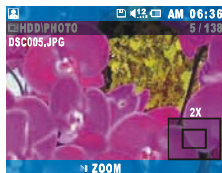 


To return to normal viewing, press the **►||** / **OK** button again.

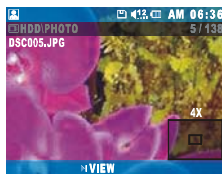 



Record Voice Clip for a Photo

 While viewing a photo in full screen, press **REC** button to record a voice clip.

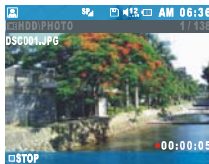

The screen on the left appears. Simply press **OK** button to start recording.

To stop, press **MODE** or **REC** button.

When the recording is done, a speaker icon will appear on the right top of the photo.

 
Tip:



You can change the audio quality setting before recording. Simply use the joystick to highlight **Q** and press **OK** button to enter.

To change the setting, use the joystick to select the quality (**SP** is better quality than **LP**) and press **OK** button to confirm. Highlight **START** using the joystick and press **OK** button to start recording with the new setting.



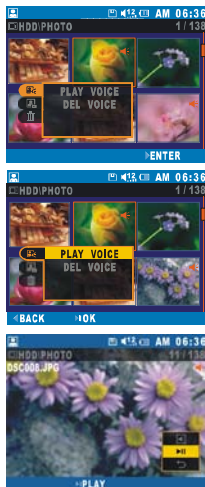


Playback/Delete the Voice Clip Attached to a Photo








Select a photo from the Thumbnail View with voice message attached as shown by the  icon. Press **MENU / INFO** button and scroll down to select  icon. Press the joystick right to highlight **PLAY VOICE**.

Play Voice:

Press  / **OK** button to display the voice sub-menu.

Use the joystick to highlight the  / **OK** option and press  / **OK** button to play the voice clip.


To change the photo (only those with voice clips will be shown), scroll up to    icon and then press the joystick right / left to change.


To exit the voice playback sub-menu, highlight the  option and press  / **OK**.




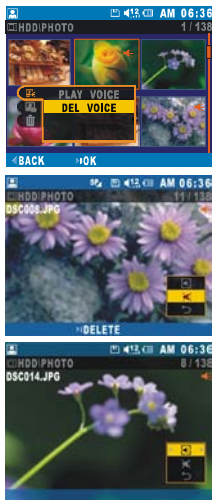 
Delete Voice:

Scroll down to select **DEL VOICE** and press **▶||** / **OK** button to enter the delete voice clip sub-menu.

To select a different voice message to be deleted, scroll up to  icon and press the joystick left / right to select.

To delete the voice clip attached to the currently displayed photo, highlight the  option and press **▶||** / **OK** button.


When the voice message is deleted, the  icon will be removed from the photo.







Slide Show Playback



 
 
Use the joystick to select the photo you want to start the slide show with. Press **MENU / INFO** button and scroll down to select . Press the joystick right twice to enter the slide show sub-menu.

Tip:

You can change the interval and transition effect setting. To change the interval, scroll up to  and press **▶▶ / OK** button to enter. Press the joystick up / down to set the time each photo is shown and press **▶▶ / OK** button to confirm.



To change the transition effect, scroll to  and press **▶▶ / OK** to enter.


Use the joystick left / right to choose an effect and press **▶▶ / OK** button to confirm.

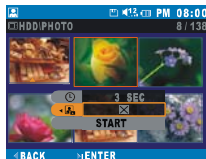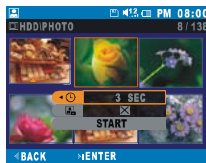



Effects

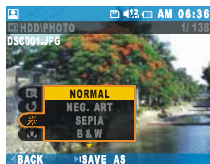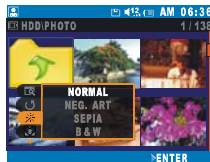  


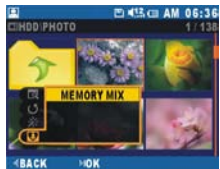 
While in Thumbnail View, use the joystick to select the photo to apply effects to. Press **MENU / INFO** button and scroll down to . Press the joystick right to enter the effects sub-menu. Use the joystick up / down to select the effect to apply.






Memory Mix




Use the joystick to select the photo to add frames to. Press **MENU / INFO** button and scroll down to select . Press the joystick right to highlight **MEMORY MIX**. Press **▶▶ / OK** button to enter a frame sub-menu.



 Scroll up to highlight  and use the joystick left / right to change the photo to apply the frame to. Scroll up to highlight . Use the joystick left / right to select the frame to add to the photo. To save the image as a new file, press **▶▶ / OK** button.

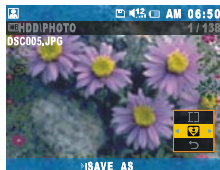


To exit the sub-menu, highlight  and press **▶▶ / OK** button.

Video Playback

Select **VIDEO PLAYER** in the **Main Menu** and press **OK** button to enter.




Use the joystick to select a video and press **▶||** / **OK** button to play. Use the joystick Up / Down to scroll through files.

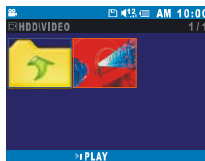 

During Playback, press **MODE** / **■** button to stop playback, press the joystick right (**▶▶**) to advance playback and press the joystick left (**◀◀**) to reverse playback.



Tip:

 You can choose the point at which to start playback of the selected video before playing.

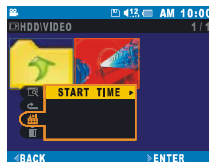

Press **MENU/INFO** button and scroll down to select **▶||**. Press the joystick right twice to enter the start time sub-menu.

  Note: To turn off the power during video playing, first press the **STOP** button to stop playback and then press the power button to turn it off.

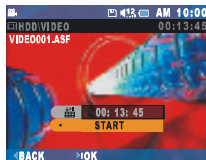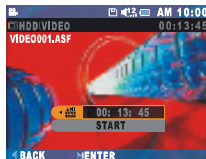


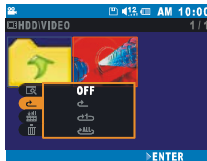 
Set Start Time

The total video time will be shown on the screen. Press **▶▶ / OK** button and then press the joystick up / down to set the hours. Press **▶▶ / OK** button and then press the joystick up / down to set the minutes. Press **▶▶ / OK** button and then press the joystick up / down to set the seconds.


Finally, press **▶▶ / OK** button to confirm. Press joystick up / down to highlight “Start” and then press **▶▶ / OK** button again to start playback from the selected point.

Repeat Playback


Select **VIDEO PLAYER** in the **Main Menu** and press **▶|| / OK** button to enter. Press **MENU / INFO** button and scroll down to select  icon from the menu.




Repeat Normal



Press the joystick right to highlight  **NORMAL PLAYBACK** from REPEAT menu. Press **▶|| / OK** button to confirm.

   
Playback will start with the selected video and will play all videos until the last one. Then playback will stop.

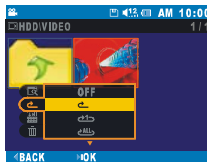

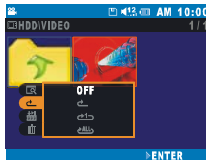
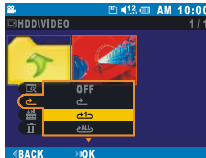 


Repeat One




Select  **REPEAT ONE** from REPEAT Menu and press  / **OK** button to confirm.

Press the joystick up / down to highlight a video file and press  / **OK** button to playback the current selected video file repeatedly.

 
To return to normal playback, select  **NORMAL PLAYBACK** from the menu.



Repeat All


Select  **REPEAT ALL** from REPEAT Menu and press  / **OK** button to confirm. Press the joystick up / down to highlight a video file and press  / **OK** button to start playback all the video files continuously.

To return to normal playback, select  **NORMAL PLAYBACK** from the menu.

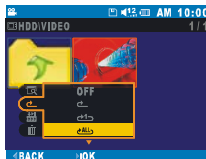



VIDEO PLAYER

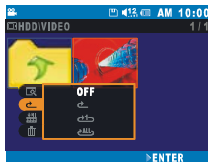 

Repeat A-B

 
Select **A-B REPEAT A-B** from REPEAT Menu and press **▶▶ / OK** button to confirm.

Press up / down on the joystick to select a video and press **▶▶ / OK** button to start playback.

During the playback, press **▶▶ / OK** button to set point A and then press **▶▶ / OK** button again to set point B. The section between points A & B will then be repeated.


To cancel A-B Repeat, press the **▶▶ / OK** button again.

To return to normal playback, select **↶ NORMAL PLAYBACK** from the menu.

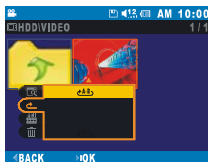


Cancel Repeat

  
To return to normal playback, select **OFF** from REPEAT Menu and press **▶▶ / OK** button to confirm.

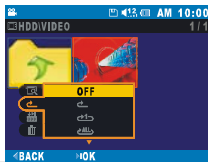



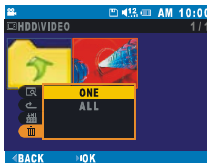

Delete


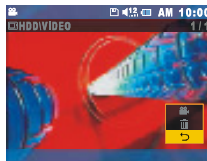 





Press **MENU / INFO** button and press the joystick down to select  icon. The screen on the left appears.



Delete One

     
Press the joystick right to highlight **ONE**, and then press  / **OK** button. Scroll up to highlight , and use the joystick right / left to select the video file to delete. Scroll down to highlight  and press  / **OK** button to delete the selected file.

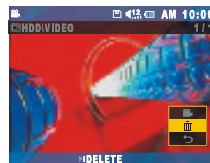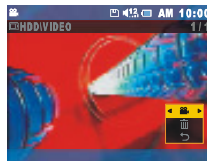

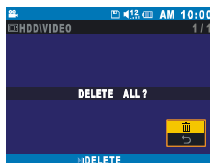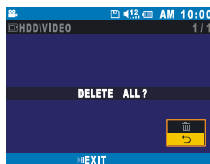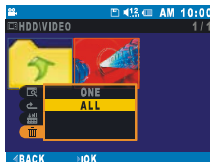

Delete All

Use the joystick to highlight **ALL**, and then press **▶▶ / OK** button. A message will be shown on the screen for further confirma-

tion. Scroll up to highlight  and press **▶▶ / OK** button to delete all video files.



 
VOICE PLAYER

Voice Playback

Select **VOICE PLAYER** in the **Main Menu** and press **▶▶ / OK** button to enter.




Press the joystick up / down to select an audio file and press **▶▶ / OK** button to play. Use the joystick Up / Down to scroll through files.

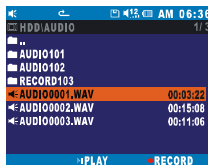

During Playback, press **MODE / ■** button to stop playback, press the joystick right (**▶▶**) to advance playback and press the joystick left (**◀◀**) to reverse playback.

 Tip: If the audio file to play resides in the sub-folder under the current AUDIO folder, press the joystick up / down to highlight the sub-folder, and then press **▶▶ / OK** button to enter.

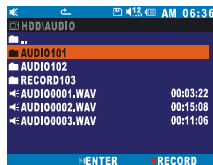

Note: To save power, turn off the LCD display by briefly pressing **|□| / ⏻** button.

Note: To turn off the power during audio playing, first press the **STOP** button to stop playback and then press the power button to turn it off.

Record Voice Clip

Select **VOICE PLAYER** in the **Main Menu** and press **▶▶ / OK** button to enter. Press **● REC** button.

 


Press **● REC** button. The screen on the left will be shown. Simply press **▶▶ / OK** button or **● REC** button to start recording.

To stop, press **MODE / ■** or **● REC** button.

Tip:

You can change the audio quality setting before recording.

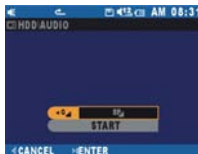


Press the joystick up to highlight **Q** and press **▶▶ / OK** button to enter.






 To change the setting, press the joystick left / right to select one and press **▶▶ / OK** button to confirm (**SP** is higher quality than **LP**). Finally, press **▶▶ / OK** button to start recording with the new setting.

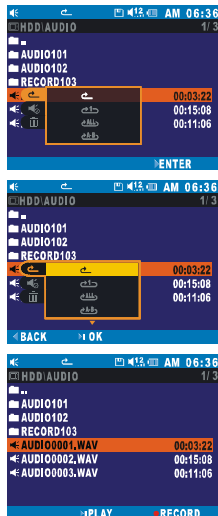
Repeat Playback

 



Repeat Normal


Press **MENU / INFO** button and scroll down to select  icon from the menu. Press the joystick right to highlight  **NORMAL PLAYBACK**. Press  / **OK** button to confirm.

    
Playback will start with the selected song and will play all songs until the last one. Then playback will stop.

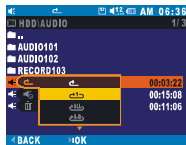


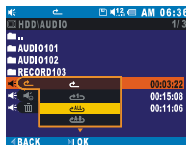 
Repeat One

Select  **REPEAT ONE** from REPEAT Menu and press  / **OK** button to confirm.

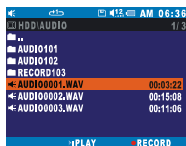




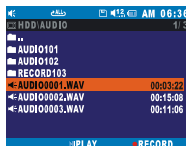 
Press the joystick up / down to highlight an audio file and press  / **OK** button to playback the current selected audio file repeatedly.


To return to normal playback, select  **NORMAL PLAYBACK** from the menu.

 


Repeat All

Select  **REPEAT ALL** from REPEAT Menu and press  / **OK** button to confirm. Press the joystick up / down to highlight an audio file and press  / **OK** button to start playback all the audio files continuously.



To return to normal playback, select  **NORMAL PLAYBACK** from the menu.

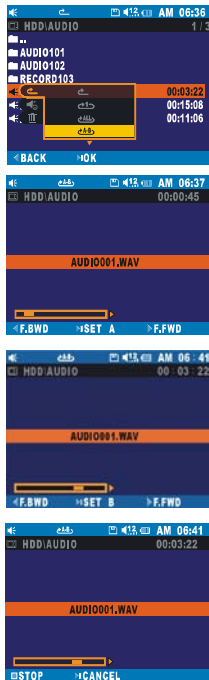

Repeat A-B

 
Select **REPEAT A-B** from REPEAT Menu and press **OK** button to confirm.

Press up / down on the joystick to select an audio file and press **OK** button to start playback.



During the playback, press **OK** button to set point A and then press **OK** button again to set point B. The section between points A & B will then be repeated.


To cancel A-B Repeat, press the **OK** button again.

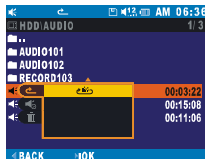To return to normal playback, select **NORMAL PLAYBACK** from the menu.



Repeat Random

 
 
 
Select  **REPEAT RANDOM** from REPEAT Menu and press  / **OK** button to confirm.


Press the joystick up / down to select an audio file and press  / **OK** button to start playback all the audio files in a random order.

To return to normal playback, select  **NORMAL PLAYBACK** from the menu.


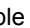
Please note that when using the joystick up / down to change the tracks during playback manually, the next / previous song in the list will be chosen. This will not be a random choice. Only at the end of the song will a random choice be made.

Alarm

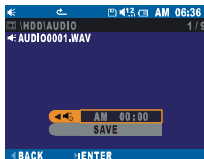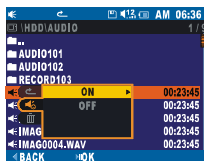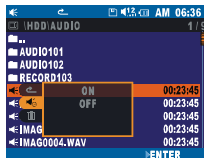

 
 
 
 
Press the joystick up / down to select a file (*.wav) you want to set as the ring sound of the alarm. Press **MENU / INFO** button and press the joystick down to select  icon. The screen on the left appears. Press the joystick right to enable the function.

Time Set Up

Press the joystick right and then press  / **OK** button to set the time the alarm should turn on. After setting, highlight **SAVE** and press  / **OK** button to enable the function.



Note: Music Player also provides Alarm function. The operation procedure is very similar to this one. You can choose either to set alarm in Voice Player or in Music Player. Only one setting (the latest) will be used as the alarm.

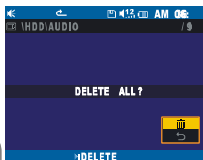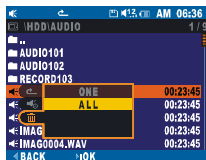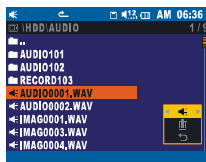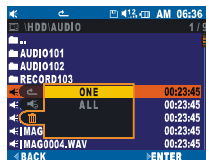Delete




Press **MENU / INFO** button and press the joystick down to select  icon. The screen on the left appears.

Delete One

Press the joystick right to highlight **ONE**, and then press **▶▶ / OK** button. Scroll up to highlight  and use the joystick right / left to select the audio file to delete. Scroll down to highlight  and press **▶▶ / OK** button to delete the selected file.

Delete All

Press the joystick right to highlight **ALL**, and then press **▶▶ / OK** button. A message will be shown on the screen for further confirmation. Scroll up to highlight  and press **▶▶ / OK** button to delete all audio files.

Music Playback

Select **MUSIC PLAYER** in the **Main Menu** and press **▶▶** / **OK** button to enter.

 
 
 


Press the joystick up / down to select a MP3 file and press **▶▶** / **OK** button to play.

To stop, press **MODE** / **■** button.

Tip:

If the MP3 file you want to play resides in the sub-folder under the current MUSIC folder, press the joystick up / down to highlight the sub-folder, and then press **▶▶** / **OK** button to enter.

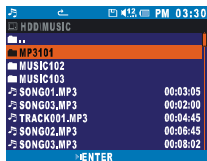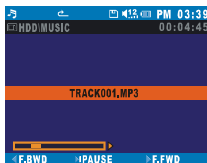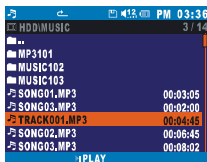



Note: To save power, you may turn off the LCD display by pressing **|□|** / **⏻** button on the GPDR40.


Note: To turn off the power during music playing, first press the **STOP** button to end the operation and then press the power button to turn it off.

Alarm

 Select **MUSIC PLAYER** in the **Main Menu** and press **▶▶ / OK** button to enter.

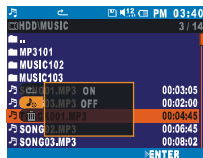

 
Press the joystick up / down to select a file (*.mp3) you want to set as the ring sound of the alarm. Press **MENU / INFO** button and scroll down to select  icon. The screen on the left appears. Press the joystick right to enable the function.

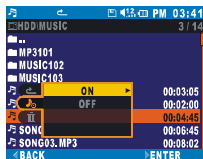


Turn on Time

Press the joystick right and then press **▶▶ / OK** button to set up the time.

 Note: Voice Player also provides Alarm function. The operation procedure is very similar to this one. You can choose either to set alarm in Voice Player or in Music Player. Only one setting (the latest) will be used as the alarm.

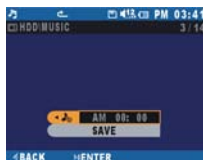

MUSIC PLAYER

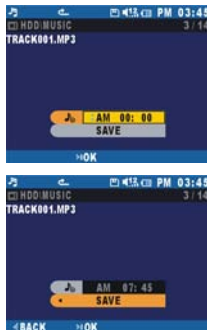 


Press the joystick up / down to set **AM** or **PM** and press **▶▶** / **OK** button to confirm and continue. Press the joystick up / down to set the hour and press **▶▶** / **OK** button to confirm and continue. Press the joystick up / down to set the minute and press **▶▶** / **OK** button to confirm and continue.

Press the joystick down to highlight **SAVE** and press **▶▶** / **OK** button to save the setting.

Record from External Equipment to the GPDR40


Whilst making connections, ensure that all equipment is turned off.

 Connect to TV with RCA cable

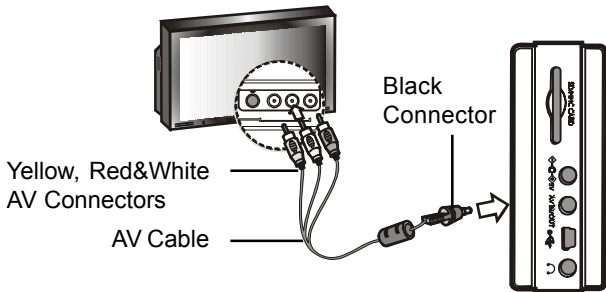



1. Connect one end (black connector) of the provided AV cable to the **AV IN / OUT** socket of the GPDR40.
2. Connect the other end (3-RCA audio&video connectors) to the corresponding **AV OUT** connectors of the external equipment. (For details of which sockets to use on the external equipment, please consult the instruction book of that equipment.)
3. Power on the TV and the GPDR40.

 Connect to TV with SCART cable

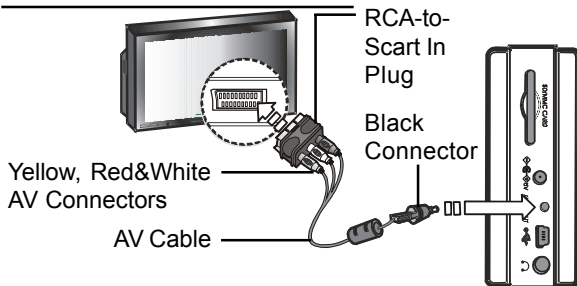

1. Connect one end (black connector) of the provided AV cable to the **AV IN / OUT** socket of the GPDR40.
2. Connect the other end (3-RCA audio&video connectors) to one end (3-RCA audio&video connectors) of the RCA-to-Scart In plug. Connect SCART plug to the corresponding **SCART OUT** connector of the external equipment. (For details of which sockets to use on the external equipment, please consult the instruction book of that equipment.)
3. Power on the TV and the GPDR40.

  Please Note: Due to the limits of the file system used on the GPDR40, the maximum time for one recording is limited to 4 hours. This limit is fixed for all recording qualities.

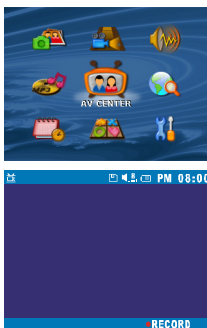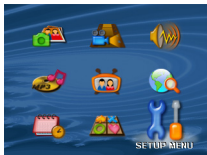





Set Up TV System

Select **SETUP MENU** in the **Main Menu** and press **▶▶ / OK** button to enter. Press the joystick right to scroll to **DISPLAY** page and scroll down to select **TV SYSTEM**. Press the joystick left / right to select the correct TV system and press **MODE / ■** button to return to the **Main Menu**.

 Start Recording

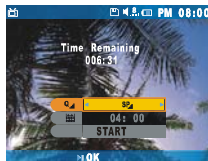
Select **AV CENTER** in the **Main Menu** and press **▶▶ / OK** button to enter. Press **● REC** button and then press **▶▶ / OK** button or **● REC** button to start recording. To stop, press **MODE / ■** or **● REC** button.






To change video quality, press the joystick up to select  and press  / **OK** button to enter. Press the joystick left / right and press  / **OK** button to confirm.

 
Tip:

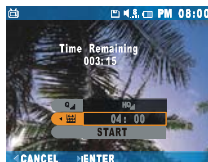

An estimate of the time remaining will be shown above the menu. Please ensure that there is enough time remaining before commencing recording.



 
Set the Recording Length

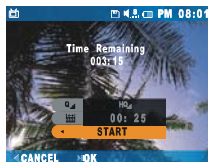Press  / **OK** button again to enter  time length setting. "04:00" indicates maximum time for recording. To set the recording length, press the joystick up / down to set the hours and then press  / **OK** button to confirm and continue to the minutes setting.



 
Press  / **OK** button to confirm and then highlight **START** using the joystick and press  / **OK** button to start recording.

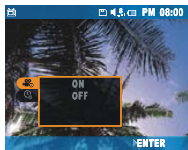

Timer Record




 Enter **AV Center**. Press **MENU / INFO** button.

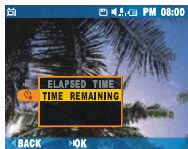



 
When setting a timer record event, please ensure that enough time / space is available. An estimation of the available time is shown above the menu.

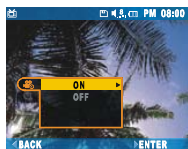


  
 
 
 
To enter  **TIMER RECORD** sub-menu, highlight  and press the joystick right twice.




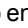

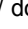

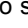
Change Record Quality

Press  / **OK** button to enter  **QUALITY** setting. Press the joystick left / right to select the required quality setting and press  / **OK** button to confirm and continue. **HQ**  is the highest quality and **LP**  is the lowest quality.

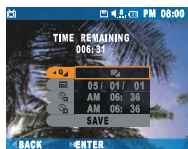

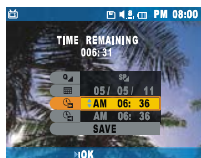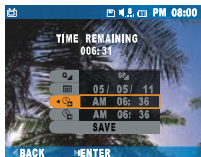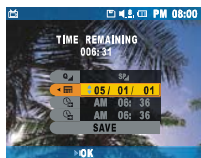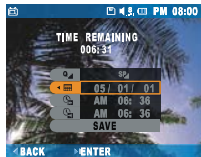

 



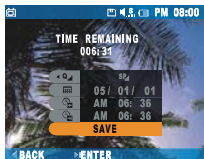 
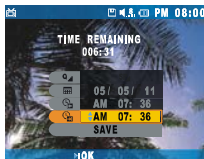 
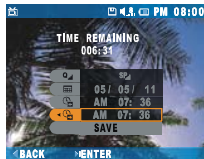 


Set Date

Use the joystick up / down to highlight  **DATE**. Press  / **OK** button to enter  **DATE** setting. Press the joystick up / down to set day and press  / **OK** button to move to month. Press the joystick up / down to set the month and press  / **OK** button to move to year. Press the joystick up / down to set the day and press  / **OK** button to confirm and continue.

Set Start Time

Highlight  **START TIME** and press  / **OK** button to enter  **START TIME** setting. Press the joystick up / down to set **AM or PM** and press  / **OK** button to move to **HOUR**. Press the joystick up / down to set hour and press  / **OK** button to move to **MINUTE**. Press the joystick up / down buttons to set minute and press  / **OK** button to confirm and continue.



Set End Time

Press **▶▶ / OK** button to enter **END TIME** setting. Press the joystick up / down to set **AM or PM** and press **▶▶ / OK** button to move to hour. Press the joystick up / down to set hour and press **▶▶ / OK** button to move to minute. Press the joystick up / down to set minute and press **▶▶ / OK** button to confirm and continue.

Scroll down and press **▶▶ / OK** button to save the above settings.

Note: If the internal battery will not last for the full recording, please ensure that the power adapter is connected.

 
Select **FILE BROWSER** in the **Main Menu** and press **▶▶ / OK** button to enter.



Press the joystick up / down to select **HDD** (built-in hard disk drive) or **SD** card (external memory) and press **▶▶ / OK** button to enter.

Select a file

Press the joystick up / down to highlight the folder or file and press the joystick right or **▶▶ / OK** button to select. To cancel the selection, press the joystick right or **▶▶ / OK** button again.

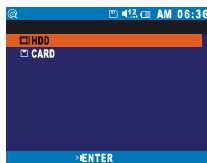

Enter a folder

To enter a folder, press **▶▶ / OK** button.




Select a folder

To select a folder, press the joystick right. To unselect a folder, press the joystick right again.

Sort

To organize the huge amount of files that can be stored in the GPDR40, use this useful tool to help sorting the files in the folder by NAME/TYPER/SELECTED.



Enter **FILE BROWSER**. Press **MENU / INFO** button and scroll down to select  icon. Press the joystick right to highlight **BY TYPE** and press **▶▶ / OK** button to confirm. The files will be sorted by different types accordingly.

 


Instead of sorting files by **TYPE**. You may arrange the files **BY NAME** or **BY SELECTED**. Simply highlight **BY NAME** or **BY SELECTED** and press **▶▶ / OK** button to confirm.

The files will then be arranged based on your setting.


Rename

To change the file name in the GPDR40, use this useful tool to help.

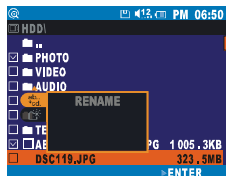


Enter **FILE BROWSER**. Press the joystick up / down to highlight the file to be renamed and press the joystick right to select.

 Press **MENU / INFO** button and scroll down to select **ab...** icon. Press the joystick right to highlight **RENAME** and press **▶▶ / OK** button to confirm. An on-screen keyboard (refer to Page 52 for keyboard definition) will be shown on the right side with the original filename shown above.

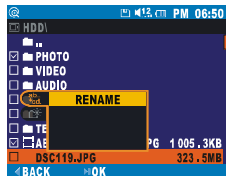

 
Press the joystick up / down / left / right to select the letters and press **▶▶ / OK** button to confirm.

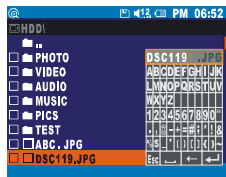


After finishing renaming, select **←** from the on-screen keyboard and press **▶▶ / OK** button to finish.

Create New Folder

 
To create a new folder in the PVR, use this useful tool.

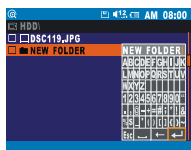


Enter **FILE BROWSER**. Press **MENU** button and scroll down to select  icon. Press the joystick right to highlight **NEW FOLDER** and press **►► / OK** button to confirm.

An on-screen keyboard appears on the right side with the folder name shown above.

To keep the folder name, simply press **►► / OK** button to exit. To change the folder name, press the joystick up / down / left / right to select the letters and press **►► / OK** button to confirm.

After finishing renaming, select  from the on-screen keyboard and press **►► / OK** button to finish.

 On-Screen Keyboard

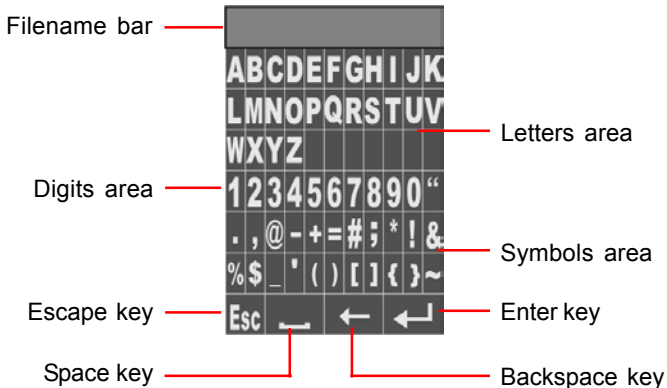

Select **CALENDAR** in the **Main Menu** and press ►► / **OK** button to enter.

 
 
 


The **Calendar** appears. You will see **TODAY** is highlighted in orange color.

Note: The Calendar appears with a monthly display. To switch to clock view, press the ►► / **OK** button. To return to the calendar, press the ►► / **OK** button again.



Select **GAME** in the **Main Menu** and press **OK** button to enter.

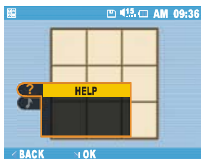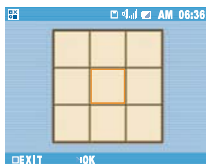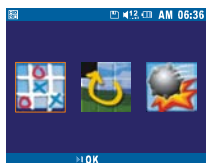


Press the joystick left / right to select a game you want to play and press **▶▶** / **OK** button to enter.

TIC-TAC-TOE

Complete three symbols of “○” in a row (horizontal, vertical, or diagonal) before the GPDR40 gets three symbols of “X” in a row.

How to Play

 Use the directional buttons to select a square and press **▶▶** / **OK** button to place the symbol. For more information, please refer to the **Game Help** on the GPDR40 accessible during play via the **MENU/INFO** button.

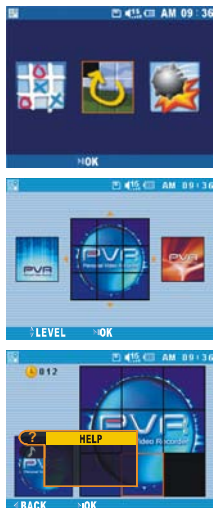



PUZZLE

Move all the pieces of the picture to the correct position.

How to Play

Use the directional buttons to select the picture and the level of difficulty you want to play and press **▶▶** / **OK** button to start.

  For more information, please refer to the **Game Help** on the GPDR40 accessible during play via the **MENU/INFO** button.

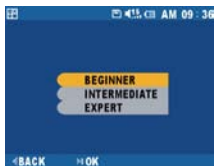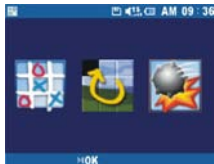


MINESWEEPER

Mark all of the mines without setting off any of the mines.

How to Play

Press the joystick up / down to select the level of difficulty and press **▶▶ / OK** button to start the game. Use the directional buttons to select a square in the Mine Field and press **▶▶ / OK** button to display the contents or press **●** button to mark it.

 For more information, please refer to the **Game Help** on the GPDR40 accessible during play via the **MENU/INFO** button.

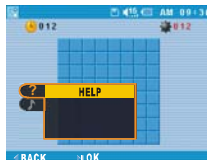


Other Functions

 


PVR CONSOLE

Change the Startup Screen

To change the Startup Screen, open the **PVR Console** and press


the  *Personal Style* button and select **Startup Screen**. The below screen appears.

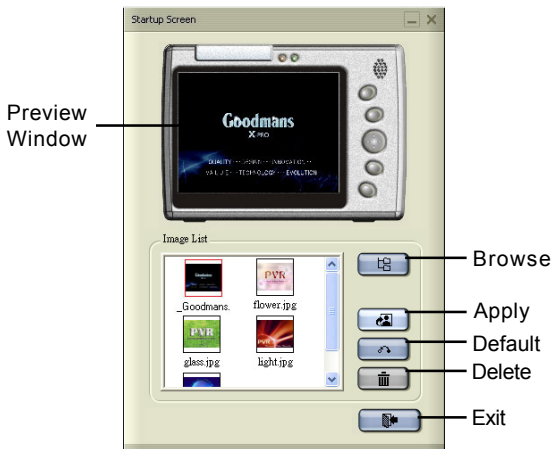



Select an image from the Image List

There are 5 startup screen images provided in the **Image List**.

Select one from the list and press the  **APPLY** button to transfer it to the GPDR40.

Import an image from your computer

Press the  **BROWSE** button to locate the image file (*.bmp or *.jpg), the file will then be imported into the **Image List**. Select it from the list and press the  **APPLY** button to transfer to the GPDR40.


Reminder: Please note that the startup image will be updated after restarting.

 
Note: All the provided startup screen images are in **320 x 240** pixel size. If the image you import is not in this size, **PVR Console** will adjust its size to fit the GPDR40 screen automatically.



Change the Startup Sound & Button Sound

To change the Startup Sound or Button Sound, open the **PVR**



Console and press the  *Personal Style* button and select **Sound Effect**. The below screen will be shown.

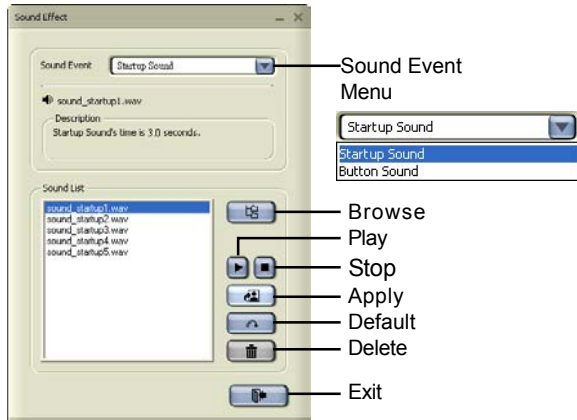





Select the sound from the Sound List

 There are 5 sound effects provided for each startup sound and button sound. To change them, first select either **Startup Sound** or **Button Sound** from the *Sound Event* menu and follow the instructions below.

Select a file from the **Sound List** and press the  **APPLY** button to transfer to the GPDR40. To preview the file before the transfer, press  button.

Import a sound from your computer



Press the  **BROWSE** button to locate the sound file (*.wav), the file will then be imported into the **Sound List**. Select it from the list and press the  **APPLY** button to transfer to the GPDR40.

Note: The startup sound is 3 seconds long and the button sound is 0.3 seconds long. If the sound files you import are longer than this, PVR Console will cut off any content after these times.

DPS

The GPDR40 features a direct print solution. If you connect it to a printer which supports DPS (Direct Print Services), then the photos can be printed directly without attaching to a computer. Use the DPS Menu to set up advanced print setting.


DPS Menu contains the following item:


	PHOTO SET	SELECT PHOTO	BROWSE \ NONE
		OPTIMAL	ON \ OFF
		COPIES	1~9
	PAPER SET	SIZE	DEFAULT \ 4" X 6" \ 5" X 7" \ 8.5" X 11"
		PAPER	DEFAULT \ PHOTO \ FAST PHOTO
		BORDER	DEFAULT \ ON \ OFF

How to Print


1. Power on the GPDR40 and connect it to the printer with the USB cable. The screen below appears.



 2. Press the joystick down to select  **DIRECT PRINT** and press ► / **OK** button to enter **DPS** Menu.

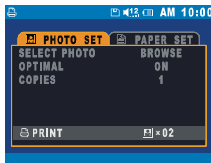

 - Press the joystick down to highlight **SELECT PHOTO** and press **▶▶ / OK** button to browse photos.

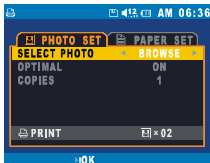


- Press the joystick up / down / left / right to highlight the photo(s) and press **▶▶ / OK** button to select them. To remove the mark, highlight the photo and press **▶▶ / OK** button again.





- When the selection is done, press **MODE / ■** button to return to DPS Menu and continue.

 - The number of the selected photos will show on the bottom of the screen. Press the joystick down to highlight **OPTIMAL**, a setting that will provide the most satisfactory print quality.

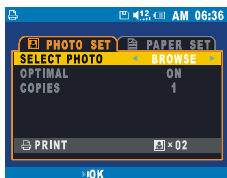

  - Press the joystick left / right to enable or disable the setting.

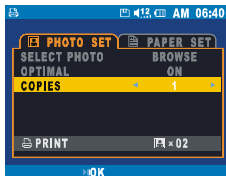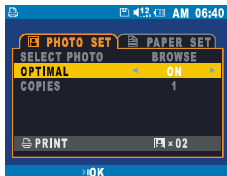



Press the joystick down to continue.

- Press the joystick left / right to select the number of copies you want to print and press **▶|| / OK** button to confirm.




DPS MENU

  9. Press the joystick down and the joystick right to go to **PAPER SET** page.

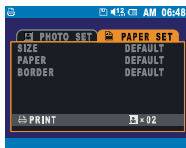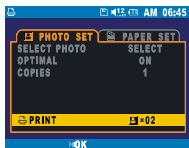


 10. Press the joystick down to highlight **SIZE** and press the joystick left / right to select the paper size. Press the joystick down to continue.

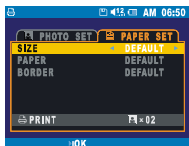

Note: If you select “DEFAULT” in paper size setting, then printer will select the paper size automatically.

 
11. Press the joystick left / right to select the paper type and press the joystick down to continue.

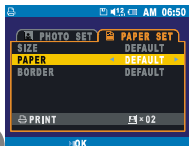

Note: If you select “DEFAULT” in paper type setting, then printer will select the paper type automatically.





 DPS MENU

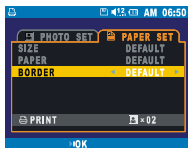

Note: To print out the entire photo and maintain 1:1 image proportion, it is recommended to add borders to your photo.

  When you are satisfied with the above settings, press **▶▶ / OK** button to start printing. To cancel the printing, press **MODE / ■** button anytime.

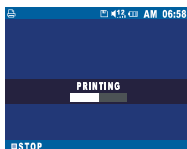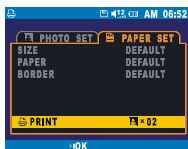











OSD MENU

PHOTO PLAYER MENU

After powering on the GPDR40, a **Main Menu** containing 9 different task icons will be shown. Each task icon represents each individual function. Each mode has its own menu accessed via the **MENU / INFO** button. Please see the following summary of the available menus.




 






 



 

 
PHOTO PLAYER MENU

Enter **PHOTO PLAYER** and press **MENU / INFO** button to open this menu. The menu contains the following:

	VIEW	LIST \ MULTIPLE \ SINGLE
	ROTATE	 Use the joystick to select a different photo.
		 Use the joystick to rotate the photo by 90° CW or 90° CCW.
		 Cancel and exit menu.
	EFFECTS	NORMAL / NEGATIVE ART / SEPIA / B&W / MOSAIC
	MEMORY MIX	 Use the joystick to select a different photo.
		 Use the joystick to select frames.
		 Cancel and exit menu.

OSD MENU

PHOTO PLAYER MENU














	PLAY VOICE	 Use the joystick to select other photos with voice attached.	
		 Press to play the selected voice clip.	
		 Cancel and exit menu.	
	DELETE VOICE	 Use the joystick to select other photos with voice attached.	
		 Select this icon to delete the voice attached to the photo.	
		 Cancel and exit menu.	
	SLIDE SHOW	 Interval: 01~60 second(s)	
		Transition:  NONE  RANDOM and etc.	
		START	
	DELETE	ONE	 Use the joystick to select a photo for deletion.
			 Select this icon to delete the selected photo.
			 Cancel and exit menu
		ALL	 Select this icon to delete all photos.
			 Cancel and exit menu.

OSD MENU

VIDEO PLAYER MENU








VIDEO PLAYER MENU

Enter **VIDEO PLAYER** and press **MENU / INFO** button to open this menu. The menu contains the following:

	VIEW	LIST \ MULTIPLE \ SINGLE	
	REPEAT	OFF	
		 NORMAL: Start playback from the current selected one to the last for one time.	
		 ONE: Repeat the selected video file continuously.	
		 ALL: Repeat all the video files continuously.	
		 A-B: Repeat the video from point A to point B.	
	START TIME	HH: MM: SS	
	DELETE	ONE	 Use the joystick to select a video for deletion.
			 Select this icon to delete the selected video.
			 Cancel and exit menu.
		ALL	 Select this icon to delete all video files.
			 Cancel and exit menu.







VOICE PLAYER MENU

Enter **VOICE PLAYER** and press **MENU / INFO** button to open this menu. The menu contains the following:

	REPEAT	 NORMAL: Start playback from the current selected one to the last for one time.	
		 ONE: Repeat the selected audio file continuously.	
		 ALL: Repeat all the audio files continuously.	
		 A-B: Repeat the audio from point A to point B.	
		 RANDOM: Repeat the audio in a random order.	
	VOICE ALARM	ON	Set up the time for alarm clock
		OFF	

OSD MENU

VOICE PLAYER MENU














	DELETE	ONE	 Use the joystick to select audio for deletion.
			 Select this icon to delete the selected audio.
			 Cancel and exit menu.
		ALL	 Select this icon to delete all audio files.
			 Cancel and exit menu.

OSD MENU

MUSIC PLAYER MENU

MUSIC PLAYER MENU

Enter **MUSIC PLAYER** and press **MENU / INFO** button to open this menu. The menu contains the following:









	REPEAT	 NORMAL: Start playback from the current selected one to the last one for one time.	
		 ONE: Repeat the selected music file continuously.	
		 ALL: Repeat all the music files continuously.	
		 A-B: Repeat the music from point A to point B.	
		 RANDOM: Repeat the music in a random order.	
	ALARM	ON	Set up the time for alarm clock
		OFF	
	DELETE	ONE	 Use the joystick to select music for deletion.
			 Select this icon to delete the selected music.
			 Cancel and exit menu.
	DELETE	ALL	 Select this icon to delete all music files.
			 Cancel and exit menu.

OSD MENU

AV CENTER MENU

AV CENTER MENU

Enter **AV CENTER** and press **MENU / INFO** button to open this menu. The menu contains the following:




	TIMER RECORD	ON	 QUALITY: SP \ HQ \ LP
			 DATE: YY / MM / DD
			  START TIME: AM/PM : HH : MM
			  END TIME: AM/PM : HH : MM
			SAVE
		OFF	
	RECORDING	ELAPSED TIME	
	TIME DISPLAY	TIME REMAINING	

OSD MENU

FILE BROWSER MENU





 

 

 
 

FILE BROWSER MENU

Enter FILE BROWSER and press **MENU / INFO** button to open this menu. The menu contains the following:

	SELECT	ALL	
		TYPE	PHOTO
			VIDEO
			AUDIO
			MUSIC
	SORT	NONE	
		BY NAME	
		BY TYPE	
		BY SELECTED	
	COPY&MOVE	COPY TO	
		MOVE TO	




OSD MENU

FILE BROWSER MENU

	DELETE	ONE	 Select this icon to delete the selected file.
			 Cancel and exit menu.
		SELECTED	 Select this icon to delete all the selected files.
			 Cancel and exit menu.
		UNSELECTED	 Select this icon to delete all the unselected files.
			 Cancel and exit menu.
		ALL	 Select this icon to delete all files.
			 Cancel and exit menu.
	RENAME	Highlight the file you want to rename and select this icon to open a character list for renaming.	
	NEW FOLDER	Select the icon to create a folder.	

CALENDAR MENU

Enter **CALENDAR** and press **MENU / INFO** button to open this menu. The menu contains the following:




	 DATE	DD/MM/YY
		SAVE
	 TIME	AM/PM : HH : MM
		SAVE

OSD MENU

SETUP MENU






SETUP MENU

Select **SETUP MENU** from the main menu using the joystick and press **▶▶ / OK** button to enter.

 POWER	AUTO STANDBY 30SEC/1MIN/1.5MIN/2MIN/OFF	Unit will go to Standby mode (LCD will be switched off) after this time when the GPDR40 is idle.
	AUTO POWER OFF 1.5MIN/3MIN/5MIN/OFF	Unit will turn off after this time when the GPDR40 is idle.
 DISPLAY	STARTUP SCRIN <u>ON/OFF</u>	Upon startup, a screen will be shown on the Unit Display. The screen can be changed using the PVR Console.
	DATE/TIME DISPLAY <u>DATE/TIME</u>	Select to display date or time in the top right corner of the screen.
	LCD BRIGHTNESS: ◀■■■■▶ Press the joystick left / right to adjust the brightness of the LCD screen.	
	VIDEO OUTPUT <u>INTERNAL LCD / EXTERNAL TV</u>	To output the screen via the AV in/out socket, select EXTERNAL TV. Note: To return to the internal LCD output from external TV, press  button.
	TV SYSTEM NTSC/PAL	Select the TV system according to the country you are in. UK Standard: PAL

OSD MENU

SETUP MENU

 SOUND	VOLUME: ◀■■■■▶ Press the joystick left / right to adjust the volume.		
	STARTUP SOUND <u>ON/OFF</u>		Turn on / off the startup sound.
	BUTTON SOUND <u>ON/OFF</u>		Turn on / off the button sounds.
 SYSTEM	LAST MEMORY <u>ON/OFF</u>		Unit will automatically select the last played file when entering a mode.
	DATE FORMAT <u>YY/MM/DD; MM/DD/YY; DD/MM/YY</u>		Select the date format to be used on the GPDR40.
	LANGUAGE: ◀ENGLISH▶ Press the joystick left / right to select other language.		
	RESTORE DEFAULT <u>YES/NO</u>		Select to restore default of the unit.
	FORMAT	<u>CARD/</u> <u>HDD</u>	 Press ▶ / OK with  highlighted to format the card/HDD.
			 Cancel and return.

Specifications

Product Function	1. Digital Video Player, 2. Digital Video Recorder, 3. Digital Photo Player, 4. MP3 Player, 5. USB Pocket Drive; 6.SD/MMC Card Reader; 7. Digital Voice Recorder	
Display	3.6" Color TFT LCD	
Hard Disk	40 GB HDD	
Microphone	Built-in	
Speaker	Built-in	
TV System	NTSC / PAL	
DPS Support	Yes	
Interface	AV In / AV Out / Earphone / DC-in / USB 2.0	
Memory Card Slot	SD / MMC	
Hardware Playback File Format	Video	ASF Compatible
	Photo	JPEG Compatible
	Audio	MP3, WAV Compatible

Specifications

Power Source	Internal	Rechargeable Li-ion Battery (Built-in Charger through Power Adapter)
	External	Power Adapter
Mass Storage		Windows 98SE / Me / 2000 / XP ; Mac OS 9.X and 10.1 above
Dimensions		110x 80 x 30 mm (L x W x H)
Weight		290g