 


Goodmans

GSPK30IP

Portable Music System with iPod Docking Station

User Guide

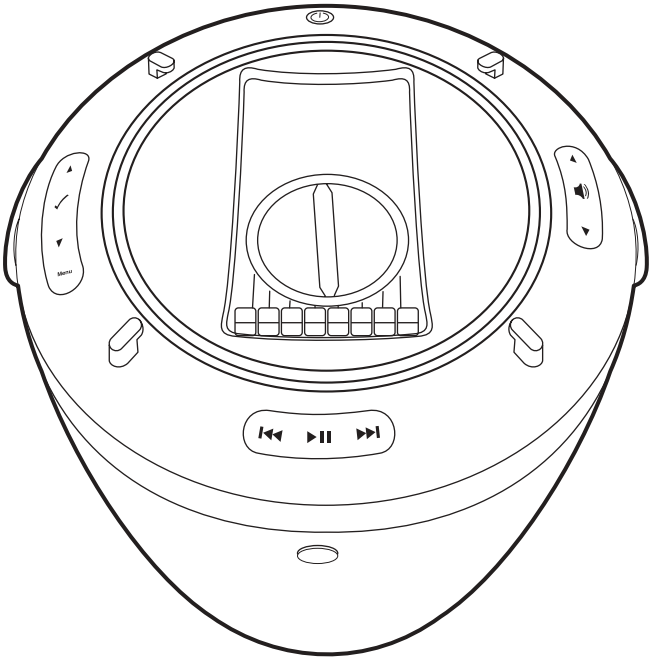

IMPORTANT: Please read all instructions carefully before use and keep for future reference

Introduction

Thank you for choosing this Portable Music System with iPod Docking Station. Not only can you listen to your tracks on your iPod, but you can also connect an auxiliary device to it.

It's really simple to use: you can fully operate your iPod directly from the control panel or from the Remote Control.

Throughout this User Guide, the Portable Music System with iPod Docking Station will be referred to as the Portable System.

 
Safety is important

Use of any electrical equipment should be undertaken with care. Please read the safety section on page 11, 12 and 13 before using your Portable System. This appliance is for household use only.




An audio system that allows docking of an iPod and which fully supports the iPod menu system.

What's in the box?

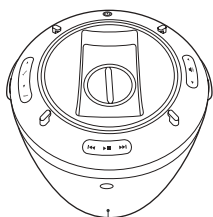


Main Unit

 


Remote Control



 
Power Adaptor



 
Mains cable (for use with the Power Adaptor)



 3.5mm Audio Cable

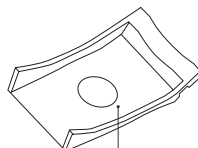

Three iPod Adaptors

 








iPod Touch Adaptor

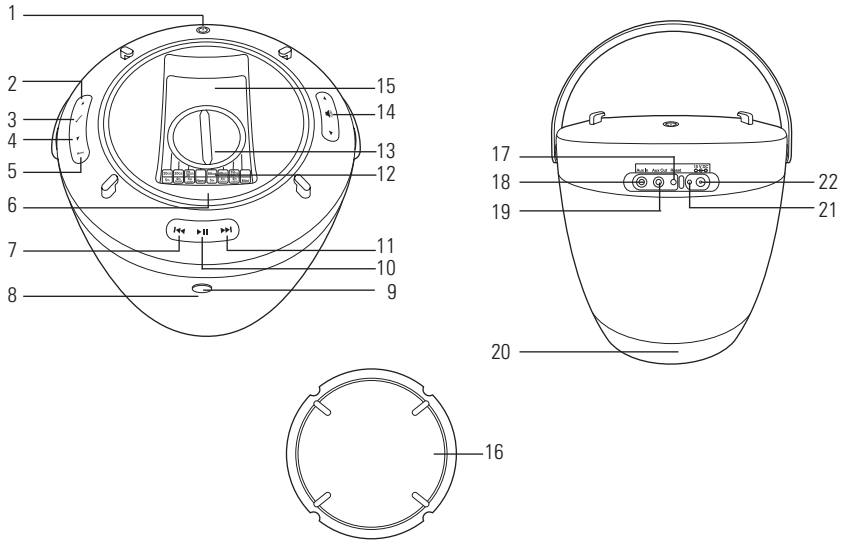 Contents


01	Your Portable System	4	05	Specifications	10
02	Get going	6	06	Warnings	11
03	Daily use	8	07	Guarantee	14
04	Troubleshooting	9			







 01 Your Portable System

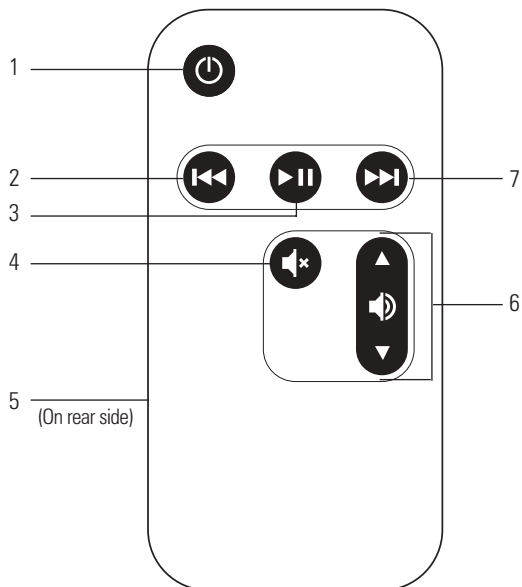

- | | |
|--|--|
| 1.  (Standby) Button | 13. iPod Adjustment Dial |
| 2. Menu Up Button | 14.  (Volume Up/Down) Buttons |
| 3. Menu Enter Button | 15. iPod Dock |
| 4. Menu Down Button | 16. Cover |
| 5. Menu Button | 17. Reset Switch |
| 6. iPod Connection Pin | 18. Aux In Socket |
| 7.  (Rewind) Button | 19. Aux Out Socket |
| 8. Power Indicator | 20. Bottom Cover |
| 9. Remote Control Sensor | 21. Charging Indicator |
| 10.  (Play/Pause) Button | 22. 15V DC Input Socket  |
| 11.  (Fastforward) Button | |
| 12. iPod Icon | |

Remote Control



 
1.  (Standby) Button
2.  (Rewind) Button
3.  (Play/Pause) Button
4.  (Mute) Button
5. Battery Compartment Cover
6.  (Volume UP/Down) Button
7.  (Fastforward) Button

1

Using the remote control

The Remote Control can be used to operate the Portable System. Before using the Remote Control, the Safety Tab should be removed.

Simply pull out the Safety Tab from the remote control, as shown below.

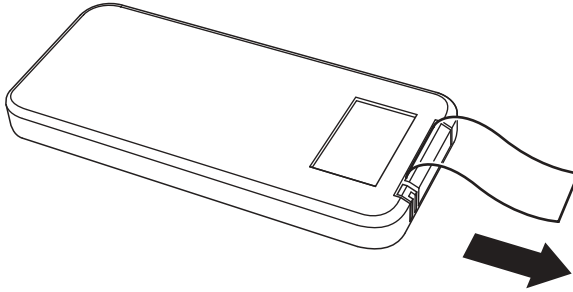


To use the Remote Control, simply direct it towards the front of the Portable System and press the desired buttons.

DONT FORGET! When replacing the battery make sure that you use the same size and type.

2

Connecting your iPod to the unit

 
1. Adjust the height of the iPod connection pin by aligning the iPod adjustment dial with your iPod icon.

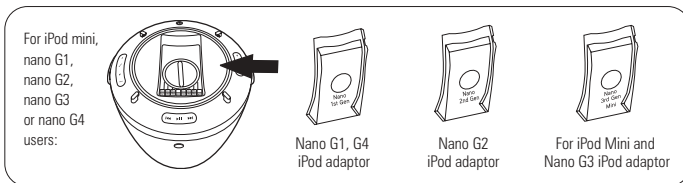

2. Place your iPod into the dock and connect to the iPod connection pins.

- For iPod mini, nano G1, nano G2, nano G3 or nano G4 users, select the appropriate iPod adaptor (supplied) for your iPod and place it into the dock so that it slides under the iPod connection pins.

 - For iPod Touch users, place the supplied adaptor under the iPod Touch into the iPod Dock. The adaptor can help to easily remove the iPod Touch when not in use.

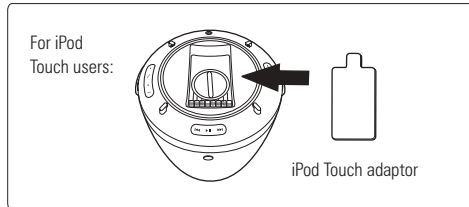

DONT FORGET! Your iPod will charge while docked in the Portable System.

3

Connecting another audio source to the unit

Insert one end of the 3.5mm cable into your audio source's output socket or headphone socket and the other end into AUX In socket on the back of the unit.

The unit will change to AUX mode automatically once the unit is connected to external audio source.


4

Connecting the unit to your home stereo unit


You can play music from the unit through your home stereo system.

Insert one end of the 3.5mm cable into Aux Out socket and the other end into Aux In or Line in on your home stereo unit.

Turning the unit on/off




Press the  button on the main unit or remote control to turn the unit on.

The power indicator illuminates gradually.

Press the  button again to turn the unit off.


Note: When playing back from external audio sources, the song's playback operations are controlled on the external audio device.

Using the Menu Feature (Only on the unit)

- 1 Press the MENU button to enter the iPod menu.
- 2 Press the menu  or menu  button to scroll through the items.
- 3 Press the  button to select an item.

Playing and pausing your music



Press the  button to begin playback.

Press the  button again to pause playback.









Skipping to and recalling a track

Press the  or  button to skip to or recall a track.


Fast forwarding and rewinding your tracks


Press and hold the  or  button to fast forward or rewind a track.




Adjusting the volume

Press the   or   button on the unit or remote control to adjust the volume to your desired listening level. Press and hold the   or   button to adjust the volume at a faster rate.

Muting the sound

Press the  * button on the unit or remote control to turn off the sound.

Press the  * button again to restore the sound to the previous level.

Problem	Possible Cause/Solution
Little or no sound coming from the speakers.	Press the  button to turn the sound on. The 3.5mm cable is disconnected from the AUX In Socket.
Remote control does not activate functions on the main unit	Replace the remote control battery. Be sure to operate the remote control within the operating range and check that there are no objects blocking the signal path.
Main unit does not power on.	Plug the unit into an electrical outlet, then press the  button.
Built-in battery does not charge.	Plug the unit into an electrical outlet, then press the  button.
Unit does not function.	Press the RESET switch to reset the unit.
No sound when unit is in Aux In mode.	Check the Aux In connections on both units.

05**Specifications**

Model Number	GSPK30IP
Speaker Unit	• Two 3" speakers (15 watts each)
Speaker Frequency Range	• 60 Hz - 20 kHz
Dimensions	• 8.25" x 9.13" x 8.86" (W x H x D)
Weight	• Approx. 3.58 kg
Power Adaptor	• 15V 4A
	• Remote control uses one CR2032 battery (included).
Built-in Battery Type	• VRLA Battery 12V DC, 3.3 Ahr (included)
iPod Compatibility	• iPod Touch • iPod Classic (80, 160 GB) • iPod Video (30, 60, 80 GB) • iPod Nano 1st, 2nd, 3rd and 4th Gen • iPod Mini

IMPORTANT: Due to continual revision and improvements to our products design, specifications are subject to change without notice.



WEEE

This appliance is labelled in accordance with European Directive 2002/96/EG concerning used electrical and electronic appliances (Waste Electrical and Electronic Equipment - WEEE).

The guideline determines the framework for the return and recycling of used appliances.

Sound levels

Your hearing is very important to you and to us, so please take care when using this Portable System. It is strongly recommended that you follow the listed guidelines in order to prevent possible damage or loss of hearing.

Establish a safe sound level

Over time your hearing will adapt to continuous loud sounds and will give the impression that the volume has in fact been reduced. What seems normal to you may in fact be harmful. To guard against this before your hearing adapts, set the volume to a low level.

Slowly increase the level until you can hear comfortably and clearly and without distortion. Damage to your hearing is accumulative and is irreversible. Any ringing or discomfort in the ears indicates that the volume is too loud.

Once you have established a comfortable listening level, do not increase the sound level.

General Safety

This Portable System has been designed and manufactured to meet European safety standards, but like any electrical equipment, care must be taken if you are to obtain the best results and safety is to be assured.

Do read these operating instructions before you attempt to use the Portable System.

Do ensure that all electrical connections (including the mains plug, extension leads and interconnections between pieces of equipment) are properly made in accordance with the manufacturer's instructions.

Switch off and remove the mains plug when making or changing any connections.

Do consult your dealer if you are ever in doubt about the installation, operation or safety of your Portable System.

Don't continue to operate the Portable System if you are ever in doubt about it working normally, or if it is damaged in any way. Switch it off, withdraw the plug from the mains and consult your dealer.

Don't remove any fixed covers as this may expose you to dangerous voltages.

Don't leave the Portable System switched On when it is unattended for long periods of time, unless it is specifically stated that it is designed for unattended operation or has a standby mode.

Make sure that other people in your household are conversant with the Portable System.

Don't obstruct the ventilation vents on the Portable System, for example with curtains or soft furnishings.

Overheating will cause damage and shorten the life of the product.

Don't allow electrical equipment to be exposed to rain or moisture.

Electrical Information

This Portable System is supplied with a mains lead fitted with a BS1363/A 13 amp plug. If it is not suitable for your supply sockets it must be removed and replaced with an appropriate plug. If the plug becomes damaged and/or needs to be replaced please follow the wiring instructions below.


The plug removed must be disposed of immediately. It must not be plugged into a supply socket as this will be an electrical hazard. If the fuse needs to be replaced it must be of the same rating and ASTA approved to BS1362. If the plug is changed, a fuse of the appropriate rating must be fitted in the plug, adaptor or at the distribution board. If the fuse in a moulded plug is replaced, the fuse cover must be refitted before the appliance can be used.

Wiring Instructions

The supply cable will be either 2-core or 3-core. Follow the appropriate wiring instructions given below. In both cases ensure that the outer sheath of the cable is firmly held by the cable clamp.

 
2- Core Plug

WARNING! Do not connect either wire to the earth terminal.

 This symbol indicates that this 2-core appliance is Class II and does not require an earth connection.


The wire coloured blue must be connected to the terminal marked with the letter N or coloured black.

The wire coloured red must be connected to the terminal marked with the letter L or coloured red.

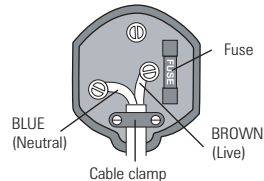


3- Core Plug

WARNING! This appliance must be earthed.

The wire coloured green and yellow must be connected to the terminal marked with the letter E, or by the earth symbol , or coloured green and yellow.


The wire coloured blue must be connected to the terminal marked with the letter N or coloured black.

 The wire coloured red must be connected to the terminal marked with the letter L or coloured red.

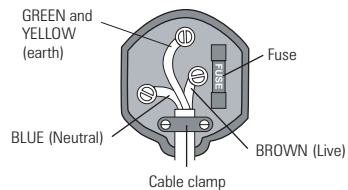


Removing the rechargeable battery from the unit

 1. Power off and unplug unit.
2. Turn the unit over and remove the 4 screws on the bottom with a screwdriver and lift the cover off.

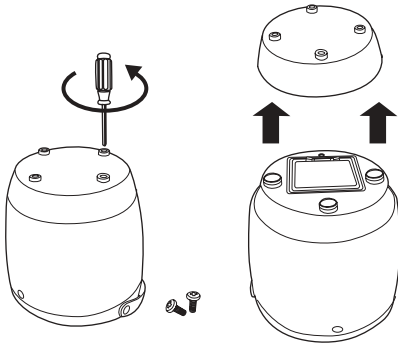

 3. Turn the unit onto its side and slide the rechargeable battery out until you can see the terminal wires.
4. Grasp the clear plugs on the end of the terminal wires and pull to disconnect from both of the contacts.

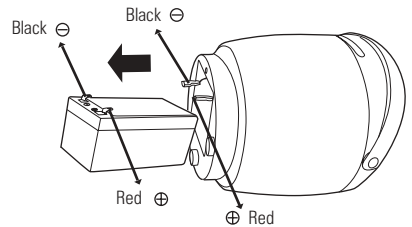

5. Slide the rechargeable battery the rest of the way out.

The rechargeable battery must be disposed of in accordance with any local regulations

The Portable System is guaranteed for twelve months from the date of original purchase. If there are any defects due to faulty materials or workmanship, contact the Goodmans Helpline. Have your receipt of purchase on hand.

The guarantee is subject to the following provisions:

- It is only valid within the boundaries of the country of purchase.
- The product must be correctly installed and operated in accordance with the instructions contained in this User Guide.
- The Portable System must be used solely for domestic purposes.
- The guarantee will be rendered invalid if the Portable System is re-sold or has been damaged by inexpert repair.
- The manufacturer disclaims any liability for incidental or consequential damages.
- The guarantee is in addition to, and does not diminish, your statutory or legal rights.

Goodmans