

2008
Issue 1 - January 2008

www.goodmans.co.uk

Goodmans

USER GUIDE

 


GSPK29iP
Portable Speaker System with
Universal Dock for iPod

CONTENTS


Contents	1
Important safety instructions	1-2
What's included	2
Getting Started	3-4
Placing a correct dock insert	3
Connection to power via Power Adapter	3
Connection to power via battery	3
Connection of other audio devices by audio cable	4
Using the system	4-5
Troubleshooting	6-7
Specifications	8


IMPORTANT SAFETY INSTRUCTIONS

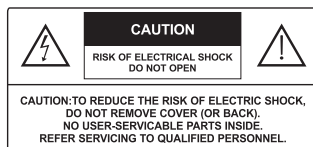

WARNING: To reduce the risk of fire or electrical shock, do not expose the product to rain or moisture.

WARNING: The apparatus should not be exposed to dripping or splashing, and objects filled with liquids. Liquids can cause a failure and/or a fire hazard.

 The lightning flash with arrowhead symbol, within an equilateral triangle, alerts the user to the presence of un-insulated dangerous voltage within the system enclosure that may be of sufficient magnitude to constitute a risk of electric shock.

 The exclamation point within an equilateral triangle alerts the user to the presence of important operating and maintenance instructions in this owner's guide.

WARNING: No naked flame sources, such as lighted candles, should be placed on the apparatus.

Note: This product is intended to be used only with the power supply provided.

Note: Where the mains plug is used as the disconnect device, such disconnect device shall remain readily operable.

Note: This product must be used in doors, It is neither designed or tested for use outdoors, in recreation vehicles, or on boats.

WARNING: Keep the battery away from children since batteries are a choke hazard. It may cause a fire or chemical burn if mishandled. Do not recharge, disassemble, heat above 100 C, or incinerate. Danger of explosion if battery is incorrectly replaced.

WARNING: The socket-outlet shall be installed near the equipment and shall be easily accessible.



Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your local authority for recycling advice.

IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions - for all components before using this product.
2. Keep these instructions - for future reference.
3. Heed all warnings - on the product and in the owner's guide.
4. Follow all instructions.
5. Do not use this apparatus near water or moisture - Do not use this product near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement, near a swimming pool, or anywhere else that water or moisture are present.
6. Clean only with a dry cloth - Unplug this product from the Electrical socket before cleaning.
7. Do not block any ventilation openings. Install in accordance with the manufacture's instructions
-To ensure reliable operation of the product and to protect it from overheating, put the product in a position and location that will not interfere with its proper ventilation. For example, do not place the product on a bed, sofa, or similar surface that may block the ventilation openings, Do not put it in a built-in system, such as a bookcase or a cabinet that may keep air from flowing through its ventilation openings.
8. Do not install near any heat sources, such as radiators, heat registers, stoves or other apparatus (including amplifiers) that produce heat.
9. Protect the power cord from being walked on or pinched, particularly at plugs, and the point where they exit from the apparatus.
10. Only use attachments/accessories specified by the manufacturer.
11. Refer all servicing to qualified service personnel - Do not attempt to service this product yourself. Opening or removing covers may expose you to dangerous voltages or other hazards.
12. Do not let objects or liquids enter the product - as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock.
13. See product enclosure for safety related markings.
14. Use proper power sources - Plug the product into a proper power source, as described in the operating instructions or as marked on the product.

WHAT'S INCLUDED

Thanks for choosing the GSPK29iP Music Station. This GSPK29iP is designed specially to work with your iPod, providing a high quality audio performance for your enjoyment. Just listen to it now!

Check the carton for the parts shown in Figure 1.

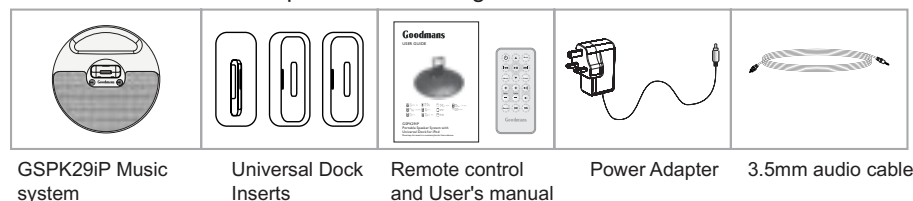 


Figure 1: What's included in the carton

GETTING STARTED

Before enjoying music, please follow the connections step below to set up your system.

1. Selecting a correct dock insert

Choose a correct dock inserts from No.8,9 or 10(details below) for your iPod model and put the insert to the dock.(figure 2)



Figure2: GSPK29iP inserts

Insert NO.	8	9	10
iPod Model	iPod nano (1st and 2nd Generation)	iPod with Video (30GB)	iPod with Video (60GB & 80GB)
Universal Dock Adapters			

Note: For older generation iPod, please refer to Apple store for insert purchase.

Note: This docking station only supports iPod model with a dock connector.

2. Using with mains power

Connect the AC Adapter into the DC in jack and plug the AC Adapter into the wall outlet. Then switch on with the on/off switch on the rear of the unit (Figure 3)

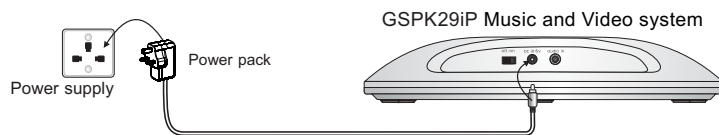 


Figure 3

Figure 3: System connections

3. Using batteries (not included)

Please open the battery compartment cover at the bottom of the unit, and install 4 pcs AA batteries (not included). Check the polarity of the batteries to match the "+" "-" markings inside the battery compartment. (Figure 4)

Please note: it will not charge your iPod when battery powered

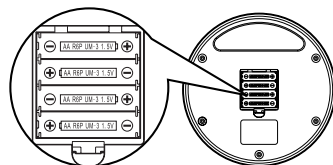 


Figure 4

USING THE SYSTEM

4. Connection of other audio devices by audio cable

You can connect other audio device, like MP3 player or any iPod without a dock connector by using the included 3.5mm audio cable to the audio in jack.

Note: When iPod is docked and audio in is connected with other device; other device will be the priority sound source.

Note: During music playback by using audio in, it's suggested to adjust your audio device loud enough to ensure the best sound quality. Then adjust the GSPK29iP volume buttons on top to control the volume level.


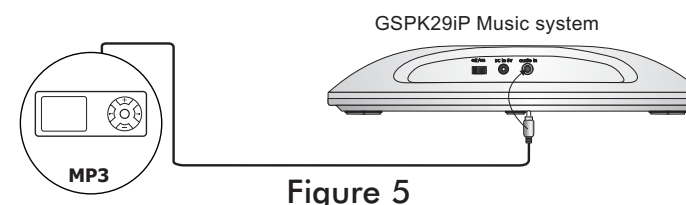 


Figure 5

USING THE SYSTEM


The GSPK29iP Digital Music System can be put to use after connecting the power supply, the indicator will light up, then after connecting your iPod, just set the music you want to listen to the iPod and plug the iPod on the docking station.

 - Switch on at your back of your GSPK29iP to turn it on. hear the music immediately. If you do not, please refer to "Troubleshooting".
- Once your iPod is docked, power is recharged automatically until it's fully charged. (Only when mains powered).
- The system has an inbuilt audio in port and can connect other audio devices or iPods directly.
- You can increase or decrease the volume by pressing "⊕" and "⊖" button respectively.
- To turn off the system, remove your iPod from the dock. Then switch the power button off or unplug the system from the outlet.



USING THE SYSTEM

 Using the Remote Control

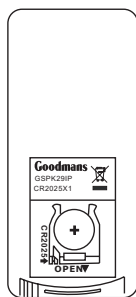

	Power on/off	Turn the audio source on/off.
	Mute	Cuts the sound, press again to resume.
	Previous /Next	Press to skip press to go previous song; press and hold to rewind through the current track. Quick press to skip to next/previous track, or hold to fast forward/rewind during play back."
	Menu Up /Down	Press or hold to scroll though iPod menus

	Play/Pause	Play and Pause iPod.
	Menu	To go back to the previous menu.
	Enter	To confirm the chosen menu item, or to confirm the selected song/photo/video when iPod is used .
	Bass +/-	Increase or decrease the bass level. steps -10 to +10
	Treble +/-	Increase or decrease the treble level. steps -10 to +10
	Volume Up/Down	Increase or decrease the music volume when the audio source is playing. steps 0-30
	Reset	Reset's the bass and treble to 0
	Shuffle	Play songs/album in a shuffled order, or to turn off the shuffle function.
	Repeat	Repeat one song, all songs in the album, or to turn off the repeat function.

USING THE SYSTEM

Your iPod navigation controls are fully functional while it is docked in the system. Your iPod volume jog wheel changes the headphone volume only. It has no effect on the Sound Dock system.

To replace the remote control battery

Changing the remote control battery is the only regular maintenance that is required. You may also clean the system as needed. Replace the remote control battery when it stops operating (normally every year or two), or its range seems reduced. Use only a Lithium Cell CR2025, Duracell, Eveready, Energizer, Maxell, Toshiba, or Shun Wo Cr2032 3-volt lithium battery. Keep in mind that lighting and other room conditions, in addition to battery age, can affect the operating range of an infrared remote control.

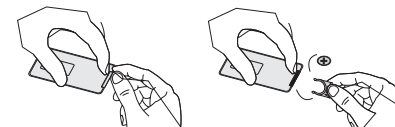 




Figure 6: Inserting a new battery

TROUBLESHOOTING

In case of malfunction, please power off the system immediately and check the unit according to following table. If the problem still exists, please contact the dealer.

Symptom	Problem	Solution
iPod / Audio source is not responding	iPod does not dock properly	- Please ensure proper insert is placed for your iPod. (Refer to "Selecting the correct insert" on page 3.) - Unplug the iPod from the docking station to see any obstructions in the connector or in your iPod.
	3.5mm headphone cable isn't connected properly	- Connect 3.5mm headphone cable to the audio source. Make sure the signal cable is inserted firmly into the correct jack & is fully connected in the "line-out", "audio-out", or the headphone jack on your sound card or other audio source.
No Sound	Power cable is not connected	- Make sure the GSPK29iP is plugged in and the LED is illuminated. - Make sure the GSPK29iP is with battery and the battery is working if GSPK29iP is not plugged in.
	Power isn't turned on	- Press the "Power" button, if there is no change on the indicator of the iPod, please press the "Power" button again.
	Volume Level too low	- The volume level might be too low, press "Volume" button on the panel to adjust.

TROUBLESHOOTING

Symptom	Problem	Solution
No Sound	No playable file on iPod	- Make sure your iPod is on, and a track is selected for playback.
	Your iPod is not charging	- Make sure the power cable is securely plugged in to a functioning wall socket. The symbol on the small connector is matched with that on rear panel of the GSPK29iP. (Refer to Figure 4 on page 4.) - Make sure your iPod is firmly seated in the dock.
	After quickly undocking or docking your iPod	- Remove your iPod from the dock, wait for 5 seconds, and return it to the dock. - Unplug the power cable for 1 minute, then plug it back to reset the system.
	iPod does not dock properly	- Remove your iPod from the dock, wait briefly, then reset it. You may need to do this for few times.
Sound distortion	Volume level too high	- Decrease volume level by pressing  on front panel or  on remote control.
	Sound source is distorted	- Distortion and noise are easily noticed with high-powered speakers when playing poor quality audio source, esp. WAV and MID files. Try a different audio source such as a music CD or change better quality audio player.
System is not Responding	Malfunction	- If the volume buttons on the top of the unit work, then check the remote control battery. To reset: unplug the power and remove batteries, after 1 minute plug back in - Please contact customer service .

SPECIFICATIONS

Audio power(THD=10%): 3W RMS X 2	Power Rating: 100-240V~50/60Hz,
Speaker Units: 2"×2	Product Dimension : $\phi 250 \times 45$ mm
Frequency range: 120Hz~20kHz	Net Weight: 530g
Rated Load Impedance: 4 Ω (Max 7W)	

Notes:

- 1) The specifications listed above are for reference only.
- 2) The technical specifications of this device are subject to changes without prior notice.