

GML32DVD

32" LCD TV

WITH REMOTE CONTROL

Goodmans



USER GUIDE

Introduction

Thank you for buying this GML 32DVD TV which is designed to give you many years of trouble-free service. You may already be familiar with using a television but do please take time to read these instructions. They are designed to familiarise you with the unit's many new features and to ensure you get the very best out of your purchase.

Safety is Important

Your safety and the safety of others is important. Please, therefore, ensure you read the Safety instructions on page 4 before you operate this GML 32DVD TV.



NOTE: This 32" LCD TV is referred to throughout this user guide as TV.

CONTENTS

Introduction	2	DTV Operation	31
Safety is Important	2	Channel Search.....	32
Safety Precautions	4	Changing Channels.....	34
Electrical Information	6	EPG Function.....	36
Wiring Instructions.....	6	Channel List.....	38
Getting Started	8	System Setting.....	41
Quick Setup	9	First Time Installation.....	41
Connecting External Equipment	11	Change Pin Code.....	42
Switching On	12	Favourite List.....	44
Mains Power.....	12	Common Interface	47
Identification of Controls	13	DVD	49
Tuning theTV	15	Using the DVD Player.....	50
Menu Navigation	16	DVD Player Setup Menus.....	63
Search Menu	17	Troubleshooting	71
Picture Menu	19	Care and Maintenance	72
Sound Menu	20	Care of the Screen.....	72
Timer Menu	21	How Do I Dispose of this Product?.....	72
Setup Menu	22	Technical Specification	73
Screen Menu	23	Guarantee	74
Source Menu	24		

Safety Precautions

Please read all the safety information before use.

Safety Considerations

Position the power supply lead so that it cannot be walked on or pinched by items placed on or against it.

Do not use the TV in humid or damp conditions.

Do not allow the TV to get wet.

Do not expose the TV to splashing or dripping.

Do not expose the TV to naked flames.

Power Source

You should only plug the TV into a 230V to 240V AC, 50 or 60 Hz supply.

High Voltage

Do not remove the rear cover as high voltage components are accessible.

Disconnect the TV from the power supply when the TV is not to be used for a prolonged period of time.

Cleaning

Disconnect the TV from the power supply before you clean it.

Do not use liquid or aerosol cleaners.

Clean your TV with a soft,damp(not wet) cloth.

Ventilation

The slots and openings on the TV are for ventilation. Do not cover or block them as it may cause overheating.

NEVER let children push anything into the holes or slots on the case.

Servicing

- There are no user serviceable parts in this TV.
- When servicing, refer to qualified service personnel.
- Consult your dealer if you are ever in doubt about the installation, operation or safety of this TV.

 
Electrical Information

This appliance is fitted with a BS1363/A10amp plug. If it is not suitable for your supply sockets it must be removed and replaced with an appropriate plug. If the plug becomes damaged and/or needs to be replaced please follow the wiring instructions below. The plug removed must be disposed of immediately. It must not be plugged into a supply socket as this will be an electrical hazard.

If the fuse needs to be replaced it must be of the same rating and ASTA approved to BS1363. If the plug is changed, a fuse of the appropriate rating must be fitted in the plug, adapter or at the distribution board. If the fuse in a moulded plug is replaced, the fuse cover must be refitted before the appliance can be used.

Wiring Instructions

The supply cable will be either 2-core or 3-core. Follow the appropriate wiring instructions given on the next page. In both cases ensure that the outer sheath of the cable is firmly held by the cable clamp.

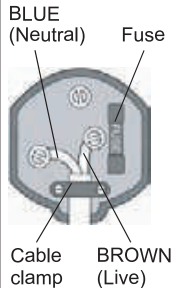2 - CORE

 
WARNING! Do not connect either wire to the earth terminal.



This symbol indicates that this 2-core appliance is Class II and does not require an earth connection.

The wire coloured blue must be connected to the terminal marked with the letter N or coloured black.

The wire coloured brown must be connected to the terminal marked with the letter L or coloured red.

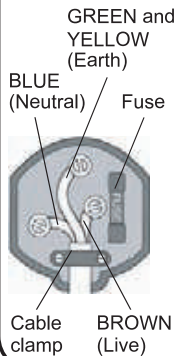3 - CORE

WARNING! This appliance must be earthed.

The wire coloured green and yellow must be connected to the terminal marked with the letter E, or by the earth symbol, \perp , or coloured green or green and yellow.

The wire coloured blue must be connected to the terminal marked with the letter N or coloured black.

The wire coloured brown must be connected to the terminal marked with the letter L or coloured red.

32" LCD TV with Remote Control

Getting Started

Remove your TV carefully from the box. You may wish to store the packaging for future use.

In the box



TV



Remote Control



2 x AAA
Batteries



 
User Guide



AC Power Cord


Quick Setup

Connections

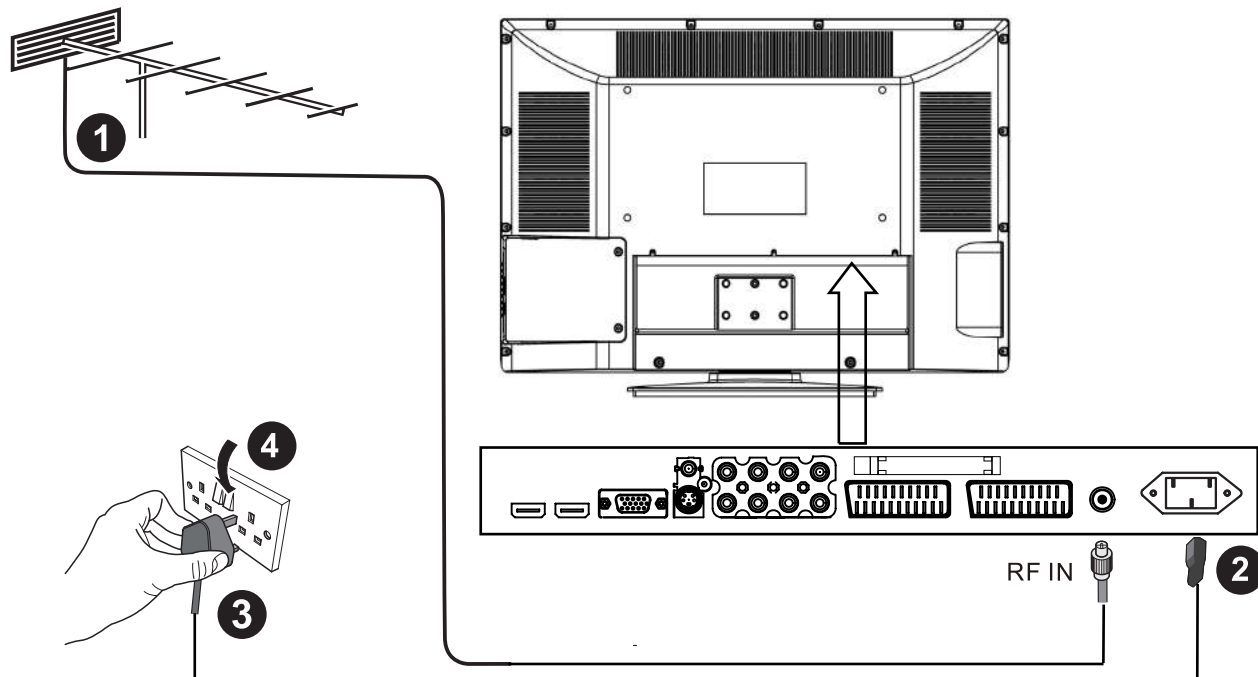

Insert remote control batteries

 5

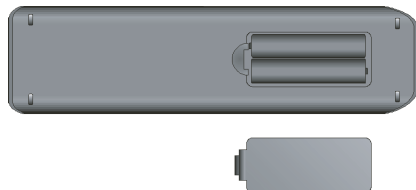

Turn on

6



The Remote Control

Inserting Remote Control Batteries

1. On the back of the remote control, push up the catch on the battery compartment cover and lift to remove it.

2. Insert the two AAA batteries, ensuring that you follow the polarity diagram inside the battery compartment.

3. Refit the cover

Battery Disposal

Please ensure batteries are disposed of safely. Never dispose of batteries in the fire or with household waste. Check with your local authority for disposal regulations.





Connecting External Equipment






You can connect a wide range of audio and video equipment to your TV.



NOTE: Refer to the manufacturer's guide for further instructions on how to connect the equipment.

The following table lists a range of the available connectors on the TV.

Connector	Purpose
 RF IN	Receives TV signals from an external aerial.
 PC AUDIO IN	Receives audio signal for PC mode.
 YPbPr (Green) (Blue) (Red) COMPONENT IN	Receives component video signal for YPBPR (Component) mode.
 AV IN (Yellow) (Red) (White)	Receives composite video signal and audio signal for AV mode.

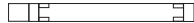 Connector	Purpose
 SCART	Receives a complete AV (Audio Visual) signal.
 VGA IN	Receives the video signal from a PC.
 HDMI IN	Receives High Quality HDMI input.
 S-VIDEO	Brightness and chroma signal input.
 PCMCIA	Slot of CI card



Switching On

Mains Power

Complete all connections before connecting to the mains supply.

Connect the aerial to Aerial Socket.


Connect the main power cable to the AC IN socket.

Insert the mains plug into the mains socket.



NOTE: When not in use, disconnect the 3-pin plug from the mains power supply.

When the TV is successfully connected to the power supply, the standby indicator on the front of the TV will illuminate red. The TV is now in standby mode and the screen remains blank.

Press the  button on the side of the TV or the power button on the remote. The standby indicator on the front of the TV will turn blue and the picture will appear after a few seconds.

Identification of Controls

Front

1. Volume Up/Down

Volume adjust buttons.
Also used to move left
and right whilst navigating
on-screen menus.

2. Programme Up/Down

Channel select buttons.
Also used to move up
and down whilst navigating
on-screen menus.

3. Menu

Activates the On-screen
menus.

4. INPUT

Cycles through the available
input sources.

5. Standby

Switches the TV to standby
and on again. The TV is
only completely disconnected
from the mains if the plug
is disconnected.

6. DVD Play/Pause

7. EJECT

 
8. Remote Control Sensor

9. Standby Indicator

10. Stand

11. DVD Slot

12. Speakers

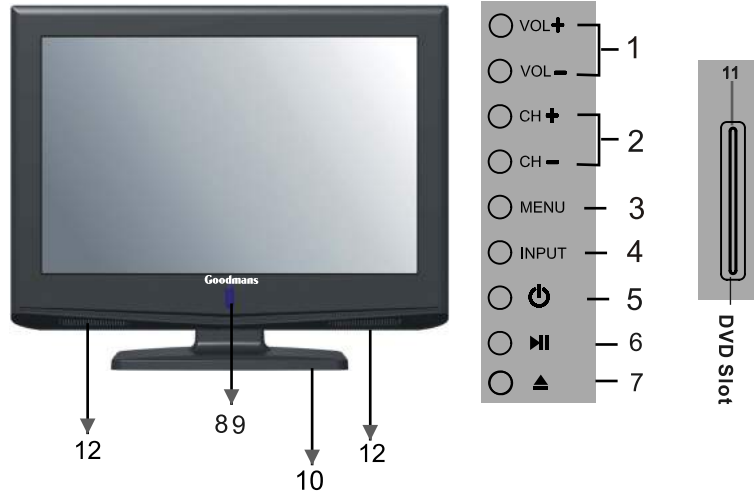

Rear

AC input

Connect the power cable.

HDMI Input

High Quality Audio/Video input socket for connecting an external device fitted with an HDMI output.

VGA Input

Connect the PC-RGB output Socket of PC .

SCART

Audio visual socket for connecting an external input device with a SCART connector.

AV Input

Input sockets, for connecting an external input device.

Audio Input

Audio input from other devices.

RF IN(Aerial Connection)

RF input socket, for connecting an external aerial.

 
 
YPbPr (Component In)

YPBPR input component video signal from other devices.

S-VIDEO

Brightness and chroma signal input.


PCMCIA Slot of CI card

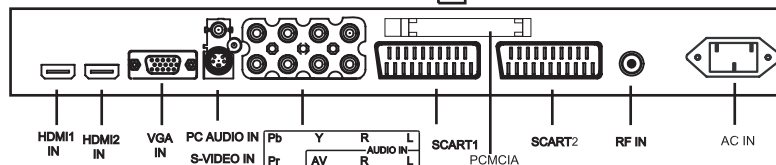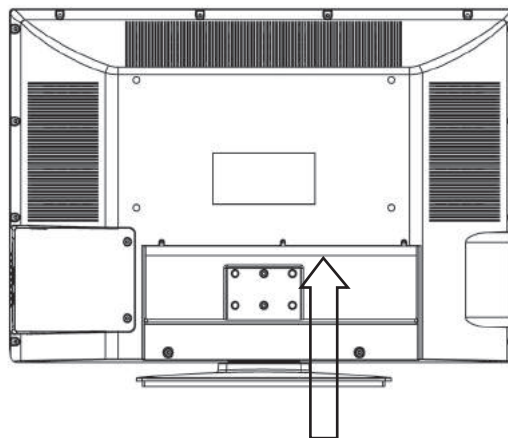


Tuning the TV

First Time Installation

 
The following screen will appear, Press the **LEFT/RIGHT ARROW** button to select the available Country .

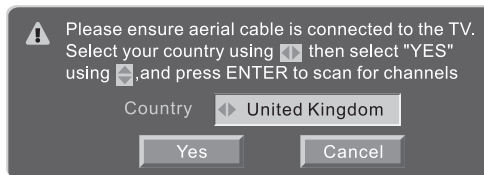

 1. Press the **LEFT/RIGHT ARROW** buttons to highlight **YES**.
2. Press **ENTER** to start analogue auto search. Once the progress bar has filled any channels found will be stored and the unit will proceed to the search for digital channels.

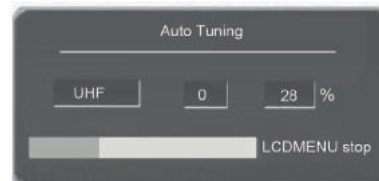

3. The following screen will appear.
4. Press **LEFT/RIGHT ARROW** button to highlight **Confirm**.
5. Press **ENTER** button to start digital search. All available digital channels found will automatically be stored into the channel list

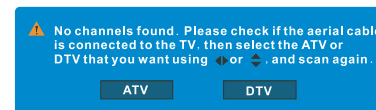



Menu Navigation

The basic controls needed to go through the menu screens are as follows:


1. Press the **LCD MENU** button to display the On-screen menu.
2. Press the **UP/DOWN ARROW** buttons to move up and down the On-screen menus.
3. Press the **LEFT/RIGHT ARROW** buttons to move left and right when navigating the On-screen menu.

AUTO Tuning

1. Press the **LCD MENU** button to display the following picture.
2. Press the **UP/DOWN ARROW** button to highlight **AUTO SEARCH**.
3. Press the **RIGHT ARROW** button the auto tuning process will begin.

This may take several minutes to complete. Once completed the TV will turn to the first channel.



 **NOTE:** To receive a TV signal, you can use an outdoor or indoor aerial. However, if you live in a poor reception area you may experience loss or corruption of teletext transmissions or may not receive a signal at all when using an indoor aerial.



SEARCH

1. Press the **LCD MENU** button to display the following picture.
2. Press the **LEFT/RIGHT ARROW** button to highlight **SEARCH**.
3. Press the **UP/DOWN ARROW** button to select the available option.
4. Press the **LEFT/RIGHT ARROW** button to change the option.





Program Edit



press **RIGHT ARROW** button

Delete: Use **UP/DOWN/LEFT/RIGHT ARROW** buttons to select the channel you want to delete, press **ENTER** button to confirm, then press the **RED** button on the remote control, and the color of the channel will change to red. Press the **RED** button again to delete, or press **LCD MENU** button to cancel.

Copy: Use **UP/DOWN/LEFT/RIGHT ARROW** buttons to select the channel you want to copy, press **ENTER** button to confirm, then press the **GREEN** button on the remote control, and the color of the channel will change to green, then use **UP/DOWN/LEFT/RIGHT ARROW** buttons to select the channel you want to be copied, and press the **GREEN** button again to copy, press **LCD MENU** button to cancel.

Move: Use **UP/DOWN/LEFT/RIGHT ARROW** buttons to select the channel you want to move, press **ENTER** button to confirm, then press the **YELLOW** button on the remote control, and the color of the channel will change to yellow, then you can use **UP/DOWN/LEFT/RIGHT ARROW** buttons to change the position of the channel you want, press the **YELLOW** again to move, press **LCD MENU** button to cancel.

Skip: Use **UP/DOWN/LEFT/RIGHT ARROW** buttons to select the channel you want to skip, press **ENTER** button to confirm, then press the **CYAN** button on the remote control, and the color of the channel will change to cyan (means this program is skipped), then press the **CYAN** button again to skip cancel.



PICTURE

1. Press **LCD MENU** button to display the OSD menu
2. press **LEFT/RIGHT ARROW** button to select the menu "PICTURE".
3. Press **RIGHT ARROW** button to enter the available menu.
4. Use **LEFT/RIGHT ARROW** button to select the submenu.



Picture Mode: Press **UP/DOWN ARROW** button to select picture mode.
Dynamic, Standard, Mild, User.

Colour Temperature: Press **UP/DOWN ARROW** button to select Colour temp.
Cool, Normal, Warm.

Press the **UP/DOWN ARROW** buttons to select one of the available options.

BRIGHTNESS

Use the **LEFT/RIGHT ARROW** buttons to increase or decrease the brightness of the picture.

CONTRAST

Use the **LEFT/RIGHT ARROW** buttons to increase or decrease the contrast of the picture.

COLOUR

Use the **LEFT/RIGHT ARROW** buttons to increase or decrease the colour of the picture.



SOUND

1. Press **LCD MENU** button to display the OSD menu
2. press **LEFT/RIGHT ARROW** button to select the menu "SOUND".
3. Press **RIGHT ARROW** button to enter the available menu.
4. Use **LEFT/RIGHT ARROW** button to select the submenu.



Sound Mode: Press **UP/DOWN ARROW** button to select picture mode. Music, Cinema, Sports, User.

BALANCE

Allows you to adjust the volume balance between left and right audio channels.

TREBLE

The treble setting adjusts the high frequency section of sound.

 
BASS

The bass setting adjusts the low frequency section of sound.



TIMER

1. Press **LCD MENU** button to display the OSD menu
2. Press **LEFT/RIGHT ARROW** button to select the menu "TIMER".
3. Press **RIGHT ARROW** button to enter the available menu.
4. Use **LEFT/RIGHT ARROW** button to select the submenu.

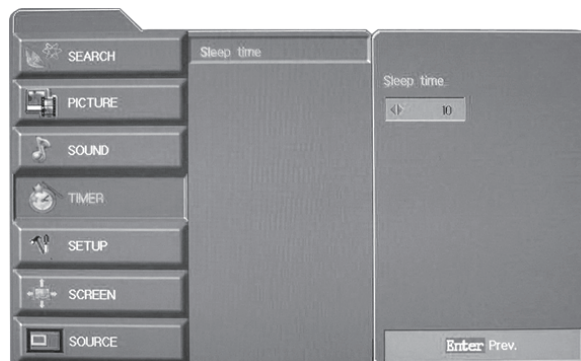

SLEEP

Press the **LEFT/RIGHT ARROW** buttons to select the sleep time, when the TV set turns off itself.



SETUP

1. Press **LCD MENU** button to display the OSD menu
2. Press **LEFT/RIGHT ARROW** button to select the menu "SETUP"
3. Press **RIGHT ARROW** button to enter the available menu.
4. Use **LEFT/RIGHT ARROW** button to select the submenu.



Keypad lock: Press **UP/DOWN ARROW** button to turn on/off the Keypad lock.

Blue Screen: Press **UP/DOWN ARROW** button to turn on/off the blue screen.

OSD Transparent: Press **UP/DOWN ARROW** button to adjust the OSD transparent.

TTX Language Group: Press **UP/DOWN ARROW** button to select the Teletext language.

Reset: Restore to the original setting.



SCREEN

1. Press **LCD MENU** button to display the OSD menu
2. Press **LEFT/RIGHT ARROW** button to select the menu "SCREEN"
3. Press **RIGHT ARROW** button to enter the available menu.
4. Use **LEFT/RIGHT ARROW** button to select the submenu.

NOTE: ANALOGUE TV, AV, SCART, S-VDEIO mode: Aspect, Noise Reduction
 HDTV(YPbPr) source: Aspect, Noise Reduction, H.Position, V.Position
 VGA source: Auto Sync, Manual config., VGA/XGA, Aspect
 HDMI source: Aspect, H.Position, V.Position.



Auto Sync: Press **RIGHT ARROW** button to auto config. (only in VGA mode).

Manual config: Press **UP/DOWN ARROW** button to select **Phase**, **Clock**, **H.Position**. Press **LEFT/RIGHT ARROW** button to adjust. (only in VGA mode)

VGA/XGA mode : Press **UP/DOWN ARROW** button to select the definition, press **ENTER** button to confirm.

Aspect : Press **UP/DOWN ARROW** button to select the ratio of the screen, press **ENTER** button to confirm. (only in VGA mode)

 
Noise Reduction: press **LEFT/RIGHT ARROW** button to turn on/off the function of noise reduction.

H./P. Position: press **LEFT/RIGHT ARROW** button to adjust the picture's position.



SOURCE

1. Press **LCD MENU** button to display the OSD menu
2. press **LEFT/RIGHT ARROW** button to select the menu "SOURCE".
3. Press **RIGHT ARROW** button to enter the available menu.
4. Use **LEFT/RIGHT ARROW** button to select the submenu.

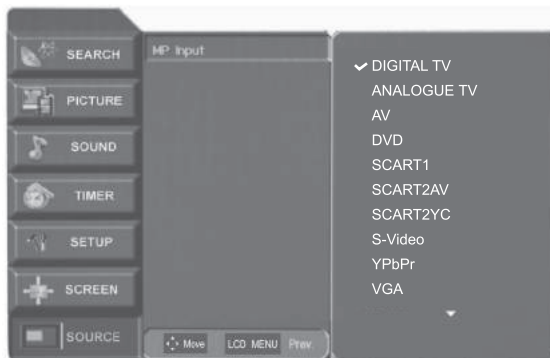

MP Input: Press **UP/DOWN ARROW** button to select the input source of the TV.

Using the TV

TV Controls

Programme Selection

You can use the controls on either the TV or remote control to select channels. Press the **CH+/-** buttons on the TV or remote control, or press a **NUMBER** button on the remote control to select a programme.


Volume

Press the **VOL+/-** buttons on the TV or remote control to adjust the volume.





Mute

1. Press the **MUTE** button on the remote control to mute the sound. The mute symbol  will be shown in the top left hand corner of the screen.
2. Press the **MUTE** button again to restore the sound. The mute symbol will disappear from the screen.



NOTE: Pressing the **VOL+** button will also restore the sound.

Display

1. Press the **DISPLAY** button on the remote control. Information will appear on screen giving the user settings and channel information. It depends on the input selected.
2. Press the **DISPLAY** button again to remove the information from the screen.

Mono/Stereo

Press the **NICAM** button to switch between **MONO** or **STEREO** reception.



Input selection

Press the **INPUT** button repeatedly to scroll through and select one of the following input options:

- DIGITAL TV - RF Signal(DTV Aerial)
- ANALOGUE TV - RF Signal(TV Aerial)
- AV - Signal from AV socket
- SCART1 - Signal from SCART1 socket
- SCART2AV - AV Signal from SCART2 socket
- SCART2YC - YC Signal from SCART2 socket
- S-VIDEO - Signal from S-VIDEO socket
- YPBPR - Signal from YPBPR socket
- VGA - Signal from VGA socket
- HDMI1 - Signal from HDMI1 socket
- HDMI2 - Signal from HDMI2 socket

SLEEP

Press the **LEFT/RIGHT ARROW** buttons to select the sleep time, when the TV set turns off itself. You can select one of the: 0 MIN / 10 MIN / 20 MIN / 30 MIN / 90 MIN / 120 MIN / 180 MIN / 240 MIN.



Using Teletext

Teletext is an information system that displays text on your TV screen. Using the teletext control buttons you can view pages of information that are listed in the teletext index.



NOTE: No On-screen display is available in text mode. The contrast, brightness and colour can not be changed but the volume control is still available



NOTE: Make sure the TV channel you are watching transmits teletext.

TEXT

1. Press the **TEXT** button to enter **TEXT** mode. The text page will appear, normally the index page.
2. Press the **TEXT** button again to view a page of text whilst watching a TV programme. The text will be superimposed over the TV programme.
3. Press the **TEXT** button a third time to return to the channel you were watching.

To Select a Page of Text

1. Find the number of the page in the index and enter it by pressing the **NUMBER** buttons. The number of the page will appear in the top left hand corner of the screen. The page counter will search for your page. When it finds it, the page will be displayed.



2. Press the **CH+** button to move to the next page of text.

3. Press the **CH-** button to move to the previous page of text.

INDEX

Press the **INDEX** button to go to the index page.

Page Hold

If the page of text you have selected contains sub-pages, these sub-pages will automatically be displayed in order with a delay to allow you to read the page.

1. Press the **HOLD** button to stop the move to the next sub-page. The hold symbol will appear in the top left hand corner of the screen.

2. Press the **HOLD** button again to continue cycling through the sub-pages.

To Reveal Information

1. Press the **REVEAL** button to reveal concealed information (quiz answers etc.).

2. Press the **REVEAL** button again to conceal the information.

SUBPAGE

If the page of text you are viewing contains sub-pages, the number of the sub-page you are on and the total number of sub-pages is displayed on the right of the screen.

To select a sub-page, press the **SUBPAGE** button. S.... will appear in the top left hand corner of the screen.



Enter the number of the sub-page, using the **NUMBER** buttons in the format 0001 for sub-page 1. The teletext will search for the sub-page.

Fast Text

At the bottom of the teletext screen is a row of subject headings in red, green, yellow and blue.

1. Press one of the coloured fast text buttons on the remote control to display that page.
2. Press the **INDEX** button to return to the main page.

SIZE

TELETEXT:

1. Press the **SIZE** button to enlarge the text shown on the teletext screen. Only one half of the page is shown.
2. Press the **SIZE** button again to view the second half of the page.
3. Press the **SIZE** button a third time to return to normal size text page.

ASPECT (EXCEPT DTV and DVD):

Press the **ASPECT** button to switch between 4:3 or 16:9.

Digital TV (DTV)

Turn on your TV set and select Digital TV input by pressing the **INPUT** key on the remote.



 
 
 
 


Channel Search

During the First time installation process you will be given the opportunity to search for Digital channels after searching for the analogue channels. In the unlikely event that this does not happen or if you need to re-scan in case new channels have been added, the following procedure can be used.

Auto Scan

- 1) Press the **DTV MENU** button to enter the main menu of the **DTV**.
- 2) Press the **▼ / ▲** button to choose **Settings**.
- 3) Press the **ENTER** button to enter the sub-menu.
- 4) Press the **▼ / ▲** button to choose **Installation**.
- 5) Press the **ENTER** button to enter the sub-menu.
- 6) Highlight the **Automatic Search** and press **ENTER** button to enter.
- 7) Press **◀ / ▶** to select this item, then press **ENTER** button if you want the TV to automatic search, and it will require you to confirm that this function will replace the previous channel list.

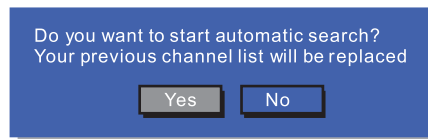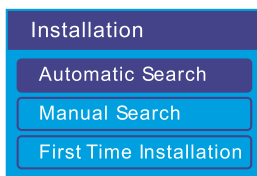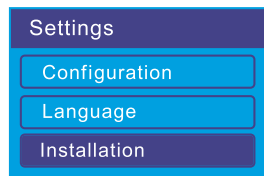
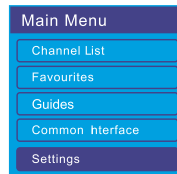




Manual Scan

Recommended for advanced users only. If you know the UHF channel number that a set of digital channels are located at, the manual search can be used to add only these channels.

  - 1) Press the **DTV MENU** button to enter the main menu of the **DTV**.
- 2) Press the **▼ / ▲** button to choose **Settings**.
- 3) Press the **ENTER** button to enter the sub-menu.
- 4) Press the **▼ / ▲** button to choose **Installation**.
- 5) Press the **ENTER** button to enter the sub-menu.
- 6) Highlight the **Manual Search** and press **ENTER** button to enter.
- 7) Press 0-9 button to select "**Channel No**" section.
- 8) Press the **ENTER** button to start searching.
- 9) Press **DTV MENU** button to cancel searching.

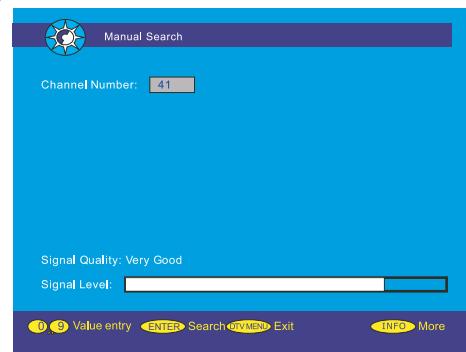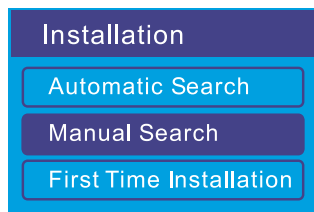



Changing Channels

There are five ways of channel selection as follows:

1)Stepping through the channel list:

Press the **CH+** button to browse up and the **CH-** button to browse down the available channels.

2)Selection by number:

Enter the complete channel number directly using the numerical buttons to select desired channel.

 
3)Selection by on-screen channel list:

You can also select the desired channel directly from on-screen channel list. This is displayed using the DTV main menu. Please See **CHANNEL LIST** later in this manual for the further details.

4)Selection by mini channel list:

It is also possible to change the channel using a mini channel list that is accessible by pressing the **ENTER** button to enter.

Use the **▼ /▲** keys to navigate and press the **ENTER** button to display the selected channel. To exit this mini channel list press the **DTV MENU** button.

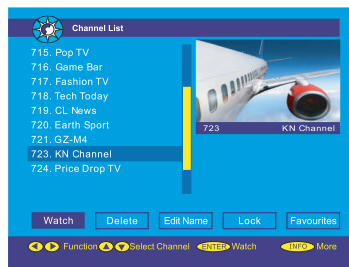




Changing Channels

5) Selection by EPG(Electronic Programme Guide):

You can also select the desired channel directly from Channel Schedule. This is displayed by pressing the **EPG** button on the remote control. The **EPG** provides the users with a brief description of the programme on the currently selected channel and lists the current channels. Please See **Accessing the EPG** in this manual for further detail.

 - 1) Press the ▼ /▲ button to choose.
- 2) Press the ENTER button to enter.
- 3) Press the EPG button to exit.

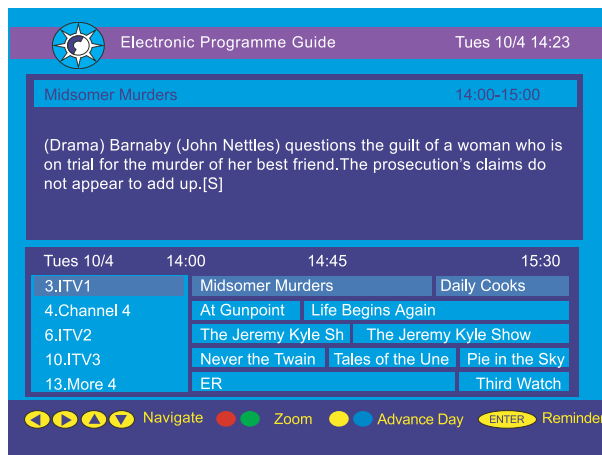




Accessing the EPG (Electronic Programme Guide)


From the **EPG** it is possible to check the program information for the next 7 days (if the information is available from the broadcaster.) and also set reminders to automatically change channel for a specific event using the following instructions.

 - 1) Press **DTV MENU** button to display the Main Menu
- 2) Press **▼ / ▲** button to select **Guides**, press **ENTER** button to enter **Electronic Programme Guide Menu**.
- 3) Press **▼ / ▲** button to select the channel you want to edit, press **LEFT/RIGHT/ENTER** button to select the function you want.
- 4) When you are satisfied with your settings, press **DTV MENU** button to go back to the previews menu.

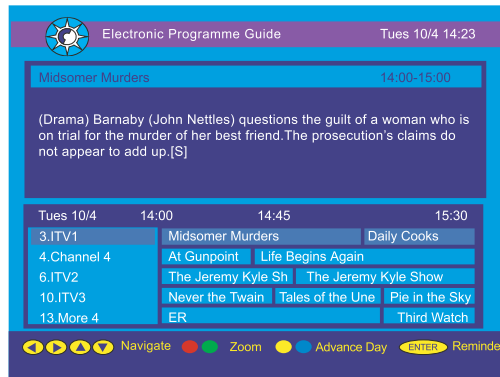



Accessing the EPG (Electronic Programme Guide)

5) Press  (blue) button to enter the Schedule Menu of EPG, and you can change the time scheduled in this menu.

Press  (red)/  (green) button to jump to previous/next range of time.

 
Press  (yellow)/  (blue) button to jump to previous/next day.






Channels List


1. Press **DTV MENU** button to display the **Main menu**.
2. Press **▼ / ▲** button to select Channel List, press **ENTER** button to enter **Channel List Menu**.
3. Press **▼ / ▲** button to select the channel you want to edit, press **◀ / ▶ / ENTER** button to select the function you want.
4. When you are satisfied with your settings, press **DTV MENU** button to go back to the previews menu.

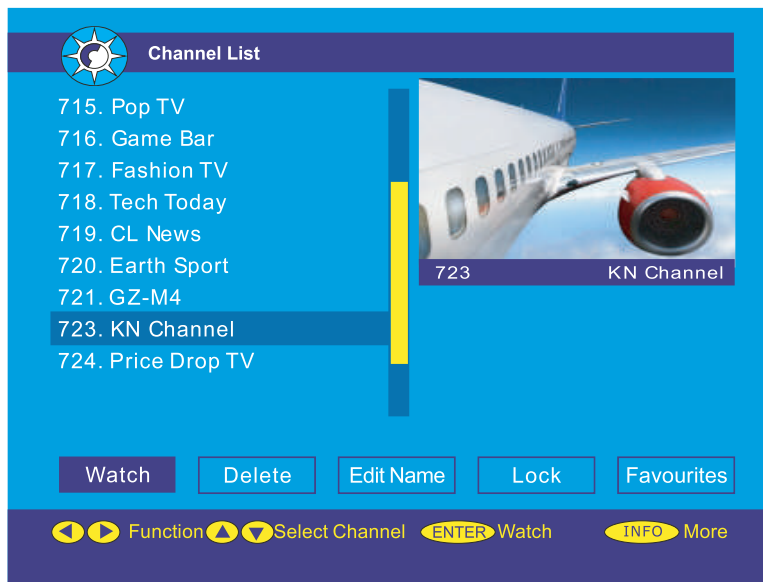




Lock/Unlock a channel:

 - 1) Enter the channel list menu, press ◀ / ▶/**ENTER** button to select the channel to be locked/unlocked.
- 2) Enter a correct pin code using the numeric buttons, press **ENTER** button to confirm. (The default pin code is 0000).
- 3) Then a lock symbol  displays alongside the selected channel.
- 4) Repeat step 123 to remove the lock symbol.
- 5) Press **DTV MENU** button to exit from the **channel list**.

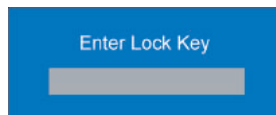

Delete a channel:

 Press **ENTER** button to delete the selected channel. The TV will ask you to confirm whether you want to del the channel.

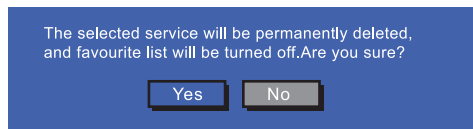

Edit Name

Press **ENTER** button to name the selected channel, or to edit the channel's name.

Favourites

Press **ENTER** button to edit the favourite channel list.



Subtitles

Press the **SUBTITLE** button repeatedly to cycle through the available subtitle languages. The on-screen display will show briefly the language of the selected subtitles. To remove the subtitles press the **SUBTITLE** button repeatedly until **Subtitles off** is shown on the on-screen display. Please note that only the languages that are being broadcast for the current program will be available.

LANG

Press the **LANG** button repeatedly to cycle through the available audio languages. The on-screen display will show briefly the language selected for the audio. Please note if "AD" follows the language shown on the on-screen display (for example "English AD") this is the audio descriptor audio, the normal audio from the program will not be heard, instead there will be description of the scene shown on the TV when there is a break in the normal audio.

Size:

Press the **SIZE** button to switch 4:3 or 16:9.

Digital Teletext

Some digital channels have a digital version of the traditional teletext service. Usually if the channel that you are viewing has this digital teletext there will be an on-screen display showing how this service can be accessed. For most channels that have this digital teletext service is accessed by pressing the **RED** or **TEXT** button. Once started follow the on-screen instruction to navigate through the available information. The standard navigation method is using the **UP/DOWN/LEFT/RIGHT ARROW** buttons and the **ENTER** button. Some services will offer shortcuts via the coloured buttons on the remote.



System Setting

First Time Installation

This menu allows you to delete all existing channels in the memory

- 1) Enter the system setting menu, press ▼ / ▲ button to highlight the **First Time Installation**
- 2) Press **ENTER** button to confirm, a confirmation window appears.
- 3) Press ◀ / ▶ button to highlight **Confirm** icon, press **ENTER** button to start first time installation. The instructions for automatic channel search can then be followed.
- 4) Highlight the **EXIT** icon, press **ENTER** button to cancel the first time installation.

Are you sure you want to delete all channels and settings for first time installation?

Yes

No

System Info :

 
- 1) Enter the **SYSTEM SETTING** menu, press ▼ / ▲ button to highlight the **System Info** option.
- 2) Press **ENTER** button to display the system information. You can view the software version of the DTV.



Change Pin Code

This menu allows you to change pin code.

- 1) Enter the **Settings** menu, press ▼ /▲ button to highlight the **Configuration** option.
- 2) Press ▼ /▲ button to select **Parental Settings** and enter.
- 3) Enter the **old pin code** using the numeric buttons(Default pin code is 0000).
- 4) Press ▼ /▲ button to select **Set lock key** and enter new pin code using the numeric buttons(0~9).
- 5) Press ▼ /▲ button to select **Enter Again**, and enter the new pin code again using the numeric buttons (0~9).
- 6) Press **DTV MENU** button to exit.

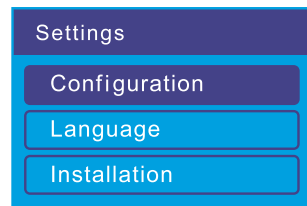




Language Settings

Enter the **SETTINGS** menu, press ▼ /▲ button to highlight the Configuration option.

 
Press ▼ /▲ button to select **Language** Menu, then press **ENTER** button to enter

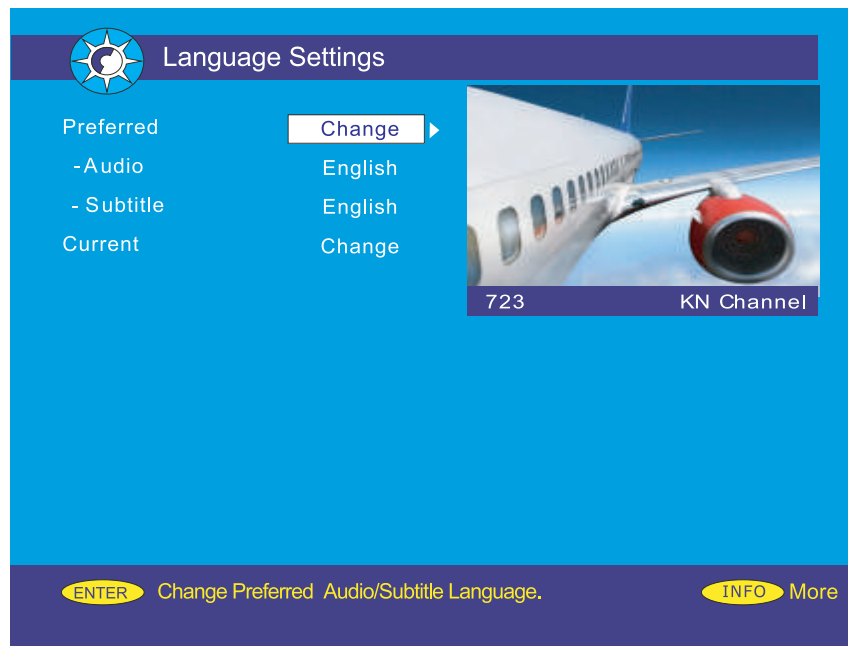



Favourite Lists

 - 1 Press **DTV MENU** button to display the Main Menu.
- 2 Press **▼ /▲** button to select channel List, press **ENTER** button to enter **Favourites** Menu.
- 3 Press **▼ /▲** button to select the channel you want to edit, press **◀ / ▶** / **ENTER** button to select the function you want.
- 4 When you are satisfied with your settings, press **DTV MENU** button to go back to the previews menu.

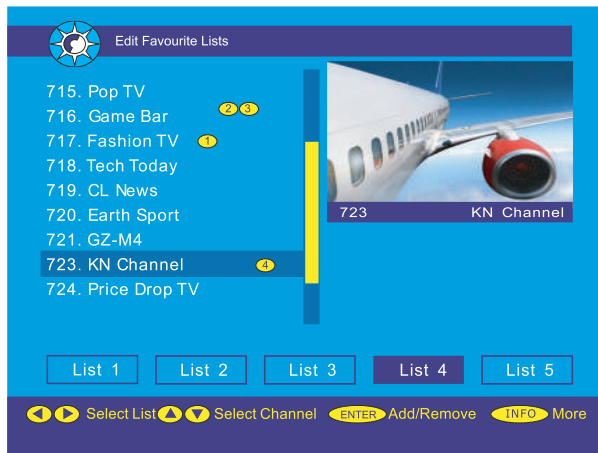

Press **▲ /▼** button to select the channel you want to edit, press **◀ / ▶** button to select the list number you want to add/remove the channel, then press **ENTER** button to confirm.



Remove favourite channels from favourite list:

- 1) Press **DTV MENU** button to display the Main Menu.
Press ▼ / ▲ button to choose the Favourites MENU.
- 2) Press the ▼ / ▲ / ◀ / ▶ button to highlight the channel to be removed from the favourite list.
- 3) Press the **ENTER** button to remove the channel from the favourite list
- 4) Press the **DTV MENU** button to exit.



Navigating channels using FAV buttons:

- 1) Press the **FAV** button to display favourite list selection screen.
- 2) Press the **RED** button repeatedly until the required favourite list is shown
- 3) Use **▼ / ▲** button to select a channel from the favourite list and press **ENTER**.
- 4) The currently selected Favourite list will be shown on the left hand side of the I-Bar.



COMMON INTERFACE

 
- 1 Press **DTV MENU** button to display the Main Menu.
- 2 Press ▼ / ▲ button to select Channel List, press **ENTER** button to enter **Common Interface** Menu.
- 3 Press ▼ / ▲ button to select the channel you want to edit, press ◀ / ▶ / Enter button to select the function you want.
- 4 When you are satisfied with your settings, press **DTV MENU** button to go back to the previews menu.

If inserted an available CI card, the information of the CI card will display on the TV.

NOTE: The information may be different between different cards.



(example)

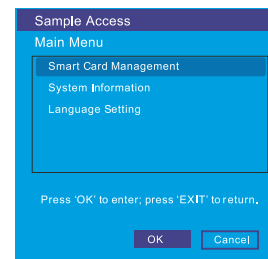


(example)

If you have not inserted it with an available CI card, it will display a message as below:

No common interface
module detected.



 Configuration Menu

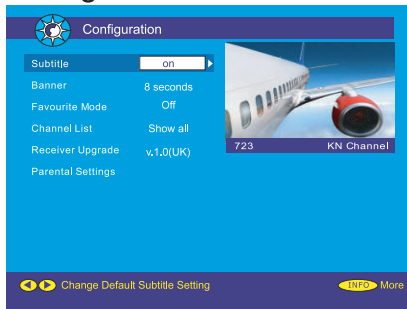

Subtitle

Press ◀ / ▶ button to change the default subtitle setting.

Banner

Press ◀ / ▶ button to change the default banner mode.

Favourite Mode

Press ◀ / ▶ button to change the favourite mode, select the number of Favourite List.

Channel List

Press ◀ / ▶ button to select the channel list.

Receiver Upgrade

Press ◀ / ▶ button to upgrade the program of receiver.

Parental Settings

Press ◀ / ▶ button to enter the parental settings submenu, and it will require you to enter the password, the factory original password is 0000.





DVD

Turn on your TV set and select **DVD** input by pressing the **INPUT** key on the remote.

Using the DVD Player Compatible Discs

Your DVD player can play discs that are marked with the following logos:



12cm DVD Video Discs.



12cm Compact Disc Recordable Discs.



12cm Compact Disc Re-Writable Discs.



12cm Compact Disc Audio Discs.



12cm Photo Compact Discs.

Region code

If the region code of the disc being played does not match the region code of this DVD player then the disc cannot be played.

The region code for this player is region 2 (refer to the symbols opposite).



Inserting a Disc



NOTE: To operate the DVD player from the remote control you must first repeatedly press the INPUT button so that DVD is displayed in the top right hand corner of the screen.

1. Gently push the disc into the slot on the left side of the TV/DVD with the label facing towards you. The mechanism will take the disc into the player.
2. 'LOAD' and 'READ' will be displayed.





Playing DVDs

The film may start automatically or you may be presented with a menu screen, this is dependent on the way the DVD disc has been created by the movie company.

Press the **ENTER** button to begin playback or use the **UP/DOWN** and **LEFT/RIGHT ARROW** buttons to navigate the menu.

Pause Play

1. Press the **⏸** button to pause play. The pause symbol will be displayed on the TV screen.
2. To resume normal play press the **⏸** button. The play symbol, **▶**, will be briefly displayed when the button is pressed.

Stop Play

1. Press the **■** button to stop play.
2. Press the **⏸** button to resume play where you stopped.



NOTE: Play will commence from the exact position where the DVD was stopped, unless either the DVD disc has been removed from the player or the stop (**■**) button is pressed a second time.

To stop play to remove the disc:

1. Press the **■** button twice. The stop symbol **■**, is displayed on the DVD player background graphic.
2. If you press the **⏸** button play will start from the beginning of the first chapter.
3. Press the **▲** button to eject the disc.



Fast Forward/Reverse

To fast search the contents of a disc during play:

1. Press either the ►► button to fast forward through the disc or the ◄◄ button to search backwards through the disc.
2. Each press of the ►► or ◄◄ buttons steps through the four available speeds. These are: X2, X4, X8 and X20 normal play speed.

The set speed will be displayed on screen after each press of the button as ►► X2, X4, X8 and X20 for fast forward and ◄◄ X2, X4, X8 and X20 for fast backward.

Press the || button at any time during fast mode operation to return to normal playback speed.

Skip to the Next/Previous Chapter

To skip to the next chapter during play:

1. Press the ►► button. Play re-starts at the next chapter each time this button is pressed.
2. Press the ◄◄ button. Play will restart at the beginning of the previous chapter.

Each time a skip button is pressed, the relevant symbol, either ►► or ◄◄ is displayed briefly on the screen for forward and reverse respectively.

Slow Motion

Six slow motion speeds are available during playback.

1. Press the SLOW button to skip through the six available speeds. These are 1/2, 1/3, 1/4, 1/5, 1/6 and 1/7 normal play speed.
2. Press the || button at any time during slow motion operation to return to normal playback speed.



Special DVD Functions

Title Playback

The **TITLE** button allows you to view, select and play the different titles recorded on the DVD.

1. Press the **TITLE** button and NAVIGATE to your required title.
2. Press **ENTER**.

Sequential Playback

1. Press the **PROGRAM** button to open the sequential menu screen.
2. Use the **UP/DOWN** and **LEFT/RIGHT ARROW** buttons to navigate to each sequence.
3. Use the **NUMERIC** buttons to input the title and chapters to view.
4. Use the **UP/DOWN** and **LEFT/RIGHT ARROW** buttons to navigate to 'Play'.
5. Press **ENTER**.
6. If required, use the **UP/DOWN** and **LEFT/RIGHT ARROW**

buttons to navigate to 'Clear', to clear all entries.

Repeat

You can replay either a specific chapter, title or the entire disc.

1. Press the **REPEAT** button to scroll through the three repeat options:
 - Chapter: Repeats the current chapter
 - Title: Repeats the current title
 - Repeat All: Repeats the entire disc
2. Press the **REPEAT** button again to cancel repeat.



Display

The display function shows an on-screen display for the current title.

1. Press the **DISPLAY** button to show an on-screen display with:

- Disc Type
- Title (Current / Total)
- Chapter (Current / Total)
- Time elapsed

2. Press **DISPLAY** button a second time to show:

Audio (Current / Total / Off)

Language, Audio type, Subtitle (Current / Total)

Subtitle Language

Camera angle

3. Press the **DISPLAY** button a third time to switch the display off.

Goto

The **GOTO** button can be used to skip to your favourite title, chapter or track.

1. Press the **GOTO** button to show the on-screen display.

2. Press the **UP/ DOWN** and **LEFT / RIGHT ARROW**

buttons to move to each editable value.

3. Press the **NUMERIC** buttons to change the value.

4. Press **ENTER** to goto the selected title / chapter / track.



Subtitles

Some DVD discs contain subtitles in several languages.

To access the subtitles:

1. Press the **SUBTITLE** button repeatedly to skip through the available languages displayed on the TV screen, until the language required is found.

The subtitle in the selected language appears shortly after selection. The selected subtitle overrides the subtitle setting in the Preferences setup menu.



NOTE: See the DVD disc cover for supported languages.

Audio

Press the **AUDIO** button to display the current audio mode. Repeatedly pressing the **AUDIO** button will scroll through the available languages.

Zoom

You have six preset zoom options to choose from.

1. Press the **ZOOM** button to zoom in or zoom out on the display. There are six zoom modes. Repeatedly press the ZOOM button to scroll through the available options. The options are:

- Zoom In: X2, X3 and X4
 - Zoom Out: 1/2, 1/3 and 1/4
2. When in zoom mode, press the **UP/DOWN** and **LEFT/RIGHT** ARROW buttons to pan around the display.



Repeat A-B

You can repeat a section of the DVD, of any length, within a chapter.

1. Press the A-B button once at the point you would like repeat playback to start.
2. Press the A-B button a second time at the point you would like repeat playback to end. The selected part of playback will repeat.
3. Press the A-B button a third time to cancel A-B repeating.



Playing Audio CDs

Insert an audio CD into the DVD player as described previously. Playback will automatically start at the first track. The track number, total number of tracks, repeat mode and elapsed time will be displayed.

Control During Playback

The following controls are available during playback, as described for playing DVDs.

- Play
- Pause
- Stop
- Fast forward
- Fast backward
- Skip forwards
- Skip backwards
- Repeat A-B
- Goto
- Program
- Audio

INTRO

Press the **INTRO** button to playback a 15 second preview of each of the tracks on the CD.



Playing MP3 / JPEG CDs

Insert an MP3 or JPEG CD into the DVD player as described previously. The JPEG / MP3 contents screen will be displayed.

Note: Only JPEG files smaller than 3 MB will be shown

1. Press the **UP/DOWN** and **LEFT/RIGHT ARROW** buttons to navigate through the available files and folders.
2. Press **ENTER** to select a file or folder.

You can also use the **NUMERIC** buttons to input directly the file number required.

The following controls are available during playback, as described previously.

- Play
- Pause
- Stop
- Skip forwards
- Skip backwards
- DISPLAY
- Goto
- Zoom functions



Repeat

You can replay either the current track, current directory or the entire disc.

1. Press the **REPEAT** button to scroll through the three repeat options:

- Repeat 1
- Repeat Directory
- Repeat All

2. Press the **REPEAT** button again to cancel repeat.



Program Effects

When the JPEG contents screen is displayed, the **PROGRAM** button allows you to preselect the order the pictures are displayed in, as previously described for DVDs.

When JPEG images are displayed, press the **PROGRAM** button to display different effects available. There are 16 different effects to choose from:

- Wipe Top
- Wipe Bottom
- Wipe Left
- Wipe Right
- Diagonal Wipe Left Top
- Diagonal Wipe Left Bottom
- Diagonal Wipe Right Top
- Diagonal Wipe Right Bottom
- Extend from Centre H
- Extend from Centre V
- Compress to Centre V
- Compress to Centre H
- Window H
- Window V
- Wipe from Edge to Centre
- Random



Rotating JPEGs

When playing JPEGs, press the **ARROW** buttons to flip or rotate the picture:

When the image is displayed:

- Use the **RIGHT ARROW** button to rotate the image clockwise by 90 degrees.
- Use the **LEFT ARROW** button to rotate the image anticlockwise by 90 degrees.
- Use the **UP ARROW** button to flip the image vertically.
- Use the **DOWN ARROW** button to flip the image horizontally.



DVD Player Setup Menus

The DVD setup menus allow you to adjust various settings to suit your personal preference.



NOTE: Some of the DVD setup menu options are *only* available when the DVD is in the 'Stop' mode.

Basic Controls

 
1. Press the **■** button twice to make sure that the DVD is in the stop mode and press the **DVD SETUP** button to open the DVD setup menus.
2. Use the **UP /DOWN ARROW** buttons to select a menu page.
3. Press the **RIGHT ARROW** button to enter the sub-menu. To return to the main menu press the **LEFT ARROW** button.
4. Use the **UP /DOWN ARROW** buttons to select an entry on the page and show the list of options. The currently selected option will be shown in a brown box.
5. Press **RIGHT ARROW** to enter the options list.
6. Use the **UP /DOWN ARROW** buttons to select an option.
7. Press **ENTER** to save the setting.
8. Use either the **LEFT ARROW** button to go back to the page menu or press **DVD SETUP** to close the menu system.

System Setup Page

TV System

This menu enables you to set the picture format for your TV.

- PAL: This is the format used in the UK and the default setting.
- AUTO: Can be used if your television is capable of both PAL and NTSC formats.
- NTSC: This format is used by some other countries, e.g. USA.

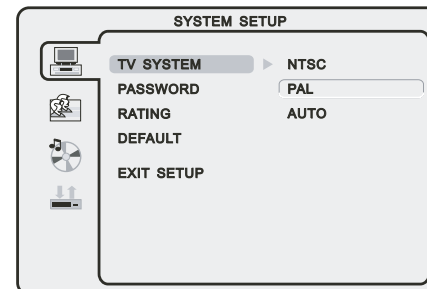



Password

You can change the password to prevent children adjusting the ratings that can be viewed. To lock, enter a four digit numerical password and press the **Enter** button. To unlock, enter the password and press the **Enter** button. The default password is "0000".

Rating

Some pre-recorded DVDs are supplied with parental control ratings. The Rating function allows you to prevent playback of unsuitable material by setting the rating available for playback. The following ratings are available: The default is "Adult".

  - 1 KID SAFE
- 2 G
- 3 PG
- 4 PG13
- 5 PG-R
- 6 R
- 7 NC-17
- 8 ADULT

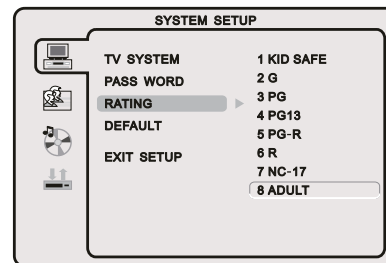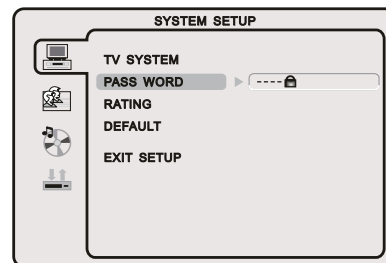


Default

This feature will reset the DVDs setup configuration to its factory default settings



 NOTE: *The reset does not reset the parental control or the password.*

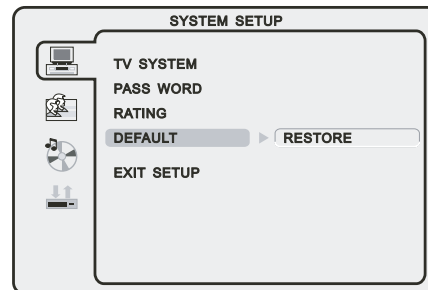

OSD Language - On-Screen Display Language

This is the language used for the text on the setup pages. English language is available. English is the default setting.

 
 
 
When you press the **ENTER** button to select a language the change is immediate.

Audio Language

Some DVD discs contain audio commentaries and the audio track in different languages. This menu enables you to select the preferred language. There are a number to choose from.

Subtitle Language


Some DVD discs contain subtitles in different languages. This menu enables you to select the preferred language. The default setting is 'off'.

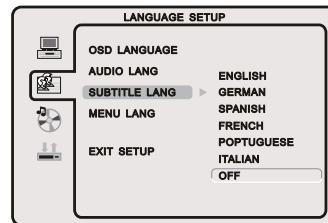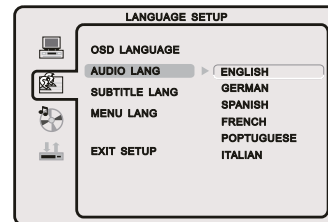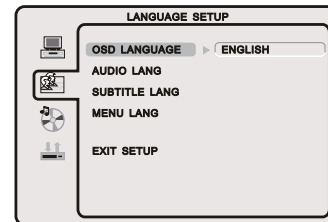

NOTE: You can also select the subtitle or audio language by pressing the **SUBTITLE** or **AUDIO** button on the remote control. Refer to the DVD disc cover for a list of subtitle language tracks.

Menu Language

 
Some DVD discs contain the menu screens in different languages. This menu enables you to select the preferred language. The default is English.

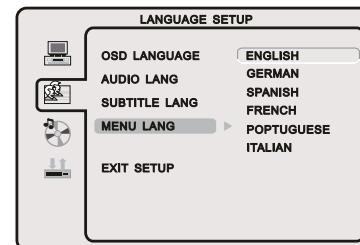

Audio Setup Page

Tone

 This menu enables you to adjust the audio output tone.

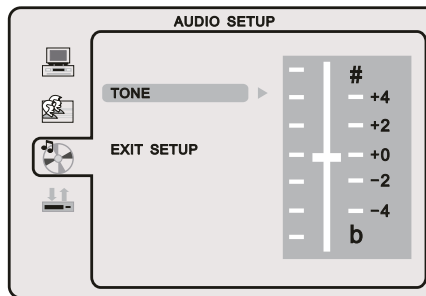

Digital Setup Page

 
 
Dynamic Range

The Dynamic Range function allows you to set the dynamic compensation level. This allows you to soften high volume outputs such as gunfire and explosions.

Dual Mono

Four audio outputs are available

- Stereo: Stereo output.
- Mono L: Left mono output from the left and right speakers.
- Mono R: Right mono from the left and right speakers.
- Mix Mono: Left mono output and right mono output played from both speakers.

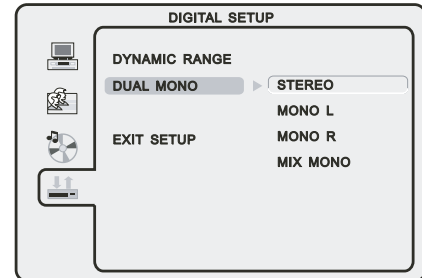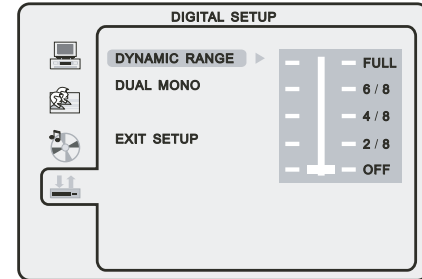

Troubleshooting

Problem	Possible Cause
The TV does not work	Make sure that the power supply is connected and that the mains supply is switched on.
Poor picture	Is the aerial plugged in? Try changing the direction of the outdoor aerial. High buildings and hills can cause ghost pictures or double images. Check the channel is tuned properly. Try adjusting the picture settings; brightness, colour, sharpness. Make sure the TV is not located close to electrical appliances that may emit radio frequency interference.
No TV picture	Is the aerial plugged in properly? Is the aerial lead damaged? Are all the plugs in the aerial lead fitted correctly? Is the TV in the correct input signal mode?
No sound	Is the sound muted? Press the Mute button. Is the volume turned down?
No colour	Adjust the colour setting. Check the programme is broadcast in colour. Check the channel is tuned properly.
No response from the remote control. DVD/CD Does not play	Is there an obstruction between the remote control and the sensor on the TV? Try changing the batteries. Avoid direct sunlight on the remote control sensor. Is the DVD/CD inserted incorrectly - Eject the DVD/CD and ensure that it is inserted with the label facing the front of the TV



WARNING: IF THIS DOES NOT WORK, CONTACT EITHER YOUR SUPPLIER OR A QUALIFIED TV REPAIR TECHNICIAN. NEVER ATTEMPT TO REPAIR THE TV YOURSELF.

Care and Maintenance

Care of the screen

Clean the screen with a slightly damp, soft cloth.

Do not use abrasive solvents or cleaners as they may damage the TV screen coating layer.

Always unplug the TV from the mains while cleaning.

How Do I Dispose of this Product?



When your TV has reached the end of its life, contact your local council regarding available recycling or disposal options.



Do not dispose of electrical products in the general waste.

Please ensure that used batteries are disposed of safely.

Technical Specification

Power Supply	
Input	AC 230-240V 50/60Hz
Fuse rating	10A
Remote Control Batteries	2×AAA(supplied)
Number of preset programmes	199
RF Aerial input	75 ohm(balanced)
Audio output	NICAM Stereo/Mono
Maximum Power Consumption	≤ 165W
Standby Power Consumption	≤ 2 W
LCD panel	
Type	32" TFT-LCD
Display Colour	16.7 M
Interface	LVDS type
Viewing Angle	89/89/89/89

Guarantee

This product is guaranteed for 12 months from the date of original purchase. If any defect arises due to faulty materials or workmanship, the unit will either be replaced, a refund given or repaired free of charge (where possible) during this period by the retailer from whom you purchased the unit.

The guarantee is subject to the following provisions:

- The guarantee is only valid within the boundaries of the country of purchase.
- The product must be correctly assembled and operated in accordance with the instructions contained in this booklet.
- The guarantee does not cover accidental damage, misuse, or consumable items.
- The guarantee will be rendered invalid if the product is resold or has been damaged by inexperienced repair.
- The manufacturer disclaims any liability for incidental or consequential damages.

This guarantee is in addition to and does not diminish your statutory, or legal rights.

A decorative graphic on the left side of the slide, consisting of several overlapping squares of various shades of gray. The squares are arranged in a way that creates a sense of depth and movement, with some squares appearing to be in front of others. The overall effect is a modern, abstract design.

Goodmans

GML 32DVD/January 08