 


Goodmans

GTV34CDG

**14" (34cm) COLOUR TELEVISION
WITH DVD PLAYER**

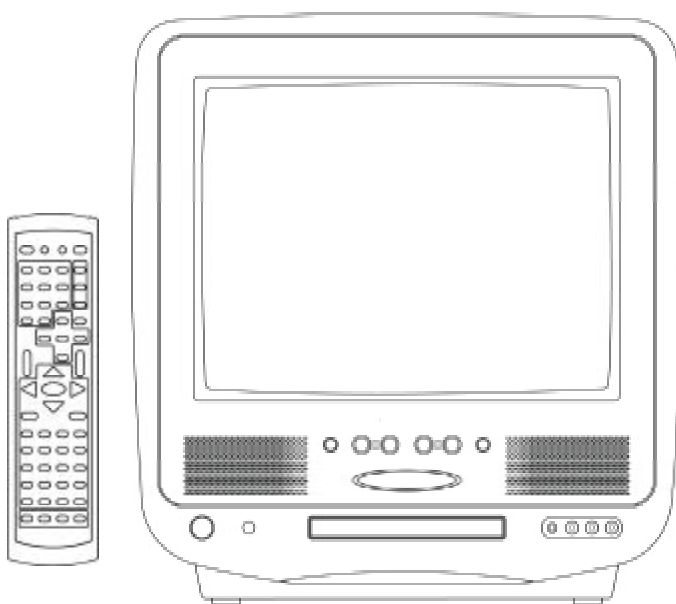

OPERATION MANUAL



Contents

CAUTION	3
IMPORTANT SAFEGUARDS (PREFITTED MAINS PLUGS)	5
LOCATION OF CONTROLS	6
LOCATION OF REMOTE CONTROL UNIT	7
OPERATING THE TELEVISION	8
REMOTE CONTROL OPERATING	11
DVD PLAYER OPERATION	12
SPECIFICATION	24



CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK. DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

The graphic symbols on the back cover of the set mean the following:



The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

WARNING : TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

INSTALLATION

LOCATE the receiver in the room where direct light does not strike the screen. Total darkness or a reflection on the picture screen can cause eyestrain. Soft and indirect lighting is recommended for comfortable viewing.

ALLOW enough space between the receiver and the wall to permit proper ventilation.

AVOID excessive warm locations to prevent possible damage to the cabinet or component failure.

CONNECTION

This TV receiver can be connected to AC: 230V~ 50Hz .

AUTOMATIC DEGAUSSING

All color television receivers are sensitive to magnetic influences, usually caused by either moving the receiver from one place to another or using certain electrical appliances near the receiver. This residual magnetism as it is called, sometimes causes distortion which gives rise to "blotchy" areas of color in the picture. To avoid these effects the receiver incorporates an automatic degaussing circuit which operates for a short while immediately each time the receiver is switched on using the mains switch. This circuit removes any residual magnetism in the metal parts of the picture tube and therefore ensures that each time the receiver is switched lifelike. If the set is moved or faced in a different direction, the mains switch must be switched off at least 10 minutes in order that the automatic degaussing circuit operates properly.

CAUTION

Never tamper with any components inside your set, or any other adjustment controls not mentioned in this manual. All television receivers are high voltage instruments. Your PICTURE TUBE is highly evacuated. If broken, glass fragments will be violently expelled. Scratching, shipping or undue pressure is dangerous and should be avoided. When you clean up dust or stick or a water drop on the PICTURE TUBE FACE or CABINET, the power cord should be pulled out from the wall then wipe the receiver with a dry soft cloth. All "inside work" on your receiver should be performed only by the Professional Service Personnel.

DANGER



 
Invisible laser radiation when open and interlock failed or defeated. avoid direct exposure to laser beam.

LASER SAFETY

This unit employs an optical laser beam system in the CD mechanism, designed with built in safeguards. Do not attempt to disassemble, refer to qualified service personnel.

Exposure to this invisible laser light beam may be harmful to the human eye.

THIS IS A CLASS-1 LASER PRODUCT. USE OF CONTROLS, OR ADJUSTMENTS OR PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN, MAY RESULT IN HAZARDOUS LASER LIGHT BEAM EXPOSURE.

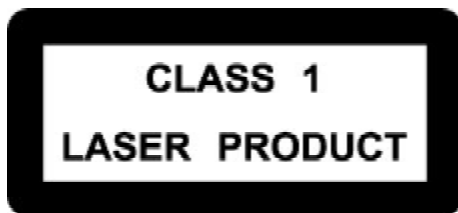

Manufactured under license from Dolby Laboratories "Dolby", "Pro Logic" and the double-D symbol are trademarks of Dolby Laboratories. Confidential unpublished works. ©1992-1997 Dolby Laboratories, Inc. All rights reserved.

This product incorporates copyright protection technology that is protected by U.S. patents and other intellectual property rights. Use of this copyright protection technology must be authorized by Macrovision, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision. Reverse engineering or disassembly is prohibited.

IMPORTANT SAFEGUARDS

PREFITTED MAINS PLUGS

For your convenience a mains plug has been fitted to this appliance. For your safety please observe the following information.

1. Should the fuse in the plug fall remove the plug from the wall socket and replace the fuse with a 3 Amp ASTA approved to BS 1362 fuse.
2. Never use the plug without the fuse cover fitted. Replacement fuse covers are available from your dealer or most electrical retail outlets.
3. If the mains plug is out off the cable, rewire the replacement plug in accordance with instruction give in this manual.
4. CAUTION: Under no circumstances should the discarded plug be inserted into the mains socket. To prevent a shock hazard carefully dispose of the discarded plug. Do not leave the plug lying around where children might see it.

WARNING: To prevent fire or shock hazard do not expose this unit to rain or moisture.

CAUTION:

DANGEROUS VOLTAGES EXIST INSIDE THIS UNIT DO NOT REMOVE COVER(OR BACK).

NO USER SERVICEABLE PARTS INSIDE REFER SERVICING TO QUALIFIED SERVICE PERSONNEL. DISCONNECT FROM MAINS SUPPLY WHEN NOT IN USE.

This wires in this mains lead are coloured in accordance with the following wiring codes:

 
Blue..... Neutral

Brown..... Live

This wires in this mains lead must be connected to the terminals in the plug as follows:

Blue Wire..... N or Black

Brown Wire..... L or Red

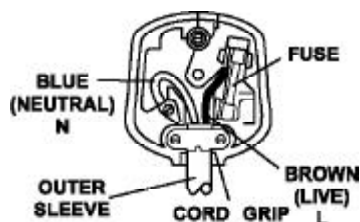


Only a 3 Amp fuse should be fitted in the plug or a 5 Amp fuse at the distribution board.

WARNING: UNDER NO CIRCUMSTANCES MUST THE LIVE OR NEUTRAL WIRES BE CONNECTED TO THE EARTH TERMINAL IN A 3 - PIN MAINS PLUG.




This symbol means that this unit is double insulated. An earth connection is not required.

 
LOCATION OF CONTROLS

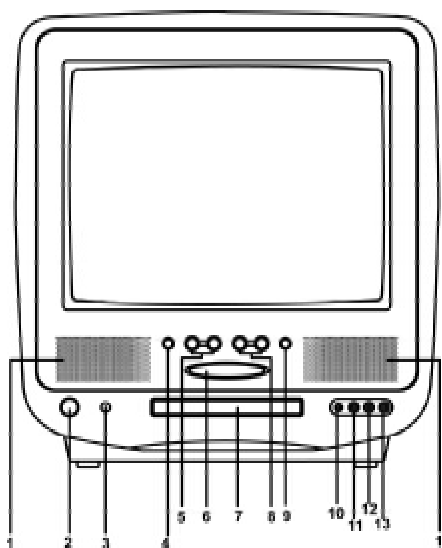

 1. Speaker
2. Power Button
3. Remote Sensor
4. TV/AV/DVD Buttons
5. Channel Button
6. DVD Open/Play/Stop Button
7. DVD Loader
8. Volume Buttons
9. MENU Button
10. MIC INPUT
11. Front Video Input(AV2)
12. Front Audio (L) Input(AV2)
13. Front Audio (R) Input(AV2)
14. 75 ohm Antenna
15. Scart connector(AV1)
16. Audio digital Out Socket(for DVD only)
17. Audio out (R) for DVD
18. Audio out (L) for DVD
19. Video out for DVD
20. S-Video out for DVD

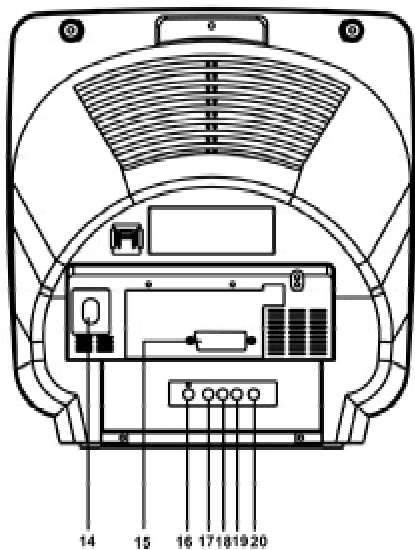


REMOTE CONTROL UNIT

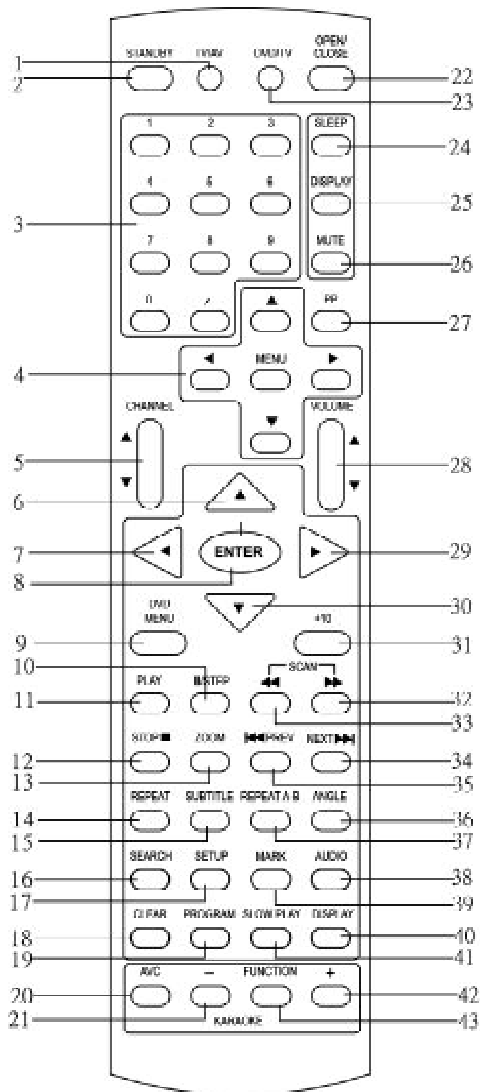 

1. TV/AV Button
2. STANDBY Button
3. Numeric Buttons
4. TV Menu/Navigation Arrows Buttons
5. Channel Button
6. DVD Navigation Up Button
7. DVD Navigation Left Button
8. DVD Enter Button
9. DVD Menu Button
10. Pause/Step Button
11. Play Button
12. Stop Button
13. Zoom Button
14. Repeat Button
15. Subtitle Button
16. Search Button
17. Setup Button
18. Clear Button
19. Program Button
20. AVC Button
21. Function - Button
22. Open/Close Buttons
23. DVD/TV Buttons
24. Sleep Button
25. TV Display Button
26. Mute Button
27. PP Button
28. Volume Up/Down Buttons
29. DVD Navigation Right Button
30. DVD Navigation Down Button
31. DVD +10 Button
32. Fast forward Button
33. Fast backward Button
34. Next Button
35. Previous Button
36. Angle Button
37. Repeat A-B Button
38. Audio Button
39. Mark Button
40. DVD Display Button
41. Slow Play Button
42. Function + Button
43. Function Button

BATTERY INSTALLATION

 - Insert two pcs "AAA"; "LR03" batteries (supplied) as illustrated and replace the battery cover.

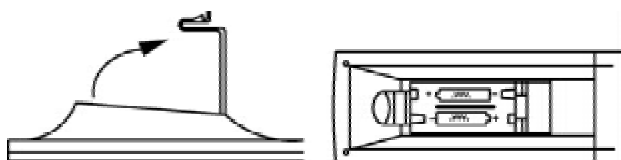

OPERATING THE TELEVISION

Connect your TV aerial to the aerial input socket located on the back of the TV.

Push the Main Power Switch, Power Indicator will be illuminated, After few second later the TV screen will light up and will show noise on the screen. The TV will require tuning into the available TV stations in your area.

Pre-setting the TV stations into the Memory

(Note: Preset tuning can only be carried out in TV Mode)

Press MENU three times on the remote handset ,the TV screen will show TUNE mode as FIG.1

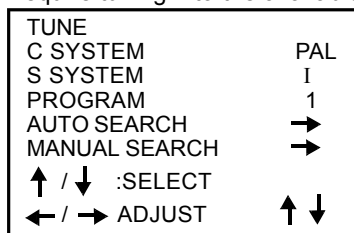 


FIG.1

AUTO SEARCH

1. Press the Navigation button ▼ to select the AUTO SEARCH mode as shown in FIG. 2
2. Press the Navigation button ► to start the automatic scanning processes,the scanning starting from VHF to UHF and the TV stations will automatic store into memory as shown in FIG. 3
- When scanning is completed, the set will tune to lowest program and show lowest program number on the screen.
- If want to stop auto search function to press MENU ▼ button.
- To exit the menu press the MENU button.

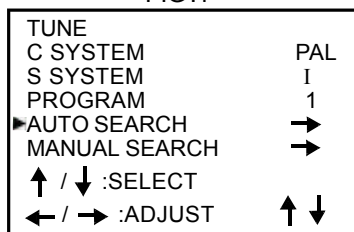 


FIG.2

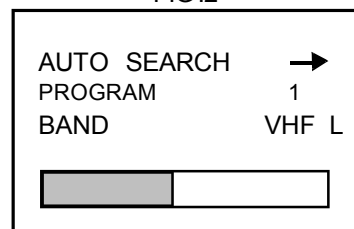 


FIG.3

MANUAL SEARCH

1. Press the Navigation ▲/▼ button to select the PROGRAM. then press the Navigation ▲/▼ button to select the desired Program number .
2. Press the Navigation ▼ button and select desired band. UK=PAL.
3. Press the Navigation ▲ button and select the MANUAL SEARCH mode then press the Navigation ◀▶ button to start search up or down the wave band. The TV screen will show the tuning bar move as shown in fig 5 and then stop at a received TV station. If this is not the desired station to be memorised into the previously set Programme CH number (1, 2,3 etc) press the Navigation ◀▶ button again until the correct TV station is shown. This station will automatically be memorised if no further buttons are pressed (Menu times out after 10 seconds) or when exiting the Menu. Repeat instructions 1-3 above to memorize other stations into the memory.

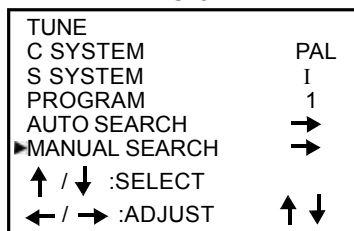 


FIG.4

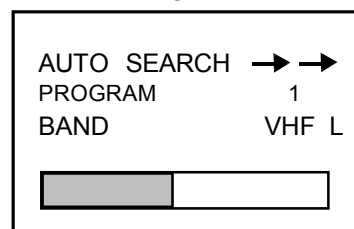 






FIG.5

Note: If an incorrect TV station is memorized then simply select the CH / Programme not required and re-tune the TV to the correct station as detailed in 1-3 above. The new station will over write the old station.

COLOUR SYSTEM

UK Colour system is "PAL". This set is factory set to "PAL".

 
 
1. Press the Navigation / button to select the C SYSTEM then press Navigation / button to change the desired color system PAL,NTSC,AUTO.

SOUND SYSTEM

UK sound system is "I". This set is factory set to "I".

1. If the unit is the single sound system,it is fixed cannot be adjust.

 
 

 
Notes:

1. If ghost / noisy stations have been stored when using the AUTO SEARCH method these can be removed from the channel list by entering the SKIP Mode shown in the TUNE menu. Press the Navigation / and change the OFF state to ON. Press the MENU button to return to normal viewing. The unwanted station will be removed from the channel list when you change TV channels and cannot be viewed.

The SKIPPED station can be restored by re entering the TUNE menu and changing the SKIP ON status to OFF.

- To exit the menu press MENU button.


 
 

PICTURE

1. Press the MENU ,TV screen will show PICTURE mode.
 2. Press the Navigation button / to select the COLOR/BRIGHT / CONTRAST / SHARP as show in FIG. 6.
 3. Press the Navigation button / to adjust the desired level, The steps can be adjust from 0 ~ 99.
- To exit the menu press the MENU three times.

PICTURE	
CONTRAST	50
BRIGHT	50
COLOR	50
SHARP	50
↑ / ↓ : SELECT	
← / → : ADJUST	

FIG.6




SET UP LANGUAGE

1. Press the MENU button 2 times to select the SETUP,as shown in figure 7.
2. Press the Navigation button / to select the LANGUAGE,then press the Navigation / to select the desired language ENGLISH, FRANCAIS,ESPANOL, PORTUGUESE,NEDERLAND,ITALIANO, DEUTSCH,PYCKK.

SETUP	
LANGUAGE	ENGLISH
BLUE BACK	ON
EXCHANGE	1 → --

FIG.7

BLUE BACK

Press the Navigation / button to select the BLUE BACK and press the Navigation / button to adjust the blue Back-ground on or off.

 
EXCHANGE / SWAP

After storing TV stations using the AUTO SEARCH or MANUAL SEARCH methods. The stations can be repositioned so that BBC1 is in CH 1 location, BBC2 is in CH 2 location etc.


1. View the channel that is to be exchanged / swapped with another station location eg swap the viewed TV channel stored in CH 4 with the TV station that is stored in CH 1.
2. Press the MENU button twice and highlight the EXCHANGE caption. Your existing CH (viewed channel) number will be shown in red. using the numeric key pad on the remote press the CH number required (1,2, or 3 etc) to swap the viewed TV channel with. Press the right navigation arrow to make the selection. The viewed station has now been moved to its new CH location. Press the MENU button twice to exit the menu system. In the same way described above move other TV stations to your preferred CH number location.

CHANNEL SELECT AND VOLUME CONTROL

1) Press CHANNEL ▼/▲ buttons to select TV station.

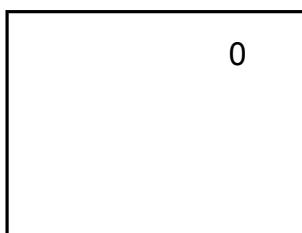


 Press CHANNEL. "▼", the program no. will appear on the top right corner and change from higher no. to lower no.

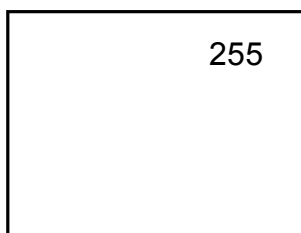


Press CHANNEL. "▲", the program no. will change from lower no. to higher no.

 2) Press VOLUME ▼/▲ button to adjust sound level.

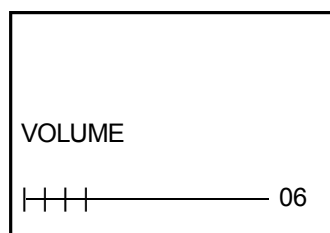

TV/AV/DVD Mode Button

 - If video/audio input socket are in use, press TV/AV/DVD Mode button, "VIDEO1" OR "VIDEO2" will display on the top right corner of the screen.
- Press TV/AV/DVD button to turn on DVD. When DVD mode is selected please wait, the screen will be dark as it will take a few seconds to show the "DVD" at the top right corner of the screen.



4. REMOTE CONTROL OPERATION

CHANNEL Up and Down buttons

Press the CHANNEL ▲ or ▼ button to select a higher or lower channel number.

0~9 Numeric Button

To select a TV station using numeric buttons 0~9.

For example:

Press number “9” button to select PROGRAM “9”.

- **Two digit Program Number**

For example:selecting PROGRAM “12”

1. Press the -/-- button, on screen will show --.
2. Press the number “1” button,on screen will show “1-”.
3. Press the number “2” button,channel “12” will show.

- **Three digit Program number**

For example:selecting PROGRAM “123”

1. Press the -/-- button twice, on screen will show ---.
2. Press the number “1” button,on screen will show “1--”.
3. Press the number “2” button,on screen will show “12-”.
4. Press the number “3” button,on screen will show “123”.

PP Button(personal preference)

- Press PP button to select the picture effect.



SLEEP Button

Presses the SLEEP button to select a predetermined time the TV will turn off. The sleep time can be set to count down from 5 to 120 minutes.

STANDBY Button

- Press the STANDBY button to switch ON/OFF the picture and sound.

MUTE Button

- Press the Mute button to switch OFF the sound,press once again to switch ON the sound.

TV/AV Button

- Press the AV/TV mode Button to select VIDEO mode.Press again to go back to TV mode.

DVD/TV Button

- Press the DVD/TV mode Button to select DVD mode.Press again to go back to TV mode.
(There will be a few seconds delay before entering the DVD mode).

DVD PLAYER OPERATION

BASIC OPERATION

1. Press "TV/AV/DVD" button on the unit or press the DVD MODE direct key on the remote handset to turn ON DVD.
2. Press "OPEN / CLOSE (EJECT)" button to load disc in disc tray.
3. Press "OPEN / CLOSE" button to close the tray.
 - Hold the disc without touching either of its surfaces, position it with the printed title side facing up.

PLAY DISCS

1. Press the OPEN/CLOSE Button on the front panel and load the Disc on the tray.
The label side should be facing upwards. For a Double-sided DVD Disc, put the disc with label A/1 up.
2. Press the OPEN/CLOSE button again to close the tray and the disc will be loaded.
3. The Disc will be played automatically.
 - If it is a DVD disc, it will show the Menu/Title Page on the screen.
 - If it is a CD, it will play the first track directly.
4. Press the STOP Button if you want to stop the Disc playback You can resume playback by pressing the PLAY button and it will start at the location where you have pressed stopped (Resume Play).
5. Press the STOP Button twice to have the Disc really stopped.

|| (PAUSE)/ STEP

This function is applicable for DVD and CD audio.

- For DVD, the picture will freeze.
 - For CD audio, it will become muted.
1. Press the (||) Button to pause play.
 2. Press the PLAY Button again to resume Play.

DVD SETUP MODE

DVD setup mode can only be selected whilst in the DVD mode.

 
- Setup Mode provides menu for the configuration of SYSTEM SETUP, LANGUAGE SETUP, KARAOKE SETUP, VIDEO SETUP, SPEAKER SETUP, DIGITAL SETUP.
- Item selection in the SETUP menu is done by using the direction button and the ENTER button.
- To exit the SETUP Mode, press the SETUP button again or select the EXIT and press the ENTER button.

SYSTEM SETUP


In stop mode press SETUP button and highlight SYSTEM setup then press ENTER button to confirm.

TO select the desired item by use the direction ▼/▲, ◀/▶ button, then press the ENTER button to confirm the selected item.

TV SYSTEM : NTSC
PAL(Default)
AUTO

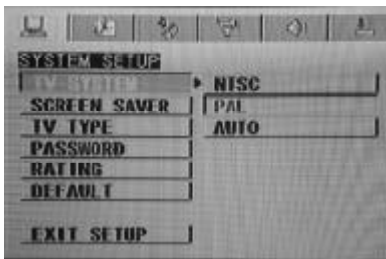

SCREEN SAVER : ON (Default)
OFF

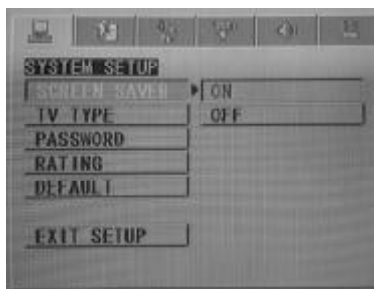 


TV TYPE: 4:3 PS (Pan Scan)
4:3 LB (Letter Box)(Default)
16:9 (wide screen)




❖ **PASS WORD: _ _ _ _**

 The password option is initialized locked, and you cannot set the ratings limit or change the password. In order for the Ratings feature work, the password mode must be turned on. If you want to set the ratings limit, you will need to enter the default password, which is 0000, then press Enter to confirm. To change the password, you will be prompted for the old password, then be prompted for a new. Enter a 4-digit number (this is your password).

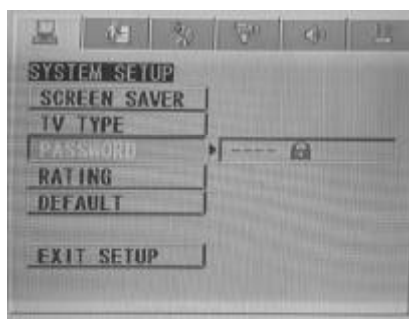

 RATING: NO ADULT
KID. SAFE
VIEW ALL(Default)

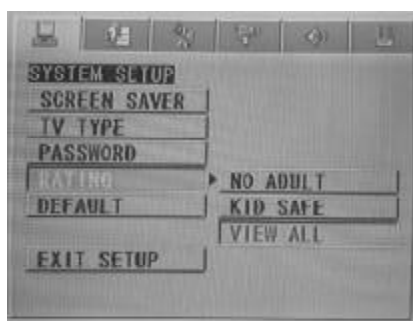

The Rating feature is a rating limit system, like movie ratings. It works with DVD discs that have been assigned a rating. This helps you control the types of DVDs that your family watches.

- There are two rating options: NO ADULT and KID SAFE.
- Select the VIEW ALL option to cancel the rating limit.

The default setting is VIEW ALL.

Notes:

- If the password option is locked, you cannot set the ratings limit; the rating limit does not work when the password option is unlocked.

❖ **DEFAULT: RESTORE**

Choose this option to resume all the setup options to default settings.



LANGUAGE SETUP MENU

In stop mode press SETUP button and press the direction◀/▶ button to highlight language setup then press ENTER button to confirm.

OSD LANGUAGE

1. Press direction▲/▼ button to highlight the OSD and press ENTER button,then press the direction ▼/▲ button to select the desired OSD language.

- **ENGLISH (Default)**
- GERMAN
- SPANISH
- FRENCH
- PORTUGUESE



AUDIO LANGUAGE

1. Press direction ▲/▼ button to highlight the AUDIO and press the ENTER button,then press the direction ▼/▲ button to select the desired AUDIO language.

- **ENGLISH (Default)**
- FRENCH
- SPANISH
- PORTUGUESE
- GERMAN



SUBTITLE LANGUAGE

1. Press direction ▲/▼ button to highlight the AUDIO and press the ENTER button,then press the direction ▼/▲ button to select the desired AUDIO language.

- ENGLISH
- FRENCH
- SPANISH
- PORTUGUESE
- GERMAN
- **OFF(Default)**



MENU LANGUAGE

1. Press direction **▲/▼** button to highlight the SUBTITLE and press the ENTER button, then press the direction **▼/▲** button to select the desired SUBTITLE language.

- **ENGLISH(Default)**
- FRENCH
- SPANISH
- PORTUGUESE
- GERMAN

 


VIDEO SETUP

In stop mode press SETUP button and press the direction **◀/▶** button to highlight VIDEO setup then press ENTER button to confirm.


❖ BRIGHTNESS

Use the Up and Down arrow button to move the scroll and adjust the brightness.

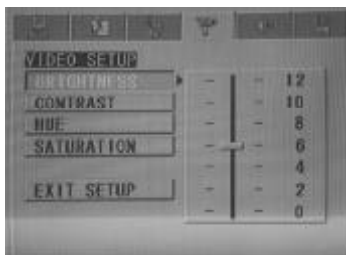

❖ CONTRAST

 Use the Up and Down arrow button to move the scroll and adjust the contrast.

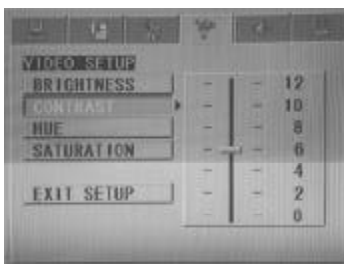

❖ HUE

Use the Up and Down arrow button to move the scroll and adjust the hue.



❖ SATURATION

Use the Up and Down arrow button to move the scroll and adjust the saturation.



KARAOKE SETUP

Quick setup is also available whilst the disc is playing. Press and hold the KARAOKE FUNCTION button on the remote. The ECHO / MIC / KEY will be shown cyclically in the display. When the correct function to be altered is shown release the FUNCTION button and press the KARAOKE “ - “ and “ + “ buttons to alter the shown function. This new change will be memorised when no further buttons are pressed and the TV screen returns to normal operation.

In stop mode press SETUP button and highlight KARAOKE setup then press ENTER button to confirm.

ECHO : 8
 6
 4 (Default)
 2
 OFF



- Use the Up and Down arrow button to move the scroll and adjust the echo.

MIC VOL : 8
 6
 4 (Default)
 2
 OFF



- Use the Up and Down arrow button to move the scroll and adjust the microphone volume.

 
KEY : 8
 +4
 +2
 0 (Default)
 -2
 -4
 b



- Use the Up and Down arrow button to move the scroll and adjust the key.

SPEAKER SETUP

In stop mode press SETUP button and highlight **SPEAKER SETUP** then press ENTER button to confirm.

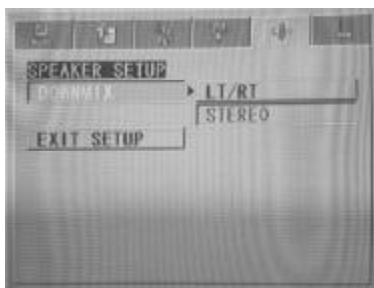

DOWNMIX: LT/RT

STEREO (Default)

- **LT / RT:**

Choose this setting, it will be sound like in a movie theatre if the original movie was recorded from encoded in the ProLogic Dolby Digital format.

DIGITAL SETUP



AUDIO OUT: **SPDIF/RAN(Default)**
SPIF/PCM

- **SPDIF/ RAW:** Choose this setting if your DVD player is connected to a power amplifier with a coaxial cable or an optical cable; When playing a disc recorded with Dolby Digital, DTS and MPEG audio formats, the corresponding digital signals will be output from the Coaxial

Output jack or Optical Output jack. This player's digital output jacks are designed for a connection to a Dolby Digital, DTS , or MPEG receiver or decoder.

- SPDIF / PCM: Choose this setting if your DVD player is connected to a 2-channel digital stereo amplifier; When playing a disc recorded with Dolby Digital and MPEG audio formats, audio signals will be modulated into a 2-channel PCM signal, and it will be output from the Coaxial Output jack or Optical Output jack.

DYNAMIC RANGE: FULL

6/8

4/8(Default)

2/8

OFF



- DYNAMIC RANGE: When “LINE OUT” is selected, choose this setting to adjust the line out ratio and get different effect. If adjusting to FULL, the audio signal peak value will be the minimum; while adjusting to OFF, maximum.

NOTE:

This option will be validated when the DOWNMIX OFF.

DVD Menu

The DVD Menu Play function is only applicable for DVD movie. User can access the Casting information, Production History, Movie Introduction etc. directly through this function.

1. Press the DVD MENU Button on the remote controller to enter the Root Menu.
2. Use the direction button (▲ / ▼, ◀ / ▶) or input the item index through the Number keys (0-9) to do the selection.
3. Press ENTER to confirm the selection.

Audio

This function is applicable for DVD and CD audio but with different effects.

- Pressing the AUDIO Button will change the Audio channel.

Note:

When AVC is on this button is no function.

SCAN / SEARCH

This function is applicable for DVD and CD audio but with different effects. The FAST FORWARD key and FAST BACKWARD key are used to achieve fast play function.

- For DVD, there are 4 different levels of speed (x2, x4, x8, x20) available. Press the FAST key to cycle speed.
- For CD audio, the FORWARD/BACKWARD will play at high speed.

Note : Press PLAY Button at any stage will resume to normal speed.

This function is not available for CD-G.

PREV./NEXT

During playback, press one of the PREV./NEXT buttons (PREVIOUS button and NEXT button)

- When the PREV. button is pressed once, playback returns to the beginning of the PREVIOUS playing chapter or track.
- When the NEXT button is pressed once, playback starts at the beginning of next chapter or track.

Slow

The Slow Forward is only available for DVD. There are 6 steps of slow motion speed; 1/2, 1/3, 1/4, 1/5, 1/6, 1/7. Press button to cycle playback speeds.

Note : Press Play Key to resume normal playback speed.

This function is not available for CD-G.

Repeat Mode

This function is available for DVD and CD audio but with different effects.

- For DVD disc playback, user can choose to repeat the current chapter, the current title or disc. Subsequent key press of the REPEAT key can change between these three options.
- For CD, user can choose to repeat the current track or the whole disc (Repeat All). Subsequent key press of the REPEAT key can change between these two options.

Repeat AB

User can specify the repeating interval by marking the starting point and the end point.

1. Press the REPEAT AB Button to mark the starting point. (Playback will continue).
2. Press the REPEAT AB Button to mark the end point. (The marked part will be repeated automatically)

Note : Press the REPEAT AB Button during repetition will disable the Repeat mode.

This function is not available for CD-G.

Subtitle

This function is only available for DVD disc. It can change the subtitle language shown on the screen.

Note : Number of subtitle available depends on the DVD disc.

This function is not available for CD-G.

Angle

Some discs may have multiple viewing angles during production. Use the ANGLE button to select the viewing angle shown on the screen.

Note : The number of Angles of View depends on the Disc.

Search

The user can access a specific location or a specific track by keying in the target time or the track number.

1. Press the SEARCH Button to enter to search mode .
2. Input the target time to the number button (0~9) and press the ENTER button. The player will jump to the target Location immediately.

Display

This function is to show the time and status information on the screen.

Resume Play

This function is in playback mode, when the STOP Button is pressed once, the player will enter the Resume Play mode. At this time, if the PLAY Button is pressed, the player will resume playback at the location where the STOP Button is pressed. If the STOP button is pressed a second time, resume mode cancels.

Zoom

This function is enlarge or reduce a still picture or a moving picture by pressing the ZOOM button to select the levels of zooming (2,3,4,1/2,1/3,1/4).

NOTE: Use the direction buttons (▲ / ▼, ◀ / ▶) to navigate within the image.

This function is not available for CD-G.

AVC(Auto vocal cut)

In some CD-G disc format R channel is record original singer sound L channel is record music, when AVC on the original singer sound will be cut automatically,while the user is singing.

Function

Press the button to select the MIC VOL,ECHO KEY functions then press the +,- button to adjust the desired level.

Picture CD

Load a picture CD into the tray if the disc can be identified,the player will start showing the picture (JPG) one by one (slide show).

Operation

During Slide Show Mode: -

- Press the STOP Button will shift to the Digest Mode in which 6 pictures will be shown on the screen each time.
- Press the PAUSE Button will freeze the screen so that the current picture can be held for a long time. To resume the slide show mode, press PLAY Button.
- Press the NEXT Button on the remote controller to skip the next picture.
- Press the PREVIOUS Button on the remote controller to repeat the current picture.

SPECIFICATION

TV SECTION

Receiving Channels

VHF _L	CH 2 - 4
VHF _H	CH 5 - 12
UHF	CH 21- 69

Tuner Type 255 Channel ,VS TUNING

DVD SECTION

Laser Wave length	655nm
Laser power :	Class 1
Signal System	PAL / NTSC output
Digital audio output	Coaxial digital output; pin jack
S-video Y output level	1Vp-p (75 Ohm);
C output level	0.300Vp-p (75 Ohm) (PAL), 0.286Vp-p (75 Ohm) (NTSC)

Headphone

Stereo in DVD mode

Mono in TV mode

GENERAL SECTION

AC Power Input	230V ~ 50 Hz
AC Power Consumption	74 W
Speaker	3 x1.5 " 8ohm x 2
Audio Output	1.8 W + 1.8 W
Dimensions	W390 x H420 x D411(mm)
Net Weight	13.5 Kg

Region coding: All DVD discs are coded by the sales territory. Please note the player is factory set to region 2 coding (UK and Europe) and cannot be changed. Therefore discs purchased outside of UK or Europe cannot be played. This is in compliance with the DVD patent requirements.