

GTVL15W18HDVF  
15.4" LCD TV

# Goodmans



## USER GUIDE

# 15.4" LCD TV with Remote Control

---

## Introduction

Thank you for buying this GTVL15W18HDVF TV which is designed to give you many years of trouble-free service. You may already be familiar with using a television but do please take time to read these instructions. They are designed to familiarise you with the unit's many new features and to ensure you get the very best out of your purchase.

## Safety is Important

Your safety and the safety of others is important. Please, therefore, ensure you read the Safety instructions on p before you operate this GTVL15W18HDVF TV.



NOTE: This 15.4" LCD TV is referred to throughout this user guide as TV.

---

## CONTENTS

<b>Introduction</b> .....	2	<b>DTV Operation</b> .....	34
<b>Safety is Important</b> .....	2	Channel Search.....	35
<b>Safety Precautions</b> .....	4	Changing Channels.....	37
<b>Electrical Information</b> .....	6	EPG Function.....	39
Wiring Instructions.....	6	Channel List.....	41
<b>Getting Started</b> .....	8	System Setting.....	44
<b>Quick Setup</b> .....	9	First Time Installation.....	44
<b>Connecting External Equipment</b> .....	11	Change Pin Code.....	45
<b>Switching On</b> .....	12	Software Upgrade.....	46
Mains Power.....	12	Favourite List.....	49
The Remote Control.....	12	<b>DVD Operation</b> .....	52
<b>Identification of Controls</b> .....	13	Basic operation.....	52
<b>Tuning the TV</b> .....	16	Function Settings .....	57
Menu Navigation.....	16	<b>Troubleshooting</b> .....	74
Channel Position.....	18	<b>Care and Maintenance</b> .....	75
<b>Using the TV</b> .....	20	<b>Technical Specification</b> .....	76
TV Controls.....	20	<b>Guarantee</b> .....	77
Picture Preset.....	22		
Input Selection.....	22		
<b>Using Teletext</b> .....	23		
<b>On-screen Menus</b> .....	26		
VIDEO SETUP.....	27		
AUDIO SETUP.....	28		
TV SETUP.....	30		
GENERAL SETUP.....	32		

# 15.4" LCD TV with Remote Control

---

## Safety Precautions

Please read all the safety information before use.

### Safety Considerations

- Position the power supply lead so that it cannot be walked on or pinched by items placed on or against it.
- Do not use the TV in humid or damp conditions.
- Do not allow the TV to get wet.
- Do not expose the TV to splashing or dripping.
- Do not expose the TV to naked flames.

### Power Source

You should only plug the TV into a 230V to 240V AC, 50Hz supply.

### High Voltage

- Do not remove the rear cover as high voltage components are accessible.
- Disconnect the TV from the power supply when the TV is not to be used for a prolonged period of time.

### Cleaning

- Disconnect the TV from the power supply before you clean it.
- Do not use liquid or aerosol cleaners.
- Clean your TV with a soft, damp (not wet) cloth.

### Ventilation

- The slots and openings on the TV are for ventilation. Do not cover or block them as it may cause overheating.
- NEVER let children push anything into the holes or slots on the case.

## Servicing

- There are no user serviceable parts in this TV.
- When servicing, refer to qualified service personnel.
- Consult your dealer if you are ever in doubt about the installation, operation or safety of this TV.

## 15.4" LCD TV with Remote Control

---

### **Electrical Information**

This appliance is fitted with a BS1363/A 13 amp plug. If it is not suitable for your supply sockets it must be removed and replaced with an appropriate plug. If the plug becomes damaged and/or needs to be replaced please follow the wiring instructions below. The plug removed must be disposed of immediately. It must not be plugged into a supply socket as this will be an electrical hazard.

If the fuse needs to be replaced it must be of the same rating and ASTA approved to BS1362. If the plug is changed, a fuse of the appropriate rating must be fitted in the plug, adapter or at the distribution board. If the fuse in a moulded plug is replaced, the fuse cover must be refitted before the appliance can be used.

 
### **Wiring Instructions**

The supply cable will be either 2-core or 3-core. Follow the appropriate wiring instructions given on the next page. In both cases ensure that the outer sheath of the cable is firmly held by the cable clamp.

## 2-CORE

BLUE

(Neutral) Fuse

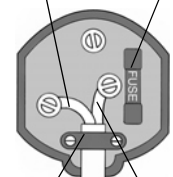

Cable clamp

BROWN  
(Live)



**WARNING!** Do not connect either wire to the earth terminal.



This symbol indicates that this 2-core appliance is Class II and does not require an earth connection.


The wire coloured blue must be connected to the terminal marked with the letter N or coloured black.

The wire coloured brown must be connected to the terminal marked with the letter L or coloured red.

## 3-CORE

 BLUE


(Neutral) Fuse

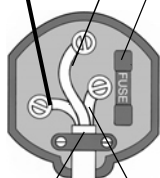

Cable clamp

GREEN and  
YELLOW  
(Earth)

 BROWN  
(Live)

The wire coloured green and yellow must be connected to the terminal marked with the letter E, or by the earth symbol, , or coloured green or green and yellow.

The wire coloured blue must be connected to the terminal marked with the letter N or coloured black.

The wire coloured brown must be connected to the terminal marked with the letter L or coloured red.

# 15.4" LCD TV with Remote Control

---

## Getting Started

Remove your TV carefully from the box. You may wish to store the packaging for future use.

If any items are missing, please contact Product Support

Telephone: 0871 230 1777

Internet: [www.goodmans.co.uk](http://www.goodmans.co.uk)

Email: [cecustomerservice@albaplc.co.uk](mailto:cecustomerservice@albaplc.co.uk)

 
In the box



**TV**




**Remote Control**



**2 x AAA  
Batteries**



**User Guide**

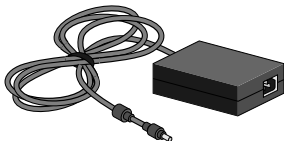 


**DC Power Supply/Adapter**




**AC Power Cord**
 
# Quick Setup

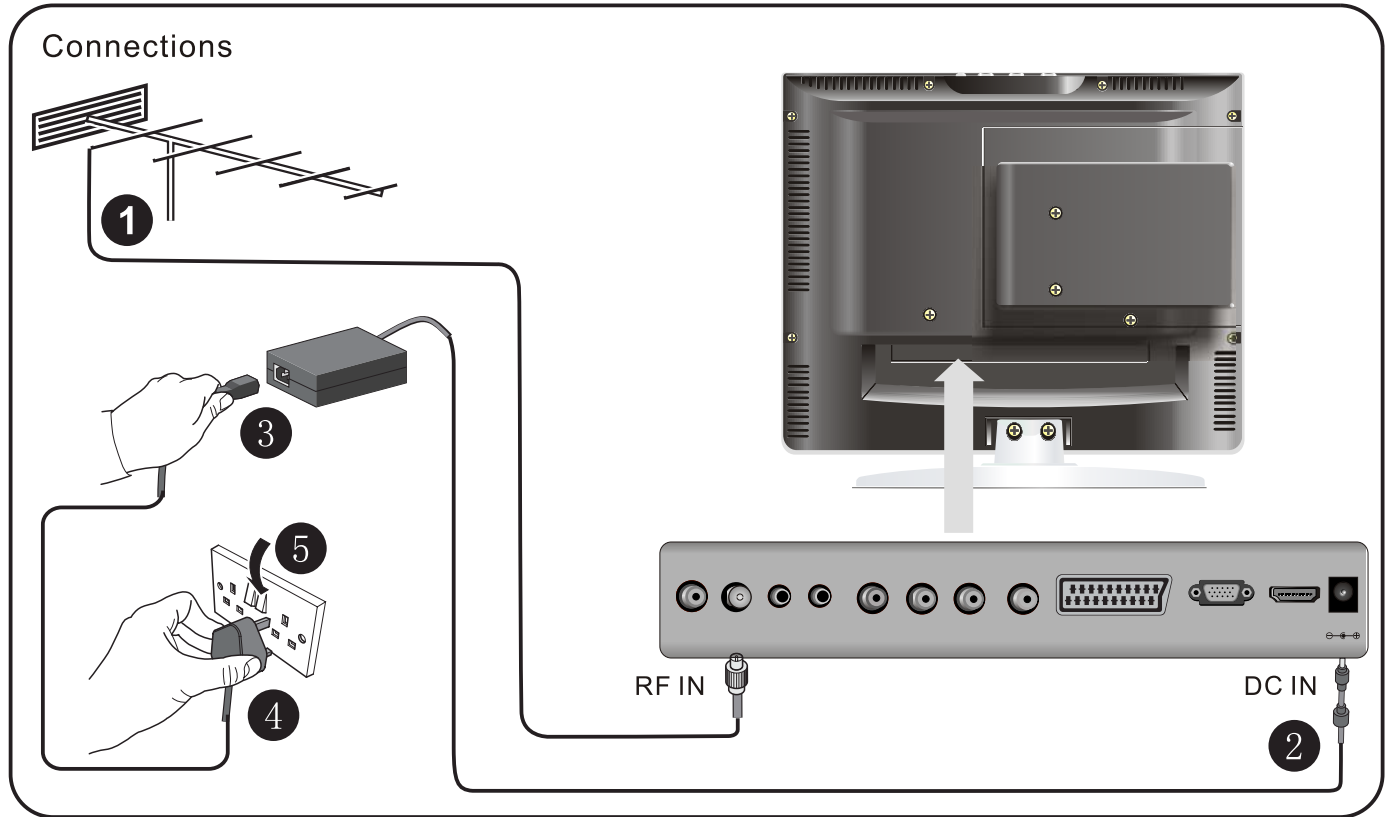

## 15.4" LCD TV with Remote Control

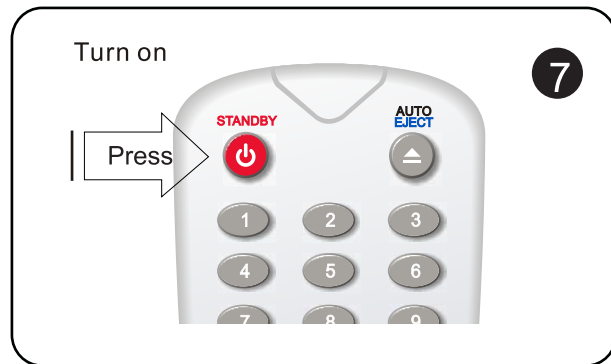 

### The Remote Control

#### Inserting Remote Control Batteries

1. On the back of the remote control, push up the catch on the battery compartment cover and lift to remove it.
2. Insert the two AAA batteries, ensuring that you follow the polarity diagram inside the battery compartment.

3. Refit the cover



We recommend the use of  
Ever Ready Energizer batteries

#### Battery Disposal

Please ensure batteries are disposed of safely. Never dispose of batteries in the fire or with household waste. Check with your local authority for disposal regulations.






# Connecting External Equipment





You can connect a wide range of audio and video equipment to your TV.



**NOTE:** Refer to the manufacturer's guide for further instructions on how to connect the equipment.

 
The following table lists a range of the available connectors on the TV.

Connector	Purpose
 RF IN	Receives TV signals from an external aerial.
 YPBPR Audio IN	Receives audio signal for YPBPR (Component) mode.
 AV/PC Audio IN	Receives audio signal for PC or AV mode.
 YPBPR Video IN (Green) (Blue) (Red)	Receives component video signal for YPBPR (Component) mode.
 AV Video	Receives composite video signal for AV mode.

Connector	Purpose
 Euro AV (SCART)	Receives a complete AV (Audio Visual) signal.
 VGA	Receives the video signal from a PC.
 HDMI	Receives High Quality HDMI input.
 COAX OUT	Connect to coaxial input jack of your amplifier

# 15.4" LCD TV with Remote Control

---

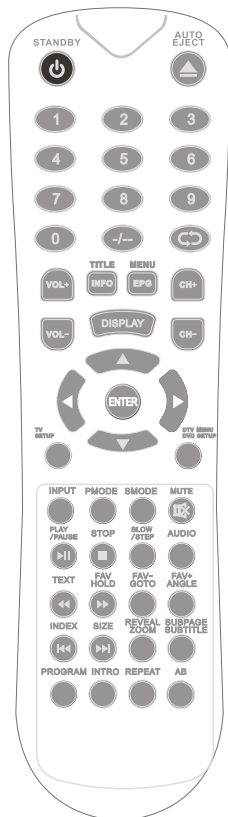

## Switching On

### Mains Power

Complete all connections before connecting to the mains supply.

Connect the aerial to Aerial Socket. Connect the adapter block to the DC IN socket

Insert the mains plug into the mains socket.

Switch the mains power on.



NOTE: When not in use, disconnect the 3-pin plug from the mains power supply.

---

When the TV is successfully connected to the power supply, the standby indicator on the front of the TV will illuminate red. The TV is now in standby mode and the screen remains blank.

Press the **STANDBY** button on the side of the TV or the power button on the remote. The standby indicator on the front of the TV will turn green and the picture will appear after a few seconds.

## Identification of Controls

### Front

#### 1. Standby

Switches the TV to stand-by and on again. The TV is only completely disconnected from the mains if the plug is disconnected.

#### 2. Menu

Activates the On-screen menus.

#### 3. Volume Up/Down

Volume adjust buttons. Also used to move left and right whilst navigating on-screen menus.

#### 4. Programme Up/Down

Channel select buttons. Also used to move up and down whilst navigating on-screen menus.

#### 5. INPUT

Cycles through the available input sources.

#### 6. Speakers

#### 7. Remote Control Sensor

#### 8. Standby Indicator

#### 9. Stand



# 15.4" LCD TV with Remote Control

## Identification of Controls

### 10 **PLAY**

Press to play the DVD playing.

### 11 **PAUSE**

Press to pause the DVD playing.

### 12 **STOP**

Press to stop the DVD playing.

### 13 **NEXT**

Press to advance forward to the next chapter.

### 14 **PREVIOUS**

 
Press to replay the current program from the pre-vious chapter.

### 15 **Eject**

Press to Eject button to take the disc out

### 16 **Disc window**

INSERT LABEL SIDE THIS WAY

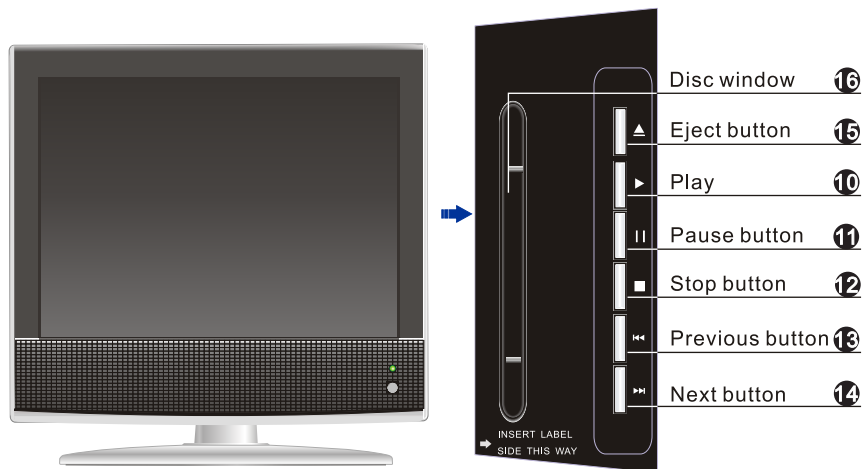

## Rear

### DC input

insert the mains adapter lead here.

### HDMI Input

High Quality Audio/Video input socket for connecting an external device fitted with an HDMI output.

### VGA Input

Connect the PC-RGB output Socket of PC .

### SCART IN(EURO AV)

Audio visual socket for connecting an external input device with a SCART connector.

### AV Input

Input sockets, for connecting an external input device.

### Audio Input

Audio input from other devices.

### RF IN(Aerial Connection)

 
RF input socket, for connecting an external aerial.

### YPBPR Input

YPBPR input component video signal from other devices.

### COAX OUT

Connect to coaxial input jack of your amplifier

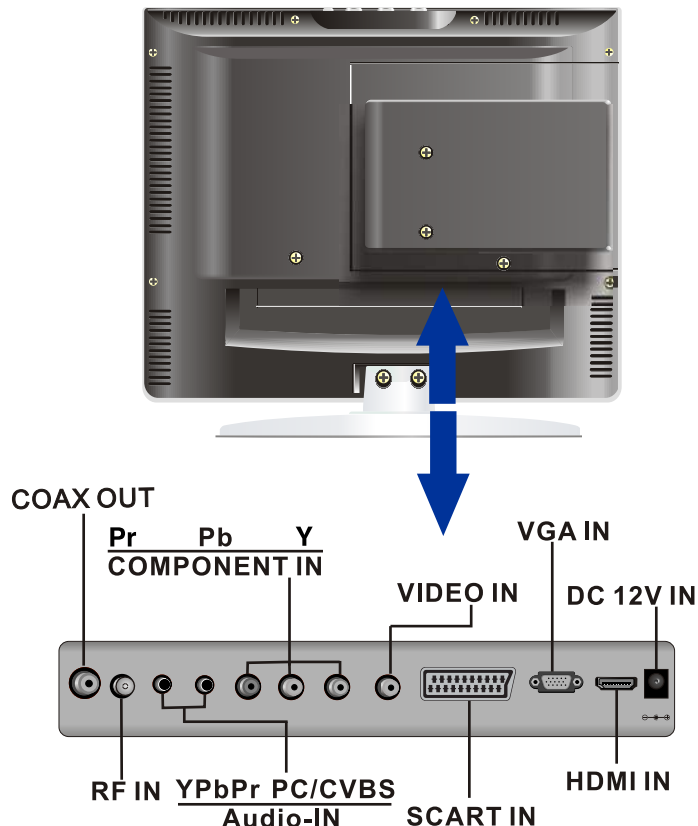

# 15.4" LCD TV with Remote Control

## Tuning the TV

### First Time Installation

The following screen will appear, Initial Channel Search will scan for, sort and save any available channels.

INITIAL CHANNEL SEARCH  
ENSURE AERIAL CONNECTED TO TV  
SELECT YES AND PRESS MENU TO CONTINUE  
YES NO

 
1. Press the **LEFT/RIGHT ARROW** buttons to highlight **YES**.
2. Press **ENTER** to start analogue auto search. Once the progress bar has filled any channels found will be stored and the unit will proceed to the search for digital channels.

ANALOGUE AUTO SEARCH  
PLEASE WAIT  
1 223.56MHZ  
PRESS SET UP TO STOP

3. The following screen will appear.
4. Press **LEFT/RIGHT ARROW** button to highlight **Confirm**.

Do you want to start digital search?  
Confirm Exit

5. Press **ENTER** button to start digital search. All available digital channels found will automatically be stored into the channel list.

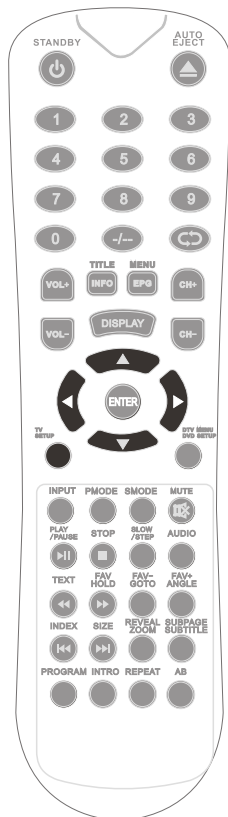

## Menu Navigation

The basic controls needed to go through the menu screens are as follows:

1. Press the **TV SETUP** button to cycle through the On-screen menu.
2. Press the **UP/DOWN ARROW** buttons to move up and down the On-screen menus.
3. Press the **LEFT/RIGHT ARROW** buttons to move left and right when navigating the On-screen menu.

## AUTO Tuning

1. Press the **TV SETUP** button 3 times to activate the **TV SETUP menu**.
2. Press the **DOWN ARROW** button to highlight **AUTO SEARCH**.
3. Press the **RIGHT ARROW** button the auto tuning process will begin.

This may take several minutes to complete. Once completed the TV will tune to the first channel.

---

**NOTE:** To receive a TV signal, you can use an outdoor or indoor aerial. However, if you live in a poor reception area you may experience loss or corruption of teletext transmissions or may not receive a signal at all when using an indoor aerial.

---

 
# 15.4" LCD TV with Remote Control

## Channel Position


The automatic tuning may not store the channels in the order you require. For example, BBC1 might be stored in channel position 4 and Channel 4 might be stored in channel position 1. Using the **TV SETUP** menu, channel positions can be swapped to obtain the correct order.

After you have performed an auto tune(see previous page);

1. Press the **TV SETUP** button 3 times to activate the **TV SETUP** menu.
2. Press the **DOWN ARROW** button to highlight **SWAP**.
3. Press the **RIGHT ARROW** button to enter the swap menu.
4. Select the first channel using the **LEFT/RIGHT ARROW** buttons.
5. Press the **DOWN ARROW** button.
6. Select the second channel using the **LEFT/RIGHT ARROW** buttons.
7. Press the **DOWN ARROW** button to highlight **SWAP**.
8. Press the **RIGHT ARROW** button to swap the two channels you just selected.
9. Press the **DTV MENU** button to exit the On-screen menu.

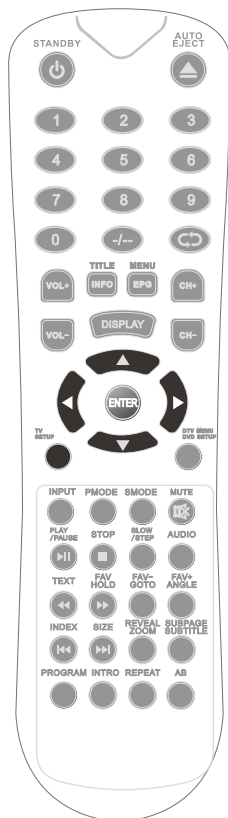


FROM	5
TO:	1
SWAP:	→

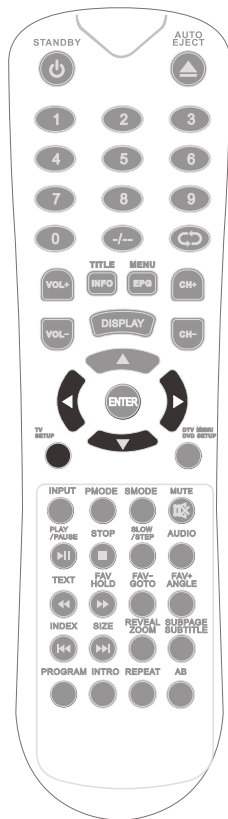 

## MANUAL Tuning

 1. Press the **TV SETUP** button 3 times to activate the **TV SETUP** menu.
2. Press the **DOWN ARROW** button to highlight **MANUAL SEARCH**.
3. Press the **RIGHT ARROW** button and the below will be shown. Select either **UP** or **down** and press the **RIGHT ARROW** button to search **up** or **down** the available frequencies for the next channel.

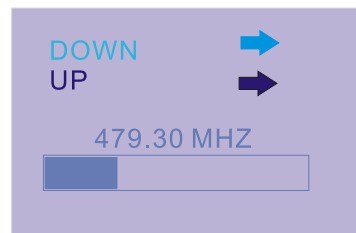

## Fine Tuning

The auto scan and manual scan will tune to the strongest signal, however, if the reception is not good you can try to fine tune the channel.

1. Press the **TV SETUP** button 3 times to activate the **TV SETUP** menu.
2. Press the **DOWN ARROW** button to highlight **FINE TUNE**.
3. Press the **RIGHT/LEFT ARROW** button to adjust the frequency and fine tune the channel.

# 15.4" LCD TV with Remote Control

---

## Using the TV

 
### TV Controls

 
#### Programme Selection

You can use the controls on either the TV or remote control to select channels. Press the **CH+/-** buttons on the TV or remote control, or press a **NUMBER** button on the remote control to select a programme.


#### Volume

Press the **VOL+/-** buttons on the TV or remote control to adjust the volume.

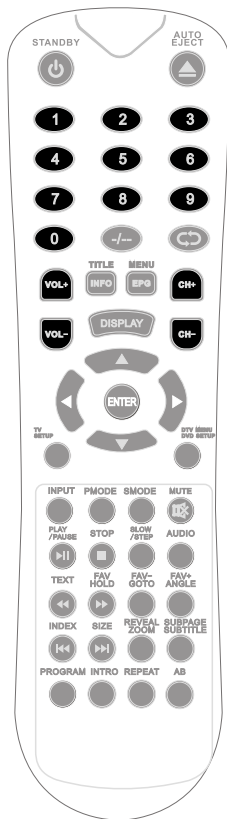

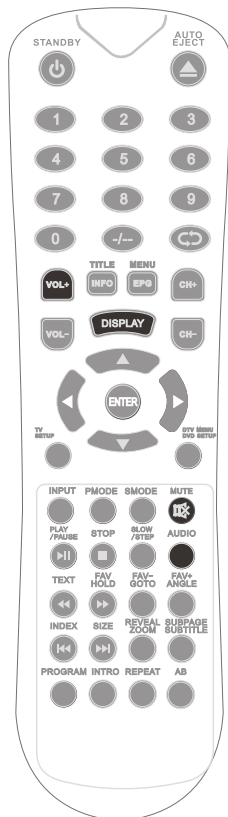

## Mute

1. Press the **MUTE** button on the remote control to mute the sound. The mute symbol  will be shown in the top left hand corner of the screen.
2. Press the **MUTE** button again to restore the sound. The mute symbol will disappear from the screen.



NOTE: Pressing the **VOL+** button will also restore the sound.

 
## Display

1. Press the **DISPLAY** button on the remote control. Information will appear on screen giving the user settings and channel information. It depends on the input selected..
2. Press the **DISPLAY** button again to remove the information from the screen.

## Mono/Stereo

1. Press the **NICAM** button to switch between **MONO** or **STEREO** reception.

# 15.4" LCD TV with Remote Control

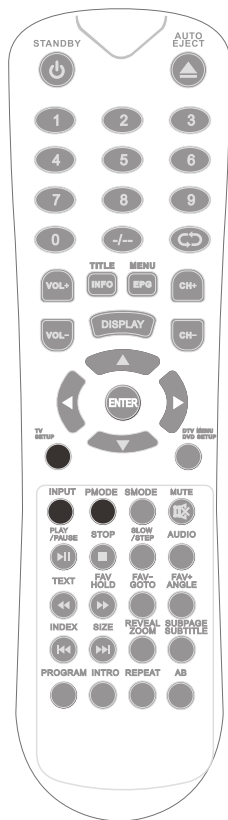

## Picture Preset

The TV has four preset conditions that alters all the options to give a different picture quality.



**NOTE:** The Picture Preset function is not available through navigation of the on screen menus.

 
Press the **P.MODE** button repeatedly to scroll through and select one of the following options:

- STANDARD -Used for general viewing.
- FRESH - Used for brighter image with strong colouring.
- PERSONAL -Used defined settings.
- MILD -Used for a softer image with weaker colouring.
- **FRESH,PERSONAL,STANDARD** and **MILD** will appear at the bottom of the screen.

## Input selection

Press the **TV SETUP** button repeatedly to scroll through and select one of the following input options:

- TV - RF Signal(TV Aerial)
- SCART - Signal from the SCART socket
- AV - Signal from AV sockets
- PC-RGB - Signal from PC-RGB socket
- YPBPR - Signal from YPBPR (Component)sockets
- HDMI - Signal from HDMI socket
- DTV - RF Signal(TV Aerial)
- DVD - Signal form COAX Socket

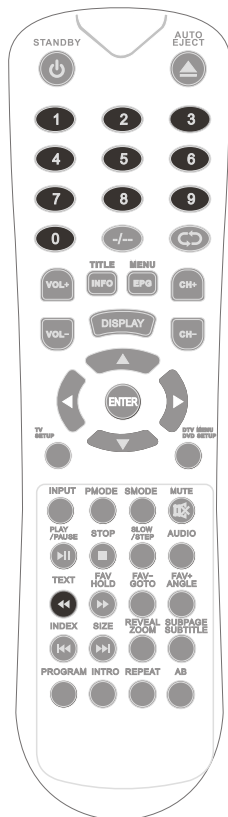

## Using Teletext

Teletext is an information system that displays text on your TV screen. Using the teletext control buttons you can view pages of information that are listed in the teletext index.



**NOTE:** No On-screen display is available in text mode. The contrast, brightness and colour can not be changed but the volume control is still available



**NOTE:** Make sure the TV channel you are watching transmits teletext.

## TEXT

 
1. Press the **TEXT** button to enter **TEXT** mode. The text page will appear, normally the index page.
2. Press the **TEXT** button again to view a page of text whilst watching a TV programme. The text will be superimposed over the TV programme.
3. Press the **TEXT** button a third time to return to the channel you were watching.

## To Select a Page of Text

1. Find the number of the page in the index and enter it by pressing the **NUMBER** buttons. The number of the page will appear in the top left hand corner of the screen. The page counter will search for your page. When it finds it, the page will be displayed

# 15.4" LCD TV with Remote Control

---

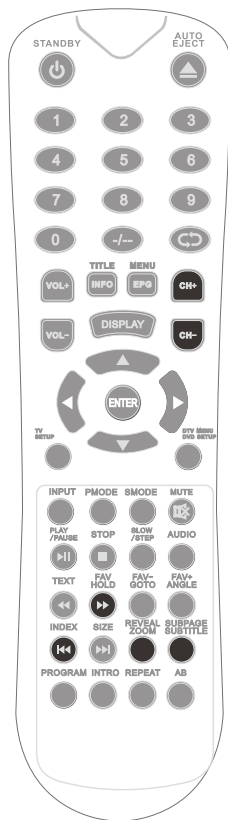

2. Press the **CH+** button to move to the next page of text.

3. Press the **CH-** button to move to the previous page of text.

## INDEX

Press the **INDEX** button to go to the index page.

## Page Stop

If the page of text you have selected contains sub-pages, these sub-pages will automatically be displayed in order with a delay to allow you to read the page.

1. Press the **HOLD** button to stop the move to the next sub-page. The hold symbol will appear in the top left hand corner of the screen.

2. Press the **HOLD** button again to continue cycling through the sub-pages.

## To Reveal Information

 
1. Press the **REVEAL** button to reveal concealed information (quiz answers etc.).

2. Press the **REVEAL** button again to conceal the information.

## SUBPAGE

If the page of text you are viewing contains sub-pages, the number of the sub-page you are on and the total number of sub-pages is displayed on the right of the screen.

To select a sub-page, press the **SUBPAGE** button. S.... will appear in the top left hand corner of the screen.

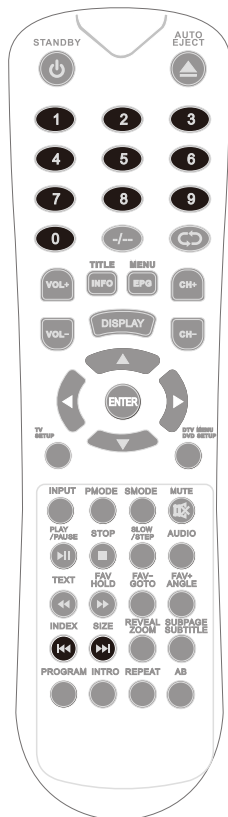

Enter the number of the sub-page, using the **NUMBER** buttons in the format 0001 for sub-page 1. The teletext will search for the sub-page.

## Fast Text

At the bottom of the teletext screen is a row of subject headings in red, green, yellow and blue.

 
1. Press one of the coloured fast text buttons on the remote control to display that page.
2. Press the **INDEX** button to return to the main page.

## SIZE

1. Press the **SIZE** button to enlarge the text shown on the teletext screen. Only one half of the page is shown.
2. Press the **SIZE** button again to view the second half of the page.
3. Press the **SIZE** button a third time to return to normal size text page.

# 15.4" LCD TV with Remote Control

---


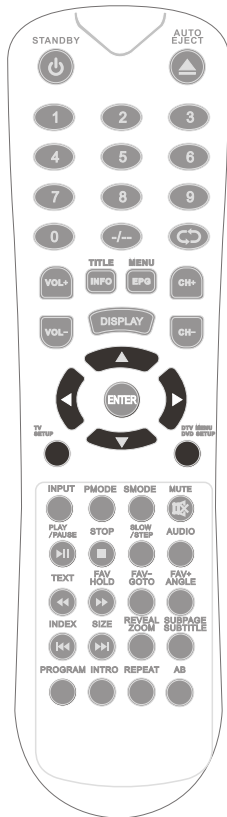


## On-screen Menus

1. Press the **TV SETUP** button to cycle through the On-screen menus.
2. Press the **UP/DOWN ARROW** buttons to highlight one of the available options.
3. Press the **LEFT/RIGHT ARROW** buttons to adjust the selected option.
4. When finished, press the **SETUP** button repeatedly until the menu disappears or press the **DVB MENU** button to exit the main menu .

## VIDEO SETUP

  Your TV has four settings which allow you to control the picture quality:

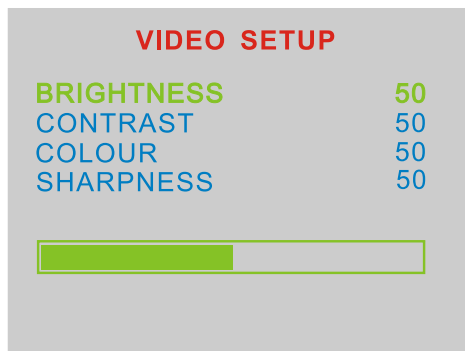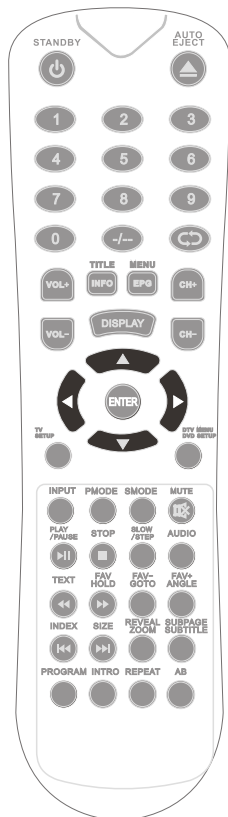

Press the **UP/DOWN ARROW** buttons to select one of the available options.

### BRIGHTNESS

Use the **LEFT/RIGHT ARROW** buttons to increase or decrease the brightness of the picture.

 
### CONTRAST

Use the **LEFT/RIGHT ARROW** buttons to increase or decrease the contrast of the picture.

### COLOUR

Use the **LEFT/RIGHT ARROW** buttons to increase or decrease the colour saturation of the picture.

# 15.4" LCD TV with Remote Control

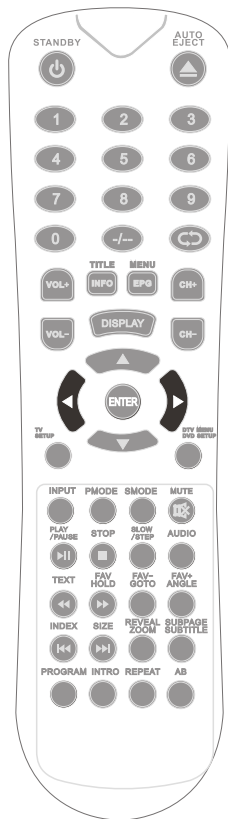


## SHARPNESS

Use the **LEFT/RIGHT ARROW** buttons to increase or decrease the sharpness of the picture.

## AUDIO SETUP

 Your TV has several settings which allow you to control the audio quality.

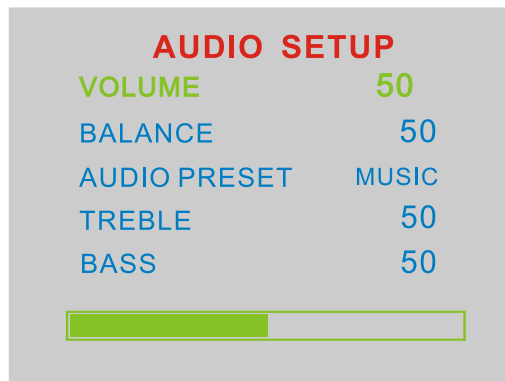


## VOLUME

Allows you to increase or decrease the volume.

## BALANCE

 Allows you to adjust the volume balance between left and right audio channels.

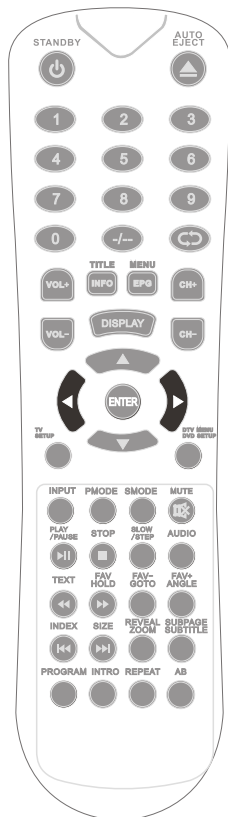

## AUDIO PRESET

Use the **LEFT/RIGHT ARROW** buttons to select one of the following settings:

**PERSONAL** -User defined preferences.

**VOICE** -High treble, low bass for normal TV programming.

**MUSIC** -High treble, high bass for music based programming.

**THEATRE** -Low treble, high bass for live performances.



NOTE: It is also possible to cycle through the audio presets by pressing the **SMODE** button on the remote.

## TREBLE

The treble setting adjusts the high frequency section of sound.



NOTE: The audio preset must be set to **PERSONAL** to adjust this option.

## BASS

The bass setting adjusts the low frequency section of sound.

 
 


NOTE: The audio preset must be set to **PERSONAL** to adjust this option.

# 15.4" LCD TV with Remote Control

## TV SETUP

The TV menu can be used to manually tune a station or to fine tune existing stations.

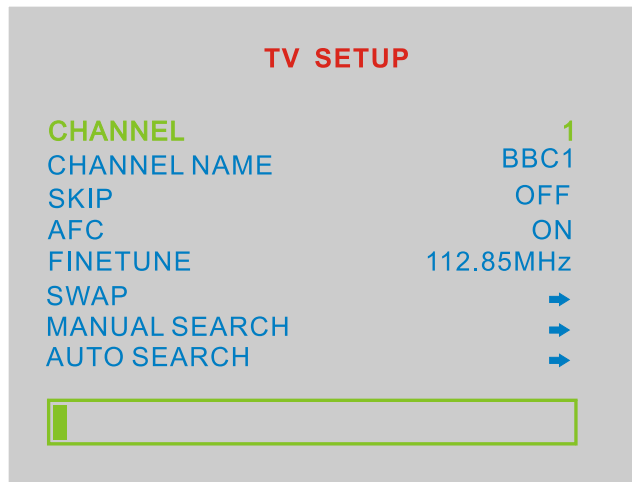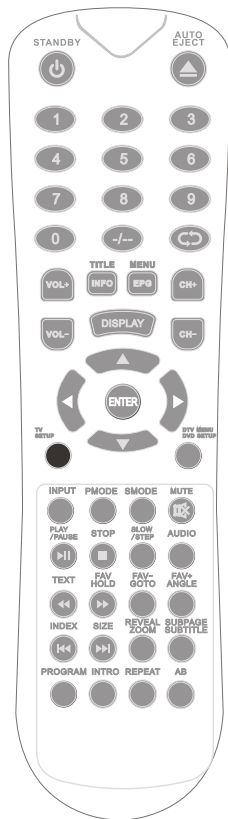


### CHANNEL

Select a particular channel to apply any changes to, the selected channel will be shown in the background.

### CHANNEL NAME

 Use this option to adjust the channel name shown when changing channels.

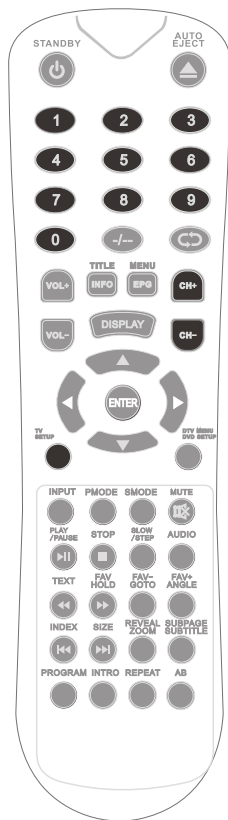

## SKIP

If you set this option to ON the channel will not be available using the **CH+/-** buttons however can still be accessed when using the **NUMBER** buttons..

## AFC

To reach the exact frequency, Set the **AFC**(Auto Frequency Control) option to **ON**.

## FINETUNE

Allows you to fine tune the channel to obtain the best picture quality.

## SWAP

Using the **SWAP** option, channel positions can be swapped to obtain the correct order

 
## MANUAL SEARCH

Allows you to preset channels manually, in the program order of your choice (for details of manual search please see page 19 )


## AUTO SEARCH

This option will automatically search for analogue TV transmissions and attempt to store them in the correct order .During searching, you can press **DTV SETUP** to stop searching, and when finished the TV will change to **DTV**(Digital TV) mode. If no DTV channels are stored it will ask you to confirm that you wish to search for DTV channels

# 15.4" LCD TV with Remote Control

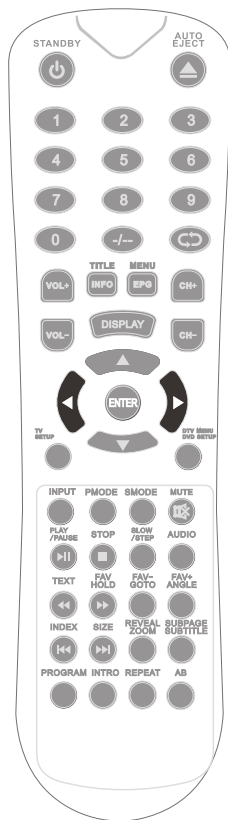

## GENERAL SETUP

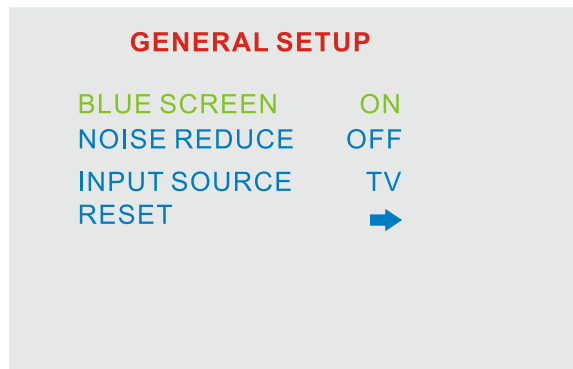 

### BLUE SCREEN

 
Activating the Blue Screen will ensure a clear, solid, blue screen is shown when no signal is being received.

Press the **LEFT/RIGHT ARROW** button to turn the **BLUE SCREEN** on or off.

### NOISE REDUCE

If the signal you receive is has a snowy effect, This feature may reduce the signal noise and improve clarity of the picture.

Press the **LEFT/RIGHT ARROW** buttons to set **NOISE REDUCE** to **OFF/LOW/ MID / HIGH**.

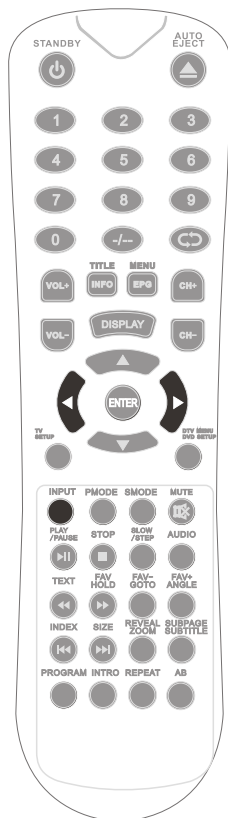

## INPUT SOURCE

Press the **LEFT/RIGHT ARROW** buttons to select the input you want to display.

- TV - Analogue TV Signal(TV Aerial)
- SCART - Signal from the SCART socket
- AV - Signal from AV sockets
- PC-RGB - Signal from PC-RGB socket
- YPBPR - Signal from YPBPR(component) socket
- HDMI - Signal from HDMI socket
- DTV - Digital TV Signal(TV Aerial)
- DVD - Signal from COAX Socket

NOTE:The input source can also be cycled by pressing the **IN PUT** button repeatedly on the remote control.

## RESET

 
Press the **RIGHT ARROW** button to restore all settings to their factory default value.

# 15.4" LCD TV with Remote Control

---

## Digital TV (DTV)

Turn on your TV set and select **DTV** input by pressing the **INPUT** key on the remote repeatedly until **DTV** is shown on the screen

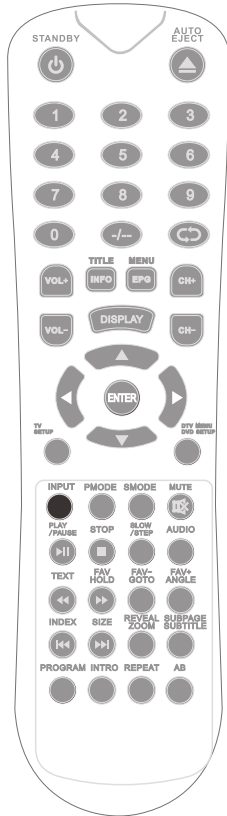

## Channel Search

 
 
During the First time installation process you will be given the opportunity to search for Digital channels after searching for the analogue channels. In the unlikely event that this does not happen or if you need to re-scan in case new channels have been added, the following procedure can be used.

### Auto Scan


- 1) Press the **DTV MENU** button to enter the main menu of the DTV.
- 2) Press the **UP /DOWN ARROW** button to choose **Channel Search**
- 3) Press the **ENTER** button to enter the sub-menu.



- 4) Highlight the **Search Type** and press **LEFT/RIGHT ARROW** button to select **Auto scan**.
- 5) Press the **ENTER** button to start searching.
- 6) Press **DTV MENU** button to cancel searching.

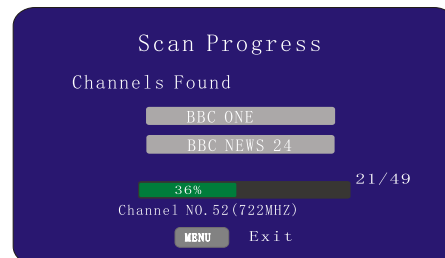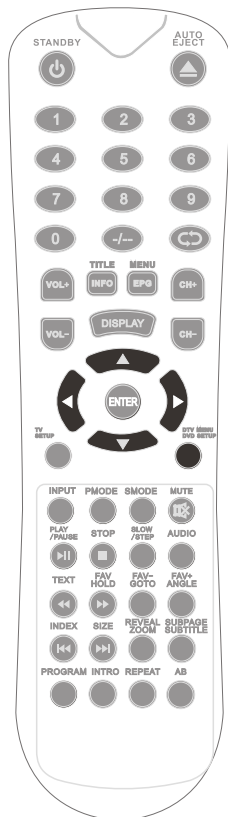



# 15.4" LCD TV with Remote Control

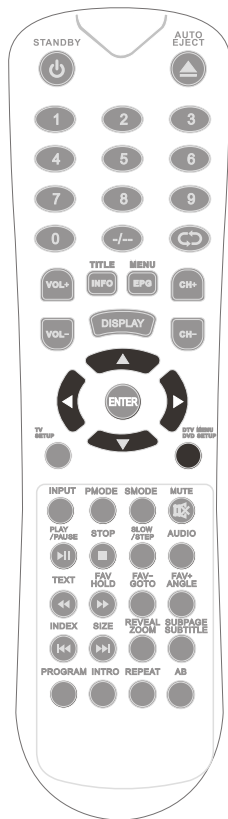 

## Manual Scan

Recommended for advanced users only. If you know the UHF channel number that a set of digital channels are located at, the manual search can be used to add only these channels.

  - 1) Press the **DTV MENU** button to enter the main MENU of the **DTV**.
- 2) Press the **UP/DOWN ARROW** button to select **Channel Search**
- 3) Press the **ENTER** button to enter the sub-menu
- 4) Highlight the **Search Type** and press **LEFT/RIGHT ARROW** button to select **Manual scan**. Press **DOWN ARROW** button to select **Channel No** section, and enter desired Channel Number.
- 5) Press **DOWN/UP ARROW** button to select "**Channel No**" section, and enter desired Channel Number.
- 6) Press the **ENTER** button to start searching.
- 7) Press **DTV MENU** button to cancel searching.

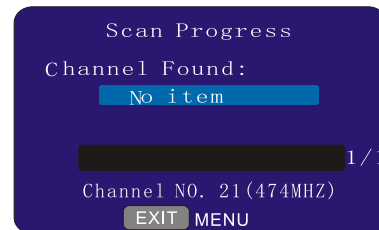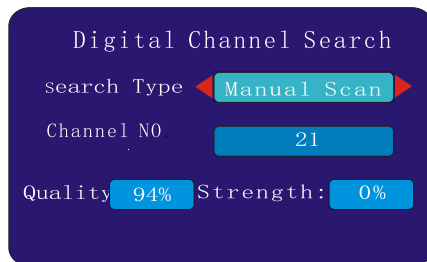

### NOTE:

When the search is finished, the first channel in the channel list is displayed. You can now watch digital terrestrial television.

## Changing Channels

There are five ways of channel selection as follows:

### 1) Stepping through the channel list:

Press the **CH+** button to browse up and the **CH-** button to browse down the available channels.

### 2) Selection by number:

 
Enter the complete channel number directly using the numerical buttons to select desired channel.

### 3) Selection by on-screen channel list:


You can also select the desired channel directly from on-screen channel list. This is displayed using the DTV main menu. Please See **CHANNEL LIST** later in this manual for the further details.

### 4) Selection by mini channel list:

It is also possible to change the channel using a mini channel list that is accessible by pressing the **ENTER** button with no other on screen display shown. Use the **UP/DOWN ARROW** keys to navigate and press the **ENTER** button to display the selected channel. To exit this mini channel list press the **DTV MENU** button.

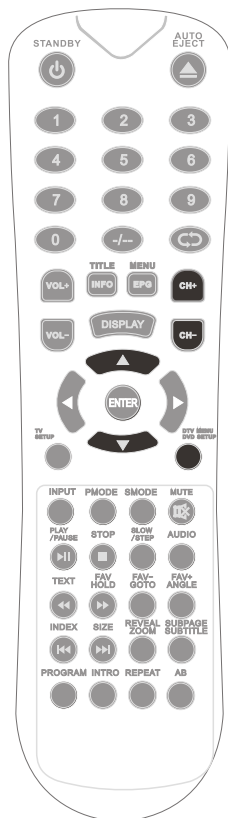

# 15.4" LCD TV with Remote Control

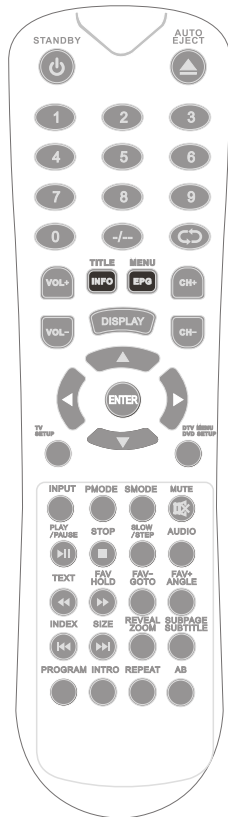 



## Changing Channels

### 5) Selection by TITLE:

You can also select the desired channel directly from Channel Schedule. This is displayed by pressing the **TITLE** button on the remote control. The **TITLE** provides the users with a brief description of the programme on the currently selected channel and lists the current channels. Please See **Accessing the TITLE** in this manual for further detail.

  After changing channels either by entering the number directly or by stepping through the channel list, the I-Bar will be shown. This will display the current and the next program for the selected channels. The current signal strength will also be shown on the I-Bar. The I-Bar can also be displayed by pressing the **MENU** button with on other on screen display.

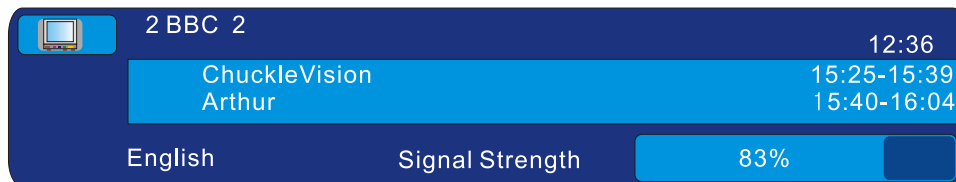

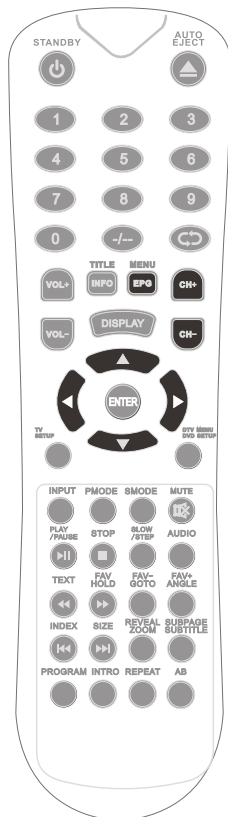


## Accessing the EPG (Electronic Programme Guide )


From the **TITLE** it is possible to check the program information for the next 7 days (if the information is available from the broadcaster.) and also set reminders to automatically change channel for a specific event using the following instructions.

- 1) Press the **TITLE** button to display the **EPG**.
- 2) Press **CH +** or **CH -** button to change the channel that the information listed is shown for.
- 3) Press **LEFT/RIGHT ARROW** button to change the day that the information is shown for.
- 4) Press **UP /DOWN ARROW** button to highlight the desired program. If this program is being currently being shown, press the **ENTER** button and the **EPG** will close and this program will be shown.

 
# 15.4" LCD TV with Remote Control

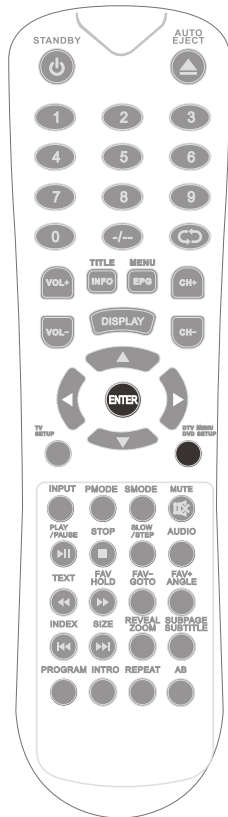

## Accessing the EPG (Electronic Programme Guide )

5) If the program is in the future, press the **ENTER** button to add the reminder, the  will appear alongside the selected program . When the reminder program is about to start, a reminder window will appear.

 
6) Press **MENU** button to quit the channel schedule.

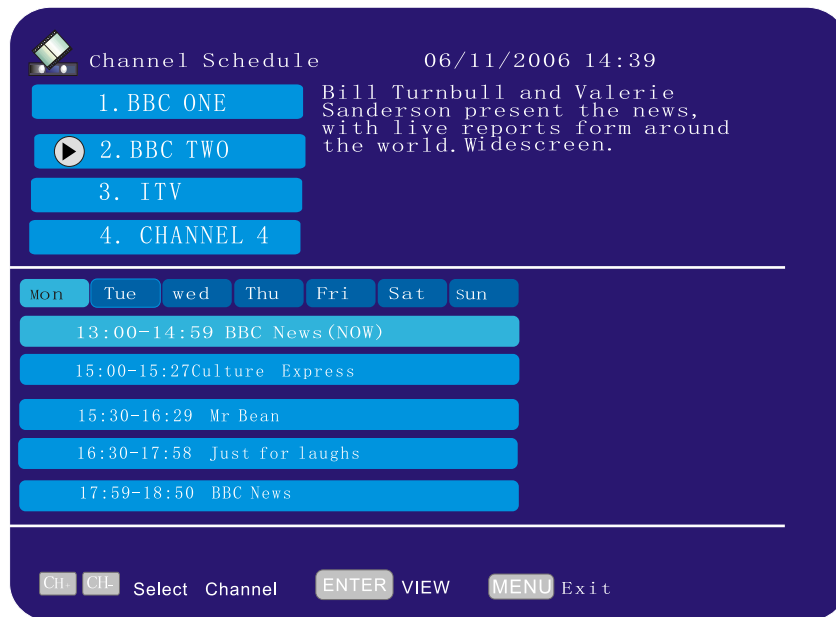


## Channels List

The Channel List will display a list of the digital channels that are stored on the TV. From the Channel List you can preview and listen to a selected channel, delete them from the list, and lock a channel so that a PIN number is required to view the channel.

 - 1) Press **DTV MENU** button to enter the main menu.
- 2) Press **UP/DOWN ARROW** button to highlight Channel List, and press **ENTER** button to enter **Channel List** menu.
- 3) Press **UP/DOWN ARROW** button to highlight a channel.
- 4) Press **ENTER** button to preview the selected channel.
- 5) Press **DTV MENU** button to exit the **channel list** menu and view the channel full screen

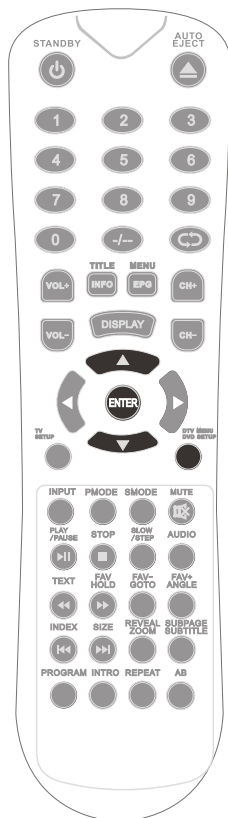


## 15.4" LCD TV with Remote Control

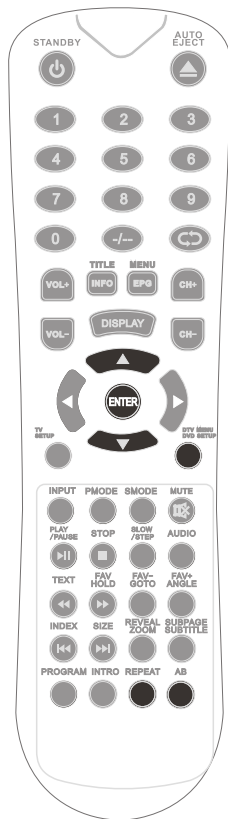 

### Lock/Unlock a channel:

1) Enter the channel list menu, press **UP/DOWN ARROW** button to select the channel to be locked/unlocked.

 2) Press **Blue** button, you are asked to enter **pin code**

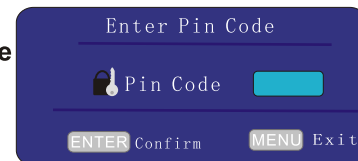

3) Enter a correct pin code using the numeric buttons, press **ENTER** button to confirm. (The default pin code is 888888).

4) Then a lock symbol channel  displays alongside the selected channel.


5) Repeat step ①②③ to remove the lock symbol.

6) Press **DTV MENU** button to exit from the **channel list**.

### Delete a channel:

 1) Enter the channel list menu, press **UP/DOWN ARROW** button to select a channel.

2) Press **Yellow** button to delete the selected channel.

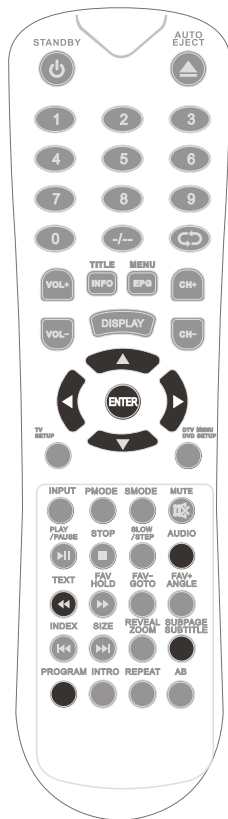

## Subtitles

Press the **SUBTITLE** button repeatedly to cycle through the available subtitle languages. The on-screen display will show briefly the language of the selected subtitles. To remove the subtitles press the **SUBTITLE** button repeatedly until **Subtitles off** is shown on the on-screen display. Please note that only the languages that are being broadcast for the current programme will be available.

 
## Audio

Press the **AUDIO** button repeatedly to cycle through the available audio languages. The on-screen display will show briefly the language selected for the audio. Please note if “AD” follows the language shown on the on-screen display (for example “English AD”) this is the audio descriptor audio, the normal audio from the programme will not be heard, instead there will be a description of the scene shown on the TV when there is a break in the normal audio.

## Digital Teletext

Some digital channels have a digital version of the traditional teletext service. Usually if the channel that you are viewing has this digital teletext there will be an on-screen display showing how this service can be accessed. For most channels that have this digital teletext service is accessed by pressing the **RED** or **TEXT** button. Once started follow the on-screen instruction to navigate through the available information. The standard navigation method is using the UP/DOWN/LEFT/RIGHT ARROW buttons and the ENTER button. Some services will offer shortcuts via the coloured buttons on the remote.

# 15.4" LCD TV with Remote Control


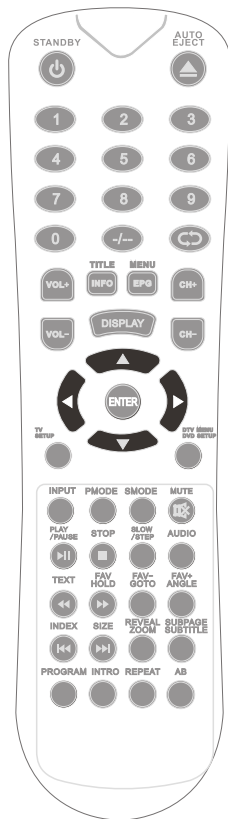


## System Setting

### First Time Installation


This menu allows you to delete all existing channels in the memory

  - 1) Enter the system setting menu, press **UP/DOWN ARROW** button to highlight the **First Time Installation**
- 2) Press **ENTER** button to confirm, a confirmation window appears.
- 3) Press **LEFT/RIGHT ARROW** button to highlight **Confirm** icon, press **ENTER** button to start first time installation. The instructions for automatic channel search can then be followed.
- 4) Highlight the **EXIT** icon, press **ENTER** button to cancel the first time installation.

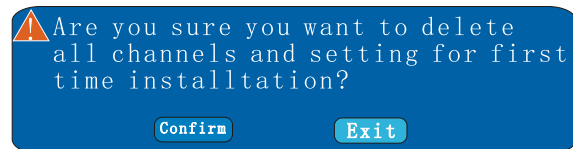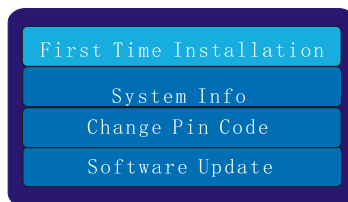

### System Info :


 
- 1) Enter the **SYSTEM SETTING** menu, press **UP/DOWN ARROW** button to highlight the **System Info** option.
- 2) Press **ENTER** button to display the system information. You can view the software version of the DTV.

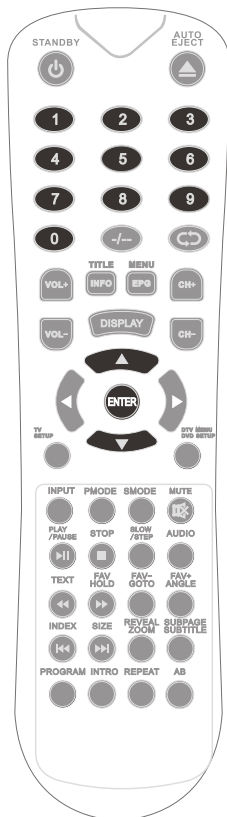


## Change Pin Code

This menu allows you to change pin code.

  - 1) Enter the **SYSTEM SETTING** menu, press **UP/DOWN ARROW** button to highlight the **Change Pin Code** option.
- 2) Press **ENTER** button.
- 3) Enter the **old pin code** using the numeric buttons (Default pin code is 888888).
- 4) Press **UP/DOWN ARROW** button to select **New Pin Code** and enter new pin code using the numeric buttons (0~9).
- 5) Press **UP/DOWN ARROW** button to select **Enter Again**, and enter the new pin code again using the numeric buttons (0~9).
- 6) Press **ENTER** button to confirm the changed pin code.

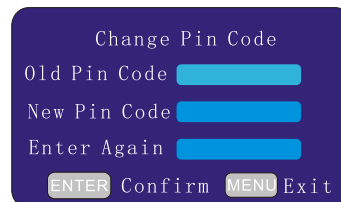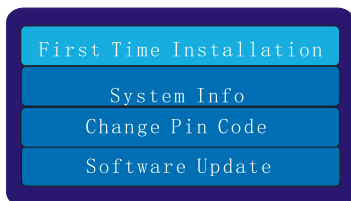



# 15.4" LCD TV with Remote Control

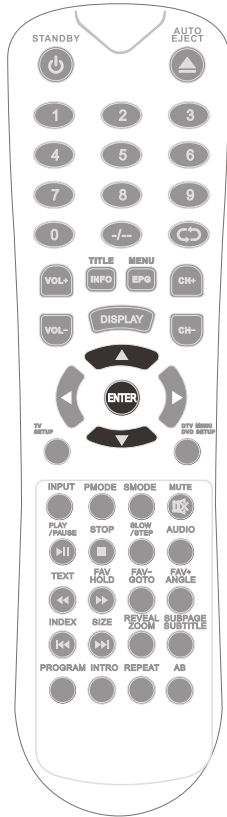 

## Software Update

This menu allows users to update the software version  
( If a software update is being broadcast).

  - 1) Enter the system setting menu, press **UP/DOWN ARROW** button to highlight the **Software Update** option.
- 2) Press **ENTER** button.

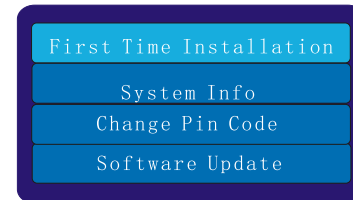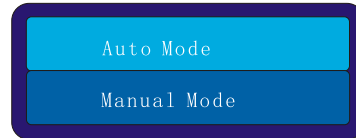


## Auto Mode:

The unit can be set to automatically search at a specific time every day. If this option is used, please ensure that it is disabled when watching TV at the time of the update otherwise viewing will be interrupted

1) Enter the software update menu, press **UP/DOWN ARROW** to highlight **Auto Mode**

 
2) Press **ENTER** button to enter **Auto Mode** menu.

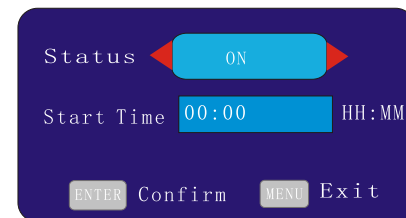


3) Press **LEFT/RIGHT ARROW** button to set the Status to **ON**.

4) Press **UP/DOWN ARROW** button to select Start Time . Use the numeric button to enter the time in.

 5) Press **ENTER** button to save the setting and press **DTV MENU** to exit. The unit will then search for an upgrade at the specified time each day.


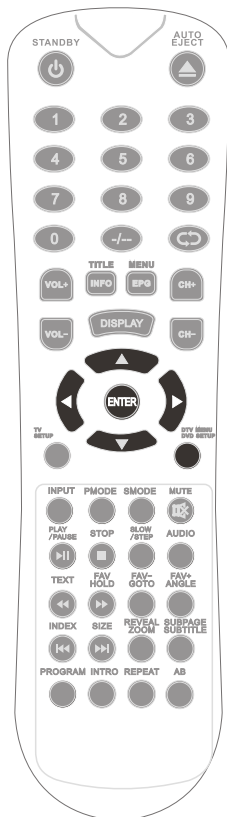



# 15.4" LCD TV with Remote Control

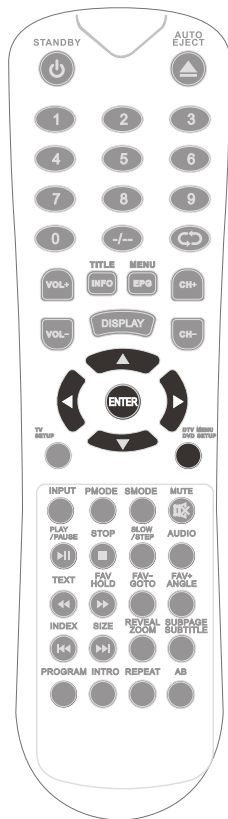 

## Manual Mode:

   - 1) Enter the **software update** menu, press **UP/DOWN ARROW** button to highlight **Manual Mode**.
- 2) Press **ENTER** button to enter **Manual Mode**.
- 3) Press **LEFT/RIGHT ARROW** button to highlight **Scan**.
- 4) Press **ENTER** button to start searching for an update. If an update is available the unit will automatically download this update and install into the unit.
- 5) Press **DTV MENU** button to quit.

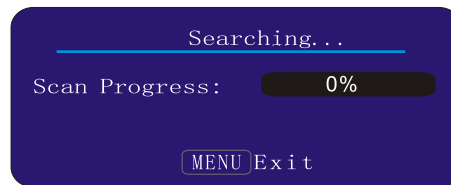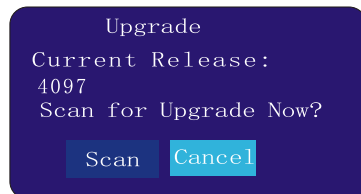

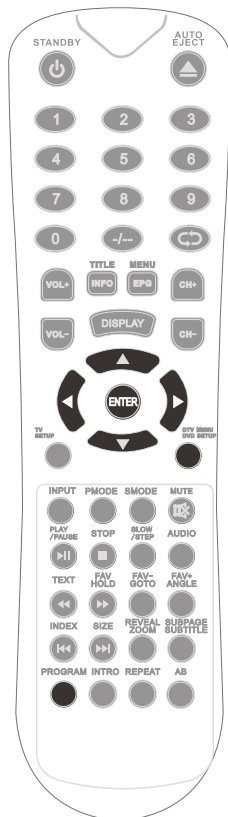

## Favourite List

The favourite list allows you to store a list of your favourite channels. So that you can access them quickly and easily. In this system, there are five favourite lists available, each family member can have their own favourite list.

Adding channels to Favourite list:

1) Press the **DTV MENU** button to display the main menu.

2) Press the **UP/DOWN ARROW** button to select **Favourite List**



Press the **ENTER** button to enter the **favourite list** menu

3) Press **Red** button to cycle through the available favourite lists. Press the **UP/DOWN ARROW** button to highlight desired channel in the selected favourite list.

 
4) Press the **ENTER** button to add the selected channel to the favourite list.

The favourite symbol (add symbol) will appear next to the channel name to indicate that it has been stored to the favourite list.

5) Press the **DTV MENU** button to exit.



# 15.4" LCD TV with Remote Control

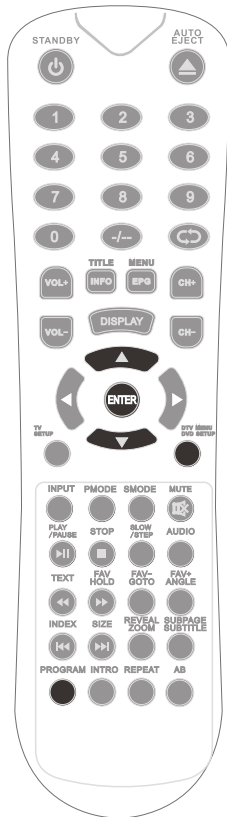

## Remove favourite channels from favourite list:

 
- 1) In the favourite list menu, press **Red** cycle through the favourite lists until the require list is shown.
- 2) Press the **UP/DOWN ARROW** button to highlight the channel to be removed from the favourite list.
- 3) Press the **ENTER** button to remove the channel from the favourite list
- 4) Press the **DTV MENU** button to exit.

## Accessing the favorite channels:

- 1) Press the cycle through the available favourite lists button to display the favourite list selection. Press **Red** button to cycle through the available favourite lists.




- 2) Press **UP/DOWN ARROW** button to select the favourite channel. Press the **ENTER** button, to view the favourite channel on full screen.
- 3) Press the **DTV MENU** button to quit.

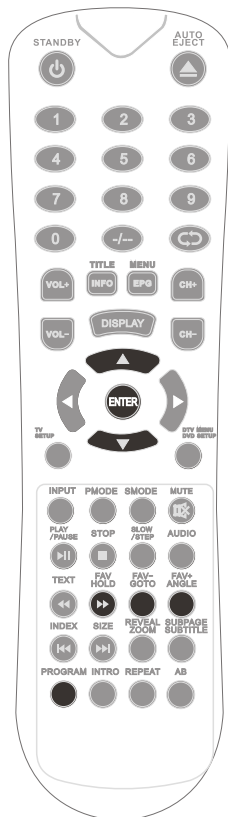

## Navigating channels using FAV + or FAV - buttons:

 - 1) Press the **FAV** button to display favourite list selection screen.
- 2) Press the **RED** button repeatedly until the required favourite list is shown
- 3) Use **UP/DOWN ARROW** button to select a channel from the favourite list and press **ENTER**.
- 4) The **FAV +** and **FAV-** buttons will now scroll up down through the channels in the selected Favourite list
- 5) The currently selected Favourite list will be shown on the left hand side of the I-Bar.


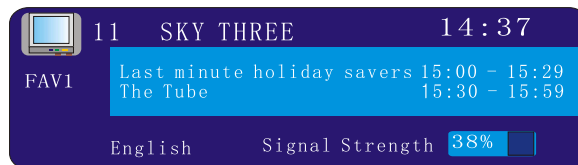


# 15.4" LCD TV with Remote Control

---

## DVD

  Turn on your **TV** set and select **DVD** input by pressing the **INPUT** key on the remote repeatedly until **DVD** is shown on the screen

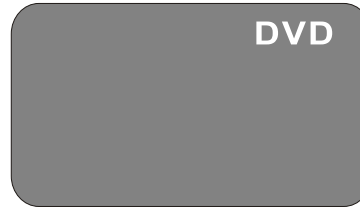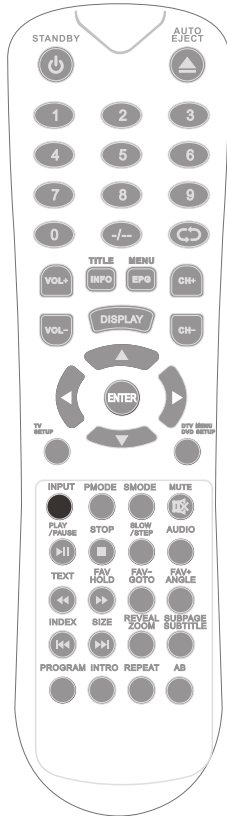

## Using the DVD Player Compating Discs

Your DVD player can play discs that are marked with the following logos :



12cm DVD Video Discs.



12cm Compact Discs Recordable Discs.



12cm Compact Discs Re-Writable Discs.



12cm Compact Discs Audio Discs.



12cm Photo Compact Discs.

## Region code

If the region code of the disc being played does not match the region code of this DVD player then the disc cannot be played.

The region code for this player is region 2 (refer to the symbols opposite) .



# 15.4" LCD TV with Remote Control

---

## Inserting a Disc

 
---

 


**NOTE:** To operate the **DVD** player from the remote control you must first repeatedly press the **INPUT** button so that **DVD** is displayed in the top right hand corner of the screen.

---

1. Gently push the disc into the slot on the left side of the TV/DVD with the label facing towards you. The mechanism will take the disc into the player.
2. "Close" and "Read" will be displayed.

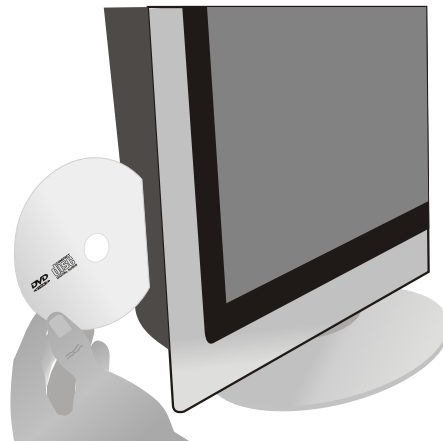

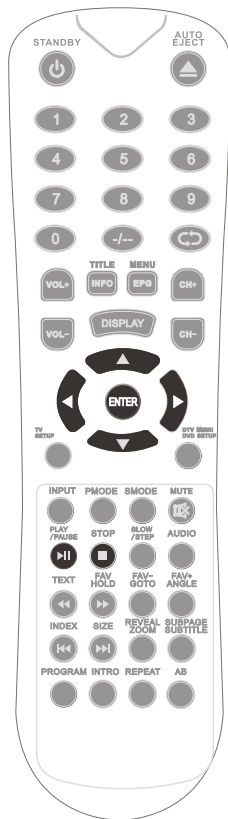

## Playing DVDs

The film may start automatically you may be presented with a menu screen, this is dependent on the way the DVD disc has been created by the movie company.

Press the **ENTER** button to begin playback or use the **UP/DOWN** and **LEFT/RIGHT** button to navigate the menu.

## Pause Play

1. Press the **⏸** button to pause play. The pause symbol will be displayed on the TV screen.
2. To resume normal play press the **⏸** button. The play symbol, **▶**, will be briefly displayed when the button is pressed.

## Stop Play

1. Press the **■** button to stop play.
2. Press the **⏸** button to resume play where you stopped.

 


**NOTE:** Play will commence from the exact position where the DVD was stopped, unless either the DVD disc has been removed from the player or the stop (**■**) button is pressed a second time.

To stop play to remove the disc:

1. Press the **■** button twice. The stop symbol **■**, is displayed on the DVD player background graphic.
2. If you press the **⏸** button play will start from the beginning of the first chapter.
3. Press the **▲** button to eject the disc.

# 15.4" LCD TV with Remote Control

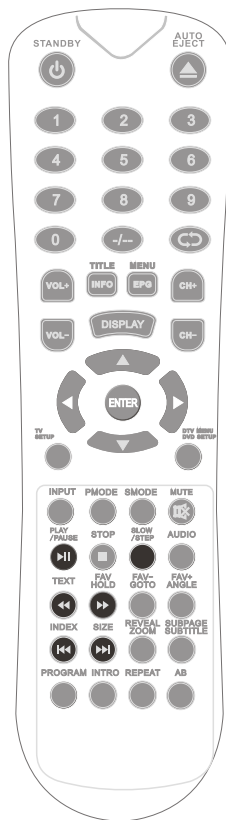

## Fast Forward/Reverse

The fast search the contents of a disc during play :

1. Press either the ►► button to fast forward through the disc or the ◄◄ button to search backwards through the disc.
2. Each press of the ►► or ◄◄ button steps through the four available speeds .  
These are : X2, X4, X8 and X20 normal play speed.

The set speed will be displayed on screen after each press of the button as ►► X2, X4, X8 and X20 for fast forward and ◄◄ X2, X4, X8 and X20 for fast backward.

Press the ►|| button at any time during fast mode operation to return to normal playback speed.

## Skip to the Next/Previous Chapter

The skip to the next chapter during play:

 
1. Press the ►|| button. Play re-starts at the next chapter each time this button is pressed.
2. Press the ◄|| button. Play will restart at the begin of the previous chapter.

Each time a skip button is pressed, the relevant symbol, either ►|| or ◄|| is displayed briefly on the screen for forward and reverse respectively.

## Slow Motion

Six slow motion speeds are available during playback.

1. Press the **SLOW** button to skip through the six available speeds. These are 1/2, 1/3, 1/4, 1/5, 1/6 and 1/7 normal play speed.
2. Press the ►|| button at any time during slow motion operation to return to normal playback speed.

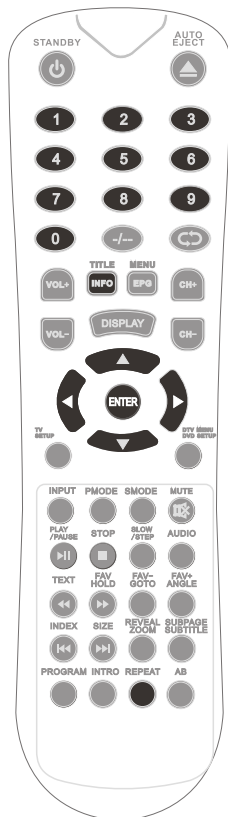

## Special DVD Functions

### Title Playback

The **TITLE** button allows you to view ,select and play the different titles recorded on the DVD.

1. Press the **TITLE** button and **NAVIGATE** to your required title.
2. Press **ENTER**.

### Sequential Playback

 
1. Press the **PROGRAM** button and to open the sequential menu screen.
2. Use the **UP/DOWN** and **LEFT/RIGHT** buttons to navigate to each sequence.
3. Use the **NUMERIC** buttons to input the title and chapters to view.
4. Use the **UP/DOWN** and **LEFT/RIGHT** buttons to navigate to 'Play'.
5. Press **ENTER**.
6. If required, use the **UP/DOWN** and **LEFT/RIGHT** buttons to navigate to 'Clear', to clear all entries.

### Repeat

You can replay either a specific chapter, title or the entire disc.

1. Press the **REPEAT** button to scroll through the three repeat options:
  - Chapter: Repeats the current chapter
  - Title: Repeats the current title
  - Repeat All: Repeats the entire disc
2. Press the **REPEAT** button again to cancel repeat.

# 15.4" LCD TV with Remote Control

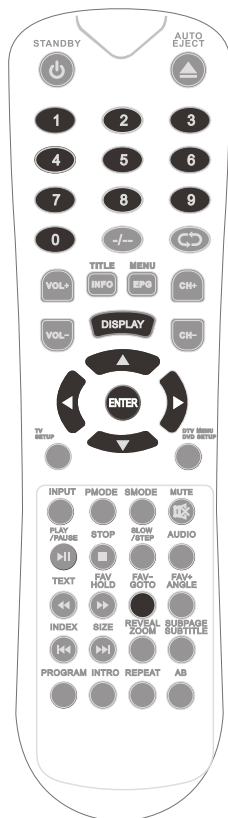

## Display

The display function shows an on-screen display for the current title.

1. Press the **DISPLAY** button to show an on-screen display with:

- Disc type
- Title(Current/Total)
- Chapter(Current/Total)
- Time elapsed

2. Press **DISPLAY** button a second time to show:

audio(Current/Total/Off)

Language, Audio type , Subtitle(Current/Total)

Subtitle Language

Camera angle

3. press the **DISPLAY** button a third time to switch the display off.

## GOTO

 
The **GOTO** button can be used to skip to your favourite title, chapter or track.

1. Press the **GOTO** button to show the on-screen display .

2. Press the **UP/DOWN** and **LEFT/RIGHT** buttons to move to each editable value.

3. press the **NUMERIC** buttons to change the value.

4. Press **ENTER** to goto the selected title/chapter/track.

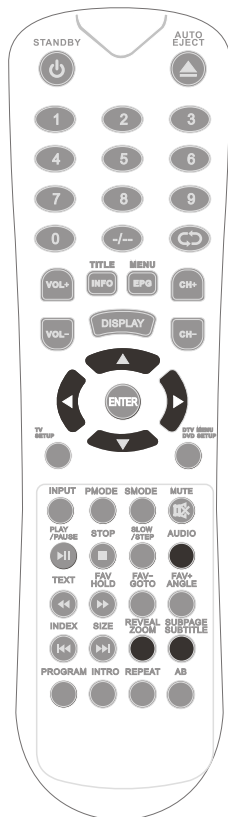

## Subtitles

Some **DVD** discs contain subtitles in several languages.

To access the subtitle:

1. Press the **SUBTITLE** button repeatedly to skip through the available languages displayed on the TV screen, until the language required is found.

The subtitle in the selected language appears shortly after selection. The selected subtitle overrides the subtitle setting in the preferences setup menu.



**NOTE:** see the DVD disc cover for supported languages.

## Audio

Press the **AUDIO** button to display the current audio mode. Repeatedly pressing the **AUDIO** button will scroll through the available languages.

## Zoom

You have six preset zoom options to choose from.

1. Press the **ZOOM** button to zoom in or zoom out on the display. There are six zoom modes. Repeatedly press the **ZOOM** button to scroll through the available options.

The options are :


Zoom IN: X2, X3 and X4

Zoom Out : 1/2, 1/3 and 1/4

2. When in zoom mode, press the **UP/DOWN** and **LEFT/RIGHT** ARROW buttons to pan around the display.

# 15.4" LCD TV with Remote Control

 
---

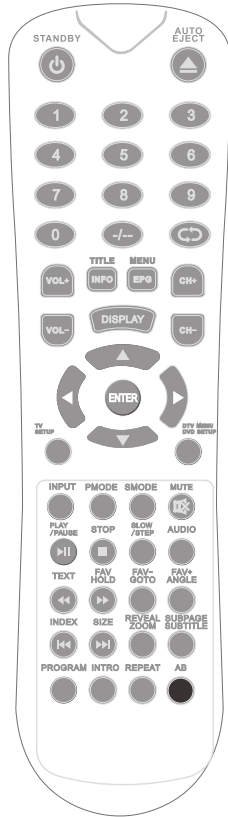

## Repeat AB

You can repeat a section of the DVD, of any length, within a chapter.

 1. Press the AB button once at the point you would like repeat playback to start.
2. Press the AB button a second time at the point you would like repeat playback to end. The selected part of playback will repeat.
3. Press the AB button a third time to cancel A-B repeating.

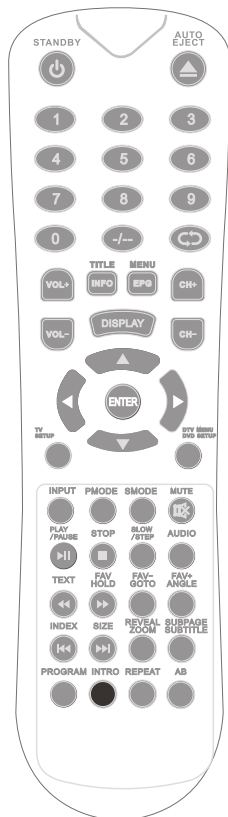

## Playing Audio CDs

Insert an audio CD into the DVD player as described previously. Playback will automatically start at the first track. The track number, total number of tracks, repeat mode and elapsed time will be displayed.

## Control During Playback

The following controls are available during playback, as described for playing DVDs.

 
- Play
- Pause
- Stop
- Fast forward
- Fast backward
- Skip forwards
- Skip backwards
- Repeat AB
- Goto
- Program
- Audio

## INTRO

Press the **INTRO** button to playback a 15 second preview of each of the tracks on the CD.

# 15.4" LCD TV with Remote Control

---

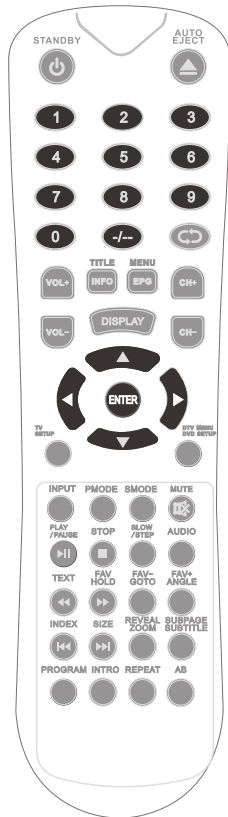

## Playing MP3/JPEG Cds

Insert an Mp3 or JPEG CD into the DVD player as described previously. The JPEG/MP3 contents screen will be displayed.

**Note:** Only JPEG files smaller than 3 MB will be shown

 
Press the UP/DOWN and LEFT/RIGHT button to navigate through the available files and folders.

Press ENTER to select a file or folder.

You can also use the NUMERIC buttons to input directly the file number required.

The following controls are available during playback, as described previously.

- Play
- Pause
- Stop
- Skip forwards
- Skip backwards
- Display
- Goto
- Zoom function

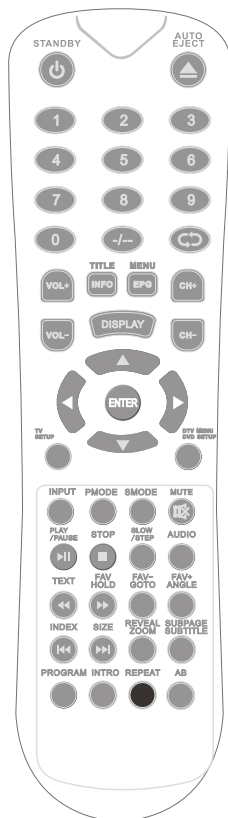

## Repeat

You can repeat either the current track, current directory or the entire disc.

 
1. Press the **REPEAT** button to scroll through the three repeat options:

- Repeat 1
- Repeat Directory
- Repeat All
- Press the **REPEAT** button again to cancel repeat.

2. Press the **REPEAT** button again to cancel repeat.

# 15.4" LCD TV with Remote Control

---

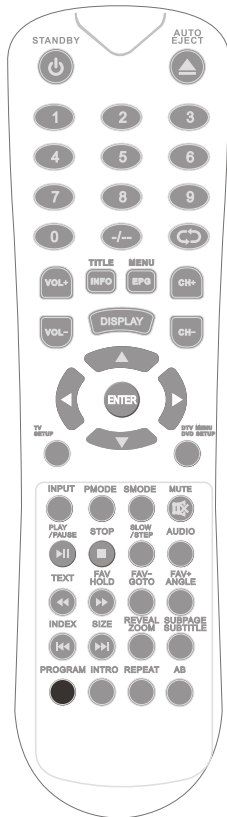


## Program Effects

When the JPEG contents screen is displayed, the **PROGRAM** button allows you to preselect the order the pictures are displayed in, as previously described for DVDs.

When **JPEG** Images are displayed, press the **PROGRAM** button to display different effects available. There are 16 different effects to choose from:

 - Wipe Top
- Wipe Bottom
- Wipe Left
- Wipe Right
- Diagonal Wipe Left Top
- Diagonal Wipe Left Bottom
- Diagonal Wipe Right Top
- Diagonal Wipe Right Bottom
- Extend from Centre H
- Extend from Centre V
- Compress to Centre V
- Compress to Centre H
- Window H
- Window V
- Wipe from Edge Centre
- Random

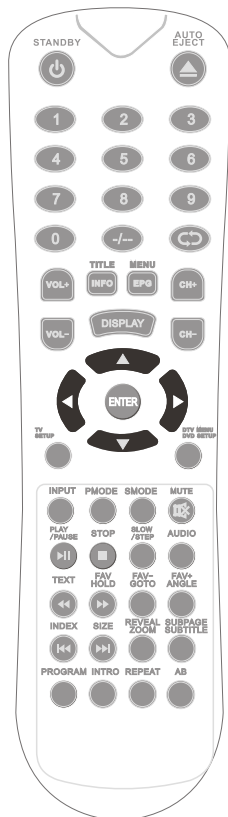


## Rotating JPEGs

When playing JPEGs, press the **ARROW** buttons to flip or rotate the picture.

When the image is displayed:

- Use the **Right** button to rotate the image clockwise by 90 degrees.
- Use the **Left** button to rotate the image anticlockwise by 90 degrees.
- Use the **UP** button to flip the image vertically.
- Use the **DOWN** button to flip the image horizontally.
 
# 15.4" LCD TV with Remote Control

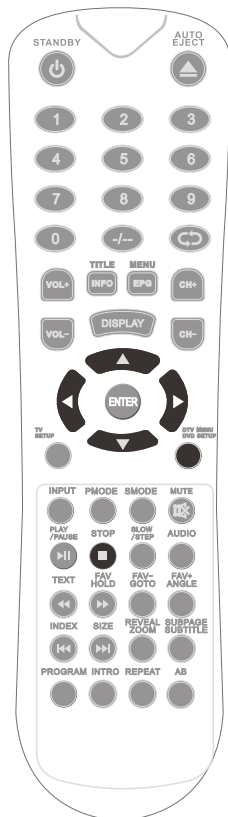

## DVD Player Setup Menus

The DVD setup menus allow you to adjust various settings to suit your personal preference.



NOTE: Some of the DVD setup menu options are only available when the DVD is in the 'Stop' mode.

## Basic Controls

 
1. Press the **■** button twice to make sure the DVD is in the stop mode and press the DVD SETUP button to open the DVD setup menus.
2. Use the **UP/DOWN** buttons to select a menu page.
3. Press the **RIGHT** button to enter the sub-menu. To return to the main menu press the **LEFT** button.

# System Setup Page

## TV System

This menu enables you to set the picture format for your TV.


- PAL: This is the format used in the UK and the default setting
- AUTO: Can be used if your television is capable of both PAL and NTSC formats
- NTSC: This format is used by some other countries, e.g.USA.

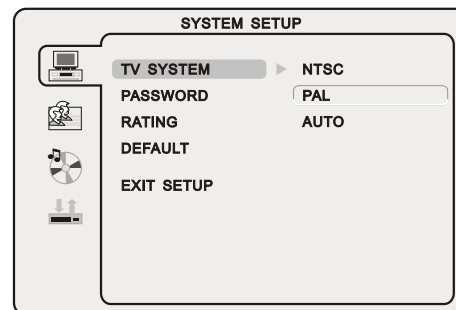

# 15.4" LCD TV with Remote Control

## Password

 
You can change the password to prevent children adjusting the ratings that can be viewed. To lock, enter a four digit number password and press the **Enter** button. To unlock, enter the password and press the **Enter** button. The default password is '0000'.

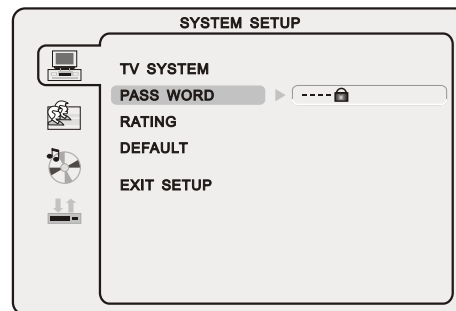

## Rating

Some pre-recorded DVDs are supplied with parental control ratings. The Rating function allows you to prevent playback of unsuitable material by setting the rating available for playback. The following ratings are available: The default is 'Adult'.

 - 1 KID SAFE
- 2 G
- 3 PG
- 4 PG13
- 5 PG-R
- 6 R
- 7 NC-17
- 8 ADULT

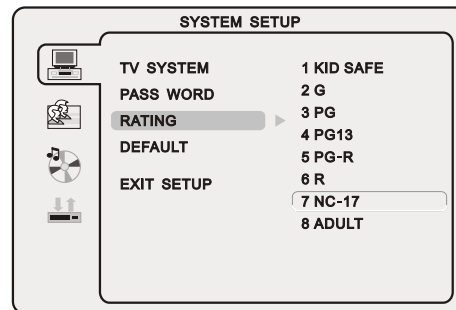


## Default

This feature will reset the DVDs setup configuration to its factory default settings.



 **NOTE:** The reset does not reset the parental control or the password.

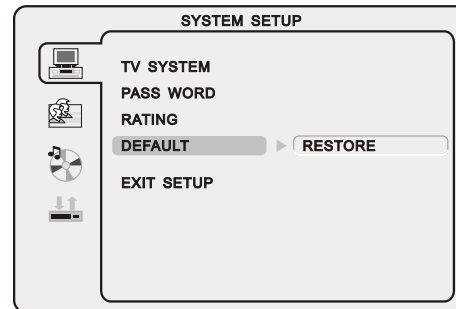

# 15.4" LCD TV with Remote Control

## OSD Language . On . screen Display Language

This is the language used for the text on the setup pages. English or French language is available. English is the default setting.

 
 
 
When you press the **ENTER** button to select a language the change is immediate.

## Audio Language

Some DVD discs contain audio commentaries and audio track in different language. This menu enables you to select the preferred language. There are a number to choose from. The default is Off.

## Subtitle Language

Some DVD discs contain subtitles in different languages. This menu enables you to select the preferred language. The default setting is 'off'.

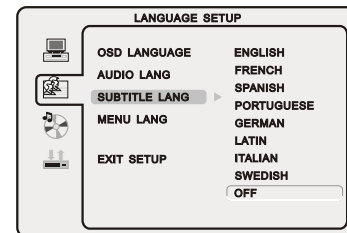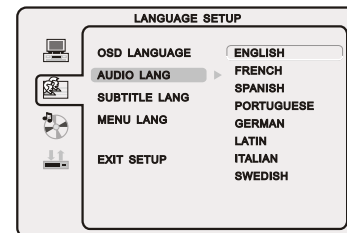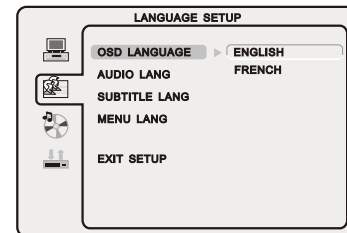


**NOTE:** You can also select the subtitle or audio language by pressing the **SUBTITLE** or **AUDIO** button on the remote control. Refer to the DVD disc cover for a list of subtitle language tracks.

## Menu Language

 Some DVD discs contain the menu screen in different languages.

This menu enables you to select the preferred language.

The default is English.

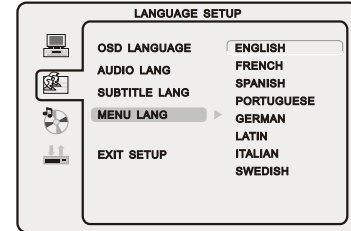


## Audio Setup Page

### Audio Out


There are three modes available for the audio output.

 - SPDIF/OFF: This setting turns the co-axial output.
- SPDIF/RAW: Used when the co-axial output is connected to your audio amplifier. The audio output is the original signal from the Dolby or MPEG disc. Your audio amplifier must have the corresponding decoding capability.
- SPDIF/PCM: Used when the co-axial output is connected to your 2 channel digital stereo amplifier. The audio output is Dolby MPEG.

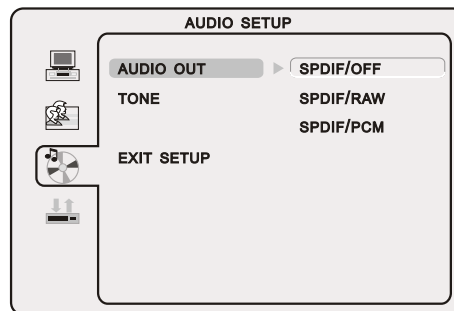

### Tone

 
This menu enables you to adjust the audio output tone.

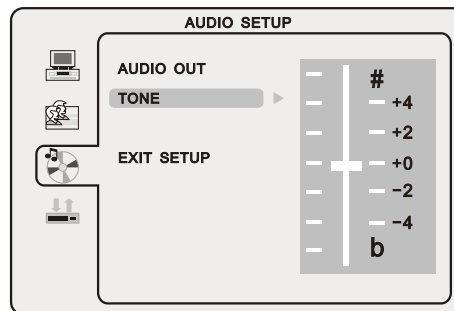

# Digital Setup Page

## Dynamic Range

 
The Dynamic Range function allows you to set the dynamic compensation level. This allows you to soften high volume outputs such as gunfire and explosions.

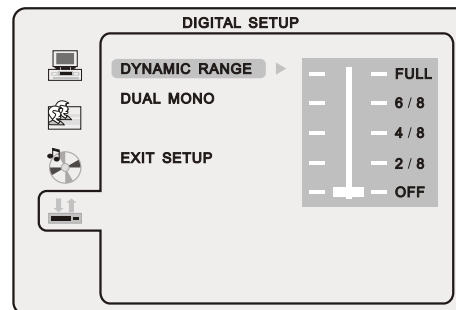

## Dual Mono

Four audio outputs are available .

 - Stereo: Stereo output.
- Mono L: Left mono output from the left and right speaker.
- Mono R: Right mono from the left and right speaker.
- Mix Mono: Left mono output and right mono output played from both speakers.

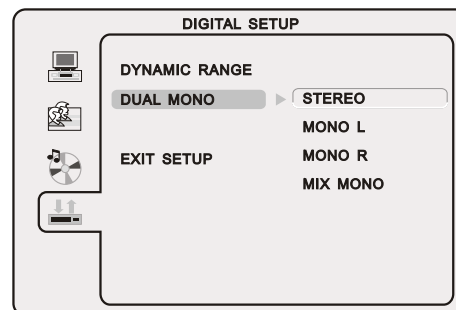

## 15.4" LCD TV with Remote Control

### Troubleshooting

Problem	Possible Cause
The TV does not work	Make sure that the power supply is connected and that the mains supply is switched on.
Poor picture	Is the aerial plugged in? Try changing the direction of the outdoor aerial. High buildings and hills can cause ghost pictures or double images. Check the channel is tuned properly. Try adjusting the picture settings; brightness, colour, sharpness. Make sure the TV is not located close to electrical appliances that may emit radio frequency interference.
No TV picture	Is the aerial plugged in properly? Is the aerial lead damaged? Are all the plugs in the aerial lead fitted correctly? Is the TV in the correct input signal mode?
No sound	Is the sound muted? Press the Mute button. Is the volume turned down?
No colour	Adjust the colour setting. Check the programme is broadcast in colour. Check the channel is tuned properly.
No response from the remote control.	Is there an obstruction between the remote control and the sensor on the TV? Try changing the batteries. Avoid direct sunlight on the remote control sensor.
DVD/CD Does not play	Is the DVD/CD inserted incorrectly - Eject the DVD/CD and ensure that it is inserted with the label facing the front of the TV



**WARNING: IF THIS DOES NOT WORK, CONTACT EITHER YOUR SUPPLIER OR A QUALIFIED TV REPAIR TECHNICIAN. NEVER ATTEMPT TO REPAIR THE TV YOURSELF.**

## Care and Maintenance

### Care of the screen

Clean the screen with a slightly damp, soft cloth.

Do not use abrasive solvents or cleaners as they may damage the TV screen coating layer.

Always unplug the TV from the mains while cleaning.

### How Do I Dispose of this Product?



When your TV has reached the end of its life, contact your local council regarding available recycling or disposal options.

Do not dispose of electrical products in the general waste.

Please ensure that used batteries are disposed of safely.

## 15.4" LCD TV with Remote Control

---

### Technical Specification

Power Supply

Input

AC 230V 50Hz

Output

12V DC

Fuse rating

5A

Remote Control Batteries

2×AAA(supplied)

Number of preset programmes

100

RF Aerial input

75 ohm(balanced)

Audio output

NICAM Stereo/Mono

Dimension (width x height x depth)

43.4cm x 40cm x 10cm

Weight

Gross weight:8.14kg Net weight:6.60kg

Maximum Power Consumption

≤ 50W

Standby Power Consumption

≤ 2.5W

LCD panel

15.4" TFT-LCD

Type

262.144M

Display Colour

LVDS type

Interface

75/75/70/65

Viewing Angle

## Guarantee

This product is guaranteed for 12 months from the date of original purchase. If any defect arises due to faulty materials or workmanship, the unit will either be replaced, a refund given or repaired free of charge (where possible) during this period by the retailer from whom you purchased the unit.

The guarantee is subject to the following provisions:

- The guarantee is only valid within the boundaries of the country of purchase.
- The product must be correctly assembled and operated in accordance with the instructions contained in this booklet.
- The guarantee does not cover accidental damage, misuse, or consumable items.
- The guarantee will be rendered invalid if the product is resold or has been damaged by inexperienced repair.
- The manufacturer disclaims any liability for incidental or consequential damages.

This guarantee is in addition to and does not diminish your statutory, or legal rights.

# Goodmans

