

**GTVL19W18HDF**

**19" LCD TV**

**WITH REMOTE CONTROL**

**Goodmans**



## Introduction

Thank you for buying this GTVL19W18HDF TV which is designed to give you many years of trouble-free service. You may already be familiar with using a television but do please take time to read these instructions. They are designed to familiarise you with the unit's many new features and to ensure you get the very best out of your purchase.

## Safety is Important

Your safety and the safety of others is important. Please, therefore, ensure you read the Safety instructions on page 4 before you operate this GTVL19W18HDF TV.



**NOTE:** This 19"LCD TV is referred to throughout this user guide as TV.

---

# CONTENTS

|  |    |  |    |
|--|----|--|----|
| <b>Introduction</b> .....                  | 2  | <b>DTV Operation</b> .....             | 33 |
| <b>Safety is Important</b> .....           | 2  | Channel Search.....                    | 34 |
| <b>Safety Precautions</b> .....            | 4  | Changing Channels.....                 | 35 |
| <b>Electrical Information</b> .....        | 6  | EPG Function.....                      | 38 |
| Wiring Instructions.....                   | 6  | Channel List.....                      | 40 |
| <b>Getting Started</b> .....               | 8  | System Setting.....                    | 42 |
| <b>Quick Setup</b> .....                   | 9  | First Time Installation.....           | 42 |
| <b>Connecting External Equipment</b> ..... | 11 | Change Pin Code.....                   | 43 |
| <b>Switching On</b> .....                  | 12 | Software Upgrade.....                  | 44 |
| Mains Power.....                           | 12 | Favourite List.....                    | 47 |
| <b>Identification of Controls</b> .....    | 13 | <b>Troubleshooting</b> .....           | 50 |
| <b>Tuning the TV</b> .....                 | 15 | <b>Care and Maintenance</b> .....      | 51 |
| Menu Navigation.....                       | 16 | Care of the Screen.....                | 51 |
| Tuning.....                                | 18 | How Do I Dispose of this Product?..... | 51 |
| <b>Using the TV</b> .....                  | 19 | <b>Technical Specification</b> .....   | 52 |
| TV Controls.....                           | 19 | <b>Guarantee</b> .....                 | 53 |
| Picture Preset.....                        | 21 |  |    |
| Input Selection.....                       | 21 |  |    |
| <b>Using Teletext</b> .....                | 22 |  |    |
| <b>On-screen Menus</b> .....               | 25 |  |    |
| VIDEO SETUP.....                           | 26 |  |    |
| AUDIO SETUP.....                           | 27 |  |    |
| TV SETUP.....                              | 29 |  |    |
| GENERAL SETUP.....                         | 31 |  |    |

## **Safety Precautions**

Please read all the safety information before use.

## **Safety Considerations**

Position the power supply lead so that it cannot be walked on or pinched by items placed on or against it.

Do not use the TV in humid or damp conditions.

Do not allow the TV to get wet.

Do not expose the TV to splashing or dripping.

Do not expose the TV to naked flames.

## **Power Source**

You should only plug the TV into a 230V to 240V AC,50Hz supply.

## **High Voltage**

Do not remove the rear cover as high voltage components are accessible.

Disconnect the TV from the power supply when the TV is not to be used for a prolonged period of time.

## **Cleaning**

Disconnect the TV from the power supply before you clean it.

Do not use liquid or aerosol cleaners.

Clean your TV with a soft,damp(not wet) cloth.

## **Ventilation**

The slots and openings on the TV are for ventilation. Do not cover or block them as it may cause overheating.

NEVER let children push anything into the holes or slots on the case.

## **Servicing**

- There are no user serviceable parts in this TV.
- When servicing, refer to qualified service personnel.
- Consult your dealer if you are ever in doubt about the installation, operation or safety of this TV.


## Electrical Information

This appliance is fitted with a BS1363/A 13 amp plug. If it is not suitable for your supply sockets it must be removed and replaced with an appropriate plug. If the plug becomes damaged and/or needs to be replaced please follow the wiring instructions below. The plug removed must be disposed of immediately. It must not be plugged into a supply socket as this will be an electrical hazard.

If the fuse needs to be replaced it must be of the same rating and ASTA approved to BS1362. If the plug is changed, a fuse of the appropriate rating must be fitted in the plug, adapter or at the distribution board. If the fuse in a moulded plug is replaced, the fuse cover must be refitted before the appliance can be used.

## Wiring Instructions

The supply cable will be either 2-core or 3-core. Follow the appropriate wiring instructions given on the next page. In both cases ensure that the outer sheath of the cable is firmly held by the cable clamp.

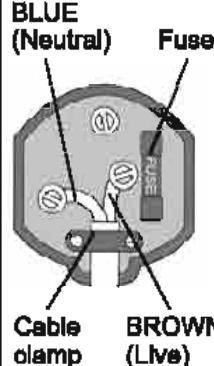**2 - CORE**


**WARNING!** Do not connect either wire to the earth terminal.



This symbol indicates that this 2-core appliance is Class II and does not require an earth connection.

The wire coloured blue must be connected to the terminal marked with the letter N or coloured black.

The wire coloured brown must be connected to the terminal marked with the letter L or coloured red.

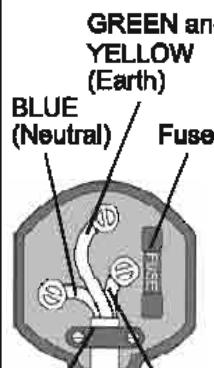**3 - CORE**

**WARNING!** This appliance must be earthed.

The wire coloured green and yellow must be connected to the terminal marked with the letter E, or by the earth symbol,  $\pm$ , or coloured green or green and yellow.

The wire coloured blue must be connected to the terminal marked with the letter N or coloured black.

The wire coloured brown must be connected to the terminal marked with the letter L or coloured red.

Cable clamp      BROWN (Live)

# 19" LCD TV with Remote Control

---

 
## Getting Started

Remove your TV carefully from the box. You may wish to store the packaging for future use.


### In the box



TV




Remote Control

 


2 x AAA  
Batteries



User Guide

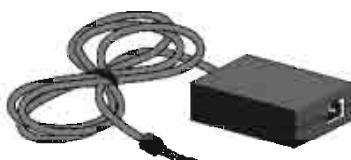

DC Power Supply/Adapter

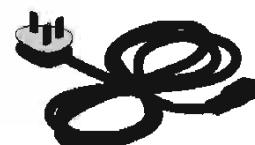

AC Power Cord

If any items are missing, please contact Product Support






Telephone: 0871 230 1777

Internet: [www.goodmans.co.uk](http://www.goodmans.co.uk)


Email: [cecustomerservice@albaplc.co.uk](mailto:cecustomerservice@albaplc.co.uk)

# Quick Setup

## Connections

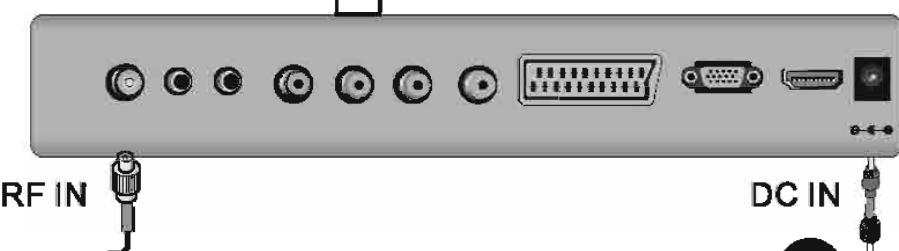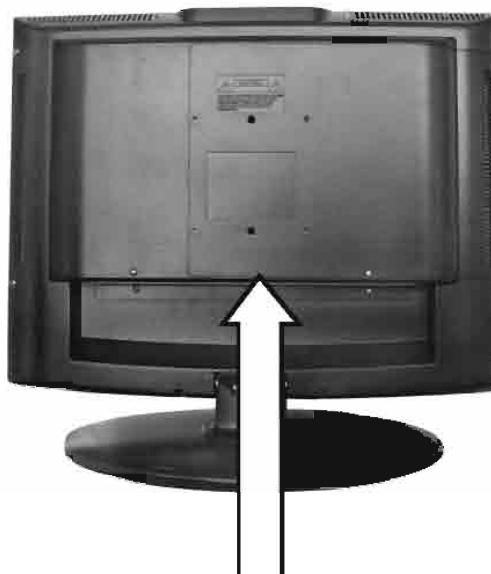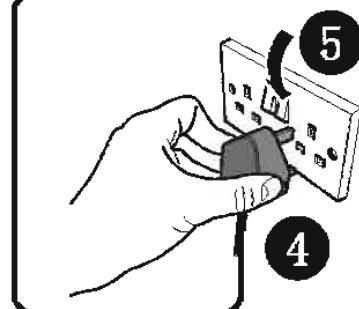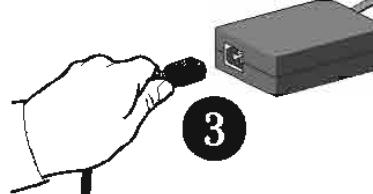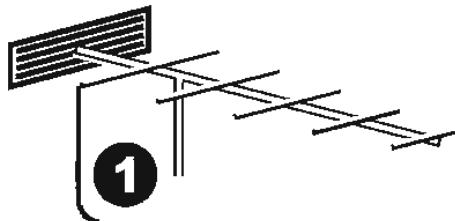

## Insert remote control batteries

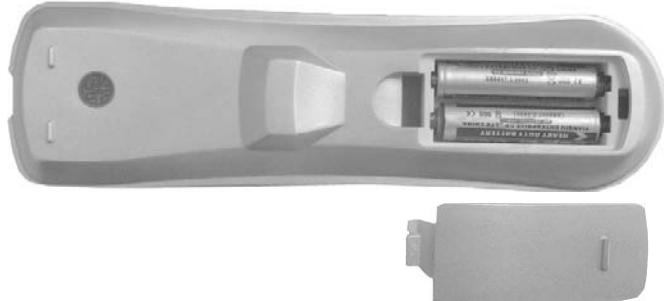

## Turn on



## The Remote Control

### Inserting Remote Control Batteries

1. On the back of the remote control, push up the catch on the battery compartment cover and lift to remove it.
2. Insert the two AAA batteries, ensuring that you follow the polarity diagram inside the battery compartment.
3. Refit the cover



We recommend the use of  
Ever Ready Energizer batteries.

### Battery Disposal

Please ensure batteries are disposed of safely. Never dispose of batteries in the fire or with household waste. Check with your local authority for disposal regulations.

## Connecting External Equipment

You can connect a wide range of audio and video equipment to your TV.




**NOTE:** Refer to the manufacturer's guide for further instructions on how to connect the equipment.

The following table lists a range of the available connectors on the TV.

| Connector | Purpose   |
|-----------|---|
|           | Receives TV signals from an external aerial.                |
|           | Receives audio signal for YPbPr (Component) mode.           |
|           | Receives audio signal for PC or AV mode.                    |
|           | Receives component video signal for YPBPR (Component) mode. |
|           | Receives composite video signal for AV mode.                |

| Connector | Purpose                                       |
|-----------|---|
|           | Receives a complete AV (Audio Visual) signal. |
|           | Receives the video signal from a PC.          |
|           | Receives High Quality HDMI input.             |

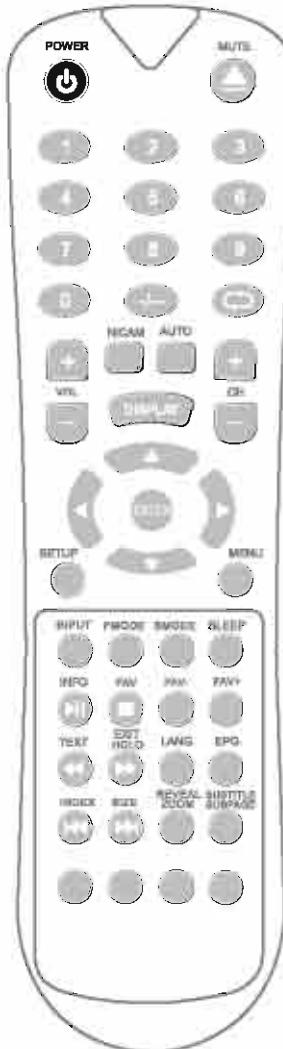

## Switching On

### Mains Power

Complete all connections before connecting to the mains supply.

Connect the aerial to Aerial Socket. Connect the adapter block to the DC IN socket

Insert the mains plug into the mains socket.

Switch the mains power on.



---

**NOTE:** When not in use, disconnect the 3-pin plug from the mains power supply.

---

When the TV is successfully connected to the power supply, the standby indicator on the front of the TV will illuminate red. The TV is now in standby mode and the screen remains blank.

Press the **POWER** button on the side of the TV or the power button on the remote. The standby indicator on the front of the TV will turn green and the picture will appear after a few seconds.

# Identification of Controls

## Front

### 1. Standby

Switches the TV to stand-by and on again. The TV is only completely disconnected from the mains if the plug is disconnected.

### 2. Menu

Activates the On-screen menus.

### 3. Volume Up/Down

Volume adjust buttons.  
Also used to move left and right whilst navigating on-screen menus.

### 4. Programme Up/Down

Channel select buttons.  
Also used to move up and down whilst navigating on-screen menus.

### 5. INPUT



Cycles through the available input sources.

### 6. Speakers

### 7. Remote Control Sensor

### 8. Standby Indicator

### 9. Stand

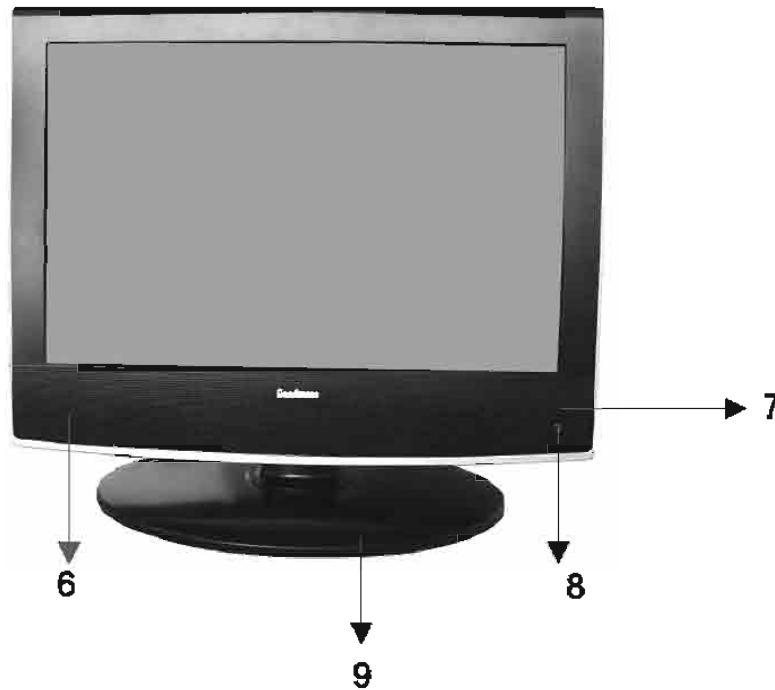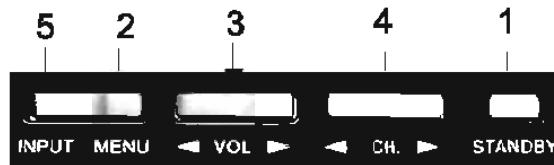

## Rear

### DC input

Insert the mains adapter lead here.

### HDMI Input

High Quality Audio/Video input socket for connecting an external device fitted with an HDMI output.

### VGA Input

Connect the PC-RGB output Socket of PC .

### SCART IN(EURO AV)

Audio visual socket for connecting an external input device with a SCART connector.

### AV Input

Input sockets, for connecting an external input device.

### Audio Input


Audio input from other devices.


### RF IN(Aerial Connection)

RF input socket, for connecting an external aerial.

### YPbPr (Component In)

YPBPR input component video signal from other devices.

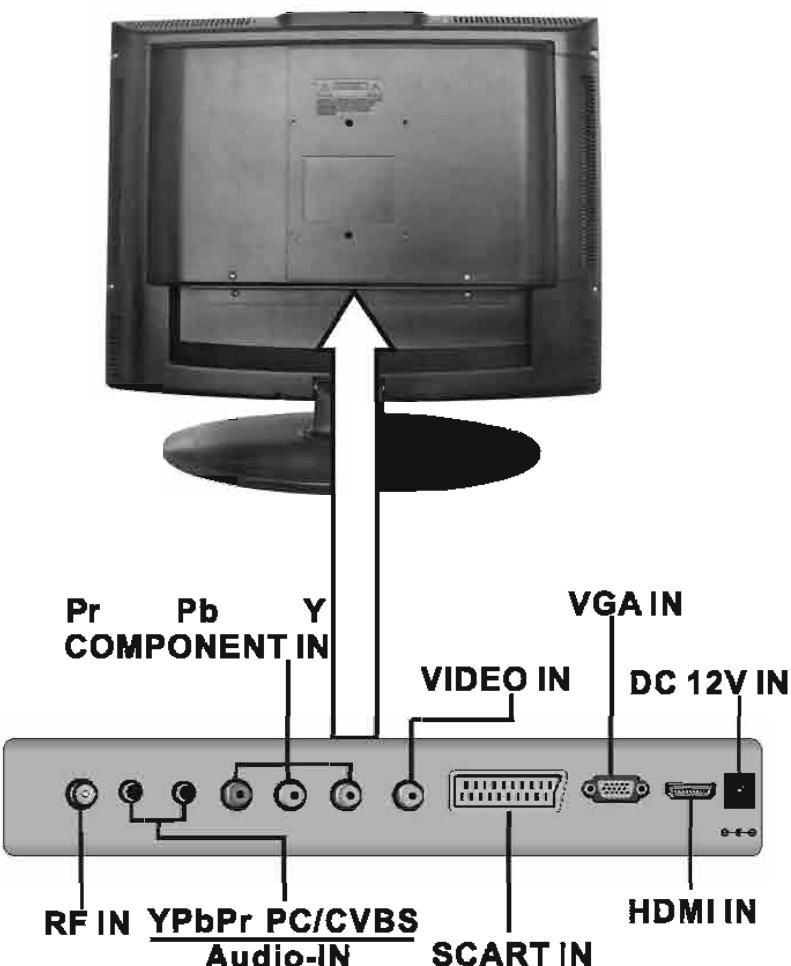


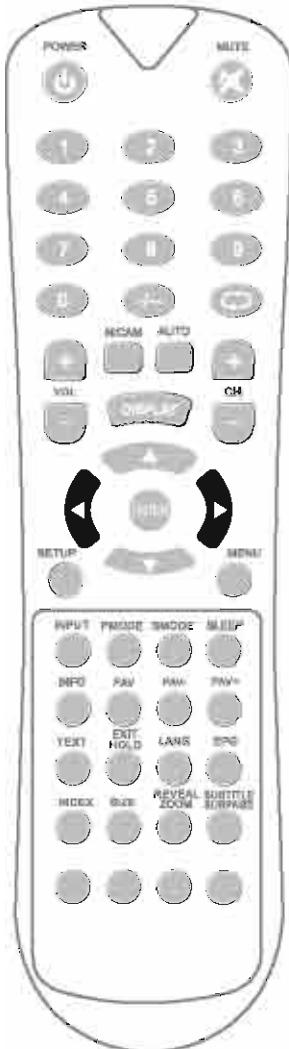


# Tuning the TV

## First Time Installation


The following screen will appear, Initial Channel Search will scan for, sort and save any available channels.

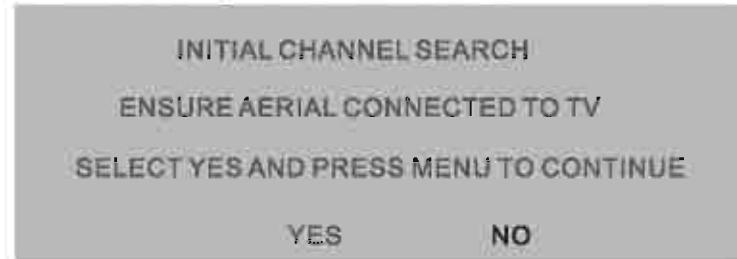


1. Press the **LEFT/RIGHT ARROW** buttons to highlight **YES**.
2. Press **ENTER** to start analogue auto search. Once the progress bar has filled any channels found will be stored and the unit will proceed to the search for digital channels.

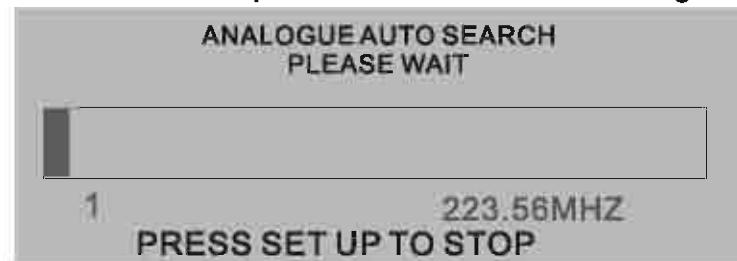

3. The following screen will appear.
4. Press **LEFT/RIGHT ARROW** button to highlight **Confirm**.
5. Press **ENTER** button to start digital search. All available digital channels found will automatically be stored into the channel list.

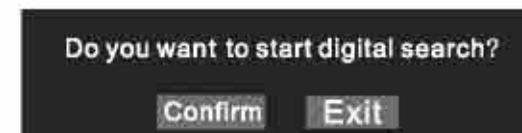

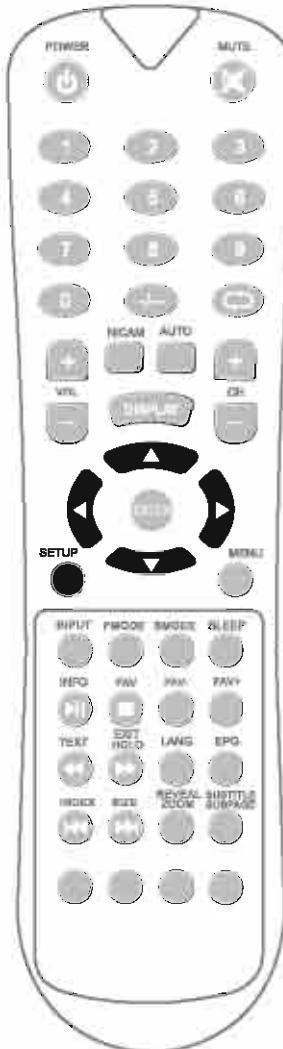

## Menu Navigation

The basic controls needed to go through the menu screens are as follows:

1. Press the **SETUP** button to cycle through the On-screen menu.
2. Press the **UP/DOWN ARROW** buttons to move up and down the On-screen menus.
3. Press the **LEFT/RIGHT ARROW** buttons to move left and right when navigating the On-screen menu.

## AUTO Tuning


1. Press the **SETUP** button 3 times to activate the **TV SETUP** menu.
2. Press the **DOWN ARROW** button to highlight **AUTO SEARCH**.
3. Press the **RIGHT ARROW** button the auto tuning process will begin.

This may take several minutes to complete. Once completed the TV will tune to the first channel.



**NOTE:** To receive a TV signal, you can use an outdoor or indoor aerial. However, if you live in a poor reception area you may experience loss or corruption of teletext transmissions or may not receive a signal at all when using an indoor aerial.

---

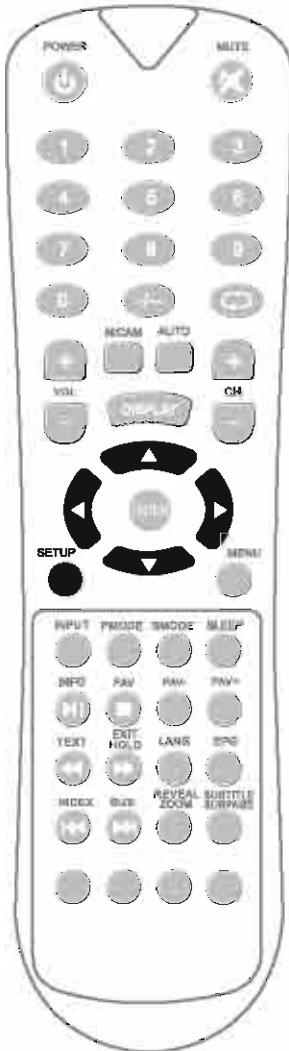



## Channel Position

The automatic tuning may not store the channels in the order you require. For example, BBC1 might be stored in channel position 4 and Channel 4 might be stored in channel position 1. Using the **SETUP** menu, channel positions can be swapped to obtain the correct order.

After you have performed an auto tune (see previous page);

1. Press the **SETUP** button 3 times to activate the **TV SETUP** menu.
2. Press the **DOWN ARROW** button to highlight **SWAP**.
3. Press the **RIGHT ARROW** button to enter the swap menu.
4. Select the first channel using the **LEFT/RIGHT ARROW** buttons.
5. Press the **DOWN ARROW** button.
6. Select the second channel using the **LEFT/RIGHT ARROW** buttons.
7. Press the **DOWN ARROW** button to highlight **SWAP**.
8. Press the **RIGHT ARROW** button to swap the two channels you just selected.
9. Press the **MENU** button to exit the On-screen menu.

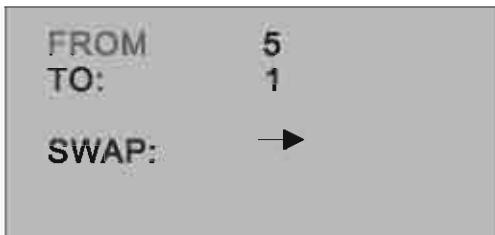

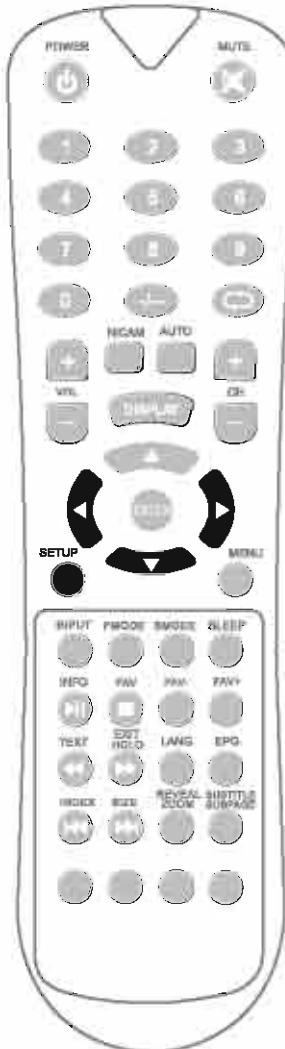

## MANUAL Tuning


1. Press the **SETUP** button 3 times to activate the **TV SETUP** menu.
2. Press the **DOWN ARROW** button to highlight **MANUAL SEARCH**.
3. Press the **RIGHT ARROW** button and the below will be shown. Select either **UP** or **down** and press the **RIGHT ARROW** button to search **up** or **down** the available frequencies for the next channel.



## Fine Tuning

The auto scan and manual scan will tune to the strongest signal, however, if the reception is not good you can try to fine tune the channel.

1. Press the **SETUP** button 3 times to activate the **TV SETUP** menu.
2. Press the **DOWN ARROW** button to highlight **FINE TUNE**.
3. Press the **RIGHT/LEFT ARROW** button to adjust the frequency and fine tune the channel.

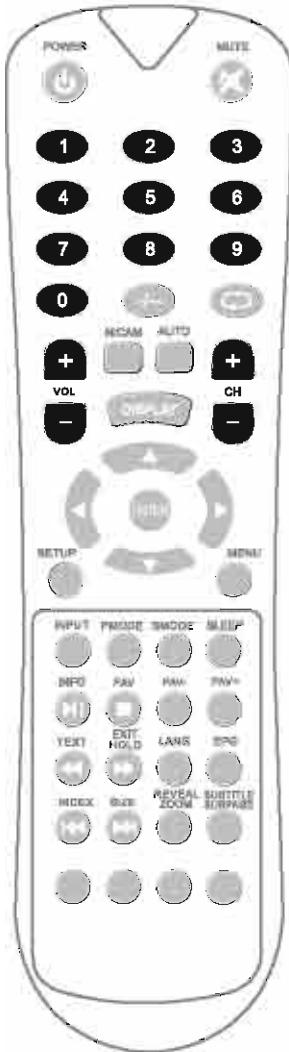

# Using the TV

## TV Controls


### Programme Selection

You can use the controls on either the TV or remote control to select channels.

Press the **CH+/-** buttons on the TV or remote control, or press a **NUMBER** button on the remote control to select a programme.

### Volume

Press the **VOL+/-** buttons on the TV or remote control to adjust the volume.

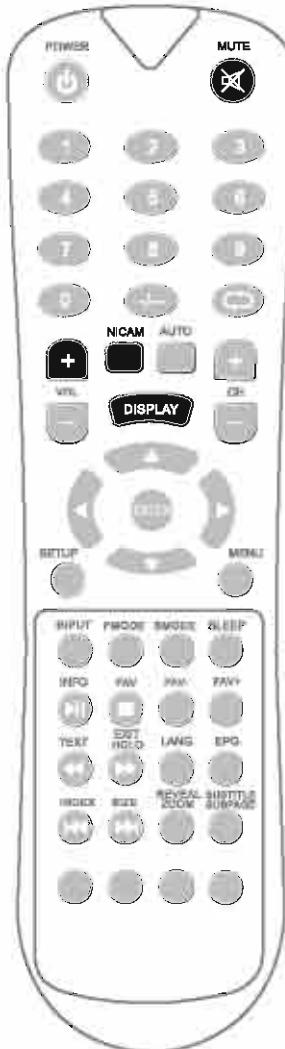

## Mute

1. Press the **MUTE** button on the remote control to mute the sound. The mute symbol  will be shown in the top left hand corner of the screen.
  2. Press the **MUTE** button again to restore the sound. The mute symbol will disappear from the screen.
- 



**NOTE:** Pressing the **VOL+** button will also restore the sound.


---

## Display

1. Press the **DISPLAY** button on the remote control. Information will appear on screen giving the user settings and channel information. It depends on the input selected..
2. Press the **DISPLAY** button again to remove the information from the screen.

## Mono/Stereo

1. Press the **AUDIO** button to switch between **MONO** or **STEREO** reception.

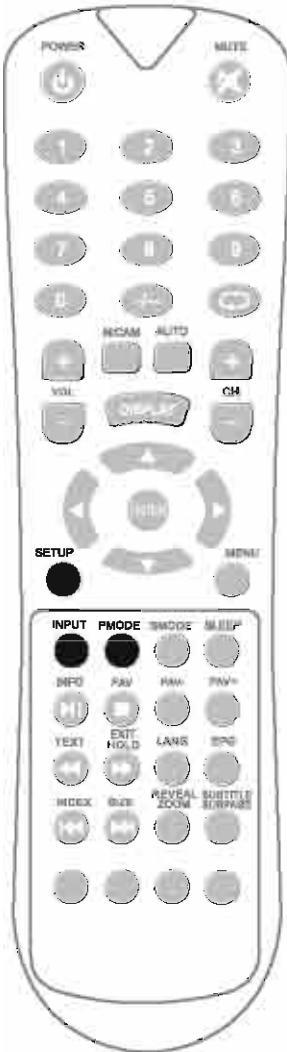

## Picture Preset

The TV has four preset conditions that alters all the options to give a different picture quality.



**NOTE:** The Picture Preset function is not available through navigation of the on screen menus.

Press the **PMODE** button repeatedly to scroll through and select one of the following options:


- **STANDARD** -Used for general viewing.
- **FRESH** - Used for brighter image with strong colouring.
- **PERSONAL** -Used defined settings.
- **MILD** -Used for a softer image with weaker colouring.

**FRESH, PERSONAL, STANDARD** and **MILD** will appear at the bottom of the screen.

## Input selection

Press the **INPUT** button repeatedly to scroll through and select one of the following input options:

- **TV** - RF Signal(TV Aerial)
- **SCART** - Signal from the SCART socket
- **AV** - Signal from AV sockets
- **PC-RGB** - Signal from PC-RGB socket
- **YPBPR** - Signal from YPBPR (Component)sockets
- **HDMI** - Signal from HDMI socket
- **DTV** - RF Signal(TV Aerial)

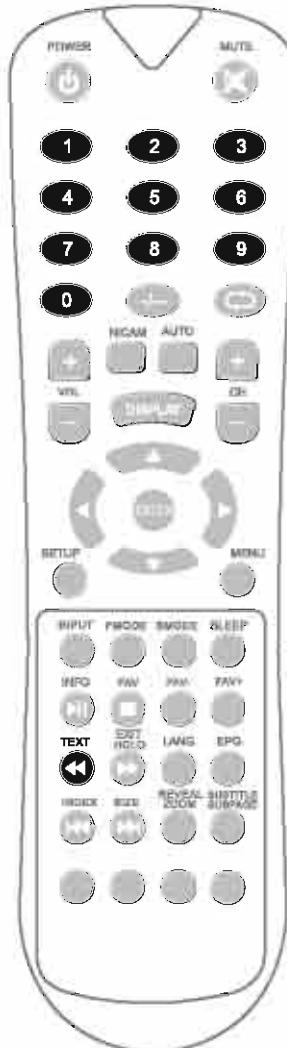

## Using Teletext

Teletext is an information system that displays text on your TV screen. Using the teletext control buttons you can view pages of information that are listed in the teletext index.



**NOTE:** No On-screen display is available in text mode. The contrast, brightness and colour can not be changed but the volume control is still available




**NOTE:** Make sure the TV channel you are watching transmits teletext.

### TEXT

1. Press the **TEXT** button to enter **TEXT** mode. The text page will appear, normally the index page.
2. Press the **TEXT** button again to view a page of text whilst watching a TV programme. The text will be superimposed over the TV programme.
3. Press the **TEXT** button a third time to return to the channel you were watching.

### To Select a Page of Text

1. Find the number of the page in the index and enter it by pressing the **NUMBER** buttons. The number of the page will appear in the top left hand corner of the screen. The page counter will search for your page. When it finds it, the page will be displayed.

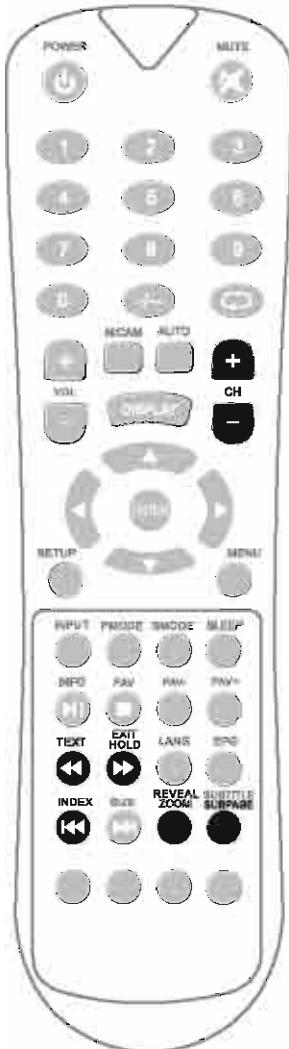

2. Press the **CH+** button to move to the next page of text.
3. Press the **CH-** button to move to the previous page of text.

## INDEX

Press the **INDEX** button to go to the index page.

## Page Stop

If the page of text you have selected contains sub-pages, these sub-pages will automatically be displayed in order with a delay to allow you to read the page.

1. Press the **HOLD** button to stop the move to the next sub-page. The hold symbol will appear in the top left hand corner of the screen.
2. Press the **HOLD** button again to continue cycling through the sub-pages.


## To Reveal Information

1. Press the **REVEAL** button to reveal concealed information (quiz answers etc.).
2. Press the **REVEAL** button again to conceal the information.

## SUBPAGE

If the page of text you are viewing contains sub-pages, the number of the sub-page you are on and the total number of sub-pages is displayed on the right of the screen.

To select a sub-page, press the **SUBPAGE** button. S.... will appear in the top left hand corner of the screen.

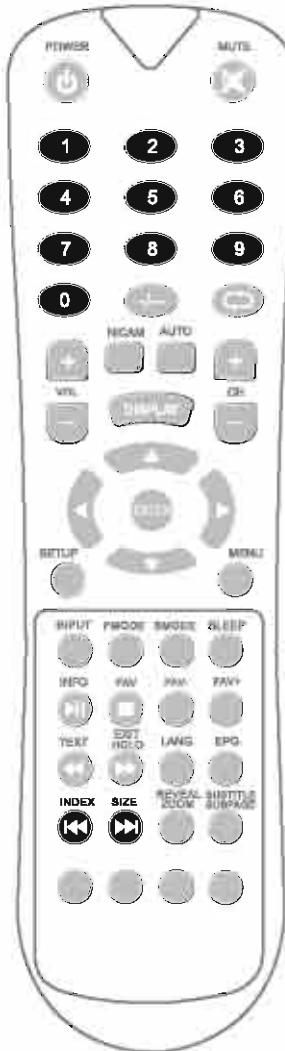

Enter the number of the sub-page, using the **NUMBER** buttons in the format 0001 for sub-page 1. The teletext will search for the sub-page.


## Fast Text

At the bottom of the teletext screen is a row of subject headings in red, green, yellow and blue.

1. Press one of the coloured fast text buttons on the remote control to display that page.
2. Press the **INDEX** button to return to the main page.


## SIZE

1. Press the **SIZE** button to enlarge the text shown on the teletext screen. Only one half of the page is shown.
2. Press the **SIZE** button again to view the second half of the page.
3. Press the **SIZE** button a third time to return to normal size text page.

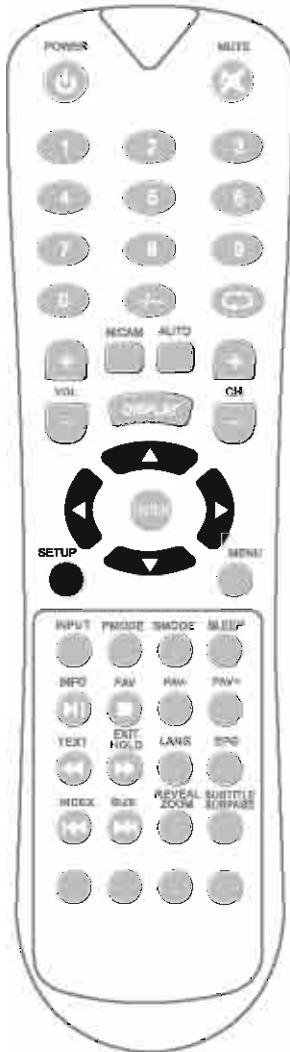

## On-screen Menus

1. Press the **SETUP** button to cycle through the On-screen menus.
2. Press the **UP/DOWN ARROW** buttons to highlight one of the available options.
3. Press the **LEFT/RIGHT ARROW** buttons to adjust the selected option.
4. When finished, press the **SETUP** button repeatedly until the menu disappears or press the **MENU** button to exit the main menu .

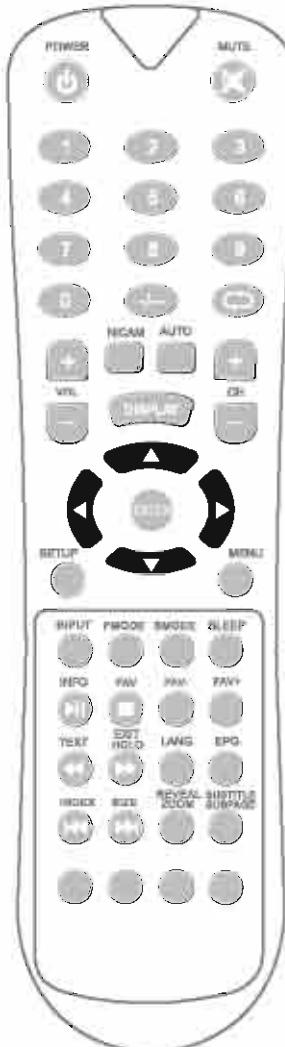

## VIDEO SETUP

Your TV has four settings which allow you to control the picture quality:



Press the **UP/DOWN ARROW** buttons to select one of the available options.

### BRIGHTNESS


Use the **LEFT/RIGHT ARROW** buttons to increase or decrease the brightness of the picture.

### CONTRAST

Use the **LEFT/RIGHT ARROW** buttons to increase or decrease the contrast of the picture.

### COLOUR

Use the **LEFT/RIGHT ARROW** buttons to increase or decrease the colour saturation of the picture.

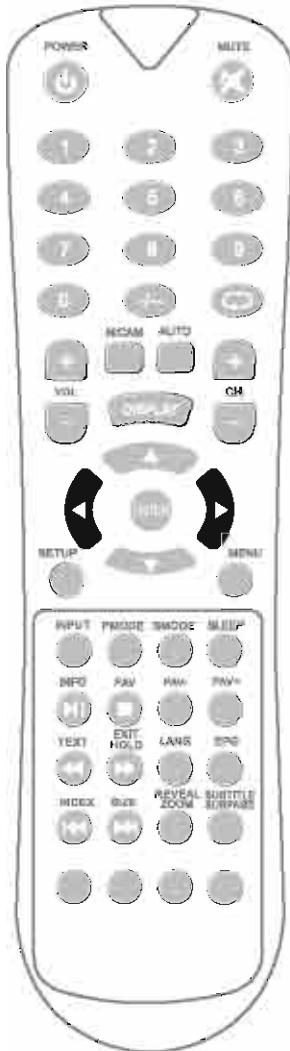


## SHARPNESS

Use the **LEFT/RIGHT ARROW** buttons to increase or decrease the sharpness of the picture.

## AUDIO SETUP

Your TV has several settings which allow you to control the audio quality.

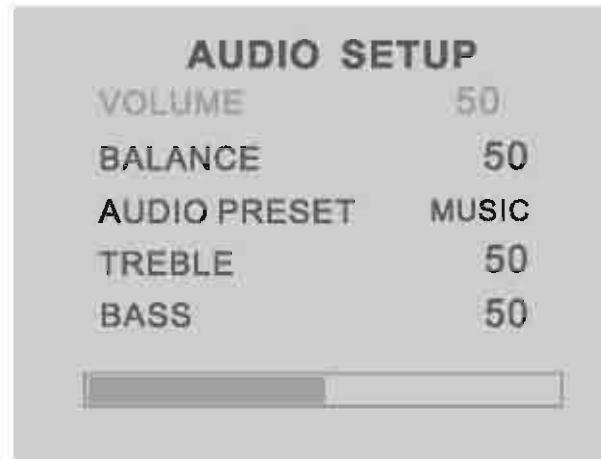


### VOLUME

Allows you to increase or decrease the volume.

### BALANCE

Allows you to adjust the volume balance between left and right audio channels.

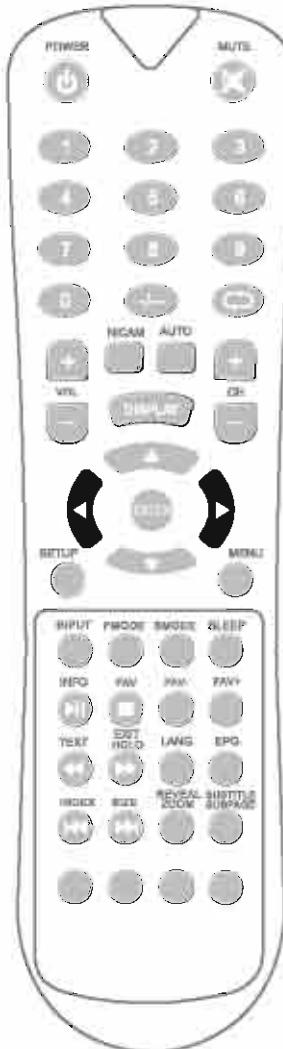

## AUDIO PRESET

Use the **LEFT/RIGHT ARROW** buttons to select one of the following settings:

**PERSONAL** -User defined preferences.

**VOICE** -High treble, low bass for normal TV programming.

**MUSIC** -High treble, high bass for music based programming.

**THEATRE** -Low treble, high bass for live performances.

---



**NOTE:** It is also possible to cycle through the audio presets by pressing the **S MODE** button on the remote.

---

## TREBLE

The treble setting adjusts the high frequency section of sound.

---



**NOTE:** The audio preset must be set to **PERSONAL** to adjust this option.

---

## BASS


The bass setting adjusts the low frequency section of sound.

---




**NOTE:** The audio preset must be set to **PERSONAL** to adjust this option.

---

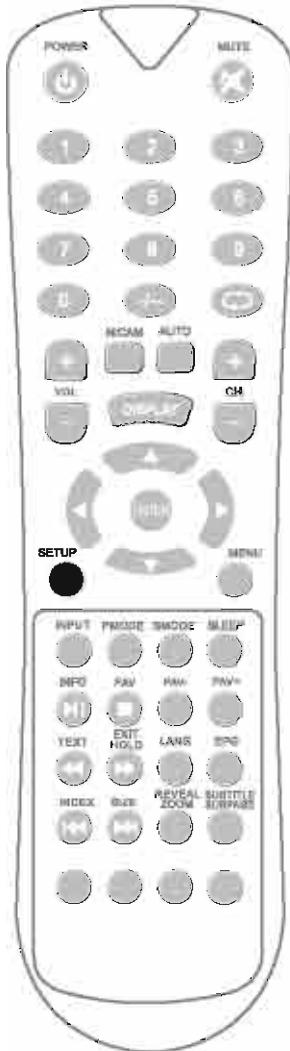

## TV SETUP

The TV menu can be used to manually tune a station or to fine tune existing stations.

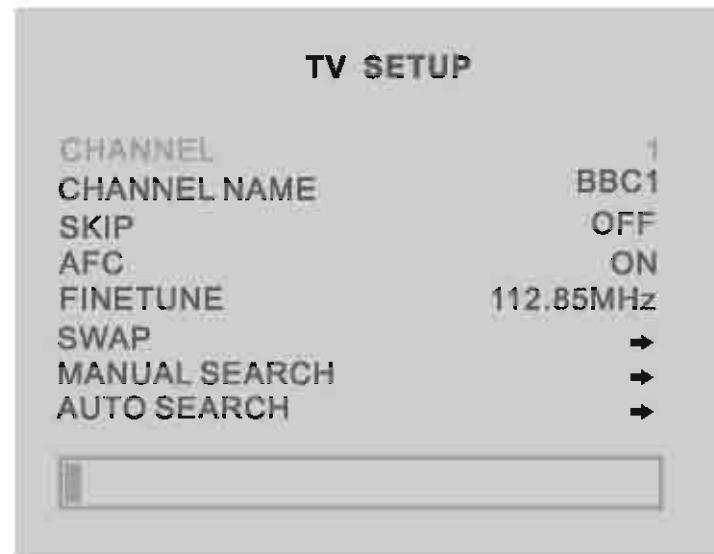


### CHANNEL

Select a particular channel to apply any changes to, the selected channel will be shown in the background.

### CHANNEL NAME

Use this option to adjust the channel name shown when changing channels.

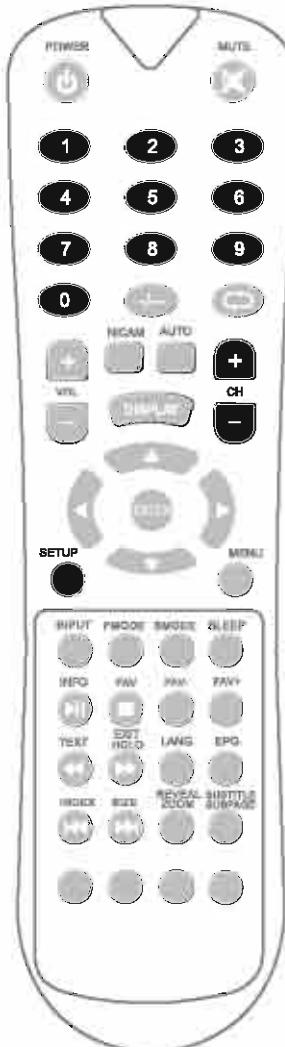

## SKIP

If you set this option to **ON** the channel will not be available using the **CH+/-** buttons however can still be accessed when using the **NUMBER** buttons..

## AFC

To reach the exact frequency, Set the **AFC**(Auto Frequency Control) option to **ON**.

## FINETUNE

Allows you to fine tune the channel to obtain the best picture quality.

## SWAP


Using the **SWAP** option, channel positions can be swapped to obtain the correct order

## MANUAL SEARCH

Allows you to preset channels manually, in the program order of your choice  
(for details of manual search please see page 18 )

## AUTO SEARCH

This option will automatically search for analogue TV transmissions and attempt to store them in the correct order .During searching, you can press **SETUP** to stop searching, and when finished the TV will change to **DTV**(Digital TV) mode. If no DTV channels are stored it will ask you to confirm that you wish to search for DTV channels

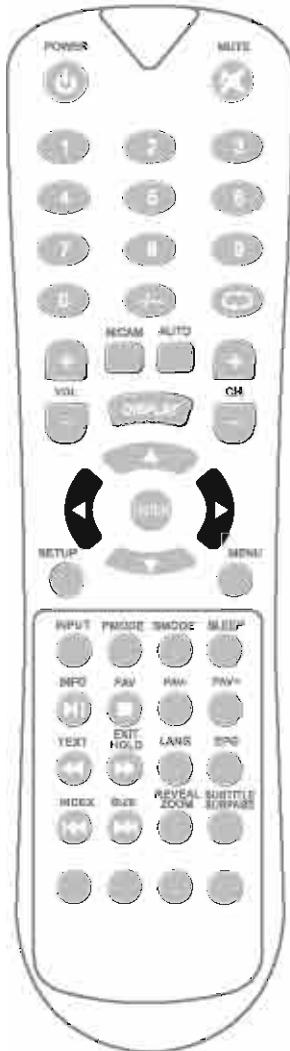

## GENERAL SETUP

### GENERAL SETUP

|              |     |
|--------------|-----|
| BLUE SCREEN  | ON  |
| NOISE REDUCE | OFF |
| INPUT SOURCE | TV  |
| RESET        | ➡   |

### BLUE SCREEN


Activating the Blue Screen will ensure a clear, solid, blue screen is shown when no signal is being received.

Press the **LEFT/RIGHT ARROW** button to turn the **BLUE SCREEN** on or off.

### NOISE REDUCE

If the signal you receive is has a snowy effect, This feature may reduce the signal noise and improve clarity of the picture.

Press the **LEFT/RIGHT ARROW** buttons to set **NOISE REDUCE** to **OFF/LOW/MID / HIGH**.

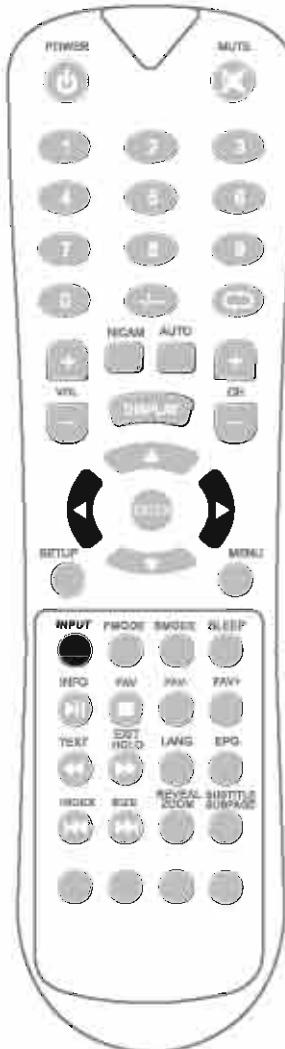

## INPUT SOURCE


Press the **LEFT/RIGHT ARROW** buttons to select the input you want to display.

- |        |   |                                     |
|--------|---|-------------------------------------|
| TV     | - | Analogue TV Signal(TV Aerial)       |
| SCART  | - | Signal from the SCART socket        |
| AV     | - | Signal from AV sockets              |
| PC-RGB | - | Signal from PC-RGB socket           |
| YPBPR  | - | Signal from YPBPR(component) socket |
| HDMI   | - | Signal from HDMI socket             |
| DTV    | - | Digital TV Signal(TV Aerial)        |

**NOTE:** The input source can also be cycled by pressing the **INPUT** button repeatedly on the remote control.


## RESET


Press the **RIGHT ARROW** button to restore all settings to their factory default value.

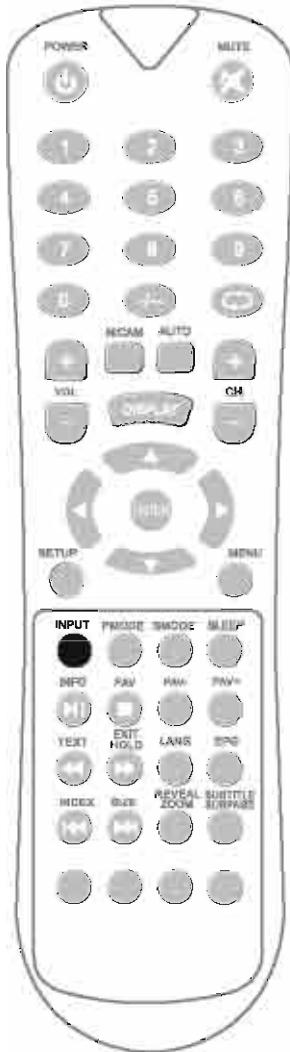

## Digital TV (DTV)

Turn on your TV set and select **DTV** input by pressing the **INPUT** key on the remote repeatedly until **DTV** is shown on the screen

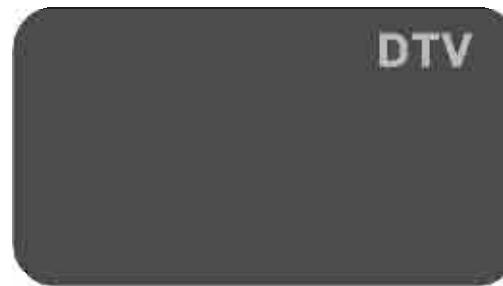

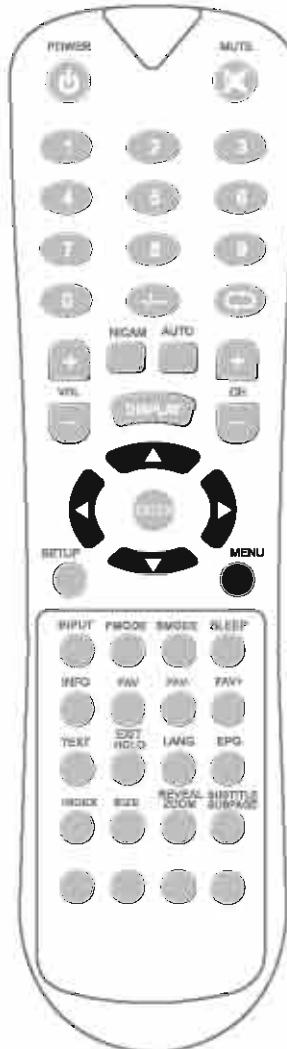


## Channel Search

During the First time installation process you will be given the opportunity to search for Digital channels after searching for the analogue channels. In the unlikely event that this does not happen or if you need to re-scan in case new channels have been added, the following procedure can be used.

### Auto Scan

- 1) Press the **MENU** button to enter the main menu of the DTV.
- 2) Press the **UP /DOWN ARROW** button to choose **Channel Search**.
- 3) Press the **ENTER** button to enter the sub-menu.
- 4) Highlight the **Search Type** and press **LEFT/RIGHTARROW** button to select **Auto scan**.
- 5) Press the **ENTER** button to start searching.
- 6) Press **MENU** button to cancel searching.





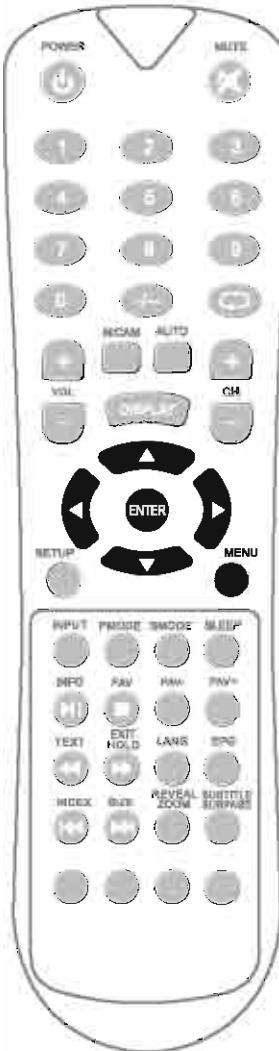


## Manual Scan

Recommended for advanced users only. If you know the UHF channel number that a set of digital channels are located at, the manual search can be used to add only these channels.

- 1)Press the **MENU** button to enter the main **MENU** of the **DTV**.
- 2)Press the **UP/DOWN ARROW** button to select **Channel Search**
- 3)Press the **ENTER** button to enter the sub-menu
- 4)Highlight the **Search Type** and press **LEFT/RIGHT ARROW** button to select **Manual scan**. Press **DOWN ARROW** button to select **Channel No** section, and enter desired Channel Number.
- 5)Press **DOWN/UP ARROW** button to select "Channel No" section, and enter desired Channel Number.
- 6)Press the **ENTER** button to start searching.
- 7)Press **MENU** button to cancel searching.

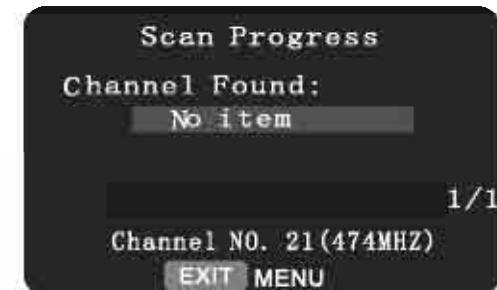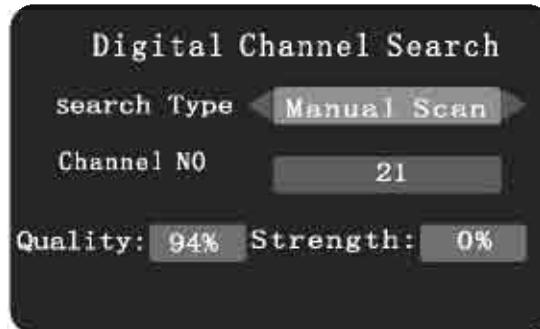

**NOTE:**  
When the search is finished, the first channel in the channel list is displayed you can now watch digital terrestrial television.

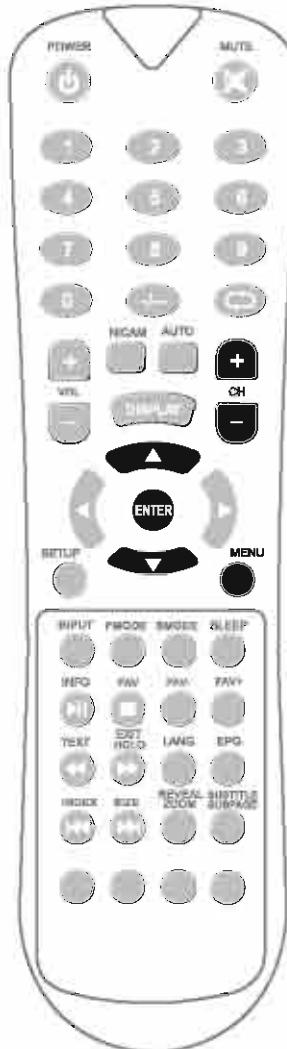

## Changing Channels

There are five ways of channel selection as follows:

### 1) Stepping through the channel list:

Press the **CH+** button to browse up and the **CH-** button to browse down the available channels.

### 2) Selection by number:

Enter the complete channel number directly using the numerical buttons to select desired channel.


### 3) Selection by on-screen channel list:

You can also select the desired channel directly from on-screen channel list. This is displayed using the DTV main menu. Please See **CHANNEL LIST** later in this manual for the further details.

### 4) Selection by mini channel list:

It is also possible to change the channel using a mini channel list that is accessible by pressing the **ENTER** button with no other on screen display shown. Use the **UP/DOWN ARROW** keys to navigate and press the **ENTER** button to display the selected channel. To exit this mini channel list press the **MENU** button.



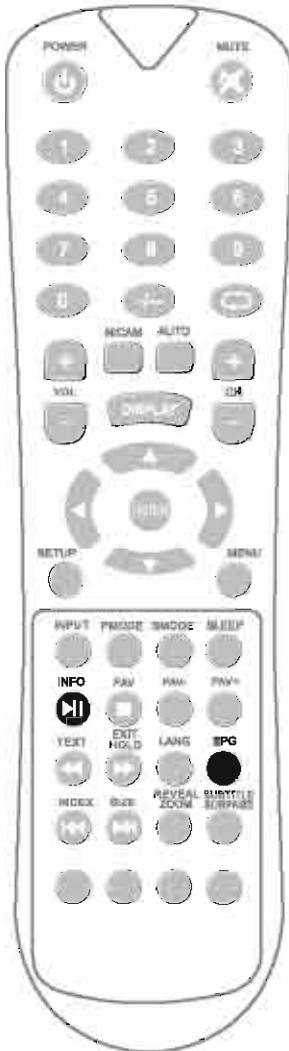


## Changing Channels

### 5) Selection by EPG(Electronic Programme Guide):

You can also select the desired channel directly from Channel Schedule. This is displayed by pressing the **EPG** button on the remote control. The **EPG** provides the users with a brief description of the programme on the currently selected channel and lists the current channels. Please See **Accessing the EPG** in this manual for further detail.

After changing channels either by entering the number directly or by stepping through the channel list, the I-Bar will be shown. This will display the current and the next program for the selected channels. The current signal strength will also be shown on the I-Bar. The I-Bar can also be displayed by pressing the **INFO** button with on other on screen display.




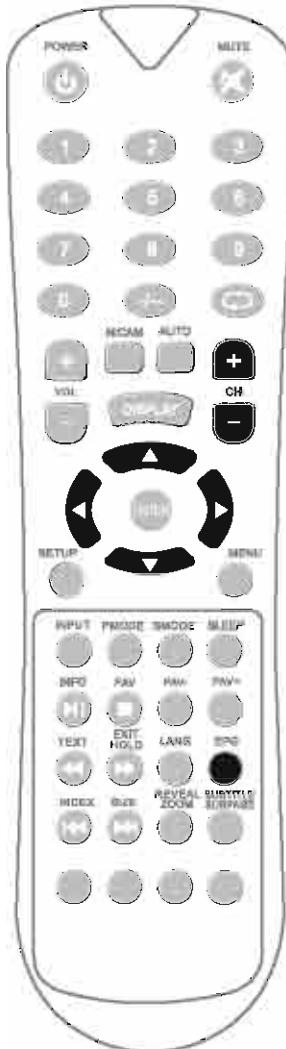

## Accessing the EPG (Electronic Programme Guide )

From the **EPG** it is possible to check the program information for the next 7 days (if the information is available from the broadcaster).) and also set reminders to automatically change channel for a specific event using the following instructions.


- 1) Press the **EPG** button to display the **EPG**.
- 2) Press **CH +** or **CH -** button to change the channel that the information listed is shown for.
- 3 )Press **LEFT/RIGHT ARROW** button to change the day that the information is shown for.
- 4)Press **UP /DOWN ARROW** button to highlight the desired program. If this program is being currently being shown, press the **ENTER** button and the **EPG** will close and this programme will be shown.

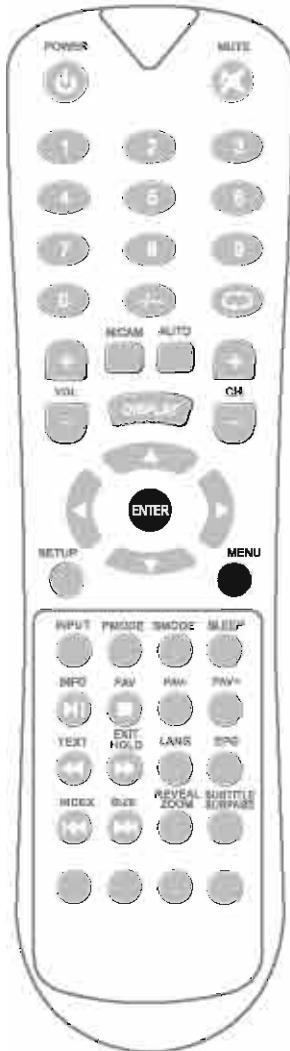

## Accessing the EPG (Electronic Programme Guide)

- 5) If the program is in the future, press the **ENTER** button to add the reminder, the  will appear alongside the selected program. When the reminder program is about to start, a reminder window will appear.
- 6) Press **MENU** button to quit the channel schedule.



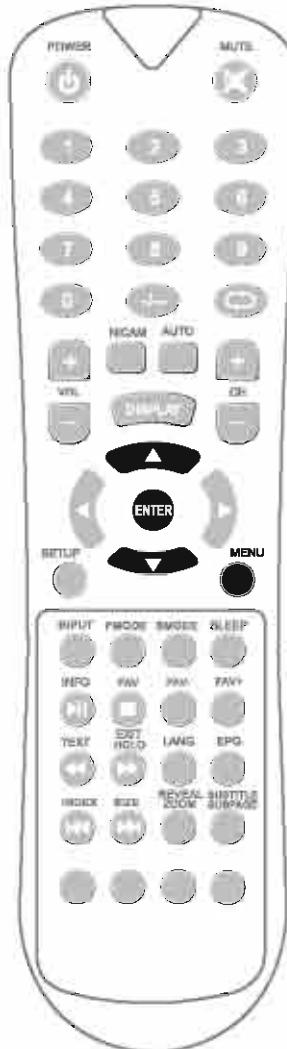


## Channels List

The Channel List will display a list of the digital channels that are stored on the TV. From the Channel List you can preview and listen to a selected channel, delete them from the list, and lock a channel so that a PIN number is required to view the channel.

- 1)Press **MENU** button to enter the main menu.
- 2)Press **UP/DOWN ARROW** button to highlight Channel List , and press **ENTER** button to enter Channel List menu.
- 3)Press **UP/DOWN ARROW** button to highlight a channel.
- 4)Press **ENTER** button to preview the selected channel.
- 5)Press **MENU** button to exit the channel list menu and view the channel full screen.



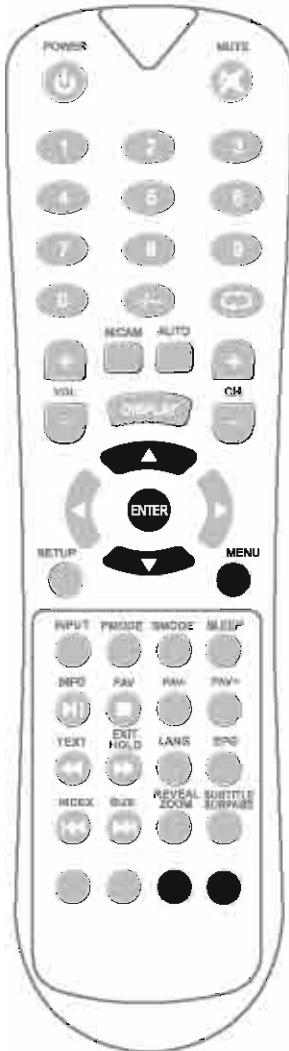

## Lock/Unlock a channel:

1) Enter the channel list menu, press **UP/DOWN ARROW** button to select the channel to be locked/unlocked.

2) Press **Blue** button, you are asked to enter **pin code**



3) Enter a correct pin code using the numeric buttons, press **ENTER** button to confirm. (The default pin code is 888888).

4) Then a lock symbol  displays alongside the selected channel.


5) Repeat step ①②③ to remove the lock symbol.

6) Press **DTV MENU** button to exit from the **channel list**.

## Delete a channel:

1) Enter the channel list menu, press **UP/DOWN ARROW** button to select a channel.

2) Press **Yellow** button to delete the selected channel.

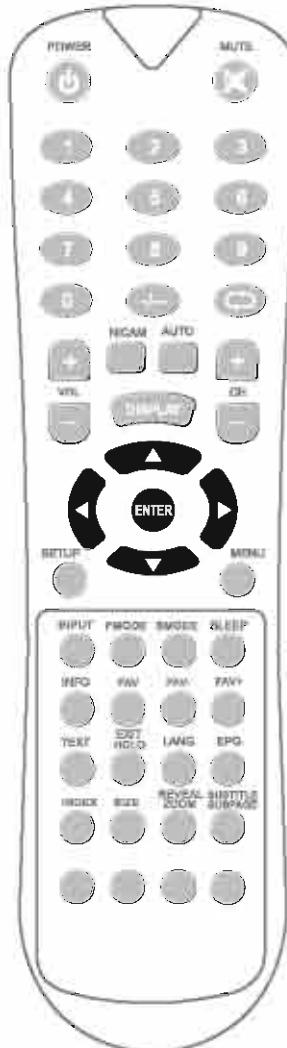

## System Setting

### First Time Installation

This menu allows you to delete all existing channels in the memory

1) Enter the system setting menu, press UP/DOWN ARROW button to highlight the **First Time Installation**

2 Press **ENTER** button to confirm, a confirmation window appears.

3) Press **LEFT/RIGHT ARROW** button to highlight **Confirm** icon, press **ENTER** button to start first time installation. The instructions for automatic channel search can then be followed


4) Highlight the **EXIT** icon, press **ENTER** button to cancel the first time installation.



### System Info :

1) Enter the **SYSTEM SETTING** menu, press **UP/DOWN ARROW** button to highlight the **System Info** option.


2) Press **ENTER** button to display the system information. You can view the software version of the DTV.

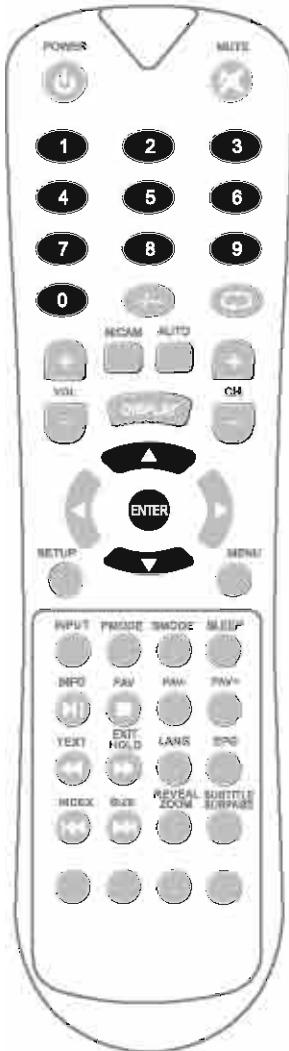


## Change Pin Code

This menu allows you to change pin code.

- 1) Enter the **SYSTEM SETTING** menu, press **UP/DOWN ARROW** button to highlight the **Change Pin Code** option.
- 2) Press **ENTER** button.
- 3) Enter the **old pin code** using the numeric buttons (Default pin code is 888888).
- 4) Press **UP/DOWN ARROW** button to select **New Pin Code** and enter new pin code using the numeric buttons (0~9).
- 5) Press **UP/DOWN ARROW** button to select **Enter Again**, and enter the new pin code again using the numeric buttons (0~9).
- 6) Press **ENTER** button to confirm the changed pin code.

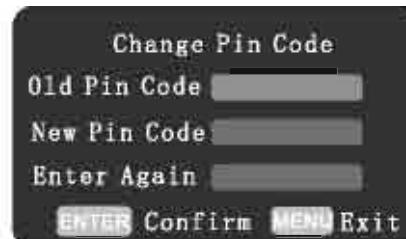

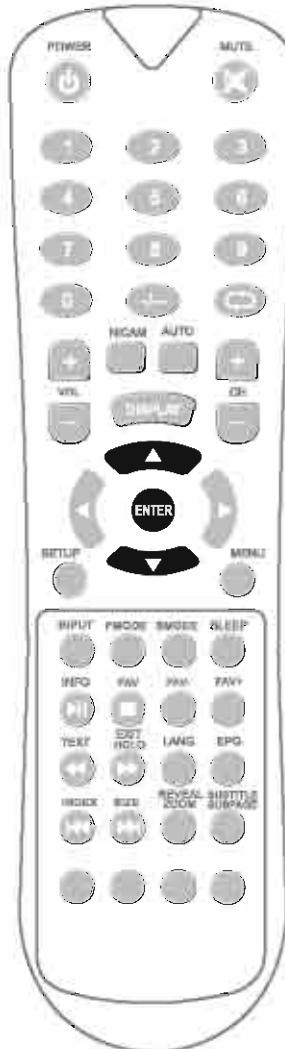


## Software Update

This menu allows users to update the software version  
( If a software update is being broadcast).

- 1) Enter the system setting menu, press **UP/DOWN ARROW** button to highlight the **Software Update** option.
- 2) Press **ENTER** button.



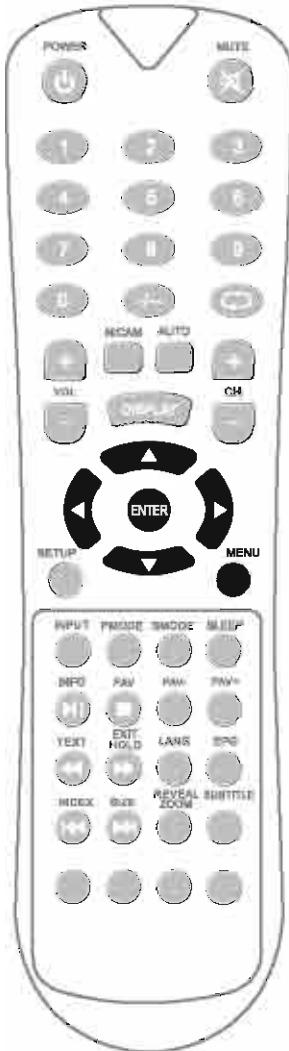

## Auto Mode:

The unit can be set to automatically search at a specific time every day. If this option is used, please ensure that it is disabled when watching TV at the time of the update otherwise viewing will be interrupted

1 ) Enter the software update menu, press **UP/DOWN ARROW** to highlight **Auto Mode**


2)Press **ENTER** button to enter **Auto Mode** menu.



3) Press **LEFT/RIGHT ARROW** button to set the Status to **ON**.


4 )Press **UP/DOWN ARROW** button to select Start Time . Use the numeric button to enter the time in.


5)Press **ENTER** button to save the setting and press **MENU** to exit. The unit will then search for an upgrade at the specified time each day.

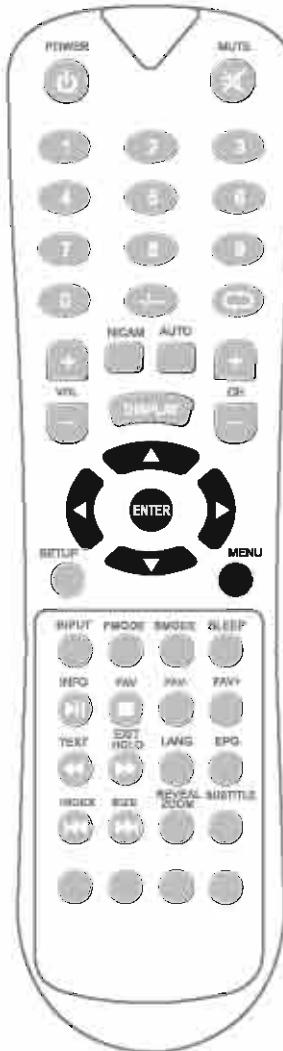

## Manual Mode:

- 1) Enter the **software update** menu, press **UP/DOWN ARROW** button to highlight **Manual Mode**.
- 2) Press **ENTER** button to enter **Manual Mode**.
- 3) Press **LEFT/RIGHT ARROW** button to highlight **Scan**.
- 4) Press **ENTER** button to start searching for an update. If an update is available the unit will automatically download this update and install into the unit.
- 5) Press **MENU** button to quit.

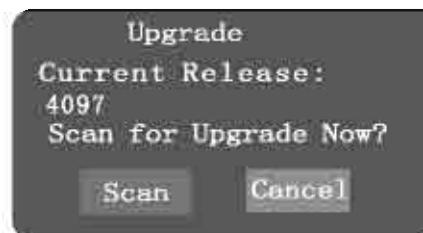

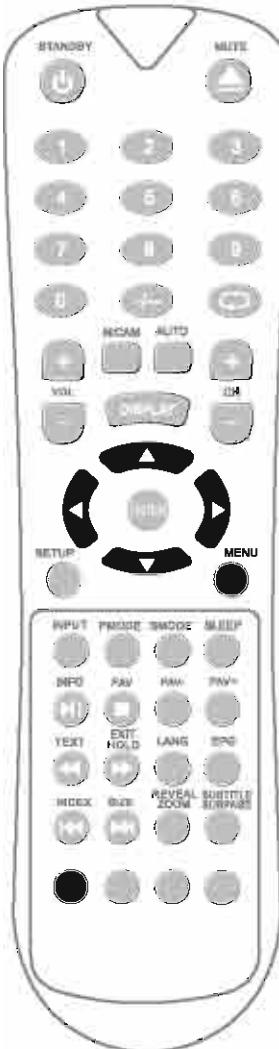

## Favourite List

The favourite list allows you to store a list of your favourite channels. So that you can access them quickly and easily. In this system, there are five favourite lists available, each family member can have their own favourite list.

Adding channels to Favourite list:


- 1) Press the **MENU** button to display the main menu.
- 2) Press the **UP/DOWN ARROW** button to select **Favourite List**



Press the **ENTER** button to enter the **favourite list** menu

- 3) Press **Red** button to cycle through the available favourite lists. Press the **UP/DOWN ARROW** button to highlight desired channel in the selected favourite list.
- 4) Press the **ENTER** button to add the selected channel to the favourite list. The favourite symbol (add symbol) will appear next to the channel name to indicate that it has been stored to the favourite list.
- 5) Press the **MENU** button to exit.



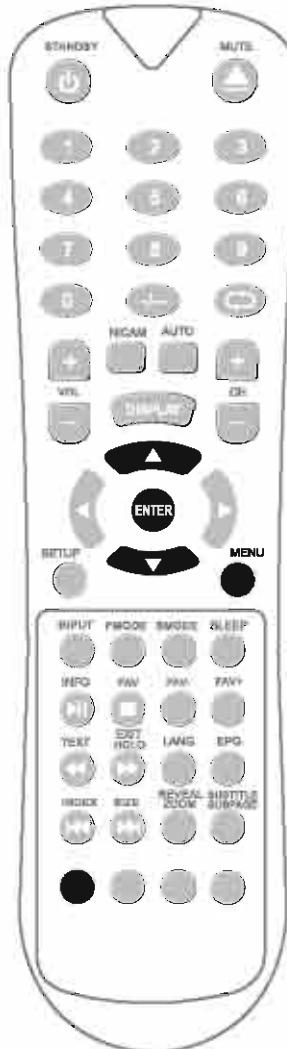

## Remove favourite channels from favourite list:


- 1)In the favourite list menu,press **Red** cycle through the favourite lists until the require list is shown.
- 2)Press the **UP/DOWN ARROW** button to highlight the channel to be removed from the favourite list.
- 3)Press the **ENTER** button to remove the channel from the favourite list
- 4)Press the **MENU** button to exit.

## Accessing the favorite channels:

- 1)Press the cycle through the available favourite lists button to display the favourite list selection. Press **Red** button to cycle through the available favourite lists.



- 2)Press **UP/DOWN ARROW** button to select the favourite channel. Press the **ENTER** button, to view the favourite channel on full screen.
- 3)Press the **MENU** button to quit.

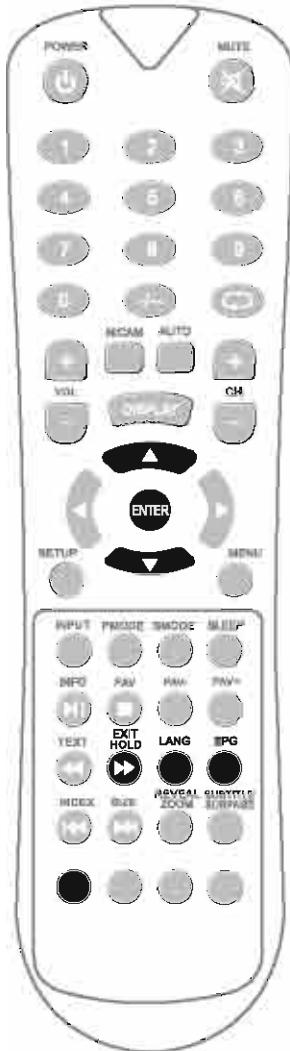

## Navigating channels using FAV + or FAV - buttons:

- 1)Press the **FAV** button to display favourite list selection screen.
- 2)Press the **RED** button repeatedly until the required favourite list is shown
- 3)Use **UP/DOWN ARROW** button to select a channel from the favourite list and press **ENTER**.
- 4)The **FAV +** and **FAV-** buttons will now scroll up down through the channels in the selected Favourite list
- 5)The currently selected Favourite list will be shown on the left hand side of the I-Bar.



## Troubleshooting

| Problem                              | Possible Cause   |
|--------------------------------------|--|
| The TV does not work                 | Make sure that the power supply is connected and that the mains supply is switched on.   |
| Poor picture                         | Is the aerial plugged in?<br>Try changing the direction of the outdoor aerial. High buildings and hills can cause ghost pictures or double images.<br>Check the channel is tuned properly.<br>Try adjusting the picture settings; brightness, colour, sharpness.<br>Make sure the TV is not located close to electrical appliances that may emit radio frequency interference. |
| No TV picture                        | Is the aerial plugged in properly?<br>Is the aerial lead damaged?<br>Are all the plugs in the aerial lead fitted correctly?<br>Is the TV in the correct input signal mode?   |
| No sound                             | Is the sound muted? Press the Mute button.<br>Is the volume turned down?   |
| No colour                            | Adjust the colour setting.<br>Check the programme is broadcast in colour.<br>Check the channel is tuned properly.  |
| No response from the remote control. | Is there an obstruction between the remote control and the sensor on the TV?<br>Try changing the batteries.<br>Avoid direct sunlight on the remote control sensor.   |



**WARNING: IF THIS DOES NOT WORK, CONTACT EITHER YOUR SUPPLIER OR A QUALIFIED TV REPAIR TECHNICIAN. NEVER ATTEMPT TO REPAIR THE TV YOURSELF.**

# Care and Maintenance

## Care of the screen

Clean the screen with a slightly damp, soft cloth.

Do not use abrasive solvents or cleaners as they may damage the TV screen coating layer.

Always unplug the TV from the mains while cleaning.

## How Do I Dispose of this Product?



When your TV has reached the end of its life, contact your local council regarding available recycling or disposal options.

Do not dispose of electrical products in the general waste.

Please ensure that used batteries are disposed of safely.

## Technical Specification

|                                    |                                       |
|------------------------------------|---------------------------------------|
| Power Supply                       | AC 230V 50Hz                          |
| Input                              | 12V DC                                |
| Output                             | 5A                                    |
| Fuse rating                        | 2×AAA(supplied)                       |
| Remote Control Batteries           | 100                                   |
| Number of preset programmes        | 75 ohm(balanced)                      |
| RF Aerial input                    | NICAM Stereo/Mono                     |
| Audio output                       |                                       |
| Dimension (width x height x depth) | 52.5cm x 45cm x 20cm                  |
| Weight                             | Gross weight:8.14kg Net weight:6.60kg |
| Maximum Power Consumption          | ≤ 50W                                 |
| Standby Power Consumption          | ≤ 2.5W                                |
|                                    |                                       |
| LCD panel                          | 19" TFT-LCD                           |
| Type                               | 16.2M                                 |
| Display Colour                     | LVDS type                             |
| Interface                          | 75/75/70/65                           |
| Viewing Angle                      |                                       |

## Guarantee

This product is guaranteed for 12 months from the date of original purchase. If any defect arises due to faulty materials or workmanship, the unit will either be replaced, a refund given or repaired free of charge (where possible) during this period by the retailer from whom you purchased the unit.

The guarantee is subject to the following provisions:

- The guarantee is only valid within the boundaries of the country of purchase.
- The product must be correctly assembled and operated in accordance with the instructions contained in this booklet.
- The guarantee does not cover accidental damage, misuse, or consumable items.
- The guarantee will be rendered invalid if the product is resold or has been damaged by inexpert repair.
- The manufacturer disclaims any liability for incidental or consequential damages.

This guarantee is in addition to and does not diminish your statutory, or legal rights.

# Goodmans

