 


Goodmans

GPS190

Portable CD Radio player with iPhone/iPod docking

User Guide

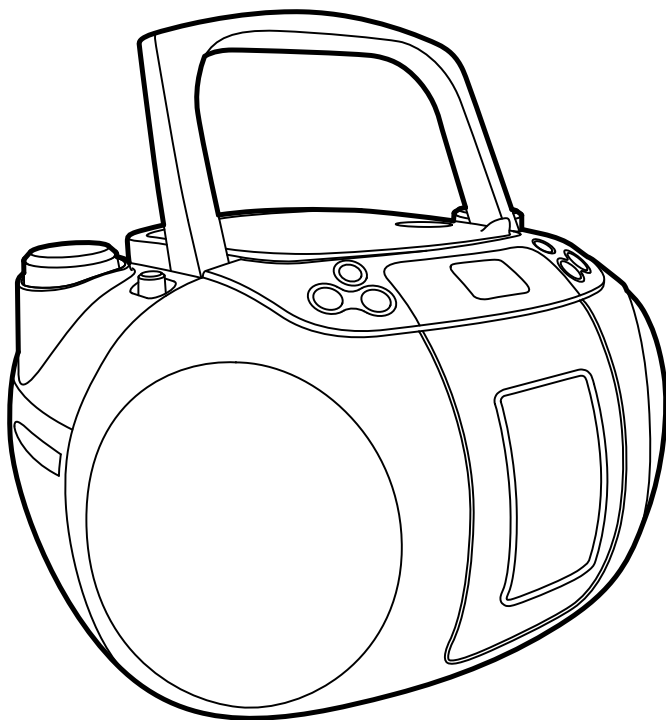

IMPORTANT: Please read all instructions carefully before use and keep for future reference

Introduction

Thank you for choosing this Goodmans Portable CD Radio Player with iPhone/iPod Docking.

 
You can listen to your favourite radio stations, CDs and iPhone/iPod.

For the purpose of ease of use, the Goodmans Portable CD Radio Player with iPhone/iPod Docking will be referred to as the Portable System.



Safety is important

Use of any electrical equipment should be undertaken with care. Please read the safety section on page 15 and 16 before using your portable System. This appliance is for household use only.

What's in the box

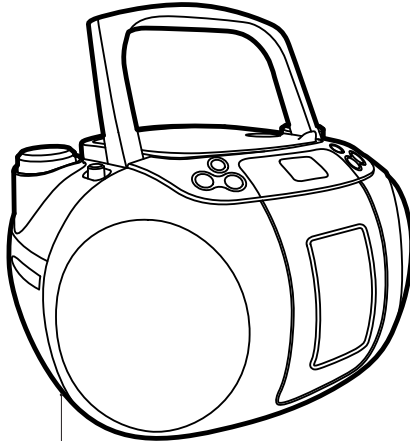


Portable system

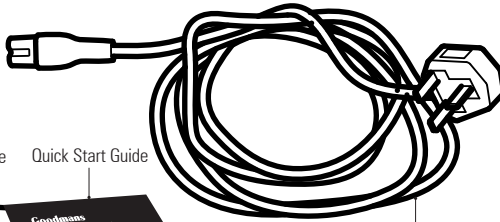  

Mains power cable

This User Guide

 Quick Start Guide

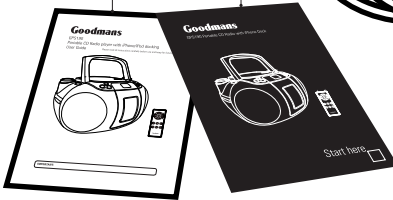

Contents

01 Your Portable System 4	05 Help and Advice 12
02 Getting Started 6	06 Specification/Guarantee 14
03 Daily use 8	07 Warnings 15
04 iPod/iPhone 10	08 Electrical Information 16

Top

AERIAL

CD COMPARTMENT

VOLUME

Up and down

TUNING

Select FM Stations

FUNCTION SELECTORSwitches between Aux,
FM, iPhone & CD**REPEAT**Repeats particular
tracks or CD
Continuously**PROG**Used to program and
preview programmes
tracks**PLAY/PAUSE****REVERSE SKIP**

Used to skip backwards

STOP**REMOTE SENSOR****FORWARD SKIP**

Used to skip forwards

LCD

 
IPOD/IPHONE DOCK DOOR

Rear

AUX INPlay music from your
personal audio player**MAINS POWER
SWITCH****MAINS SUPPLY
SOCKET**

BATTERY COMPARTMENT COVER

REMOTE CONTROL

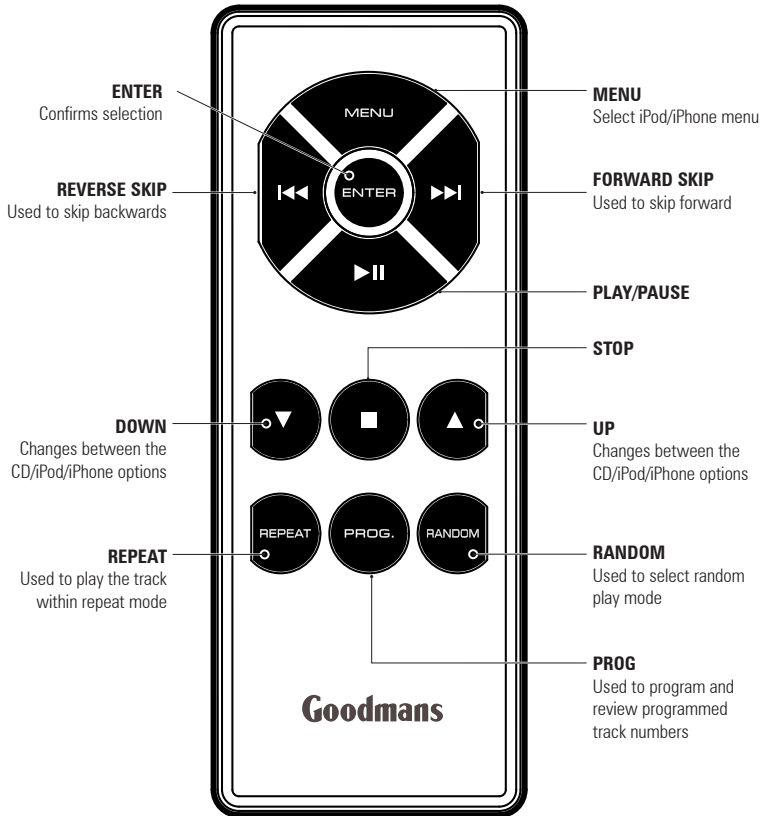


02 Getting started

1

AC Power Connection

 Plug the power cable into the AC input socket at the rear of the portable system.

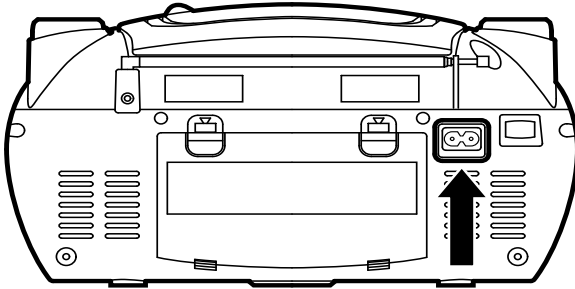

2

AC Power Connection

Connect the mains plug to the power socket and turn the power on.



 
3

Using the Remote Control

Open the battery cover of the Remote Control and insert the battery (supplied) so that the '-' '+' mark on the battery match the '-' '+' mark inside the remote control. Replace the battery cover.

To use the Remote Control, simply direct it towards the front of the Portable System and press the desired buttons.

DON'T FORGET! When replacing the batteries make sure that you use the same size and type.

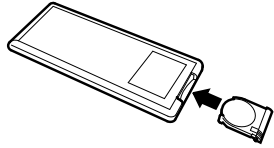

4

Using the Portable System with Batteries

Remove the battery compartment cover from the portable system and insert eight D size batteries (not supplied) following the polarity diagram, replace the battery compartment cover.

