

LED CLOCK RADIO



MODEL : GCR01
PLL FM ALARM CLOCK RADIO

USER MANUAL



Goodmans



TABLE OF CONTENTS

LOCATION OF CONTROLS

UNIT POWER SUPPLY

CLOCK SETTING

ALARM 1 SETTING

ALARM 2 SETTING

SNOOZE FUNCTION

SLEEP FUNCTION

LISTENING TO THE RADIO

PRESET TUNING

MEMORY CALL

TROUBLESHOOTING

TECHNICAL SPECIFICATIONS

CUSTOMER SUPPORT

LOCATION OF CONTROLS



- A TIME SET / PRESET**
Press to set time or to listen to preset stations.

- B MEM BUTTON**
save the current frequency.

- C HOUR / VOL- BUTTON**
Press to set the Hour/to lower the volume.

- D MIN / VOL+ BUTTON**
Press to set the minute/to increase the volume.

- E SLEEP BUTTON**
Press to select the time before the unit automatically turns OFF.

- F AL-1 / PREV BUTTON**
Press to activate Alarm 1/ Lower frequency if listening to the radio.

- G AL-2 / NEXT BUTTON**
Press to activate Alarm 2/ to increase the frequency/ to select the next selection.

 
 
- H AL OFF / AL SET BUTTON**
Press to deactivate alarms/ to set alarm.

- I FUNCTION BUTTON**
Press to choose between functions.

- J SNOOZE BUTTON**
Press down on unit to activate Snooze Mode.

- K AC Cord**
Hardwired Cable.

- L SPEAKER**

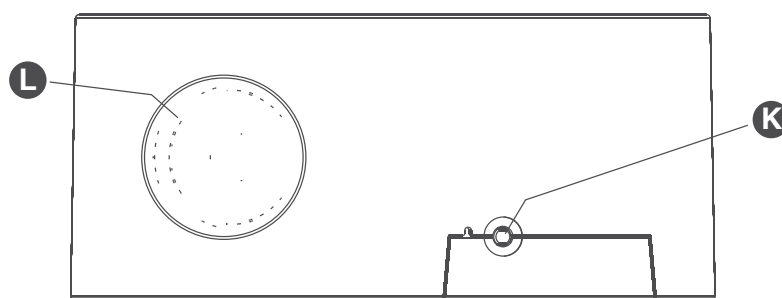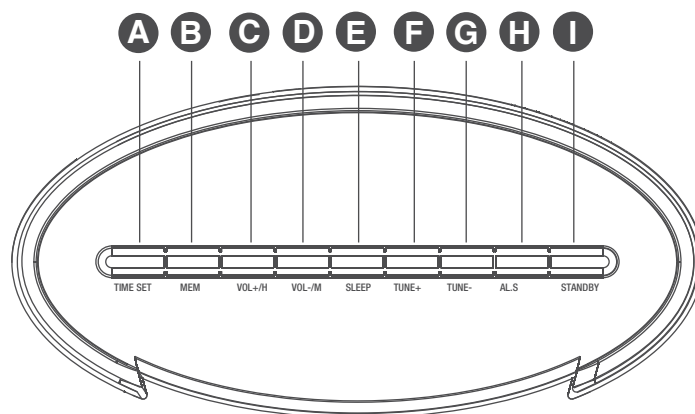

UNIT POWER SUPPLY



Unit power supply (mains 230V/50Hz)

Connect the power cable plug to the (230V) wall outlet.


Warning:

- Before using the unit, check that the local mains supply is compatible with the unit 230V (50Hz).
- Do not plug or unplug the power cable when your hands wet.
- When planning not to use this unit for long periods of time (i.e., Vacation etc.) disconnect the plug from the wall outlet.
- When disconnecting the power cord from the wall outlet, grasp the plug; do not pull the cord in order to avoid shock risks caused by the damaged cable.

1. CLOCK SETTING

In standby mode

1. To set the clock, Press and hold TIME SET/PRESET button **A** to make the time begin to flash
2. Press HOUR/VOL- BUTTON **C** or MIN/VOL+ button **D** repeatedly to set the correct time and press PRESET/CLOCK to confirm.

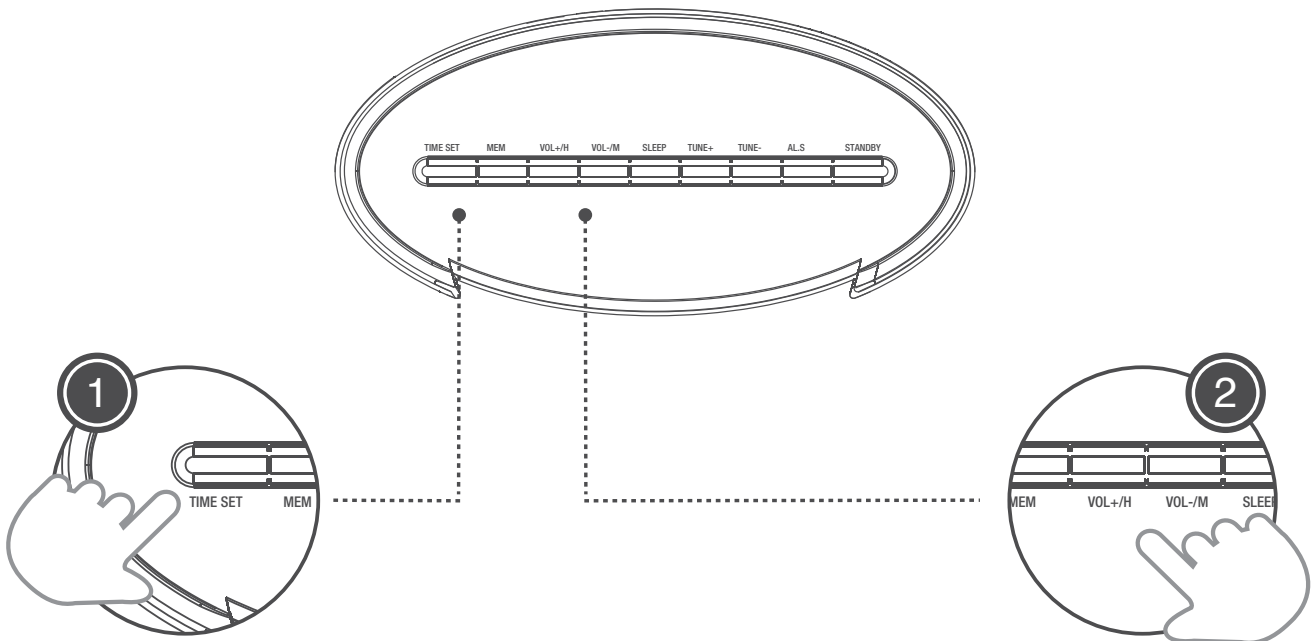


2. ALARM 1 SETTING



In standby mode

1. Press and hold AL-1/PREV button **F** to make AL-1 LED indicator & time begin to flash.
2. Press HOUR/VOL- button **C** or MIN/VOL+ button **D** respectively to set the correct time and press AL-1/PREV button **F**, then press AL-OFF/AL-S button **H** to choose the alarm sound (FM/AM/buzzer), then press AL-1/PREV button **F** to confirm.

Note: The AL-1 LED indicator will be on. If you want to cancel the AL-1 function, Just press the AL-OFF / AL-S button **H** again until the AL-1 LED indicator is off.

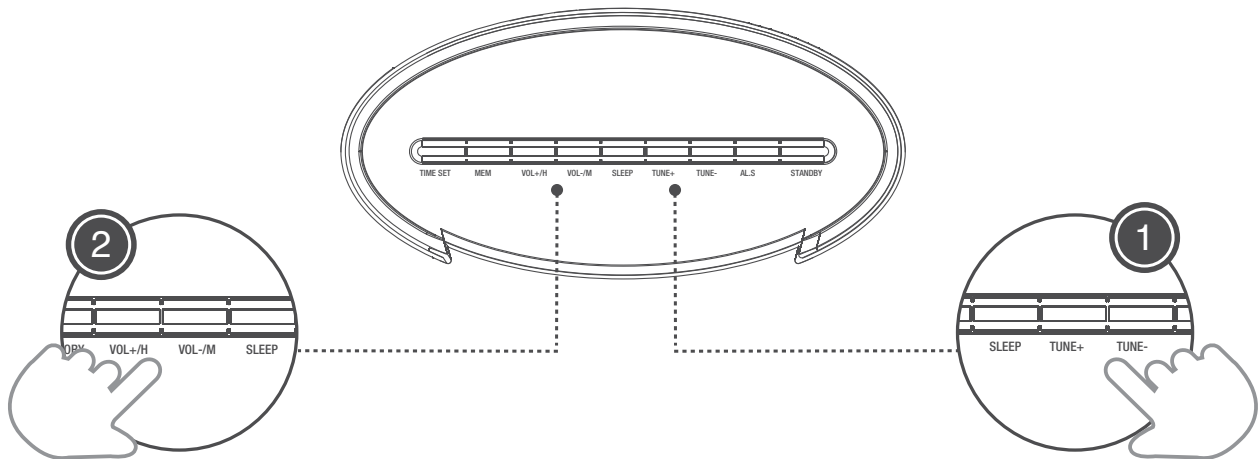


3. ALARM 2 SETTING

In standby mode

1. Press and hold AL-2/NEXT button **G** to make AL-2 LED indicator & time begin to flash.
2. Press HOUR/VOL- button **C** or MIN/VOL+ button **D** respectively to set the correct time and press AL-2/NEXT button **G**, then press AL-OFF/AL-S button **H** to choose the alarm sound (FM/AM/buzzer), then press AL-2/NEXT button **G** to confirm.

Note: The AL-2 LED indicator will be on. If you want to cancel the AL-2 function, Just press the AL-OFF / AL-S button **H** again until the AL-2 LED indicator is off.

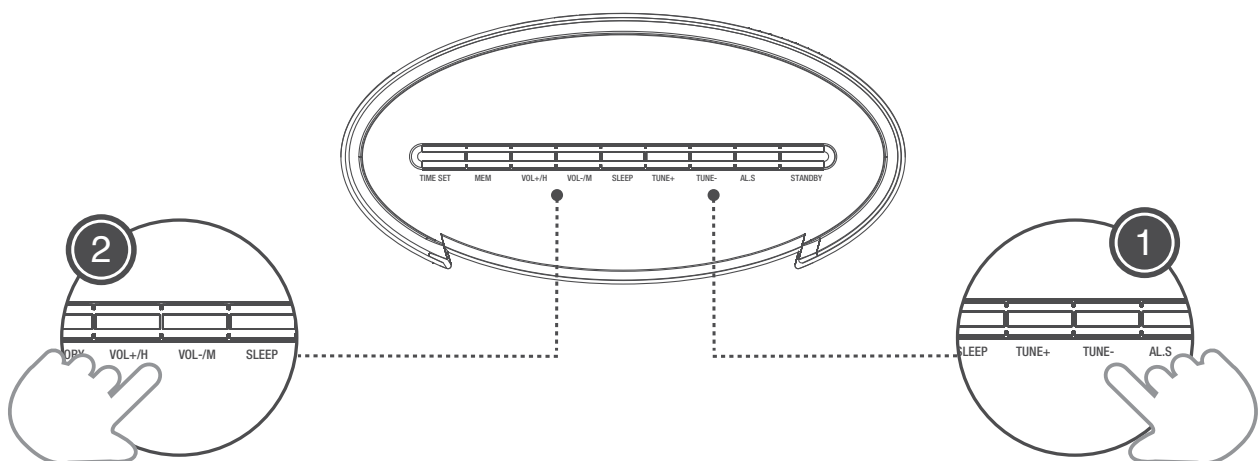


4. SNOOZE FUNCTION



The alarm can be temporarily turned off manually by pushing the unit down; the alarm will turn back on 9 min later automatically. This feature can be repeated endlessly.


5. SLEEP FUNCTION

In Power on mode, press SLEEP button to activate the sleep function, press the button repeatedly to set the sleep timer. The timer will change from 120>90>60>45>30>15 to off. When times up, the unit will turn off automatically.

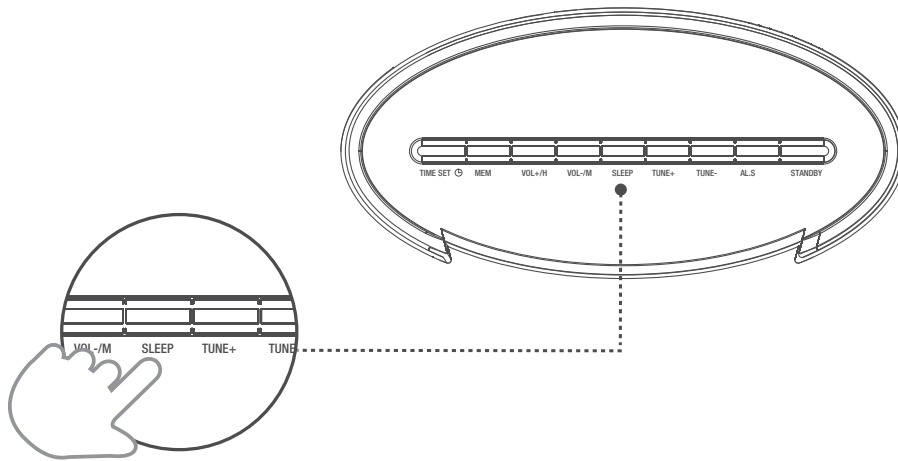

6. LISTENING TO THE RADIO


1. Turn on the unit press the Power button
2. Press the function Button to select FM
3. Press the AL-1/PREV **F** or AL-2 / NEXT button **G** to select a radio station as desired, the frequency of the selected station will be displayed on the LED display.

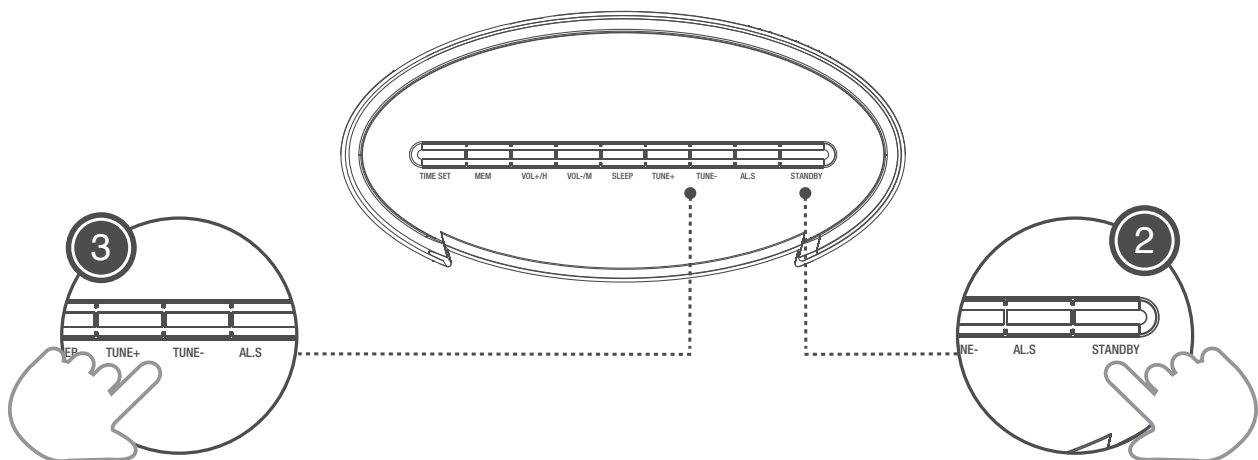

7. PRESET SAVING




 1. Tune to your desired station to the normal tuning procedure.
2. Press MEM button and the station will be stored in the next available preset. (P01 to P20)

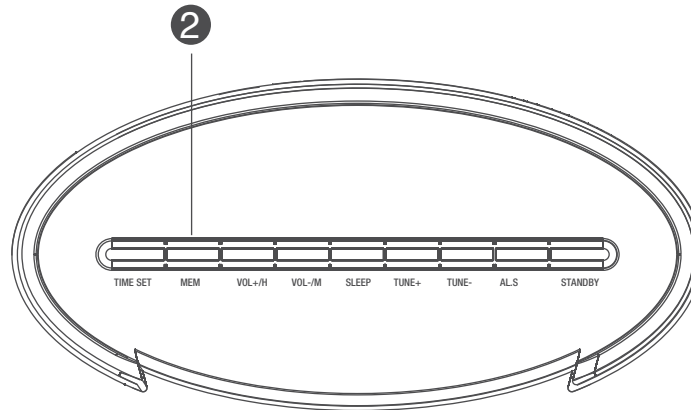

8. PRESET RECALL

1. Recall the stored frequencies by pressing TIME-SET/PRESET button to select station as desired. (P01 to P20)

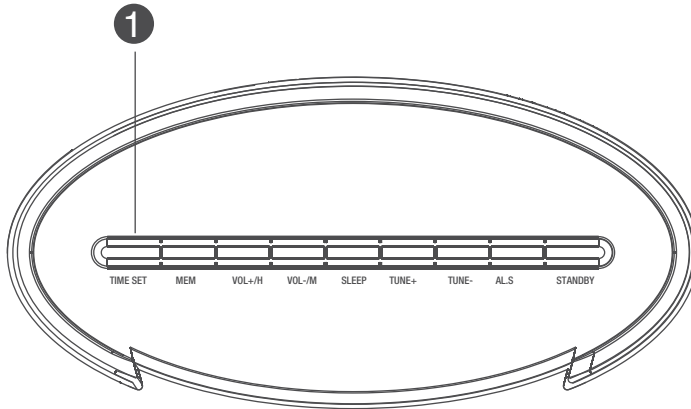



Troubleshooting

Problem	What to do
There is no sound from my radio	Check that the volume is not set to the minimum. Make sure that the radio has been able to locate FM stations.
Poor reception	As with any radio service, there will be areas of weak signal that may cause poor reception. Extend and aim the aerial for the best reception possible, keep the unit away from other electrical equipment.
Some of the buttons don't work	This maybe caused by wear and tear of the buttons after certain usage, and leads to poorer sensitivity, try turning it off and on again.



Technical Specification

Model Number	GCR01
Power Supply	230V AC ~ 50 Hz Adaptor: DC 6V, 250mA
Speaker Output Power	RMS 1W
Frequency Range	FM: 88-108MHz
LED Display	4x Seven Segment Display
Max Power Consumption	3W
Dimensions	170mm (L) x 68.6mm (W) x 79mm (H)

Customer Support

Our customer service team is available for technical or guarantee support at www.goodmans.co.uk/support

Goodmans

www.goodmans.co.uk

LED CLOCK RADIO