 


# 150W 2.1 SOUNDBAR WITH SUBWOOFER

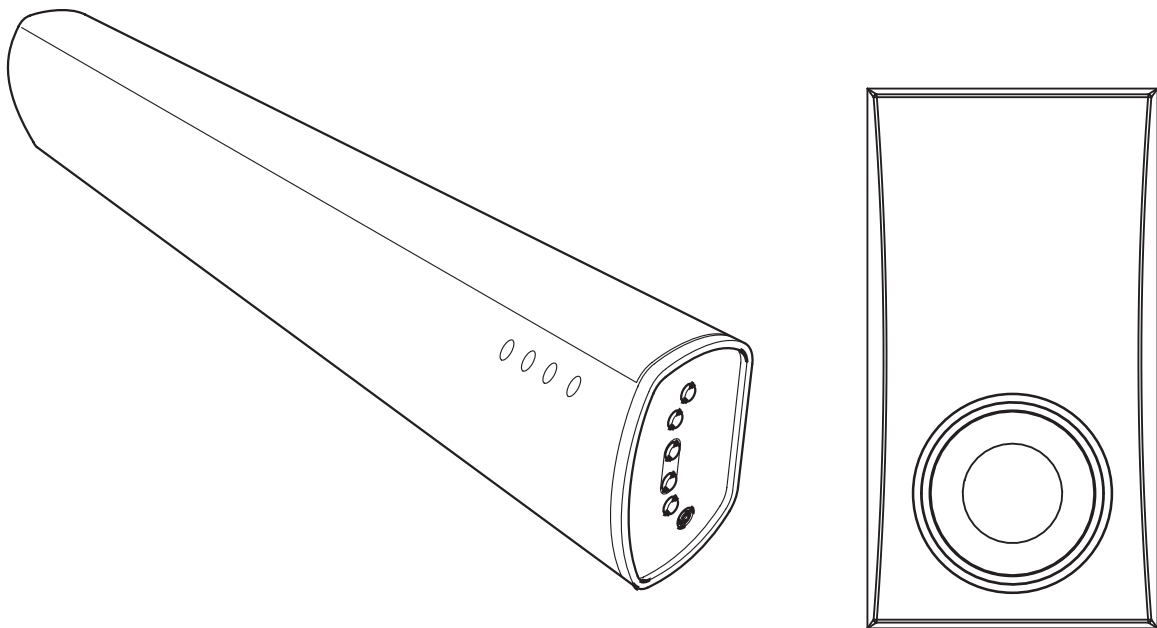

MODEL: GDSBT150OP

## USER MANUAL



Goodmans

# 1 Welcome



## 2 Your 150W 2.1 Soundbar With Subwoofer

2.1 In The Box

2.2 Front View For Soundbar

2.3 Side View For Soundbar

2.4 Rear View For Soundbar

2.5 Rear View For Subwoofer

2.6 Remote Control

## 3 Quick Setup

3.1 Power On/Off and Function Selection

3.2 Auto Power Off

3.2 Adjusting the Volume

## 4 Operation

4.1 Selecting LINE IN

4.2 Selecting AUX IN

4.3 Selecting Optical in

4.4 Selecting Bluetooth

## 5 Troubleshooting

## 6 Technical Specifications

## 7 Customer Support

# 1 Welcome



Thank you for choosing this Goodmans product. We've been making electronics for the British people for 70 years. Each of our projects has been carefully designed to be great at what it does and this one is no exception. We hope you enjoy your new 150W 2.1 SOUNDBAR WITH SUBWOOFER.

---

## 2 Your 150W 2.1 SOUNDBAR WITH SUBWOOFER

### 2.1 In The Box

Carefully remove your 150W 2.1 Soundbar with Subwoofer from the packaging.

Inside the box you will find:

- 37" Soundbar
- Subwoofer
- Quick Start Guide
- Guarantee Booklet
- 3.5mm Line-in Cable
- 3.5mm To RCA Cable
- RCA To RCA Cable
- Subwoofer Connection Cable
- Remote Control
- Wall Mount Kits
- Optical Cable
- Power Adapter

If any of these items are missing, contact customer support.

Visit: [www.goodmans.co.uk/support](http://www.goodmans.co.uk/support)



### Mains Power

Your 150W Soundbar with Subwoofer requires a mains supply of 230-240V AC ~ 50Hz.

Please ensure that your mains supply is compatible before use.

Disconnect the Power Cord from the mains when not in use.

### Position of 150W Soundbar with Subwoofer

 
Place on a flat, stable surface that is not subject to vibrations. Avoid the following locations:

- Where it is exposed to direct sunlight
- Where it is close to heat radiating sources
- Where the humidity is high and ventilation is poor
- Where it is dusty



## 2.2 Front View For Sundbar

### A SPEAKER

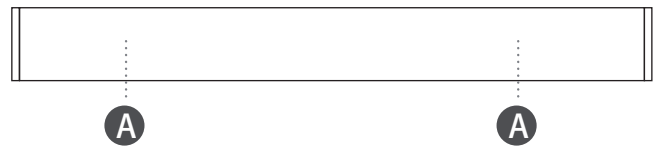

## 2.3 Side View For Soundbar

### B

Press to power the soundbar on or off

### C

Press to select BT/AUX/OPTICAL/LINE

### D +

Press to increase the volume

### E -

 
Press to decrease the volume

### F

Press to pair the Bluetooth device with soundbar after access to BT mode

### G LINE IN SOCKET

Connect external audio sources with a 3.5mm audio cable

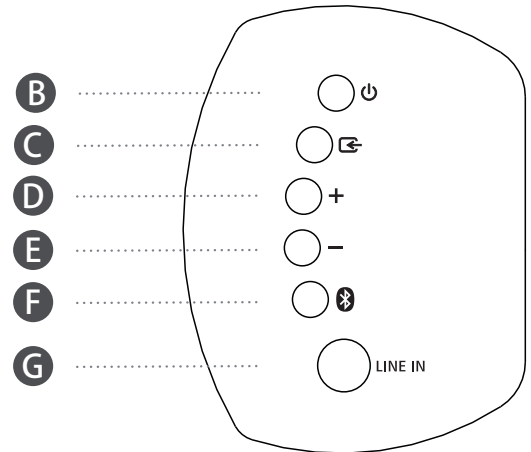

## 2.4 Rear View For Soundbar

### H AUX INPUT SOCKET

Connect external audio sources with RCA audio cable

### I SUBWOOFER OUTPUT SOCKET

 
Connect to the subwoofer with subwoofer connection cable

### J OPTICAL INPUT SOCKET

Connect external sources with optical cable

### K DC POWER INPUT SOCKET

Connect the mains adapter to this socket

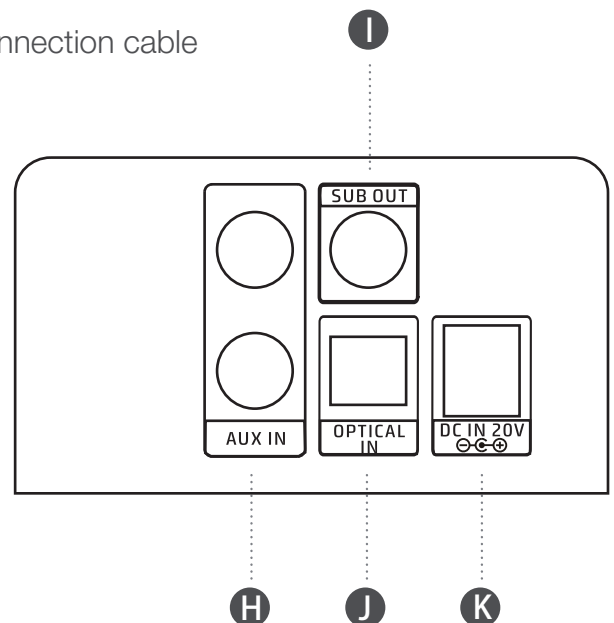




## 2.5 Rear View For Subwoofer

### **L** SUBWOOFER INPUT SOCKET

Connect the soundbar with subwoofer connection cable


### **M** POWER BUTTON

 Switch to power the subwoofer on or off

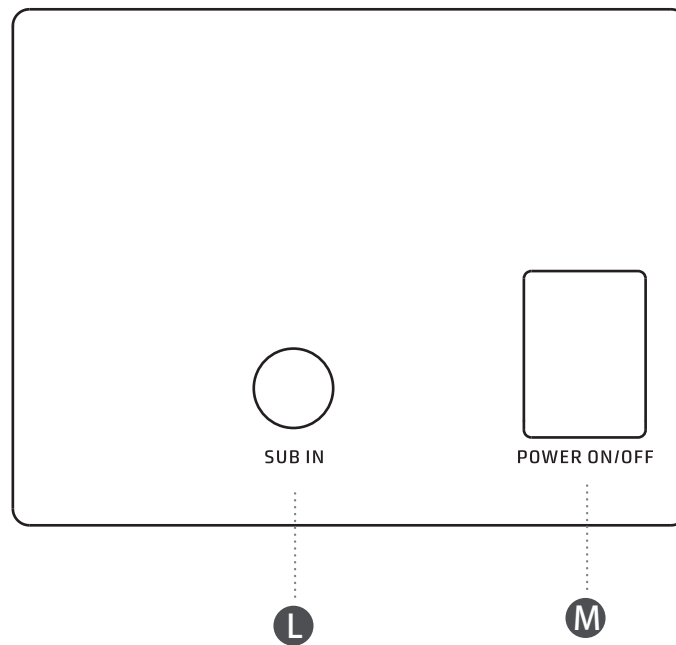



## 2.6 Remote Control

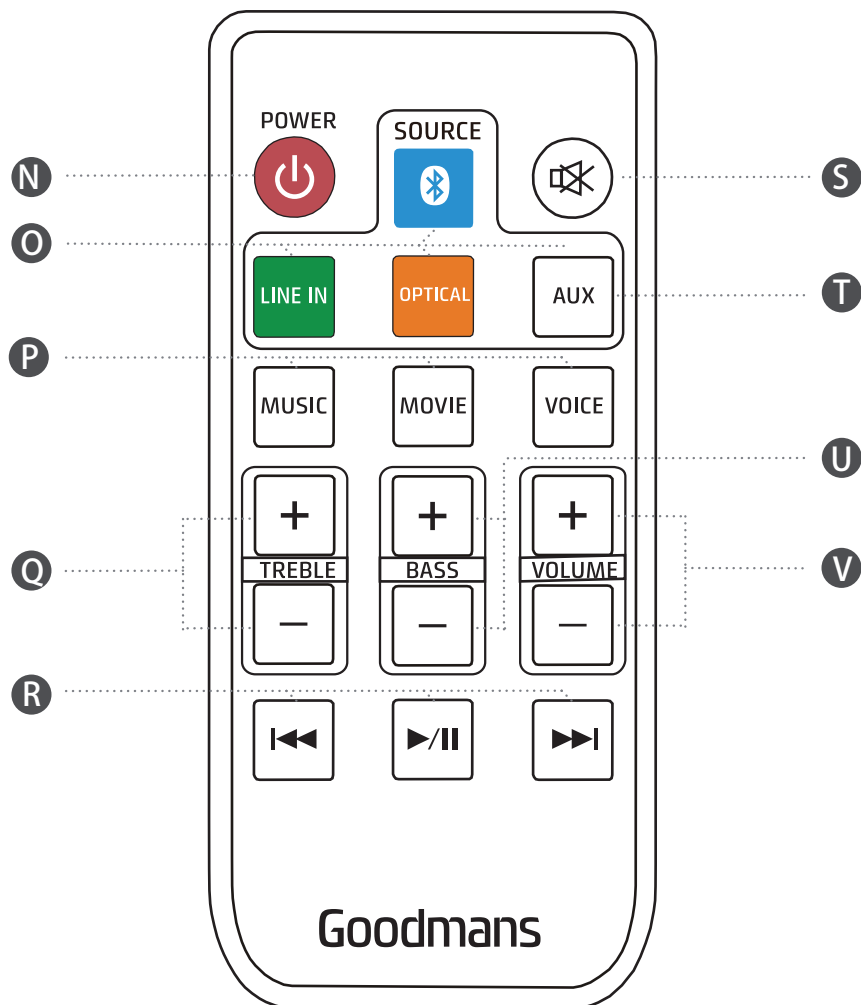 




- |   |                                    |
|---|------------------------------------|
| <b>N</b> POWER  | <b>U</b> BASS                      |
| Press to turn on or off                                       | Increase or decrease bass settings |
| <b>O</b> SOURCE   | <b>V</b> Volume                    |
| Press to select BT/LINE IN/OPTICAL/AUX mode                   | Increase or decrease the volume    |
| <b>P</b> 3 DSP Presets  |                                    |
| Press to access to Music/Movie/Voice mode.                    |                                    |
| <b>Q</b> TREBLE   |                                    |
| Increase or decrease the treble settings.                     |                                    |
| <b>R</b> In BT mode   |                                    |
| Press to Skip/Back/Play/Pause                                 |                                    |
| <b>S</b> MUTE   |                                    |
| <b>T</b> PAIR   |                                    |
| Press to connect the Bluetooth device after access to BT mode |                                    |

## 3 Quick Setup


 
### 3.1 Power On/Off and Function Selection

1. This 150W 2.1 Soundbar is supplied with a power adapter and the subwoofer is supplied with a mains lead.
2. Use the subwoofer connection cable to connect the subwoofer input on the subwoofer and the subwoofer output on the soundbar.
3. Insert the UK adapter and UK plug to the power sockets and switch the power on.
4. Press the  button on the soundbar and press the power on/off button on the subwoofer.
5. Press the  button to select LINE IN/BT/AUX/OPTICAL in mode.

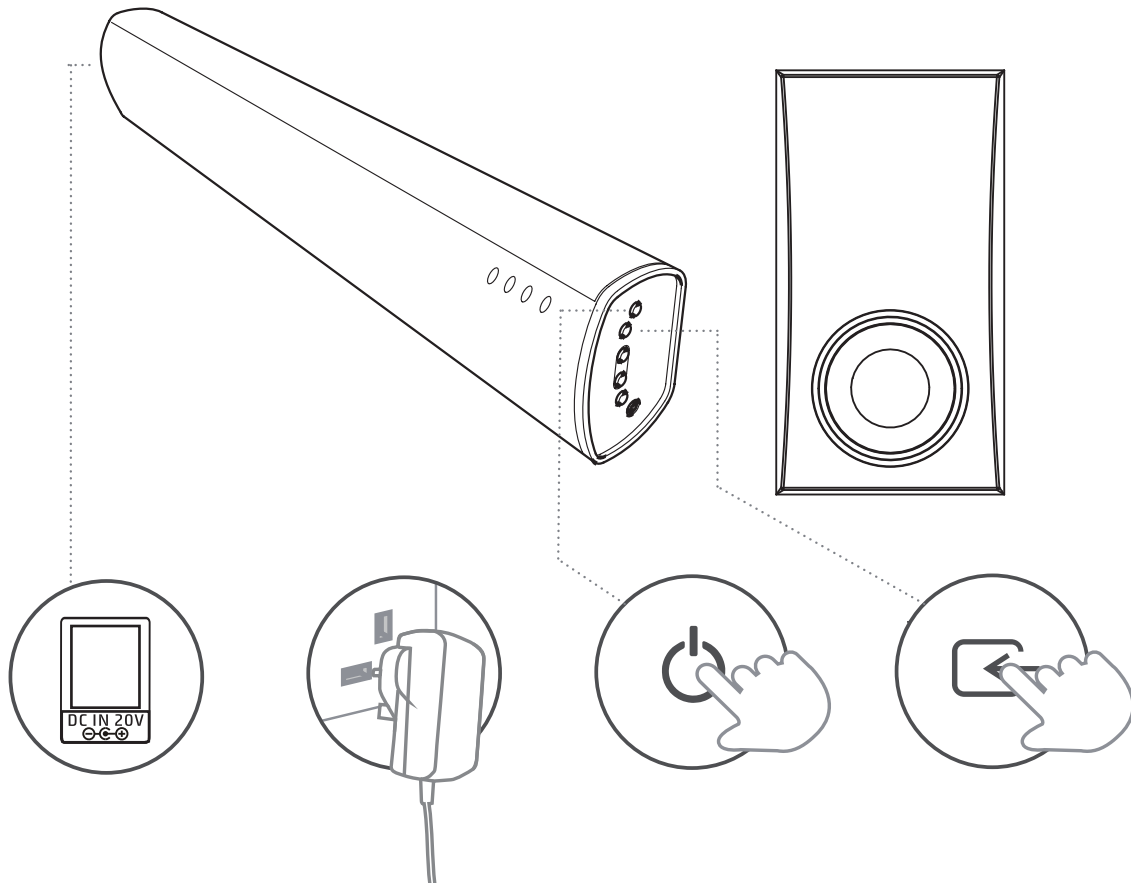

### 3.2 Auto Power Off

If no audio signal is continuously detected from for more than 170 minutes, the unit power off automatically.



### 3.3 Adjusting the Volume

Press the + button or - button on the side of the soundbar to adjust the volume to a comfortable level.








 
## 4.1 Selecting LINE IN

1. Press and hold the  button on the unit or alternatively press and release the POWER button on the Remote Control.
2. Press the  button and select LINE IN mode or press the LINE IN button on the Remote Control to switch LINE IN mode.




## 4.2 Selecting AUX IN

1. Press and hold the  button on the unit or alternatively press and release the POWER button on the Remote Control.
2. Press the  button and select AUX IN mode or press the AUX button on the Remote Control to switch AUX mode.

## 4.3 Selecting Optical in

1. Press and hold the  button on the unit or alternatively press and release the POWER button on the Remote Control.
2. Press the  button and select OPTICAL mode or press the OPTICAL button on the Remote Control to switch OPTICAL mode.

## 4.4 Selecting Bluetooth

1. Press and hold the  button on the unit or alternatively press and release the POWER button on the Remote Control.
2. Press the  button and select Bluetooth mode or press the  button on the Remote Control to switch Bluetooth mode.
3. Press the PAIR button on the unit .The blue light will flash quickly.
4. Use the controls on your Bluetooth device to select ( GDSBT1500P ) in your Bluetooth settings to pair. If your device requests a password, enter the "0000" . Refer to your device's user manual for instructions on pairing and connecting Bluetooth devices.



## 5 Troubleshooting



Problem	What to do
Soundbar does not respond (no power).	Check the mains power cable and make sure it is plugged into a suitable power outlet.  Check that the mains power supply is switched on.  Connect the power to a different power outlet.
No sound.	Check the Soundbar volume control is not at minimum.  Check that the Soundbar is not set to MUTE.  If you are connecting to the Soundbar using a headphones port on your external audio device then check the volume is turned up on that device.
The Remote Control does not work.	Replace the battery.  Make sure there are no obstacles obscuring the Soundbar.
No sound in Bluetooth mode.	Check that the Soundbar is Paired with a Bluetooth device. If prompted enter the code '0000'.

## 6 Technical Specification

Power Supply	AC 230V,50 HZ.
Power Source of Remote Control	DC 3V, 1 x CR2025 Battery(supplied)
Power Consumption	>80W
Audio Power	Woofer 90W Left Channel 30W Right Channel 30W
Impedance	Woofer 4 $\Omega$ Left Channel 8 $\Omega$ Right Channel 8 $\Omega$

## 7 Customer Support

Our customer service team is available for technical or guarantee support. Visit [www.goodmans.co.uk/support](http://www.goodmans.co.uk/support)

# Goodmans

[www.goodmans.co.uk](http://www.goodmans.co.uk)

GDSBT1500P