 


# DESKTOP BLUETOOTH SPEAKER

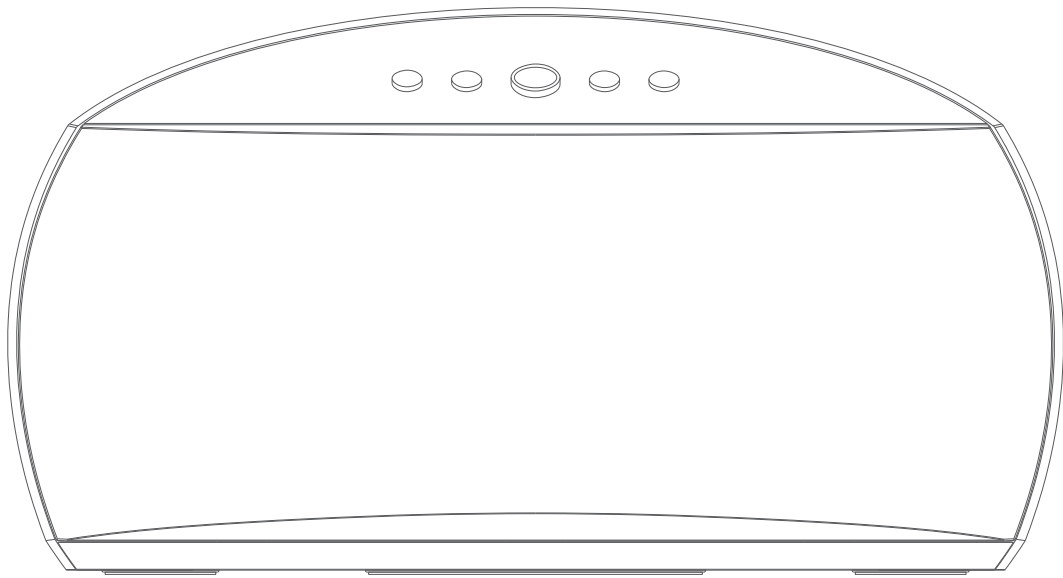

MODEL:GDBTSPK30  
DESKTOP BLUETOOTH SPEAKER

USER MANUAL



**Goodmans**

# 1 Welcome

---



## 2 Your Desktop Bluetooth Speaker

2.1 In The Box

2.2 Top View

2.3 Rear View

---

## 3 Operation

3.1 LED indicator

3.2 Remote control

---

## 4 Quick Setup

4.1 Power on GDBTSPK30

4.2 Choose the source type

---

## 5 Features

5.1 Bluetooth

5.2 Connect to an Bluetooth audio

5.3 Set the source type to

5.4 USB player

5.5 TF card

---

## 6 Troubleshooting

---

## 7 Technical Specifications

---

## 8 Customer Support

# 1 Welcome



Thank you for choosing a Goodmans product. We've been making electronics for the British people for over 70 years. Each of our products has been carefully designed to be great at what it does and this one is no exception. We hope you enjoy your new GDBTSPK30 Bluetooth speaker.

---

## 2 Your Bluetooth Speaker

### 2.1 In The Box

Carefully remove your GDBTSPK30 from the box.

Inside the box you will find:

- GDBTSPK Bluetooth speaker
- Power adaptor
- 3.5mm line-in cable
- Remote control
- 1.5V AAA batteries x 2
- Quick start guide

If any of these items are missing contact support.  
Visit: [www.goodmans.co.uk/support](http://www.goodmans.co.uk/support).



#### Mains Power

Your GDBTSPK30 speaker requires a mains supply of 100-240V 50-60Hz. Please ensure that your mains supply is compatible before use.

## 2.2 Top View



### A M button

Press M on the top of GDBTSPK30 or MODE on the remote control to change the source type.

### B — button

Press to decrease the volume.

### C ⏻ button


Press to turn GDBTSPK30 on/off.

### D + button

Press to increase the volume.

### E ▶|| button

Press to play/pause music.

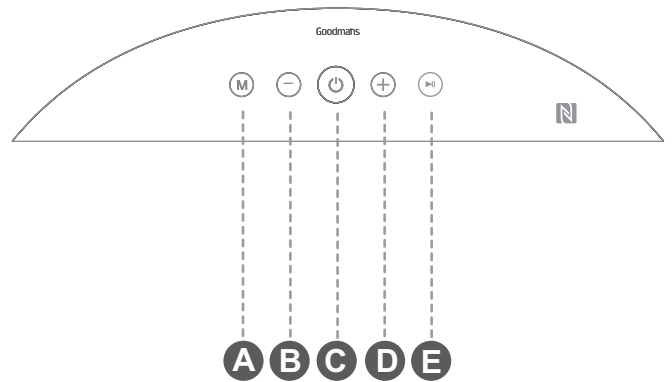

## 2.3 Rear View

### F USB socket

Insert USB Flash drive to GDBTSPK30, Press "M" to enter USB mode, it will enter music player mode automatically play.

### G TF card Slot

Insert Micro SD/TF card to GDBTSPK30, Press "M" to enter USB mode, it will enter music player mode automatically play.

### H Headphone socket



Plug in headphones, Can also be used as a 3.5mm output.

### I Aux-In socket

Connect external audio sources with a 3.5mm audio cable.

### J DC-In socket

Used to connect GDBTSPK30 to mains power supply.

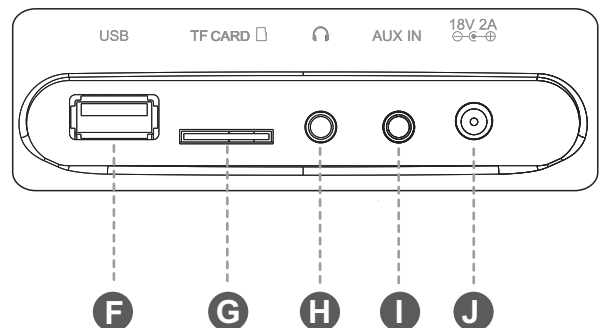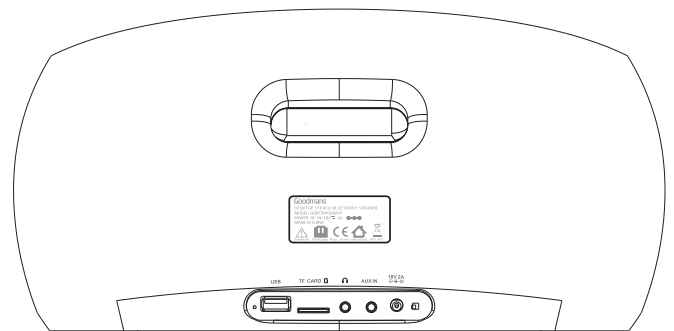


# 3 Operation



## 3.1 LED Indicator


The LED indicator on the top of GDBTSPK30 helps you to identify the status and source mode.

- Green: AUX IN
- Yellow: USB
- White: TF card
- Blue: Bluetooth

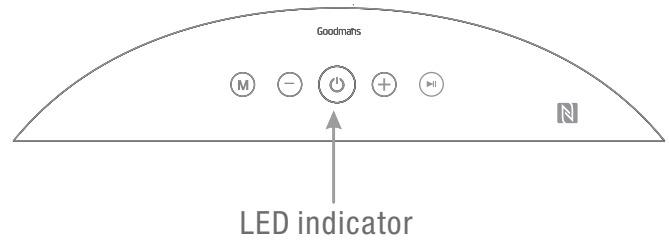

## 3.2 Remote Control

- A** Turn on or turn off GDBTSPK30.
- B** **MODE** Press MODE on the remote control to change the source type.
- C** **PAIR** Press this button, begin the pairing operation in Bluetooth mode.
- D** Mute or unmute sound.
- E** **VOL+** Increase the volume.
- F** Press to skip to the previous track of paired Bluetooth device.
- G** Press to skip to the next track of paired Bluetooth device.
- H** Press to play/pause a paired Bluetooth device.
- I** **VOL-** Decrease volume.
- J** Press to stop music.
- K** **FLAT** To restore any sound EQ preset to the default flat mode.
- L** **EQ** Press repeatedly to cycle between the sound modes.

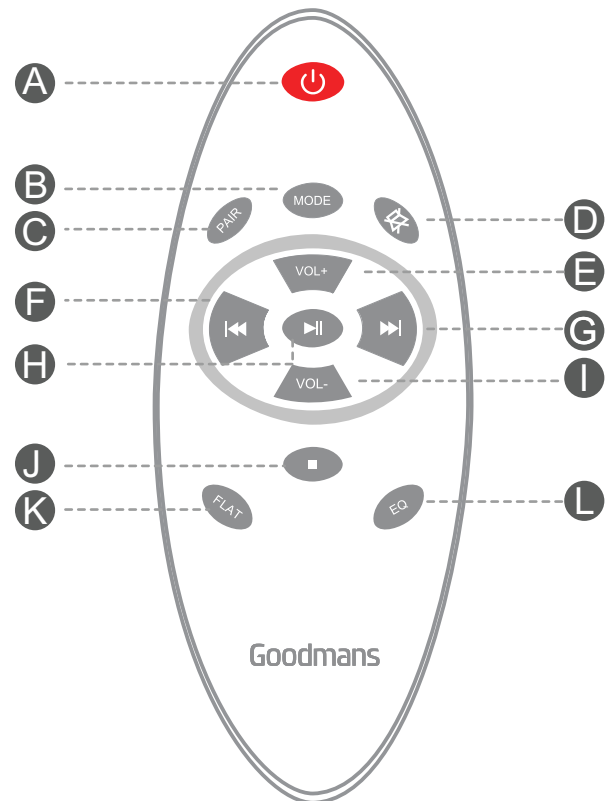


Standard	The red LED flashes 1 time
Jazz	The red LED flashes 2 times
Rock	The red LED flashes 3 times
Class	The red LED flashes 4 times
Voice	The red LED flashes 5 times



#### 4.1 Power on GDBTSPK30

Connect one end of the provided power cord to the AC in power input. Plug the other end into the power socket.

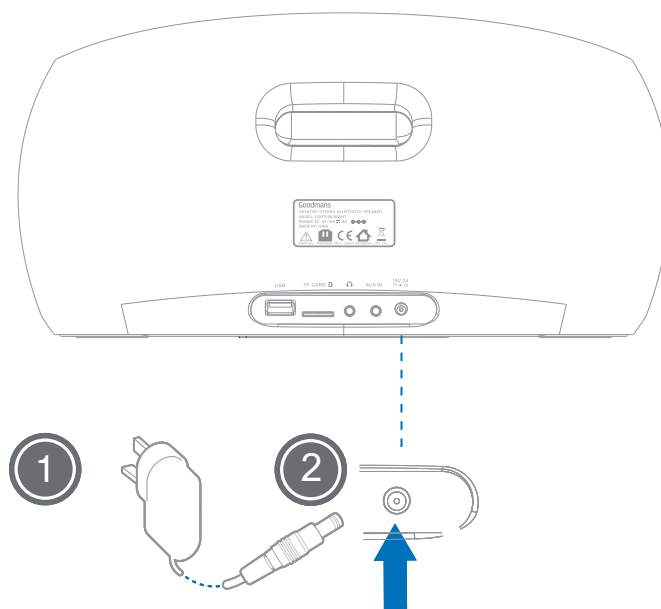

#### 4.2 Choose the source type


GDBTSPK30 offers four types of audio connectivity for you to choose.

1. Use the MODE button on the remote or press the M button on the top of GDBTSPK30 to change the source type.

2. Identify the source mode using the LED indicator. Press MODE button on the remote control, or press the M button on the top of GDBTSPK30, to set Bluetooth mode. The LED indicator will show blue.

The LED indicator on the top of GDBTSPK30 helps you to identify the status and source mode.

- Green: AUX IN
- Yellow: USB
- White: TF card
- Blue: Bluetooth

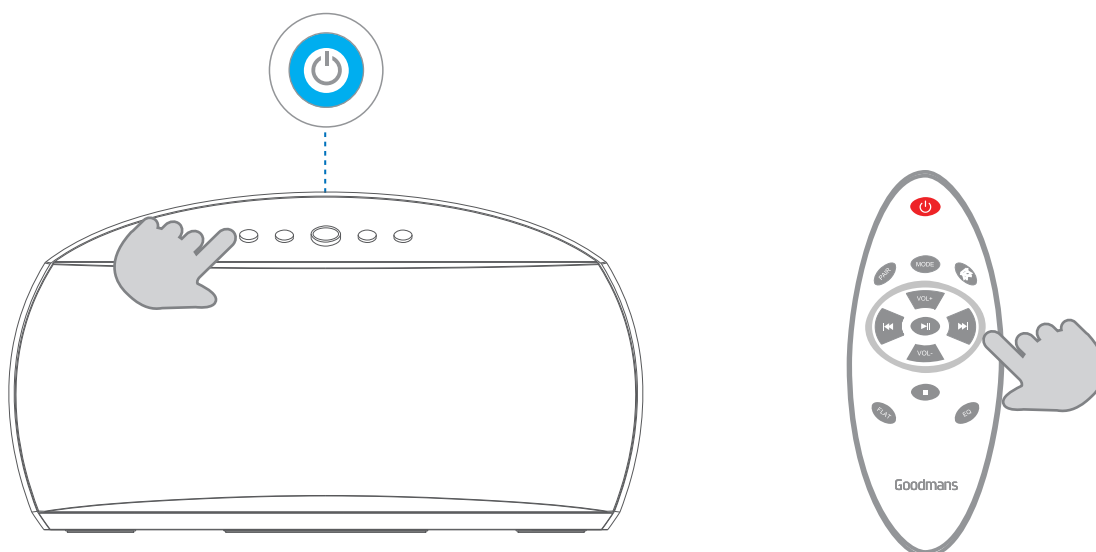


# 5 Features




## 5.1 BLUETOOTH CONNECTIVITY


Set the source type to Bluetooth

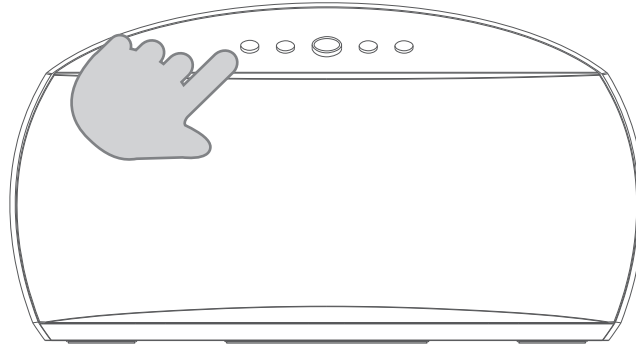

### Connect to your Bluetooth enabled device

1. Go to the Bluetooth setting on your smartphone, tablet, computer or other devices.
2. Search and select GDBTSPK30 to connect. If your phone is NFC compatible, touch the NFC zone, the  located on the top right of GDBTSPK30,

 This Bluetooth feature is to stream your music collection from your Bluetooth enabled smart phone or tablet. It cannot be used to connect to a Smart TV.

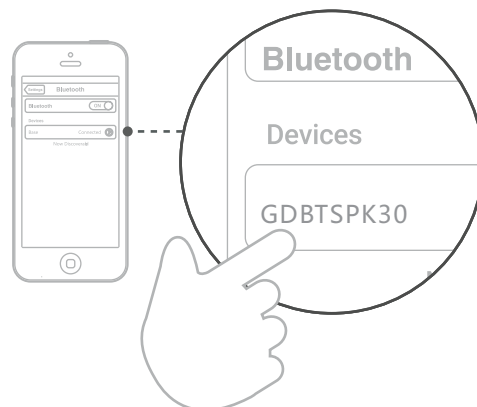


## 5.2 AUX IN MODE



Connect to an external audio device

Connect one end of the 3.5mm audio cable to the external audio devices headphone output and the other end to the AUX input of GDBTSPK30.

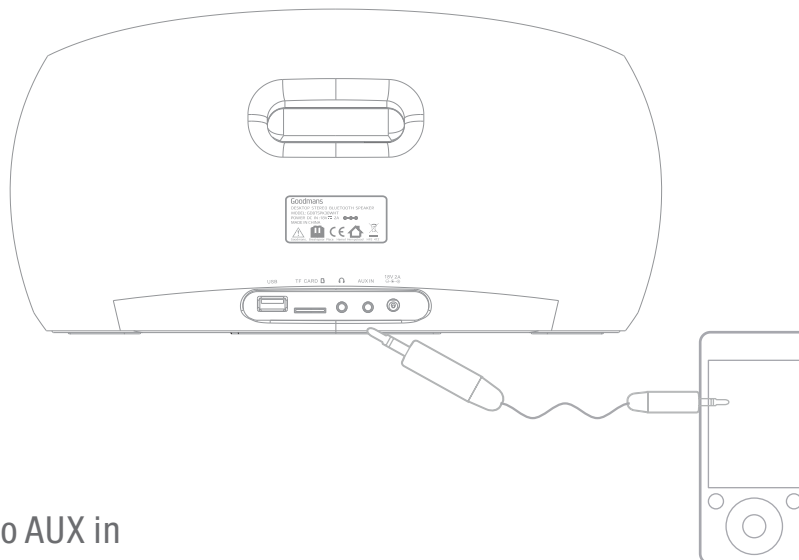


## 5.3 Set the source type to AUX in

1. Press mode button on the remote control, or press the M button on the top of GDBTSPK30. to set AUX in mode. The LED indicator will show green.
2. Press play on the external device to begin playback through GDBTSPK30.

The volume output is effected by the volume level on the audio source EG: Phone or laptop, so make sure that is set to about 70-80% (not too loud to avoid distortion).

Adjust the volume on the unit to the required listening level.

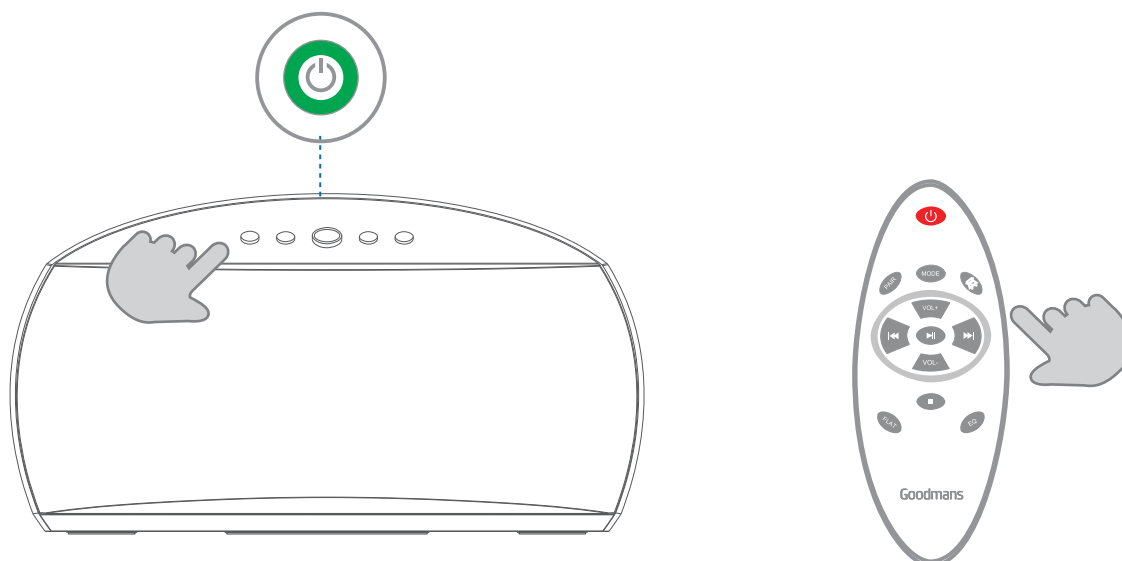




## 5.4 USB Player




Insert a USB Flash Drive into the USB interface socket. The player will start playback of the MP3/WMA files automatically. If the autoplay is not started, press MODE on the remote control or M on the unit until you reach USB mode (LED indicator on the unit will show yellow colour) and then press **▶||** to play back music.

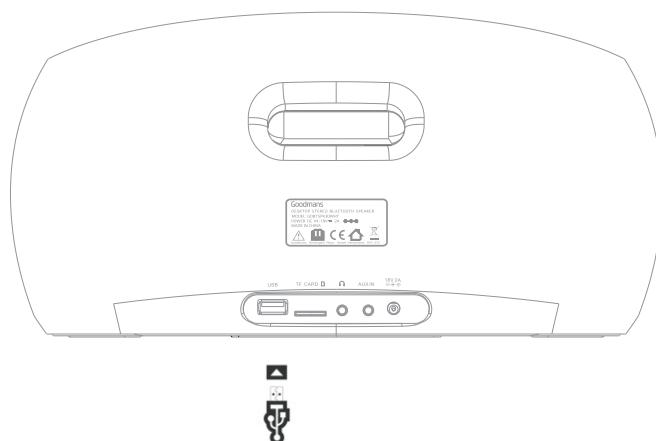

## 5.5 TF CARD

Insert a TF/SD card into the slot. The player will start playback of the MP3/WMA files automatically. If the autoplay is not started, press MODE on the remote control or M on the unit until you reach TF card mode (LED indicator on the unit will show white colour) and then press **▶||** to play back music.

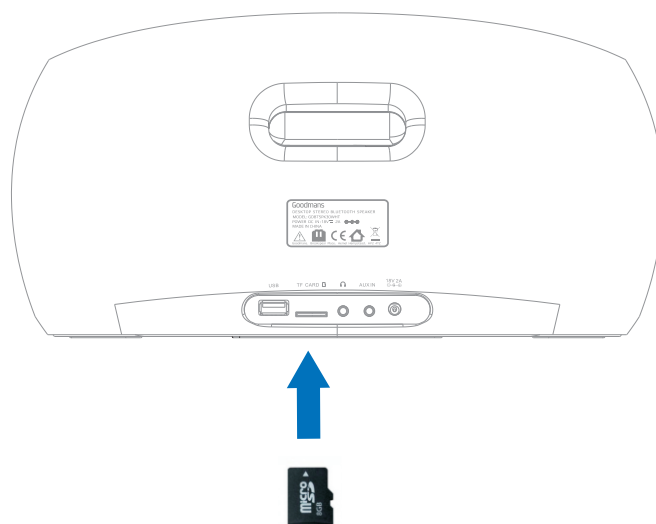

# 6 Troubleshooting



Problem	What to do
There is no sound from my GDBTSPK30	<ol style="list-style-type: none"><li>1. Make sure GDBTSPK30 is powered on.</li><li>2. Check the volume control of GDBTSPK30 is not at a minimum.</li><li>3. Check GDBTSPK30 is not set to mute.</li><li>4. Make sure GDBTSPK30 is set to the correct source that corresponds to the connected input source.</li><li>5. Check if there is content in the TF card or USB stick.</li></ol>
Distorted sound	<ol style="list-style-type: none"><li>1. Make sure the cable connections on GDBTSPK30 and audio device are secure.</li></ol>
The Remote Control does not work	<ol style="list-style-type: none"><li>1. Replace the batteries (2xAAA).</li><li>2. Make sure the batteries are installed properly.</li><li>3. Make sure there are no obstacles obscuring GDBTSPK30.</li></ol>
Problems with Bluetooth	<ol style="list-style-type: none"><li>1. Make sure GDBTSPK30 is set to the Bluetooth pairing mode. The LED should flash blue.</li><li>2. Ensure your Bluetooth device is enabled. Try connecting with a different Bluetooth device.</li><li>3. Move your Bluetooth device closer (within 33ft/10m) to GDBTSPK30 and retry the pairing procedure.</li><li>4. Check GDBTSPK30 is not paired with other devices. Try unpairing other devices then try the pairing procedure again.</li></ol>

## 7 Technical Specification



Model Number	GDBTSPK30
Power Supply	90-240V 50~60Hz
Speaker Output power	15W x 2
Frequency Range	50Hz-20KHz
Max Power Consumption	45W
Dimensions	323mm (W) x 280mm (D) x 160mm (H)

---

## 8 Customer Support

Our customer service team is available for technical or guarantee support, [www.goodmans.co.uk/support](http://www.goodmans.co.uk/support)