 


# BASE

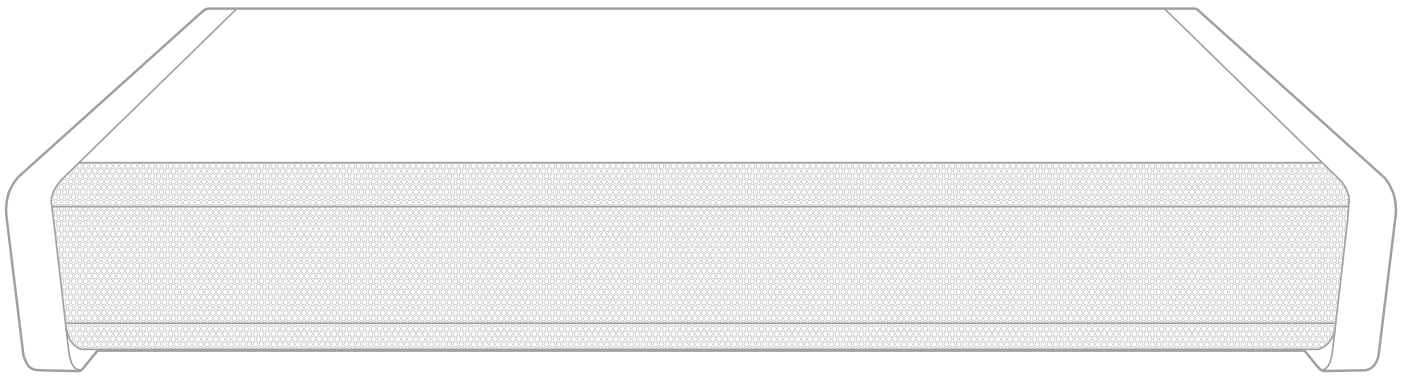

MODEL: BASE  
4.2 CHANNEL 100W 6 SPEAKER SOUND SYSTEM

## USER MANUAL



**Goodmans**

# 1 Welcome



## 2 Your Sound System

- 2.1 In The Box
- 2.2 Front View
- 2.3 Side View
- 2.4 Rear View

## 3 Operation

- 3.1 LED indicator
- 3.2 Remote control

## 4 Quick Setup

- 4.1 Setting up
- 4.2 Connect Base to your TV
- 4.3 Put your TV onto Base
- 4.4 Power on Base
- 4.5 Choose the source type
- 4.6 Mute your TV output

## 5 Bluetooth connectivity

- 5.1 Set the source type to bluetooth
- 5.2 Connect to your bluetooth enabled device

## 6 Troubleshooting

## 7 Technical Specifications

## 8 Customer Support

# 1 Welcome



Thank you for choosing a Goodmans product. We've been making electronics for the British people for over 70 years. Each of our products has been carefully designed to be great at what it does and this one is no exception. We hope you enjoy your new Base sound system.

---

## 2 Your Sound System

### 2.1 In The Box

Carefully remove your Base from the box.

Inside the box you will find:

- Base sound system
- AC power cable
- Optical digital audio cable
- Analogue stereo audio cable
- Remote control
- 1.5V AAA batteries x 2
- Quick Start Guide
- Guarantee Booklet

If any of these items are missing contact customer support.  
Visit: [www.goodmans.co.uk/support](http://www.goodmans.co.uk/support).



### Mains Power


Your Base sound system requires a mains supply of 90-265V 50~60Hz. Please ensure that your mains supply is compatible before use.



## 2.2 Front View

### A LED indicator

Shows the source type by different colours.

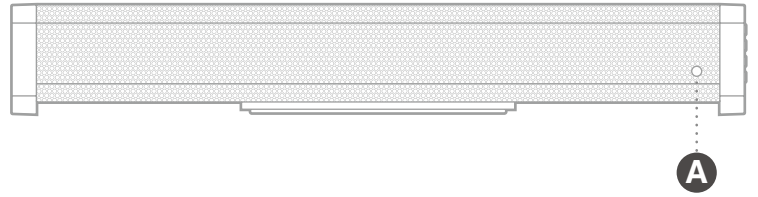

## 2.3 Side View

### B Power button

Press to turn Base on/off.

### C Source button


Press to change the input source.

### D Volume + button

Press to increase the volume.

### E Volume - button

Press to decrease the volume.

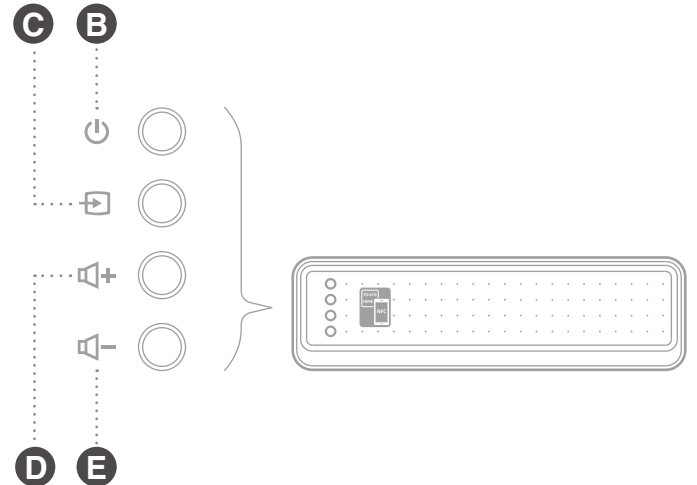

## 2.3 Rear View

### F AC power input

Used to connect Base to the mains power supply.

### G Optical digital input

Connect to television's optical digital output.

### H Coaxial digital input


Connect to television's coaxial digital output.

### I Aux in stereo input

Connect external audio sources with a 3.5mm audio cable.

### J Line in stereo input

Connect to your television's analogue stereo output.

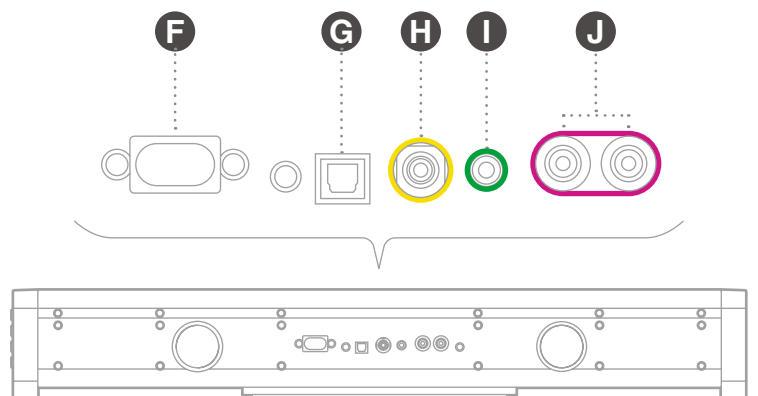

## 3 Operation



### 3.1 LED Indicator

The LED indicator on the front of Base helps you to identify the status and source mode.

**Red:** power off


**White:** optical input

**Yellow:** coaxial input

**Green:** aux input

**Magenta:** line input

**Blue:** bluetooth input

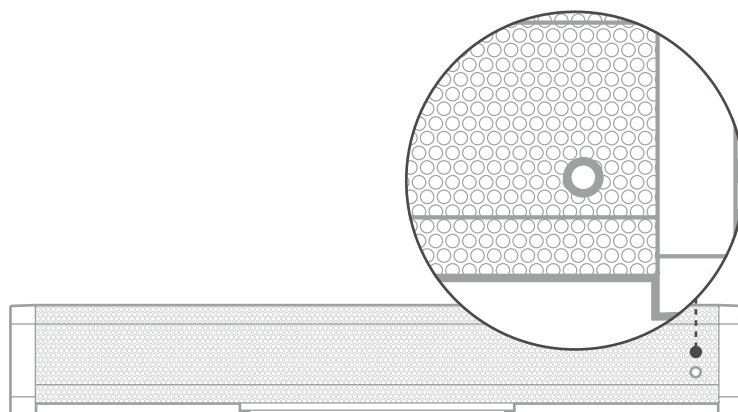

### 3.2 Remote Control

**A Mute** Short press: mute or unmute the sound.  
Long press: reset to the default sound setting.

**B** Turn on or turn off Base.

**C Line in** Select the line input.

**D Aux in** Select the aux input.

**E Bluetooth** Select the bluetooth input.


**F Optical** Select the optical input.

**G Coaxial** Select the coaxial input.

**H** Raise or lower the volume.

**I Bass** Raise or lower the Bass effect. Long press of mute to return to default setting.

**J Treble** Raise or lower the Treble effect. Long press of mute to return to default setting.

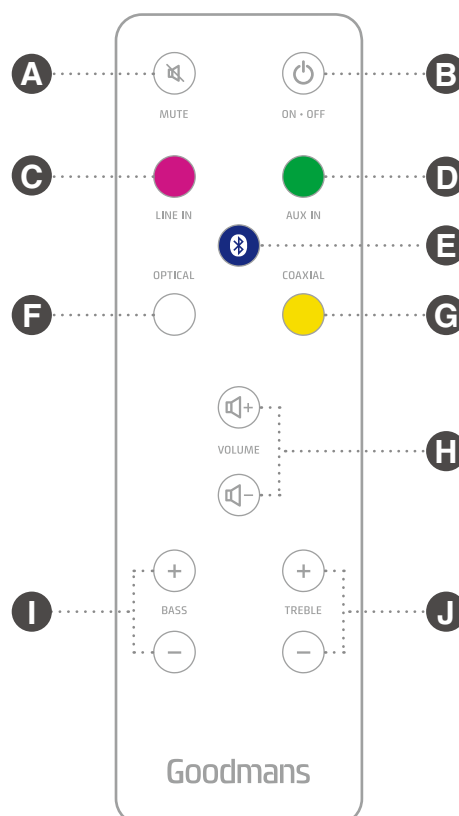


# 4 Quick Setup



## 4.1 Setting up


1. Move your TV aside and turn it to show its audio output panel.
2. Place Base where you place your TV.

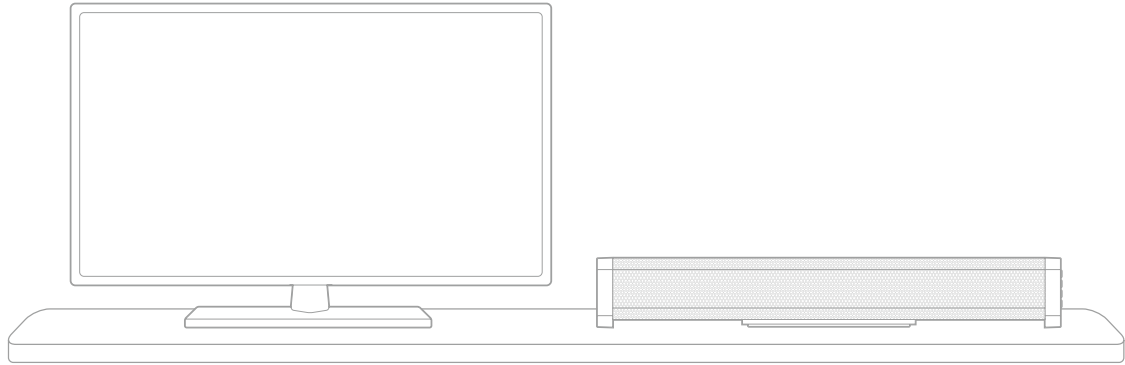

## 4.2 Connect Base to your TV

Base offers four types of audio connectivity for you to choose. Only one source type is needed for connection.

1. Plug an audio cable into an available connection on your TV.
2. Plug the other end of the chosen cable to the corresponding audio input connector of Base.

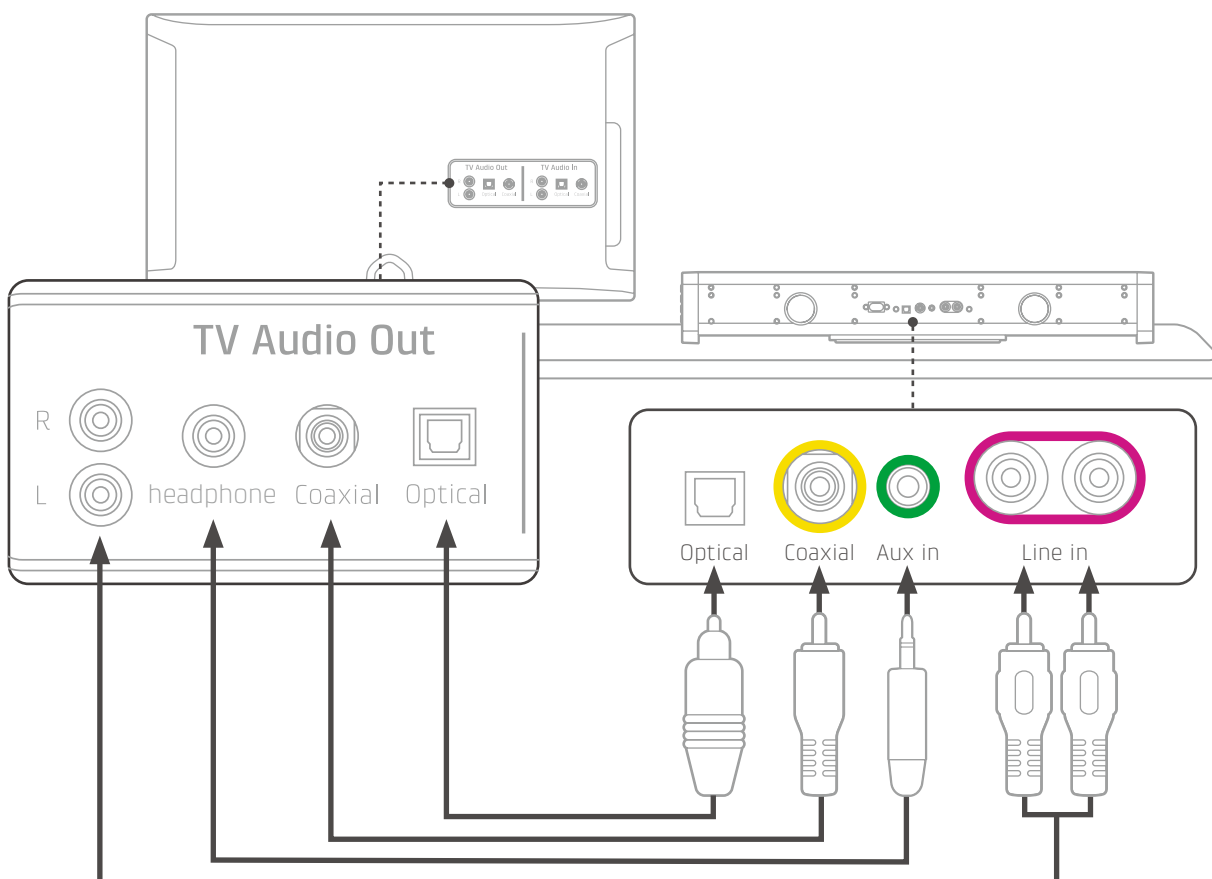



### 4.3 Put your TV onto Base

Make sure the TV is placed centrally on the top of Base, and does not hang over any of its edge.





#### If...

1. If the TV base is too large to fit the top of Base, please place Base in another location such as an open shelf under the TV, or mount your TV above Base.
2. If placing Base backed up to a wall, make sure there is at least a one-inch space between the wall and the rear of Base.




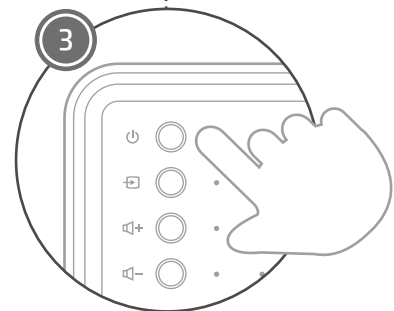
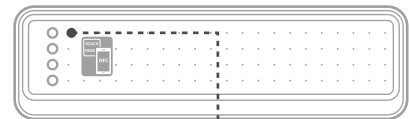
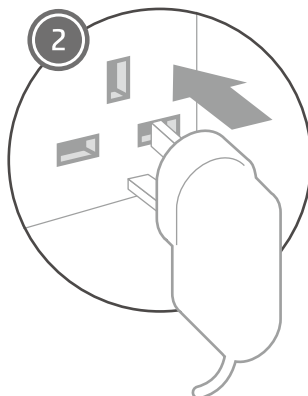
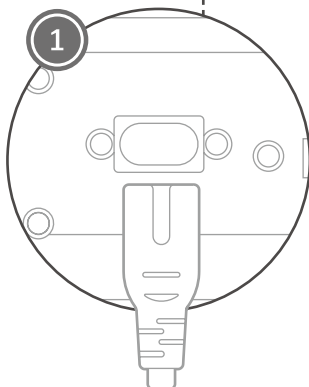
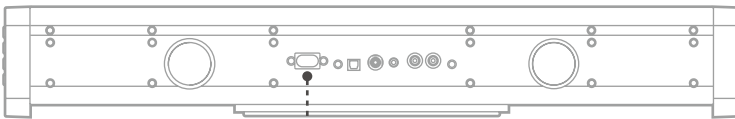
#### Notice

1. Base is designed for TVs that weigh no more than 45kg (100lbs).
2. Base is NOT designed for the CRT type TV.

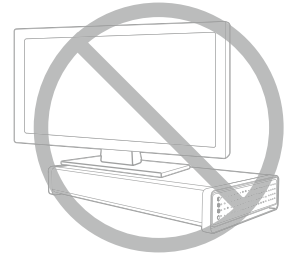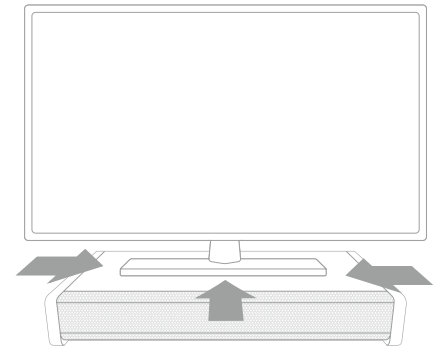


### 4.4 Power on Base


1. Connect one end of the provided power cord to the AC in power input.
2. Plug the other end into the power socket.
3. Press  to turn on.





## 4.5 Choose the source type

1. Use the remote control, or press  on the right hand of Base, to select and set the input source.
2. Identify the source mode using the LED indicator.

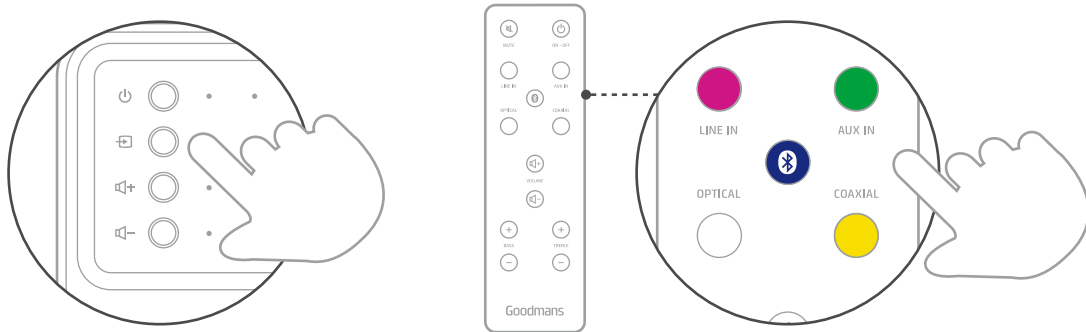

## 4.6 Mute your TV output

Please refer to your TV owner's guide for help turning off the internal speakers of your TV.

1. Turn on your TV.
2. Go to the TV setting menu and select the audio, sound, or speaker settings.
3. Look for the menu item that allows you to turn off the TV speakers.
4. If there is no option for turning the TV speakers off, decrease the TV volume to the lowest.




## 5 Bluetooth connectivity




### 5.1 Set the source type to bluetooth

Use the remote control, or press  on the right hand of Base, to set bluetooth mode. The led indicator will show blue.

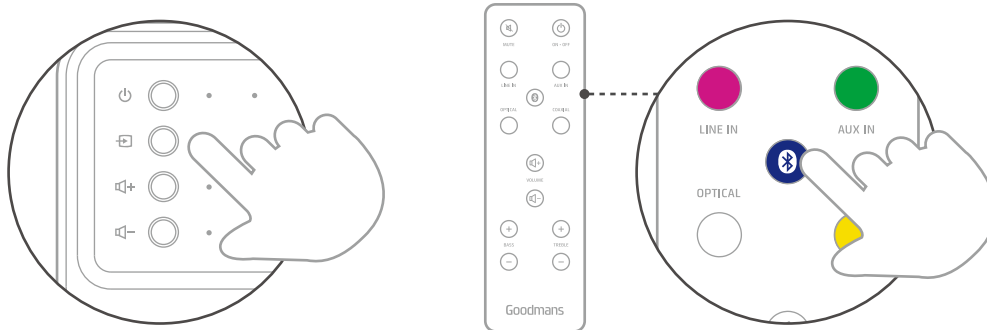

### 5.2 Connect to your bluetooth enabled device

1. Go to the bluetooth setting on your smartphone, tablet, computer or other devices.
2. Search and select 'Base' to connect. If your phone is NFC compatible, touch the NFC zone with your phone to pair.
3. Enter '0000' if the device asks for a passcode.

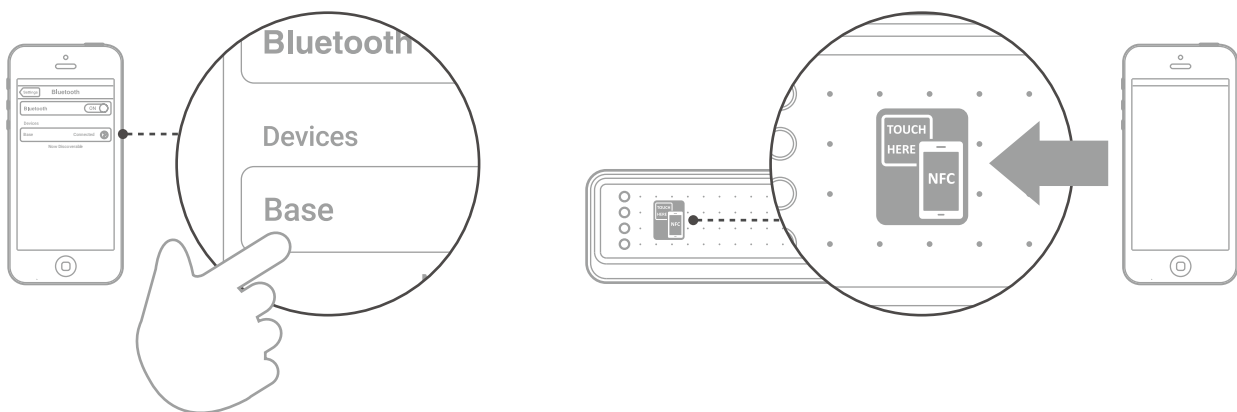

## 6 Troubleshooting



Problem	What to do
There is no sound from my Base	<ol style="list-style-type: none"><li>1. Make sure Base is powered on.</li><li>2. Check the volume control of Base is not at a minimum.</li><li>3. Check Base is not set to mute.</li><li>4. Make sure Base is set to the correct source that corresponds to the connected input source.</li><li>5. If you are using a digital audio connection, make sure the corresponding TV's digital audio output is enabled. If the digital audio connection is not working, try to use an analogue stereo audio connection.</li></ol>
Sound comes from TV	Disable or mute your TV's internal speakers, check your TV manual.
Distorted sound	Make sure the cable connections on Base and TV are secure.
The Remote Control does not work	<ol style="list-style-type: none"><li>1. Replace the batteries (2x AAA).</li><li>2. Make sure the batteries are installed properly.</li><li>3. Make sure there are no obstacles obscuring Base.</li></ol>
Problems with Bluetooth	<ol style="list-style-type: none"><li>1. Make sure Base is set to the Bluetooth pairing mode. The LED should light blue.</li><li>2. Ensure your Bluetooth device is enabled. Try connecting with a different Bluetooth device.</li><li>3. Move your Bluetooth device closer (within 33 ft/10m) to Base and retry the pairing procedure.</li><li>4. Check Base is not paired with other devices. Try unpairing other devices then try the pairing procedure again.</li></ol>

## 7 Technical Specification



Model Number	BASE
Power Supply	90-265V 50~60Hz
Speaker Output Power	Drivers: 10W x 4 Subwoofers: 20W x 2
Frequency Range	Drivers: 230Hz-15KHz Subwoofers: 80Hz-1KHz
Max Power Consumption	65W
Dimensions	600mm (W) x 320mm (D) x 100mm (H)

## 8 Customer Support

Our customer service team is available for technical or guarantee support, [www.goodmans.co.uk/support](http://www.goodmans.co.uk/support).