 


Pocket DAB & FM Radio with Speaker

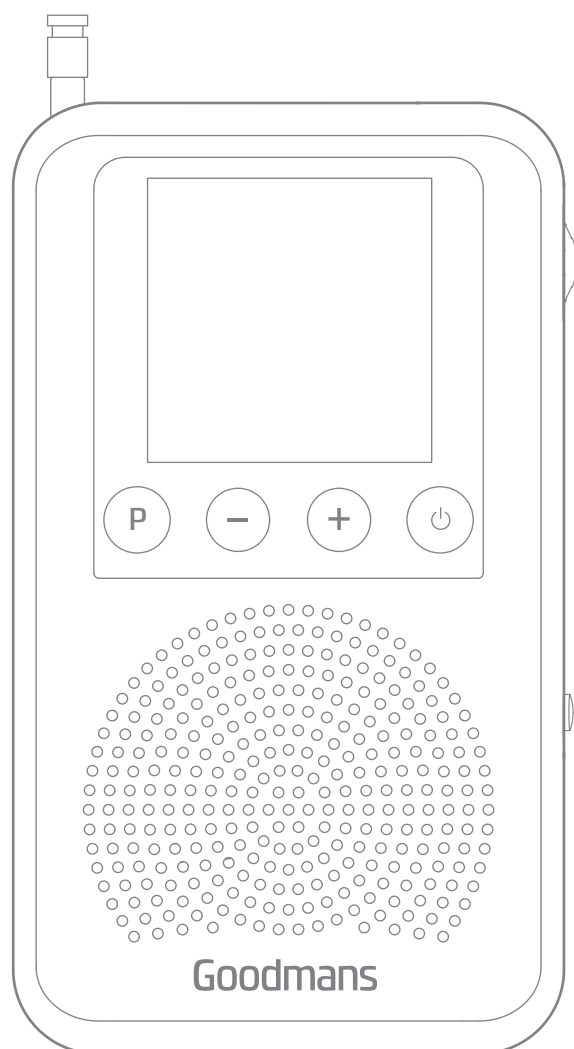

MODEL: GDPRDAB
Pocket DAB+ & FM Radio with Speaker

USER MANUAL



Goodmans

1 Welcome



2 Your DAB Digital Radio

2.1 In The Box

2.2 Front View

2.3 Rear View

3 Quick Setup

3.1 Power On and Autoscans

3.2 Changing DAB Stations

3.3 Scanning for DAB Stations

3.4 Adjusting the Volume

3.5 Switching Off

4 Features

MODE button

4.1 DAB Mode

4.2 FM Mode

Dial

4.3 Select DAB Station

4.4 Full Scan(DAB)

4.5 View DLS information

4.6 Select FM frequency

4.7 FM Station seeking

VOL+ button / VOL- button

4.8 Adjust volume

PRESET button

4.9 Storing DAB/FM Presets

4.10 Selecting a Preset Station

Others

4.11 Sleep Mode

4.12 Set Backlight

4.13 Software Version

4.14 Set Language

4.15 Factory Reset

5 Troubleshooting

6 Technical Specifications

7 Customer Support

1 Welcome



Thank you for choosing this Goodmans product. We've been making electronics for the British people for 70 years. Each of our projects has been carefully designed to be great at what it does and this one is no exception. We hope you enjoy your new Pocket DAB Digital Radio.

2 Your DAB Digital Radio

2.1 In The Box

Carefully remove your DAB Digital Radio from the box.

Inside the box you will find:

- DAB Digital Radio
- USB cable
- Lithium battery
- Quick Start Guide
- Guarantee Booklet

USB Cable

Your DAB/FM Radio requires USB power supply.
Please ensure your USB socket is compatible before use.

Position of DAB Digital Radio

Place on a flat, stable surface that is not subject to vibrations.
Avoid the following locations:

- Where it is exposed to direct sunlight
- Where it is close to heat radiating sources
- Where the humidity is high and ventilation is poor
- Where it is dusty

Adjusting the Aerial


Fully extend the aerial to ensure good reception in both DAB and FM Radio modes. It may be necessary to alter the position of the DAB Digital Radio and/or the aerial to achieve the best signal.

Using Headphones

Headphones require a 3.5mm diameter stereo plug and an impedance of 8-32 ohms. Headphones are not supplied with this DAB Digital Radio.


2.2 Front View

- A Aerial**
- B Preset Button**
Press and hold to save a station as a preset, or press to recall a preset station.
- C Volume- Button**
Press to decrease the volume level.
- D Volume+ Button**
Press to increase the volume level.
- E Power / Mode Button**
Press and hold to switch on/off the radio, or press to switch between DAB and FM.

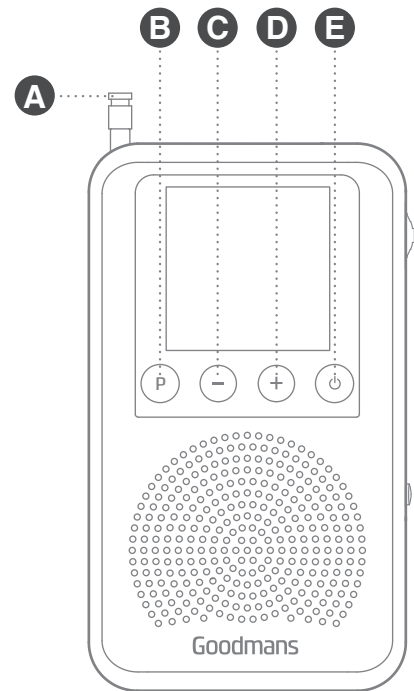

2.3 Rear View

- F Dial**
Press and hold the Dial for 2 sec to perform full scan. Scroll between different stations and then press to select the station. Press to view DLS.
- G Lock Button**
Push to lock the keys.
- H Micro USB Socket**
Used to connect the DAB Digital Radio to USB power supply.
- I Headphone Jack**
Used for headphone.
- J Lithium Battery**
- K Battery Cover**

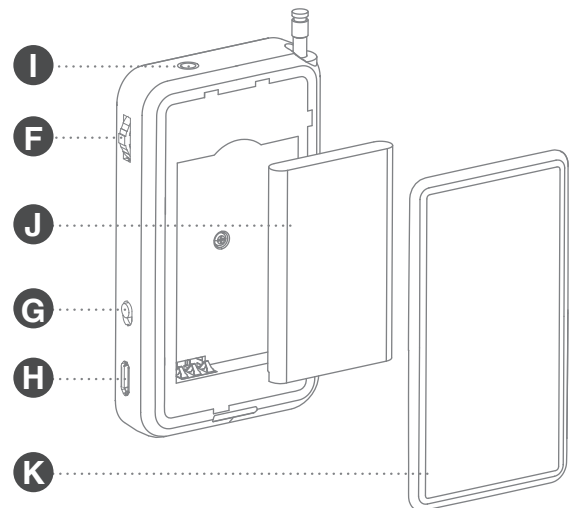

3 Quick Setup



3.1 Power on and Autoscan

1. Connect the power cable to the DAB Radio and USB socket to charge up the radio.
2. Raise and extend the aerial.
3. Press and hold the Power/Mode button to turn on the radio, it will autoscan automatically for first time use.

3.2 Changing DAB stations

1. Make sure it is in DAB+ mode.
2. Scroll to the station you want to listen to.
3. Press the dial to confirm.

3.3 Scanning for DAB stations

1. Make sure it is in DAB mode.
2. Press and hold for 2 sec the Dial to perform full scan.

3.4 Adjusting the volume

Press the VOL-/VOL+ to adjust the volume.

3.5 Switching Off

Press and hold the Power/Mode button to switch off the radio.

4 Features

MODE button

4.1 DAB mode

1. If the DAB radio is in FM mode, press the MODE button until DAB is shown on the display.
2. Press and hold the Dial for 2 sec to perform full scan.

4.2 FM Mode

1. If the DAB radio is in DAB mode, press the MODE button until FM is shown on the display.

Dial

4.3 Select DAB station

1. In DAB mode, scroll the dial and rotate to the station you want to listen to , then press the dial to select.

4.4 Full Scan(DAB)

In DAB mode, press and hold for 2 sec the Dial to perform full scan.

4.5 View DLS information

When you are listening to DAB station, press the Dial to view the DLS information.



4.6 Select FM frequency

In FM mode, scroll up and down to select the FM frequency you want to listen to.

4.7 FM Station seeking

In FM mode, scroll up/down and hold to seek for the nearest FM station.

VOL+ button / VOL- button

4.8 Adjust Volume

Press VOL+/VOL- to adjust volume levels, there are 30 volume levels.

PRESET button

4.9 Storing DAB/FM Presets

When you are listening to the DAB/FM station you want to store, press and hold the PRESET button for 2 seconds and then scroll the Dial to position you want to store the station, press the dial to select.

4.10 Selecting a Preset Station

In DAB/FM mode, press and hold the PRESET button to recall the stored station list, scroll to the preset station you want to listen to and press the dial to select.

Others

4.11 Sleep Mode

Press and hold both the VOL- button and the Dial for 2 sec to enter Sleep Mode. Scroll to the duration (5-90mins) you want and press the Dial to select. Press and hold both the VOL- button and the Dial for 2 sec to exit the Sleep Mode.

4.12 Set Backlight

1. Push the LOCK up to lock the keys.
2. Press and hold both the PRESET button and the Dial for 2 sec to enter backlight menu.
3. Scroll to the duration (10s|30s|Always On) you want and press the Dial to select.

4.13 Software Version

1. Push the LOCK up to lock the keys.
2. Press and hold both the VOL+ button and the Dial for 2 sec to view the software version.

4.14 Set Language

1. Push the LOCK up to lock the keys.
2. Press and hold the Dial for 5 sec.
3. Scroll to Language and press the dial to select.
4. Scroll and press the dial to select the language you want.

4.15 Factory Reset

1. Push the LOCK up to lock the keys.
2. Press and hold the Dial for 5 sec.
3. Scroll to Factory Reset and press the Dial to select.
4. Scroll to Yes and press the Dial to perform Factory Reset.

5 Troubleshooting



Problem	What to do
There is no sound from my radio	Check that the volume is not set to the minimum. Make sure that the radio has been able to locate DAB/FM stations.
The display shows 'NO SERVICES AVAILABLE' in DAB mode	Make sure that DAB coverage exists in your area. Try adjusting the position of the aerial or location of the radio.
Poor reception	As with any radio service, there will be areas of weak signal that may cause poor reception. Follow the instructions for Manual Tuning on 4.11 and adjust the aerial while monitoring the signal strength until the optimum signal is obtained. If reception is still poor, try re-locating the radio to another part of the room.
Some of the buttons on the DAB Digital Radio are not working	This may be caused by electrostatic discharge. Turn the DAB Digital Radio off, disconnect the USB plug and retry after a few seconds.

6 Technical Specification

Model Number	GDPRDAB
Power Supply	USB Input
Speaker Output Power	0.3W
Frequency Range	FM: 87.5-108MHz DAB+: 174-240MHz
LCD Display	1.44 TFT Color Display
Battery Capacity	1000mAh
Dimensions	89mm(H)x52mm(W)x17mm(D)

7 Customer Support

Our customer service team is available for technical or guarantee support. Visit www.goodmans.co.uk/support

Goodmans

www.goodmans.co.uk

GDPRDAB

Pocket DAB+ & FM Radio with Speaker