


CD BOOMBOX

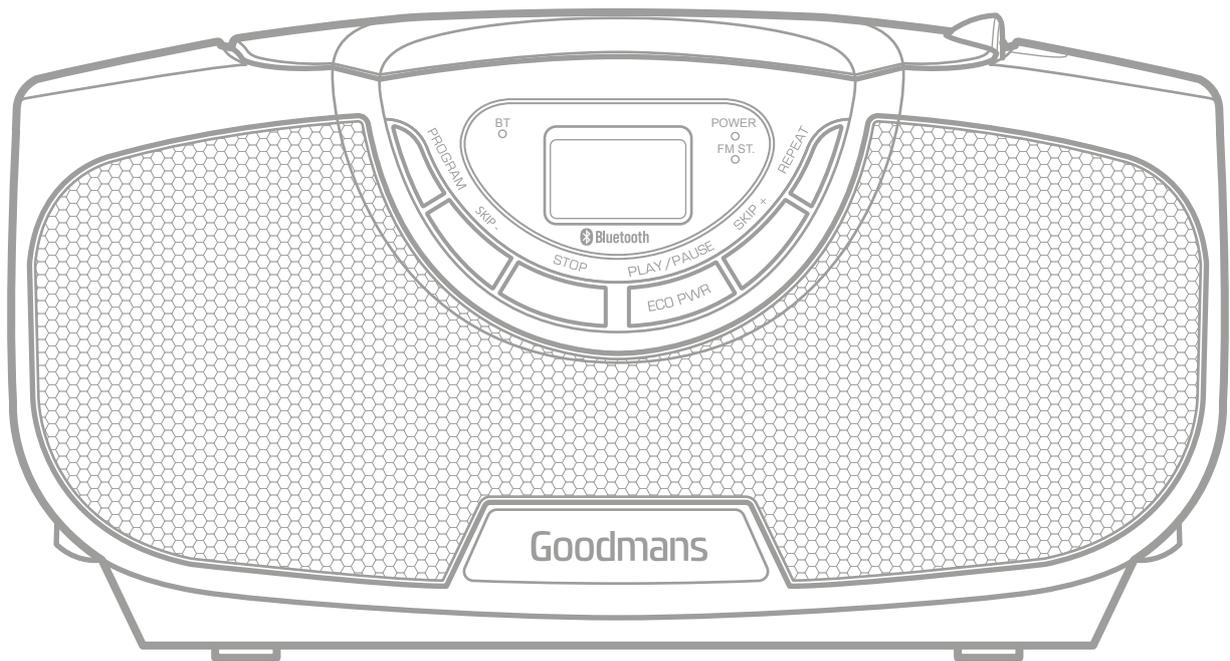

MODEL: GPSBT01

USER MANUAL



Goodmans

1 Welcome



2 Your CD Boombox

2.1 In The Box

2.2 Front View

2.3 Control Panel

2.4 Rear View

2.5 Right Side

2.6 Left Side

3 Quick Setup

3.1 Power On/Off and Function Selection

3.2 Standby & Auto Standby

3.3 Adjusting the Volume

3.4 Fitting Batteries

4 Operation

CD Operation

4.1 Load a Disc

4.2 Play a Disc

4.3 Skip Tracks And Search For A Specific
Point To Play

4.4 Programmed Play

4.5 Repeat Single/All Track(s)

Radio Operation

4.6 Tuning a Station

Aux-In Mode

4.7 Aux In Mode

Bluetooth Operation

4.8 Pairing a Bluetooth Device

5 Troubleshooting

6 Technical Specifications

7 Customer Support

1 Welcome



Thank you for choosing this Goodmans product. We've been making electronics for the British people for 70 years. Each of our projects has been carefully designed to be great at what it does and this one is no exception. We hope you enjoy your new CD Boombox.

2 Your CD Boombox

2.1 In The Box

Carefully remove your CD Boombox from the packaging.

Inside the box you will find:

- CD Boombox
- Mains Power Supply Lead
- Quick Start Guide
- Guarantee Booklet

If any of these items are missing, contact customer support.

Visit: www.goodmans.co.uk/support



Mains Power

Your CD Boombox requires a mains supply of 230-240V AC ~ 50Hz.

Please ensure that your mains supply is compatible before use.

Disconnect the Power Cord from the mains when not in use.

Position of CD Boombox

Place on a flat, stable surface that is not subject to vibrations. Avoid the following locations:

- Where it is exposed to direct sunlight
- Where it is close to heat radiating sources
- Where the humidity is high and ventilation is poor
- Where it is dusty

Adjusting the Aerial

Fully extend the aerial to ensure good reception in both MW and FM Radio modes. It may be necessary to alter the position of the CD Boombox and/or the aerial to achieve the best signal.





2.2 Front View

- A SPEAKERS.** Stereo speakers.
- B LID RELEASE.** Lift upwards to open the CD compartment.


2.3 Control Panel

- C PROGRAM button.** Press to enable program function.
- D BLUETOOTH LED.** Indicates the status of a bluetooth connection.
- E LED DISPLAY.** Displays current information relative to the mode selected.
- F POWER LED.** This will illuminate when the power is on.
- G REPEAT button.** Press repeatedly to toggle the repeat functions.
- H SKIP- button.** Press to skip to previous CD tracks. Press and hold to fast rewind CD tracks.
- I ■ button.** Press to stop CD playback.
- J ECO PWR/ ▶/⏸ button.** Wake from standby mode. In CD mode press to Play or Pause playback of a CD.
- K SKIP+ button.** Press to skip to next CD track(s). Press and hold to fast forward CD tracks.
- L FM STEREO LED.** Illuminates when a station is tuned in the FM STEREO mode.

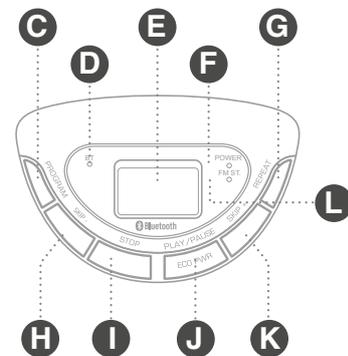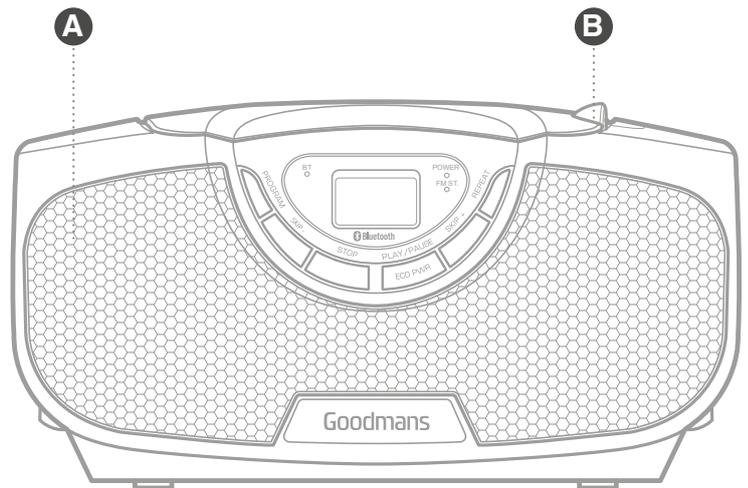

2.4 Rear View


- M AERIAL.** Extend fully for best radio signal.
- N Carry handle.**
- O AUX INPUT socket.** Connect external audio sources with a 3.5mm audio cable.
- P AC mains input socket.** Connect the mains cable to this socket.

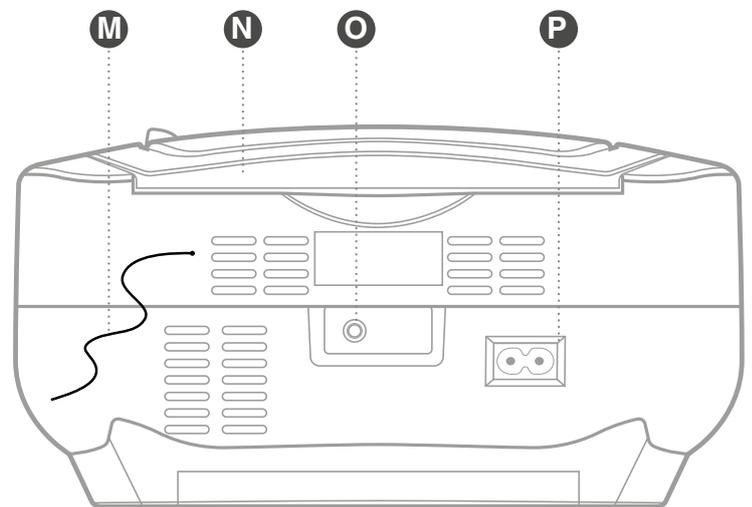




2.5 Right Side

- Q RADIO TUNING control.** Rotate to scan up or down the selected band frequencies.
- R RADIO BAND switch.** Set the radio band from MW, FM or FM STEREO.

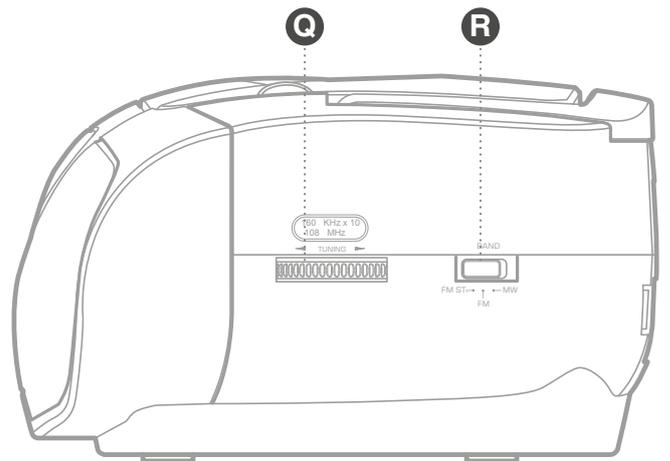

2.6 Left Side

- S FUNCTION switch.** Enable CD, AUX/ RADIO or Bluetooth functions.
- T VOLUME control.** Rotate to increase or decrease the volume output.

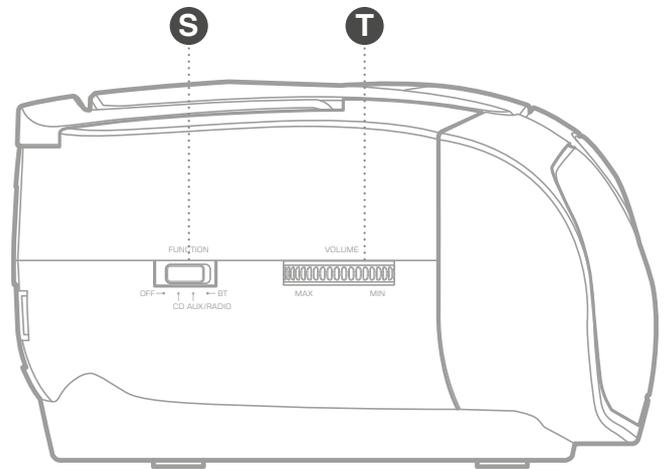


3 Quick Setup



3.1 Power On/Off and Function Selection

1. This CD boombox is supplied with a mains cable.
To connect the power insert the figure 8 shaped end in the rear of the unit (P).
2. Insert the UK plug into a household power socket, and switch the power on.
3. Set the FUNCTION switch (S) to either/CD/ RADIO or BLUETOOTH.

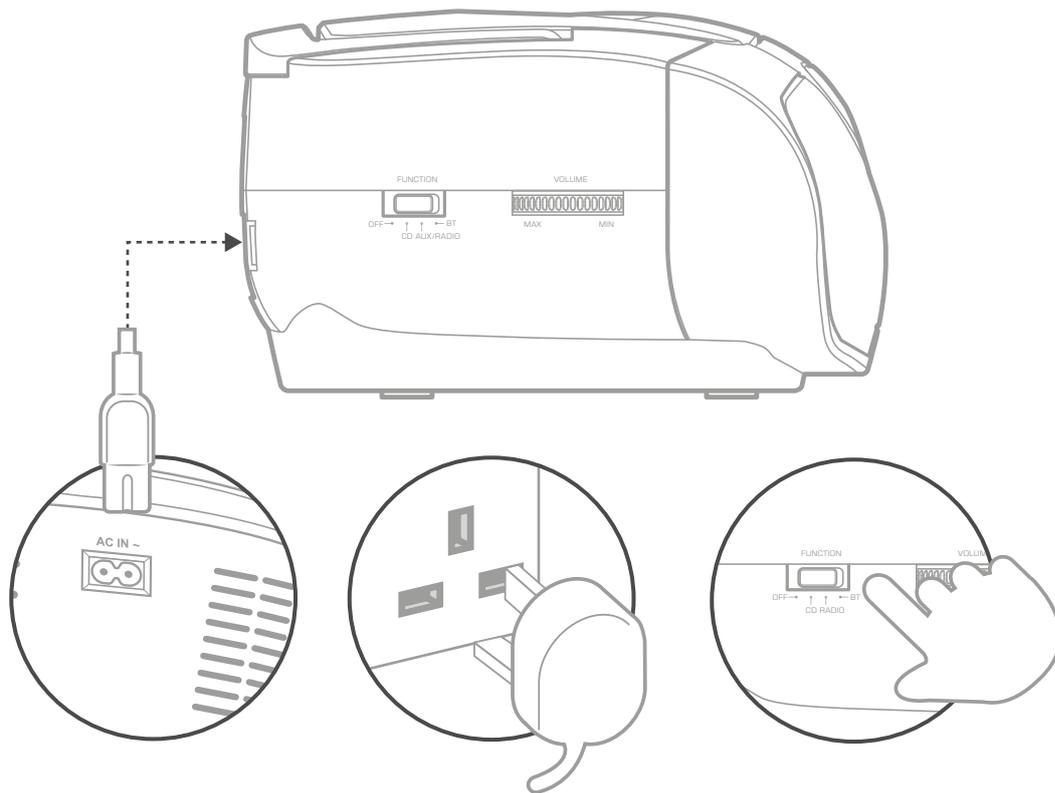

3.2 Standby & Auto Standby

1. Set the FUNCTION switch (S) to the OFF position to enter standby mode.
2. Set the FUNCTION switch (S) to any position other than OFF to wake from standby.




Due to new ECO regulation requirements this product incorporates a power saving feature.

3. When in CD, Bluetooth or AUX mode, once audio playback has ceased and the unit has stood idle for approximately 20 minutes, it will switch into a 'power-down' power saving mode.
4. To wake the unit up, press the ECO PWR/ ►/|| button (J).




3.3 Adjusting the Volume

Rotate the volume control (T) clockwise or anti-clockwise to increase or decrease the volume output.

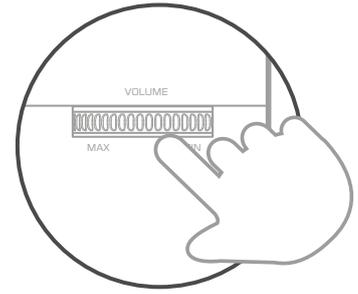

3.4 Fitting Batteries

1. Open the battery compartment on the bottom of the unit by pressing down on the OPEN symbols and sliding in the direction of the arrows (see diagram below).
2. Insert 6 x C size batteries taking care to match the + & - polarity symbols correctly.
3. Replace the battery compartment cover.

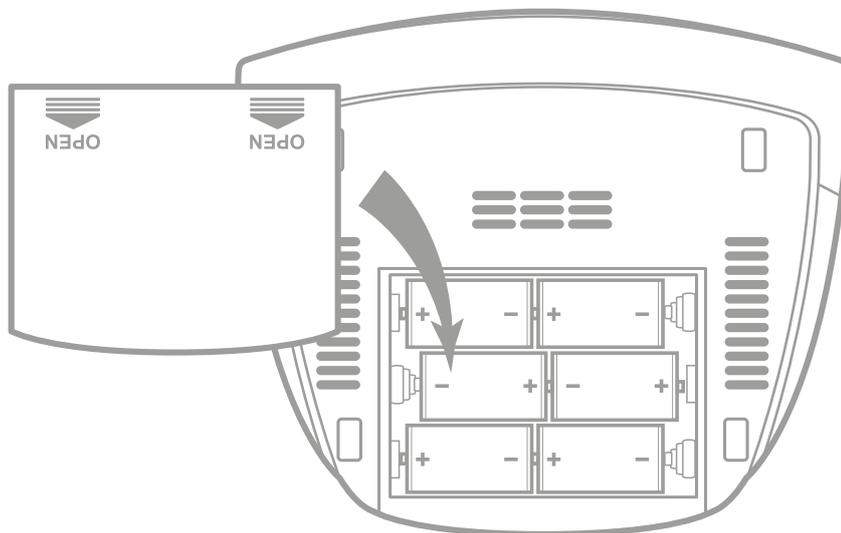

The mains cable must be detached from the AC socket of the player for the batteries to power the unit.

Leaking batteries may damage the battery cabinet and the player as a whole. If you are not going to use the CD Boombox for an extended period, please remove the batteries to avoid damage.



Caution: Danger of explosion if battery is incorrectly inserted. Replace only with the same or equivalent type.


4 Operation



CD Operation



4.1 Load a Disc

1. Open the CD lid using the LID RELEASE (B) latch.
2. Load a disc onto the disc tray with the label side facing up.
3. Close the CD lid.

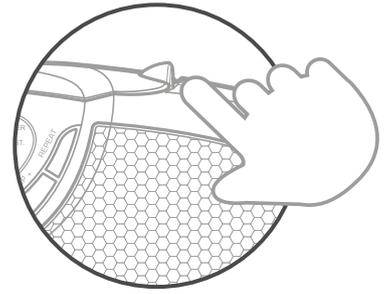



4.2 Play a Disc

1. Slide the FUNCTION (S) switch to the CD position.
2. Follow the steps above to load a disc (if not already loaded).
3. When the disc is successfully read, the total number of tracks on the disc will appear on the LED display (E).
4. Press the ECO PWR/ ▶/■ button (J) once to begin playback. Press the button again to pause the music playback. A red dot flashes in the bottom right corner to indicate the player is in Pause mode; press the ■ button (I) to cease music playback. The LED shows the total number of tracks again.

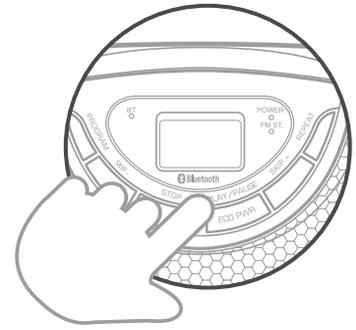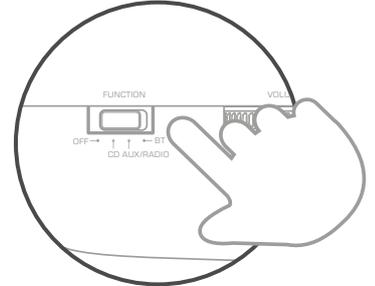

4.3 Skip Tracks And Search For a Specific Point To Play

1. Press the SKIP+ button (K) once during playback to skip to the next track. To skip to a specific track ahead, press this button several times until you reach the track number required.
2. Press the SKIP- button (H) once during playback to return to the beginning of the current track. Press this button twice repeatedly to skip to the previous track. To skip back to a specific track, press this button several times.
3. Hold the SKIP+ button (K) during playback to fast forward the current track.
4. Hold the SKIP- button (H) during playback to fast rewind the current track.

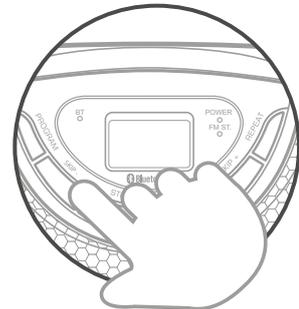
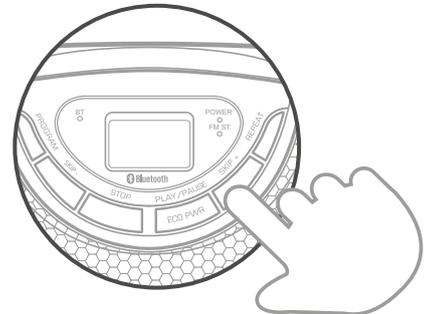




4.4 Programmed Play



To program an alternative playback order of up to 20 tracks follow the below steps.

1. Make sure the unit is not playing a disc.
2. Press the PROGRAM button (C) once. The program sequence “01” flashes on the LED display.
3. Select the first track to be programmed using SKIP -/+ (H, K) buttons.
4. Press the PROGRAM button (C) again to store and advance to the next programmed track. The program sequence indication changes to “02” momentarily waiting for your next input.
5. Repeat the steps above to program more tracks. A maximum of 20 tracks can be programmed.
6. Press the ECO PWR/ ▶/■ button (J) to begin the programmed playback in the preferred order. A red dot appears in the bottom right corner to indicate the player is in program mode.
7. You can press the ■ button (I) twice to terminate the programmed playback or switch to a different input mode using the FUNCTION switch (S).

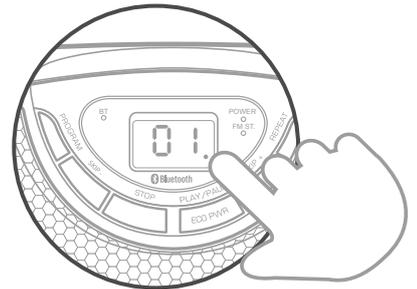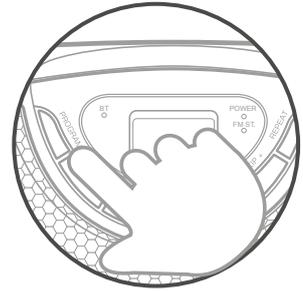

4.5 Repeat Single/All Track(s)

1. During playback press the REPEAT button (G), you will see a red dot appear in the middle of the LED display. This indicates the current track will repeat until the ■ button (I) is pressed.
2. During playback press the REPEAT button (G) twice, you will see a red dot will flash in the middle of the LED display. This indicates that all the tracks of the current disc will repeat until the ■ button (I) is pressed.
3. To turn off the REPEAT function press the REPEAT button (G) until the repeat icons disappear or press the ■ button (I).

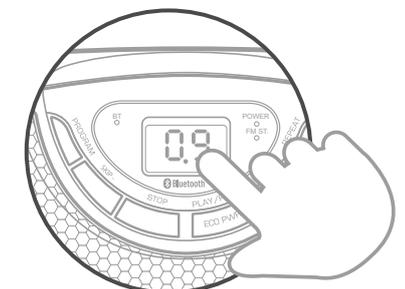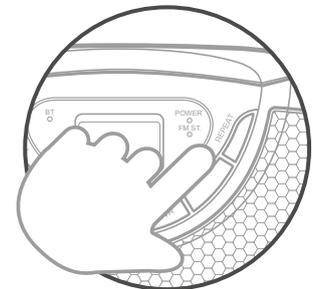



Radio Operation

4.6 Tuning a station




1. Slide the FUNCTION (S) switch to the AUX/ RADIO position.
2. Set the required band with the BAND selection switch (R).
To listen to an FM station in stereo set the FUNCTION switch to FM ST.
3. Tune the station by rotating the TUNING control (Q).
4. The built-in MW aerial and external FM pigtail aerial are directional.



When receiving an FM broadcast, fully extend the pigtail aerial and position it for the best reception.

For MW broadcasts, vary the position of the unit until the best reception is located.


5. Adjust the volume to a comfortable listening level using the VOLUME control (T).

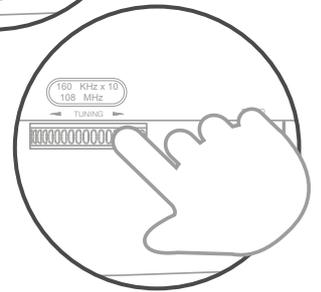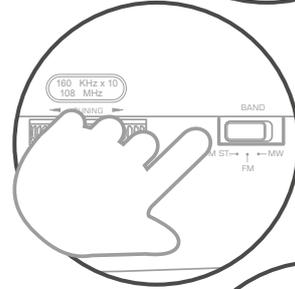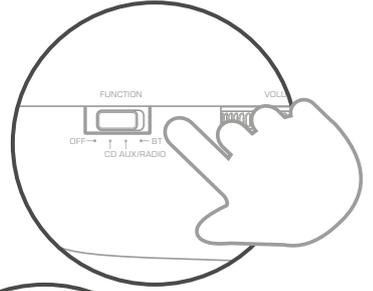

4.7 Aux In Mode

It is possible to connect an external audio source like an MP3 player using a 3.5mm audio cable (not supplied).

1. Connect one end of the cable to the MP3 player headphone output and the other end to the AUX input (O) on the back of the unit.

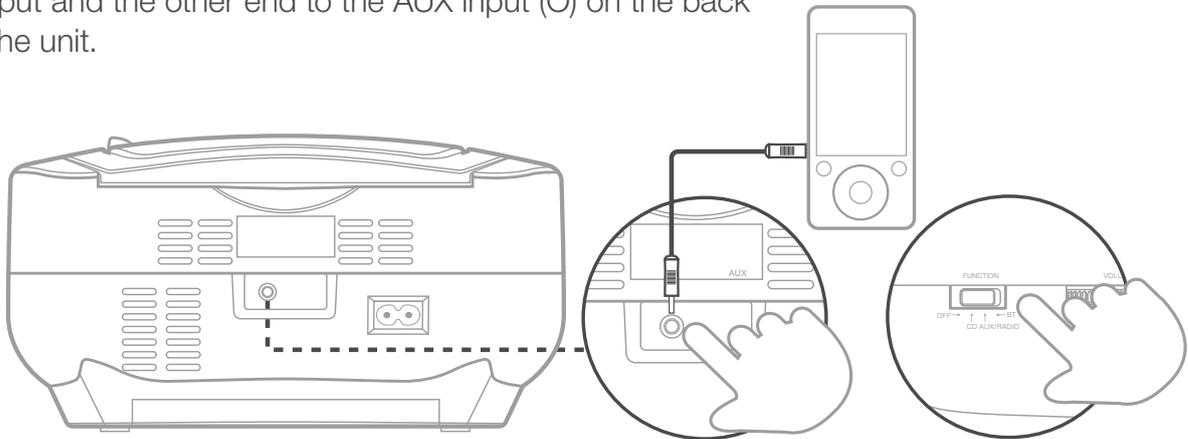

1. Slide the FUNCTION (S) switch to the AUX/ RADIO position.
When the audio cable is connected the radio audio output will be muted.
2. Press ►|| on the external audio source EG:-MP3 player.



The volume output is affected by the volume level on the source EG: MP3 player so make sure that is set to about 70-80% (not too loud to avoid distortion).


3. Adjust the VOLUME control (T) on the unit to the required listening level.



Bluetooth Operation


4.8 Pairing a Bluetooth Device

1. Slide the FUNCTION (S) switch to the 'BT' (Bluetooth) position.
2. After entering Bluetooth mode the blue LED will flash to indicate the boombox is in pairing mode, with no device connected.
3. Enable Bluetooth on your audio device and search for available Bluetooth connections. Select the GPSBT01 from the list. If you are asked for a pass code enter '0000'.

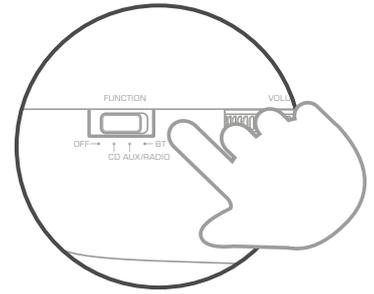

i If you turn off either device before pairing is complete the process will need to be repeated when powered on again. If you do not see 'GPSBT01' set the FUNCTION switch (S) to any other mode and back to BT to begin the pairing process once more .

4. Once paired the blue bluetooth LED (D) will stop flashing & the paired audio indicator melody will be heard.

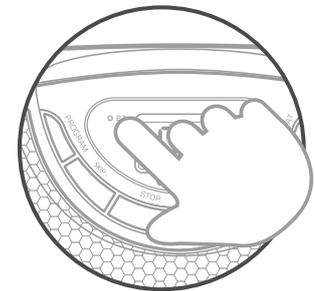


i Each time you switch the boombox on and select Bluetooth mode the device will automatically connect, unless you have un-paired the device.

5. You can now begin playback from the audio device and the output will playback through the boombox.

i The volume output is effected by the volume level on the audio source EG: Phone or laptop, so make sure that is set to about 70-80% (not too loud to avoid distortion).

6. Adjust the VOLUME (T) on the unit to the required listening level.

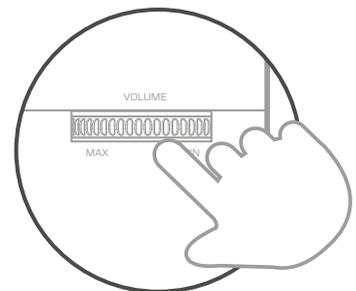

5 Troubleshooting



Problem	What to do
No Power	Check the mains plug is connected to the wall socket. Switch the wall socket ON. Check the FUNCTION button (S) is not set to the OFF position.
No sound from the CD No sound from an AUX input	The volume level is too low. Increase using the volume control (T). The volume level is too low. Increase using the volume control (T). The external audio source volume is too low, increase the volume level.
The sound is distorted The sound is distorted from an AUX input	Reduce the CD boombox volume level using the volume control (T). The external audio source volume is too high, decrease the volume level.
Unable to play a CD	Check there is a disc present in the CD compartment. Remove and re-insert the CD with the label side facing upwards. Clean the disc, it may be dirty. If scratched try another disc.
Static sound when listening to the radio	This is caused by poor reception. Re-locate the antenna or if that fails try moving the CD boombox to a different location.
No sound from the Bluetooth input	Check the external device is paired correctly. The external audio source volume is too low, increase the volume level.

6 Technical Specification



Model Number	GPSBT01
Power Supply	AC 230-240V ~ 50 Hz DC 9V UM-2/'C' size x 6pcs
Speaker Output Power	1W x 2 (RMS)
Speaker Impedance	8 Ohms
Frequency Range	FM: 88-108MHz MW: 540-1600KHz
Supported Disc Types	CD, CD-R, CD-RW
Max Power Consumption	AC 9W
Dimensions	115mm (H) x 217mm (W) x 192mm (D)

7 Customer Support

Our customer service team is available for technical or guarantee support. Visit www.goodmans.co.uk/support