 


100W SOUNDBAR

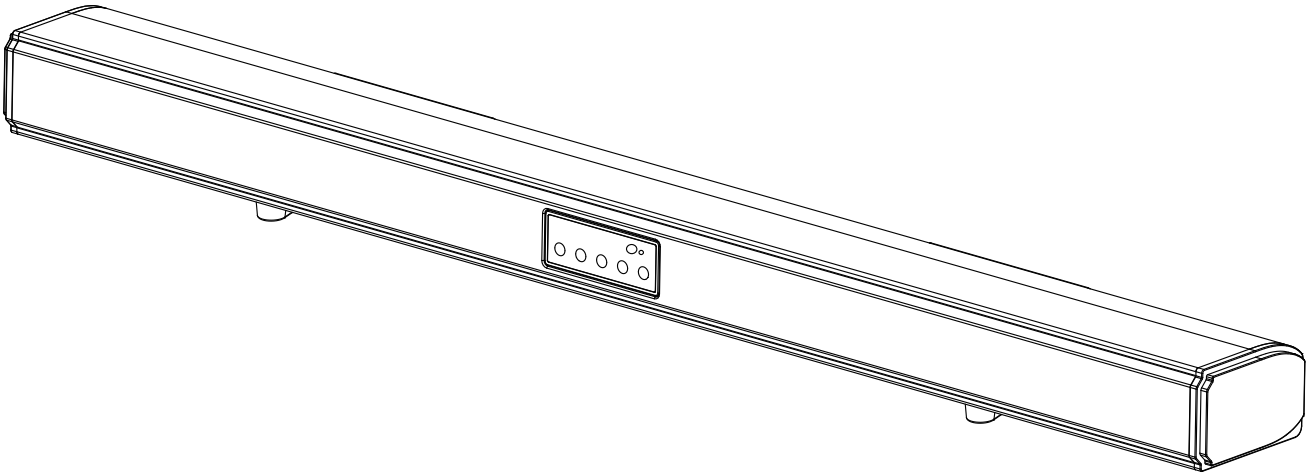

MODEL: GDSBT100OP

USER MANUAL



Goodmans

1 Welcome



2 100W Soundbar

- 2.1 In The Box
- 2.2 Front View
- 2.3 Rear view
- 2.4 Remote Control

3 Quick Setup

- 3.1 Power On/Off and Function Selection
- 3.2 Auto Power Off
- 3.3 Adjusting The Volume

4 Operation

- 4.1 Selecting LINE IN
- 4.2 Selecting AUX IN
- 4.3 Selecting Optical in or Coaxial Input
- 4.4 Selecting Bluetooth

5 Troubleshooting

6 Technical Specifications

7 Customer Support

1 Welcome



Thank you for choosing this Goodmans product. We've been making electronics for the British people for 70 years. Each of our projects has been carefully designed to be great at what it does and this one is no exception. We hope you enjoy your new 100W Soundbar

2 Your 100W SOUNDBAR

2.1 In The Box

Carefully remove your 100W Soundbar from the packaging.

Inside the box you will find:

- 100W Soundbar
- Optical Cable
- Quick Start Guide
- Guarantee Booklet
- 3.5mm Line-in Cable
- 3.5mm To RCA Cable
- RCA To RCA Cable
- Remote Control
- Wall Mount Kit

If any of these items are missing, contact customer support.
Visit: www.goodmans.co.uk/support



Mains Power

Your 100W Soundbar requires a mains supply of 230-240V AC ~ 50Hz.
Please ensure that your mains supply is compatible before use.
Disconnect the Power Cord from the mains when not in use.

Position of 100W Soundbar

Place on a flat, stable surface that is not subject to vibrations. Avoid the following locations:

- Where it is exposed to direct sunlight
- Where it is close to heat radiating sources
- Where the humidity is high and ventilation is poor
- Where it is dusty



2.2 Front View

A POWER

Touch to power the soundbar on or off.

B SOURCE

Touch to select input.

C VOLUME

Touch decrease the volume.

D VOLUME

 
Touch to increase the volume.

E BLUETOOTH

Touch to pair the Bluetooth device with soundbar after access to BT mode.

F IR Receiver

G Status LED

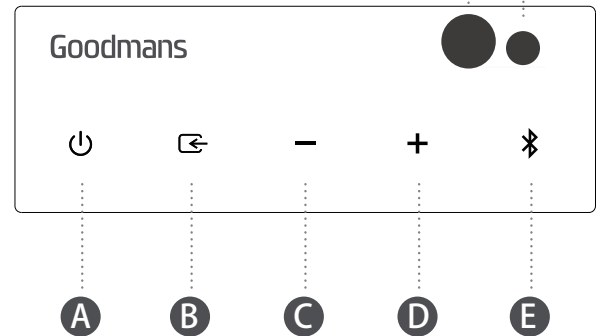

STATUS	INDICATOR
Power On/Off	Red Light
Optical Mode	Yellow Light
Coaxial Mode	Purple Light
AUX In Mode	White Light
Line In Mode	Green Light
Bluetooth Pairing	Flashing Blue Light
Bluetooth Connected	Blue Light

2.3 Rear View

H POWER CORD

Plug the power cord into the wall of AC socket.

I LINE IN SOCKET

Connect external audio sources with a 3.5mm audio cable.

J AUX INPUT SOCKET

 
 
Connect external audio sources with RCA audio cable.

K COAXIAL INPUT SOCKET

Connect external audio sources with coaxial cable.


L OPTICAL INPUT SOCKET

Connect external audio sources with optical cable.

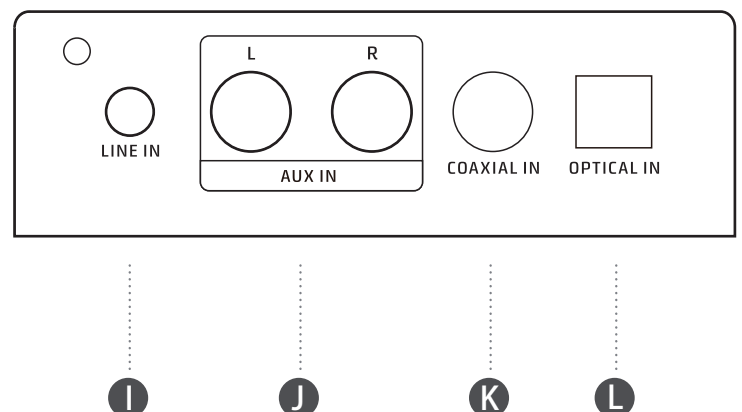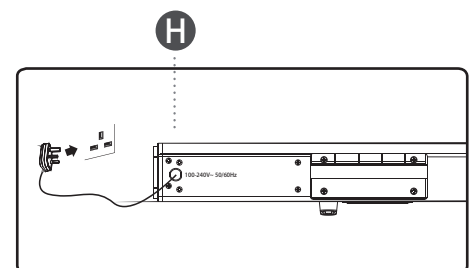



 2.4 REMOTE CONTROL

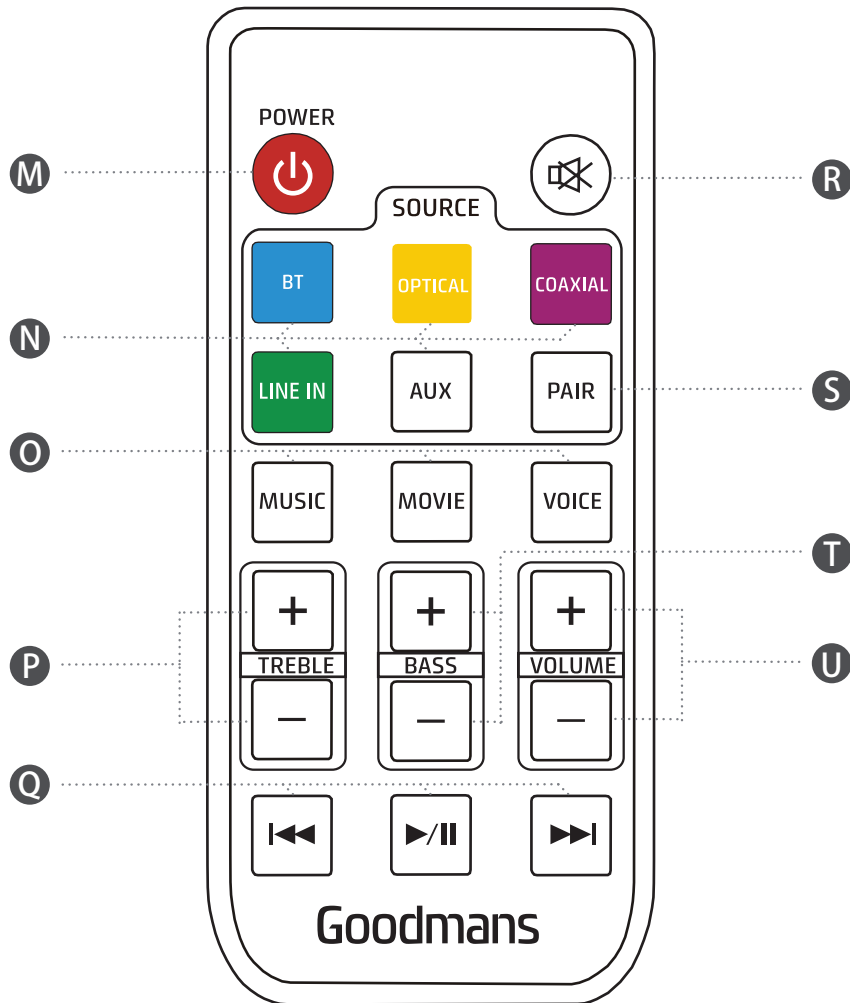






- M** POWER
Press to turn on/off.
- N** SOURCE
Press to select BT/LINE IN/OPTICAL/AUX/COAXIAL mode.
- O** DSP PRESETS
Press to access to Music/Movie/Voice mode.
- P** TREBLE
Increase or decrease the treble settings.
- Q** In BT mode
Press to Skip/Back/Play/Pause/Stop the track.
- R** MUTE
- S** PAIR
Press to connect the Bluetooth device after access to BT mode.
- T** BASS
Increase or decrease bass settings.
- U** VOLUME
Increase or decrease the volume.

3 Quick Setup



3.1 Power On/Off and Function Selection

   1. This 100W Soundbar is supplied with a mains lead.
2. Insert the UK plug into a household power socket, and switch the power on.
3. Touch the  button to turn the unit on.
4. Touch the  button to select Bluetooth/Line in/Aux/Optical/Coaxial in mole

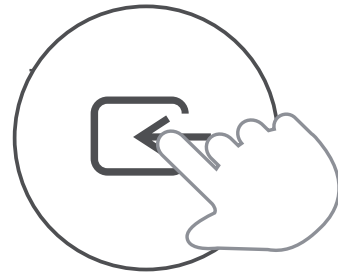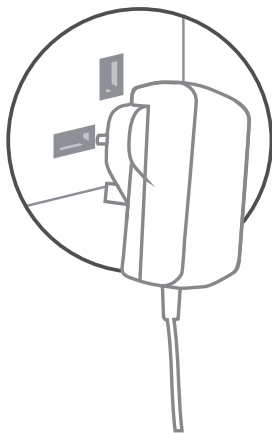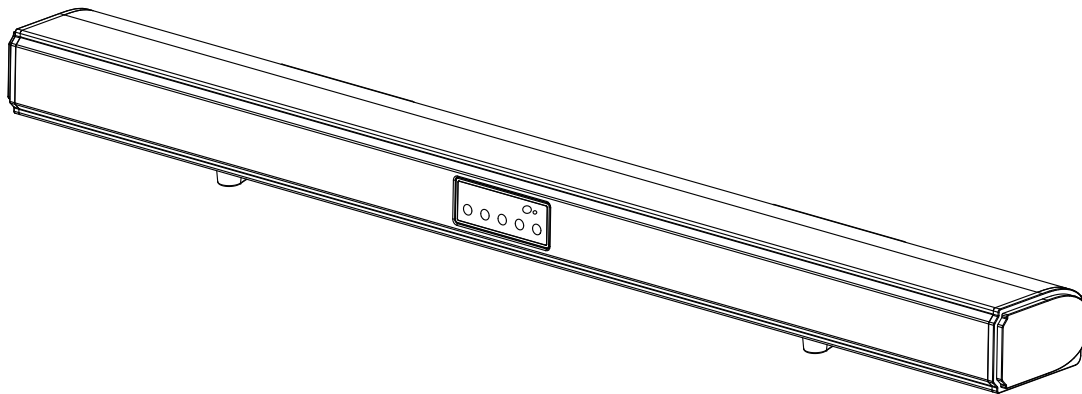

3.2 Auto Power Off

If no audio signal is continuously detected from the selected mode for more than 170 minutes, the unit will power-off automatically.



3.3 Adjusting the Volume

Touch the + button or - button on the centre of the soundbar to adjust the volume to a comfortable level.








4.1 Selecting LINE IN

1. Touch the  Button in the centre of the soundbar or alternatively press the POWER button on the remote control, so that the blue LED is illuminated.
2. Touch the  and select LINE IN mode or press the LINE IN button on your remote control.
3. Adjust volume to the desired level.



4.2 Selecting AUX IN

1. Touch the  Button in the centre of the soundbar or alternatively press the POWER button on the remote control, so that the blue LED is illuminated.
2. Touch the  and select LINE IN mode or press the AUX button on your remote control.
3. Adjust volume to the desired level.

4.3 Selecting Optical in Or Coaxial in

1. Connect one end of Optical cable to the back of the soundbar and the other end to the OPTICAL OUTPUT of your TV.
2. Or connect one end of Coaxial cable to the back of the soundbar and the other end to the COAXIAL OUTPUT of your TV.
Note : RCA cable can be used.
3. Touch the  Button in the centre of the soundbar or alternatively press the POWER button on the remote control, so that the blue LED is illuminated.
4. Press the appropriate SOURCE button on your remote control to select the input.
5. Adjust volume to the desired level.

4.4 Selecting Bluetooth

1. Touch and hold the  button on the unit or alternatively press the POWER button on the Remote Control.
2. Touch the  button and select Bluetooth mode or press the BT button on the Remote Control to switch Bluetooth mode.
3. Press the PAIR button on the remote control .The blue light will flash quickly.
4. Use the controls on your Bluetooth device to select (GDSBT1000P) in your Bluetooth settings to pair. If your device requests a password, enter the "0000" . Refer to your device's user manual for instructions on pairing and connecting Bluetooth devices.

5 Troubleshooting



Problem	What to do
Soundbar does not respond (no power).	Check the mains power cable and make sure it is plugged into a suitable power outlet. Check that the mains power supply is switched on. Connect the power to a different power outlet.
No sound.	Check the Soundbar volume control is not at minimum. Check that the Soundbar is not set to MUTE. If you are connecting to the Soundbar using a headphones port on your external audio device then check the volume is turned up on that device.
The Remote Control does not work.	Replace the battery. Make sure there are no obstacles obscuring the Soundbar.
No sound in Bluetooth mode.	Check that the Soundbar is Paired with a Bluetooth device. If prompted enter the code '0000'.

6 Technical Specification

Power Supply	AC 230V,50 HZ.
Power Source of Remote Control	DC 3V, 1 x CR2025 Battery (supplied)
Power Consumption	> 80W
Audio Power	Woofer 60W Left Channel 20W Right Channel 20W
Impedance	2x Woofer 35W 8Ω 2x Left Channel 20W 4Ω 2x Right Channel 20W 4Ω

7 Customer Support

Our customer service team is available for technical or guarantee support. Visit www.goodmans.co.uk/support